



- Shortest cycle times
- Compact design
- Simple planning, installation and commissioning
- Installation and adaptation concept

## Handling modules HSP

Key features at a glance

### Field of application


The handling module is a new generation of function modules for the automatic transfer, feed and removal of small parts in extremely confined spaces. This is achieved by means of a guided vertical and horizontal motion sequence. A backlash-free cross-guide

with recirculating ball bearing elements ensures high precision and good rigidity.

The combination of a semi-rotary drive and a slotted guide system produces a compact unit for a complete pick & place cycle.

### Special features

- Compact design
- Extremely short cycle times
- Low cost
- Simple commissioning
- For working loads up to 1.6 kg
- Stroke adjustment along Y- and Z-axes
- Wait positions possible
- No planning costs

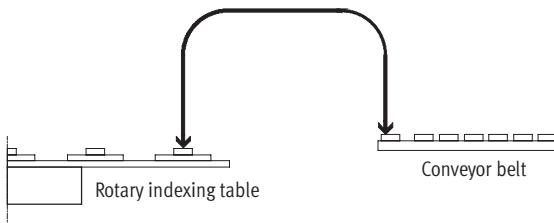

### Three drive variants are available

	Pneumatic: HSP-...-AP, with swivel module DSM	Electric: HSP-...-AE, with servo motor unit MTR-DCI-...-HM	Without drive: HSP-...-AS, with drive shaft

### Advantages

	<ul style="list-style-type: none"> <li>• Fast</li> <li>• Cost-effective</li> <li>• Ready to install</li> <li>• No system planning required</li> <li>• Simple commissioning</li> </ul>	<ul style="list-style-type: none"> <li>• Freely positionable</li> <li>• Freely selectable speed</li> <li>• Smooth motion sequence</li> <li>• Ready to install</li> <li>• No system planning required</li> <li>• Simple commissioning using teach-in procedure</li> </ul>	<ul style="list-style-type: none"> <li>• Compact</li> <li>• Universal compatibility</li> <li>• Variable drive interface</li> <li>• On request: Drive options in combination with servo motors MTR-AC</li> </ul>
--	---	--	---

### Technical data


Stroke	Y [mm]	52 ... 170	
	Z [mm]	20 ... 70	
Min. cycle time	[s]	0.6 ... 1.0	0.8 ... 1.2
Working load	[g]	0 ... 1600	Depends on drive
Repetition accuracy at end positions	[mm]	±0.02	
Wait positions		Max. 2	Any
Function of wait position		Pulling with return cylinder	Freely approachable
Repetition accuracy at wait positions	[mm]	< 1	< 2
Data sheet		➔ 1 / 7.2-8	➔ 1 / 7.2-18
			➔ 1 / 7.2-32

## Handling modules HSP

Typical applications


### HSP-...-AP, pneumatic

Linear transfer

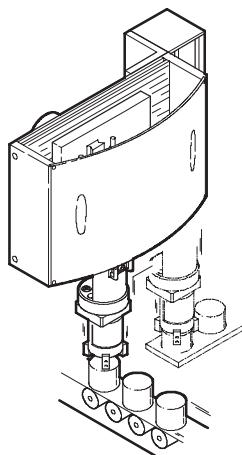

- Fast feed and removal, e.g. for linear transfer or rotary indexing table


### Belt-type part positioning

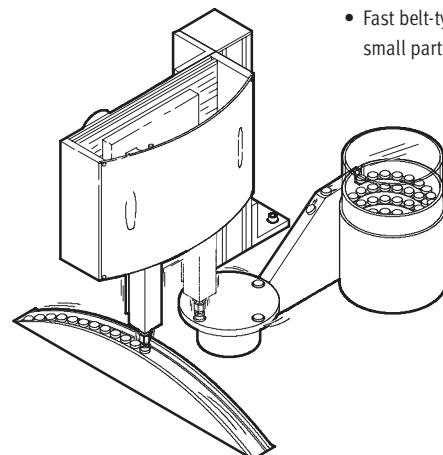

- Fast belt-type part positioning of small parts


### HSP-...-AE, electric

Rotary indexing table

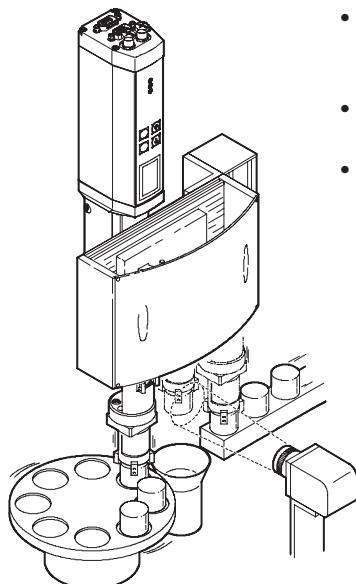

- Flexible pick & place unit with quality inspection of components and ejector for reject parts
- Handling of parts with different heights
- Handling at different speeds, e.g. for linear transfer or rotary indexing table


### Rotary indexing table

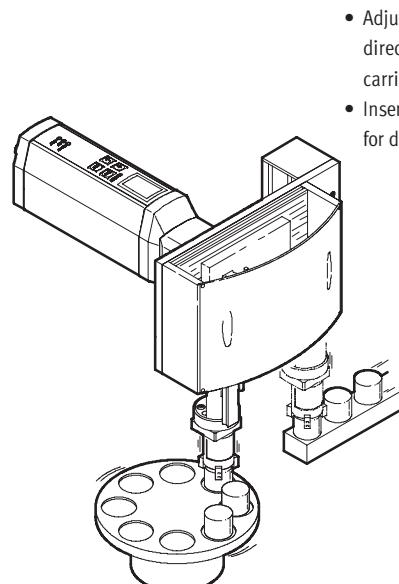

- Adjustable wait position module directly above workpiece/workpiece carrier
- Insertion tasks at different speeds for delicate components


### HSP-...-AS, without drive

Linear transfer

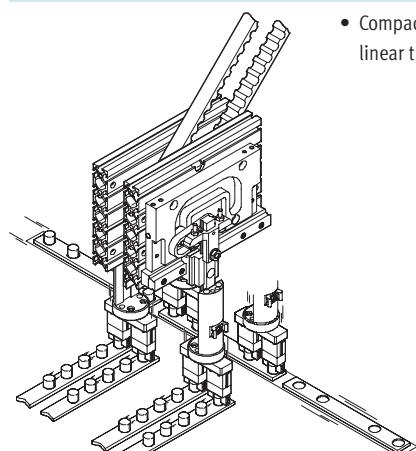

- Compact twin pick & place unit for linear transfer

### Rotary indexing table, linear transfer

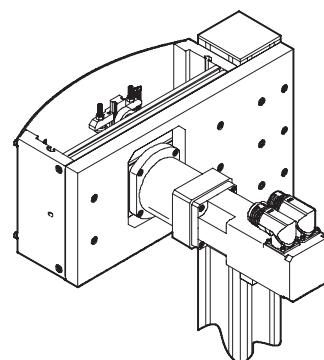


- Fast and flexible pick & place unit with servo motor MTR-AC
- Electrical variant using third-party motor

## Handling modules HSP

Key features at a glance


FESTO

HSP-....-AP – pneumatic with swivel module DSM

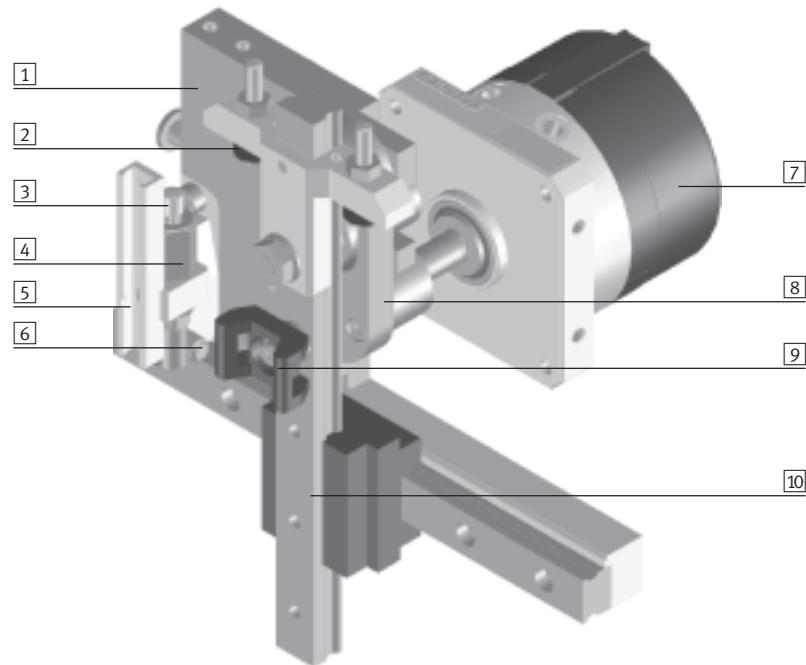

- [1] Slotted guide plate
- [2] Adjustable stop
- [3] Shock absorber YSRW
- [4] Stop sleeve
- [5] Sensor rail
- [6] Pressure piece
- [7] Swivel module DSM
- [8] Swivel lever
- [9] Cable binder holder
- [10] Cross-guide

HSP-....-AS – without drive (rear side)

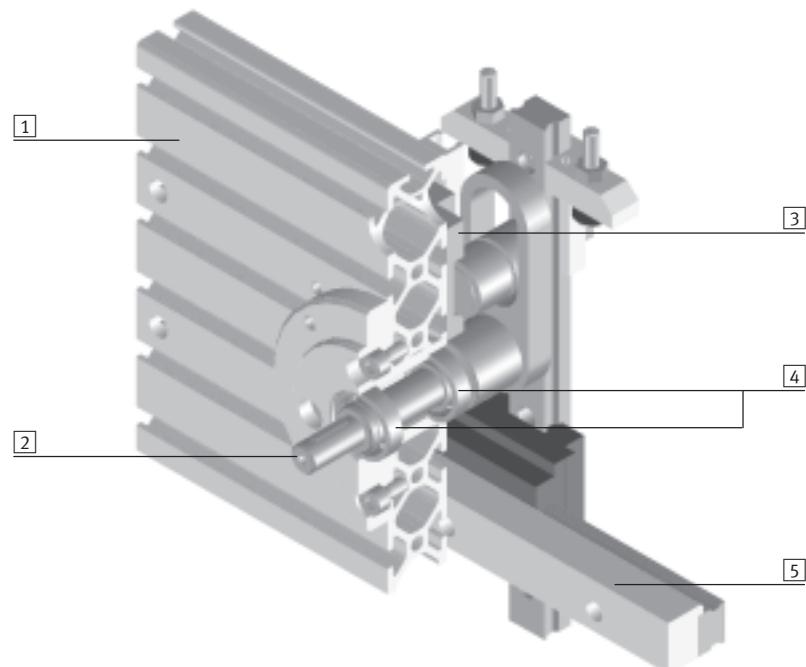


- [1] Back plate
- [2] Shaft with Woodruff key
- [3] Slotted guide plate
- [4] Ball bearings
- [5] Aluminium rail for alignment of slotted guide plates

## Handling modules HSP

Key features at a glance


HSP-...-AE – electrical version with servo motor unit MTR-DCI-...-HM

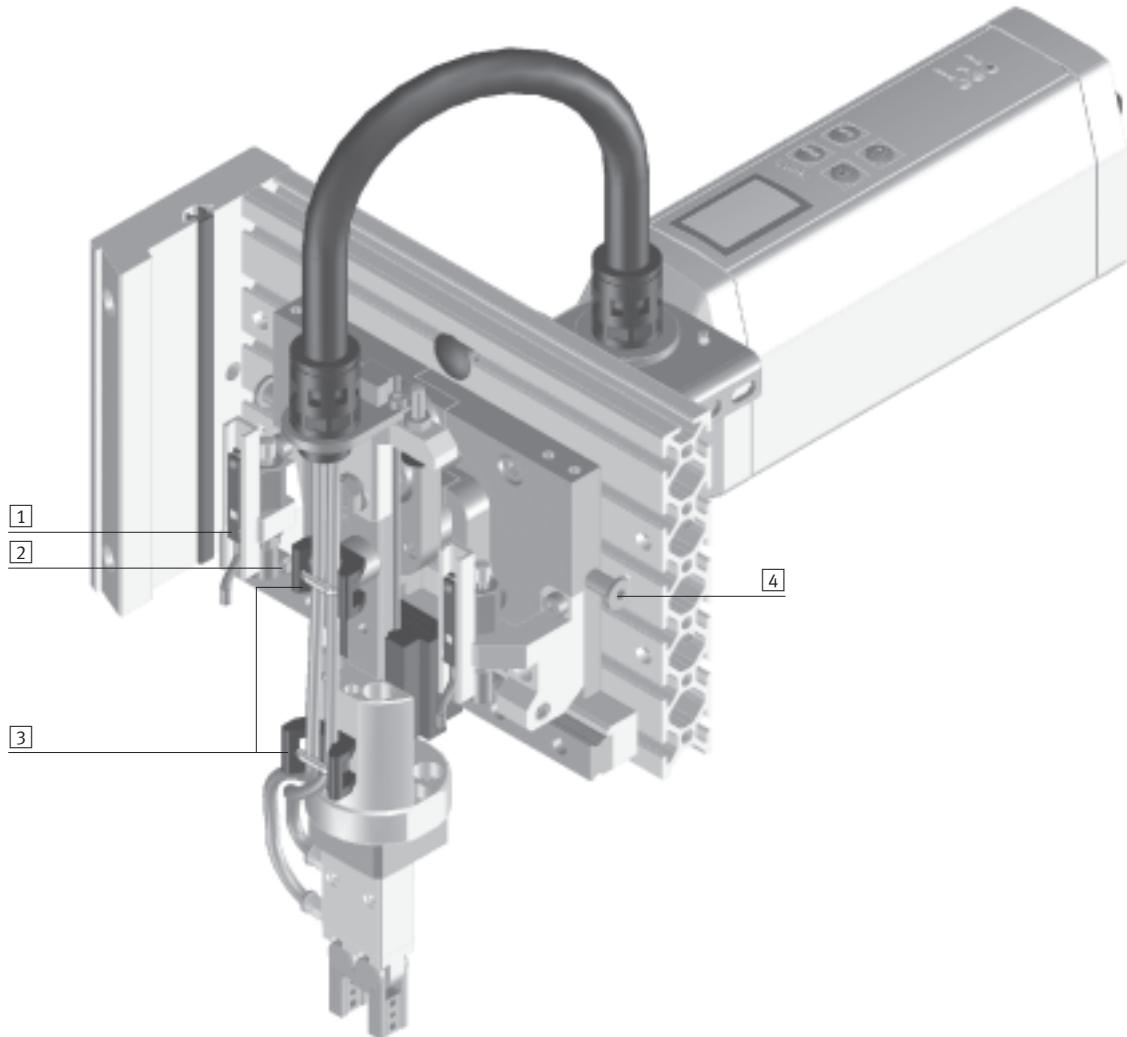

### The technology in detail




- [1] Proximity sensor cables are installed via profile slots in the side and back plate.

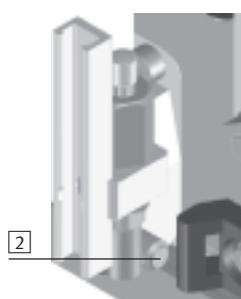

- [2] The pressure piece guarantees freedom from backlash and precision at the end positions and in the effective linear stroke along the Z-axis.



- [3] Cable binder holders facilitate the secure routing of tubing and cables.

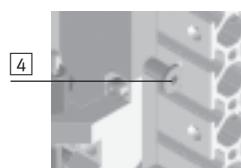

- [4] The adjustable slotted guide plate permits precise stroke setting.


## Handling modules HSP

Peripherals overview

FESTO

Handling units  
Handling modules

7.2

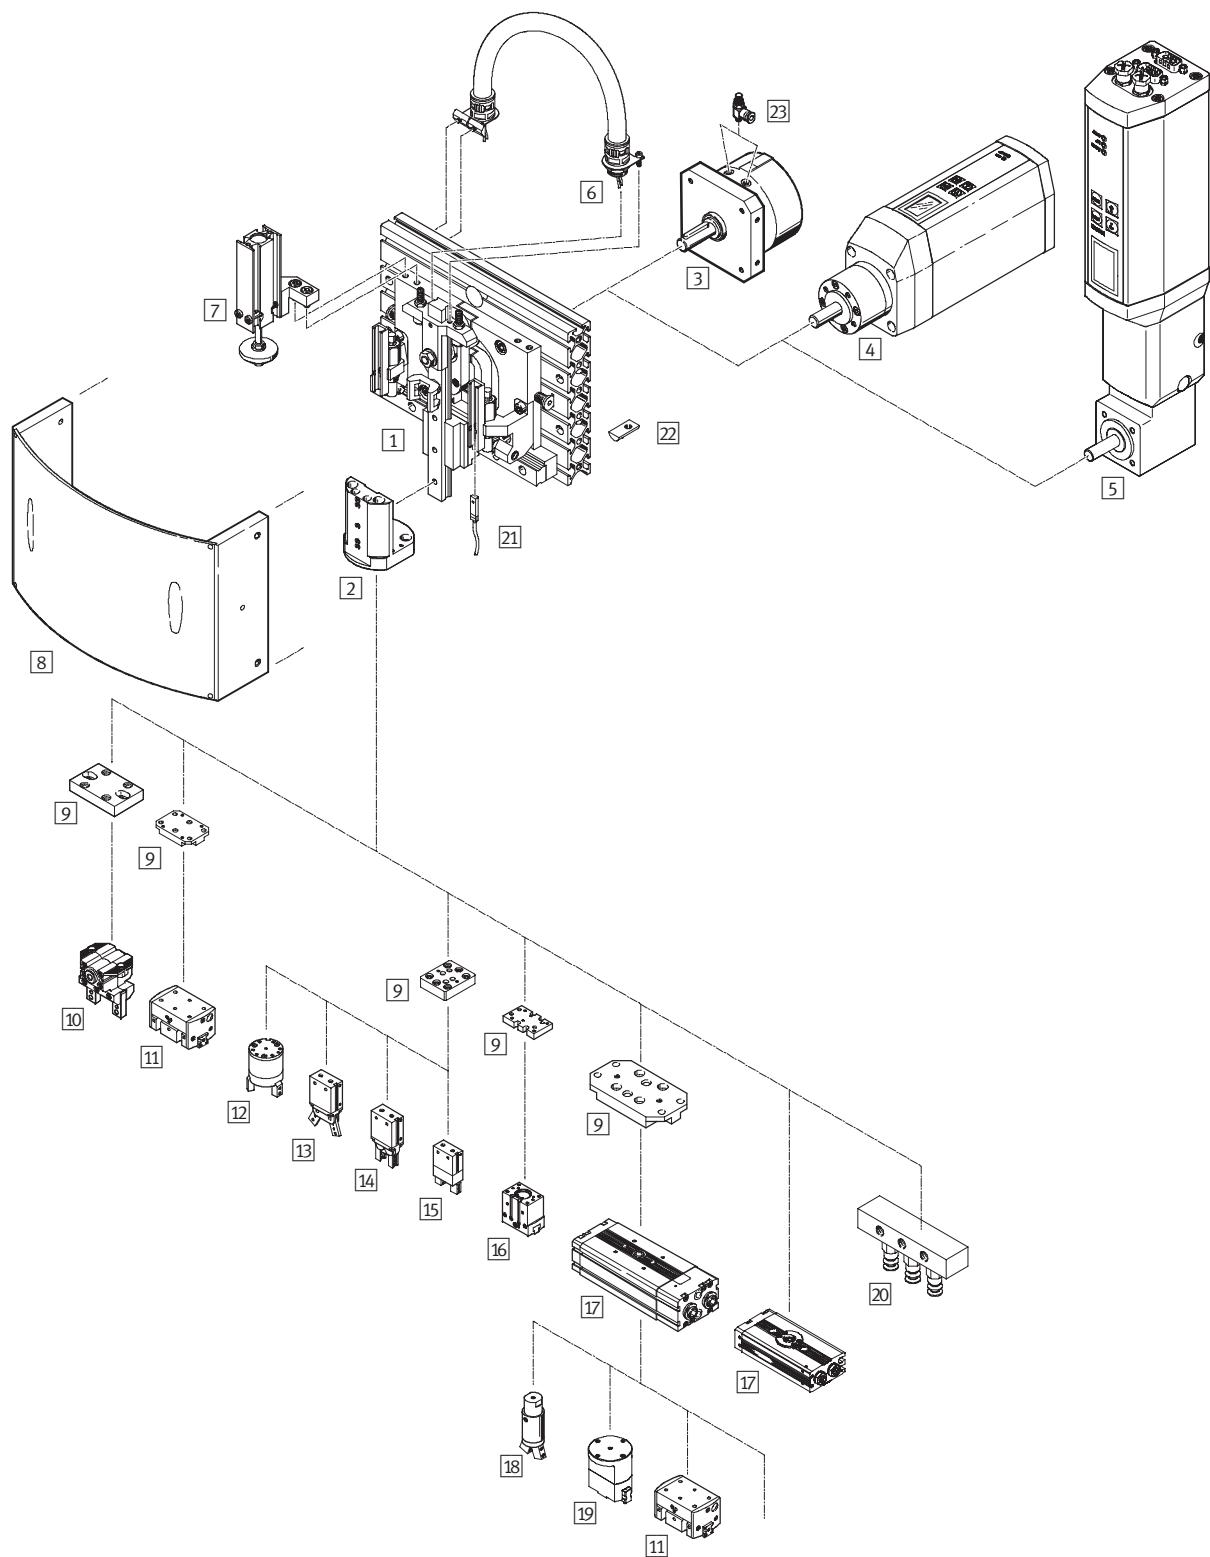

# Handling modules HSP

FESTO


Peripherals overview

Accessories	Brief description	12	16	25	➔ Page
[1] Handling module HSP	Standard module without accessories	■	■	■	1 / 7.2-9
[2] Adapter kit HAPG	Interface for grippers, semi-rotary drives, etc.	■	■	■	1 / 7.2-36
[3] Swivel module DSM	Pneumatic drive, adapted to each size	■	■	■	1 / 4.1-2
[4] Motor unit MTR-DCI-...-HM	Servo motor with integrated power electronics	■	■	■	1 / 7.2-25
[5] Motor unit MTR-DCI-...-HM	Servo motor with angle gear unit and integrated power electronics	■	■	■	1 / 7.2-25
[6] Installation kit MKRP	Conduit to protect electric cables and tubing	■	■	■	1 / 7.2-36
[7] Wait position module BWL-/BWR-HSP	With pneumatic drive: Function for retracting the swivel arm from operating area	■	■	■	1 / 7.2-37
[8] Cover kit BSD-HSP	To protect against accidental contact	■	■	■	1 / 7.2-37
[9] Adapter kit HAPG	Interface between HSP and gripper or semi-rotary drive	-	■	■	1 / 7.2-38
[10] Parallel gripper HGPC	Appropriate gripper for every application	-	■	■	1 / 7.2-38
[11] Parallel gripper HGPP		-	■	■	1 / 7.2-38
[12] Three-point gripper HGD		-	■	■	1 / 7.2-38
[13] Angle gripper HGW		■	■	■	1 / 7.2-38
[14] Radial gripper HGR		■	■	■	1 / 7.2-38
[15] Parallel gripper HGP		■	■	■	1 / 7.2-38
[16] Parallel gripper HGPT		■	■	■	1 / 7.2-38
[17] Semi-rotary drive DRQD	Semi-rotary drive for transferring parts	■	■	■	1 / 4.2-24
[18] Angle gripper HGWM	Appropriate gripper for every application	■	■	■	1 / 7.4-5
[19] Parallel gripper HGPM		■	■	■	1 / 7.4-5
[20] Suction cups	Appropriate suction cup for every application	■	■	■	Volume 6
[21] Proximity sensor SME-/SMT-8	Sensing facility for end positions	■	■	■	1 / 7.2-40
[22] Slot nut HMBN	Mounting element	■	■	■	1 / 7.2-41
[23] Non-return and flow control valve GRLA	Speed setting of pneumatic drives	■	■	■	Volume 2

## Handling modules HSP, pneumatic

Type codes

**FESTO**

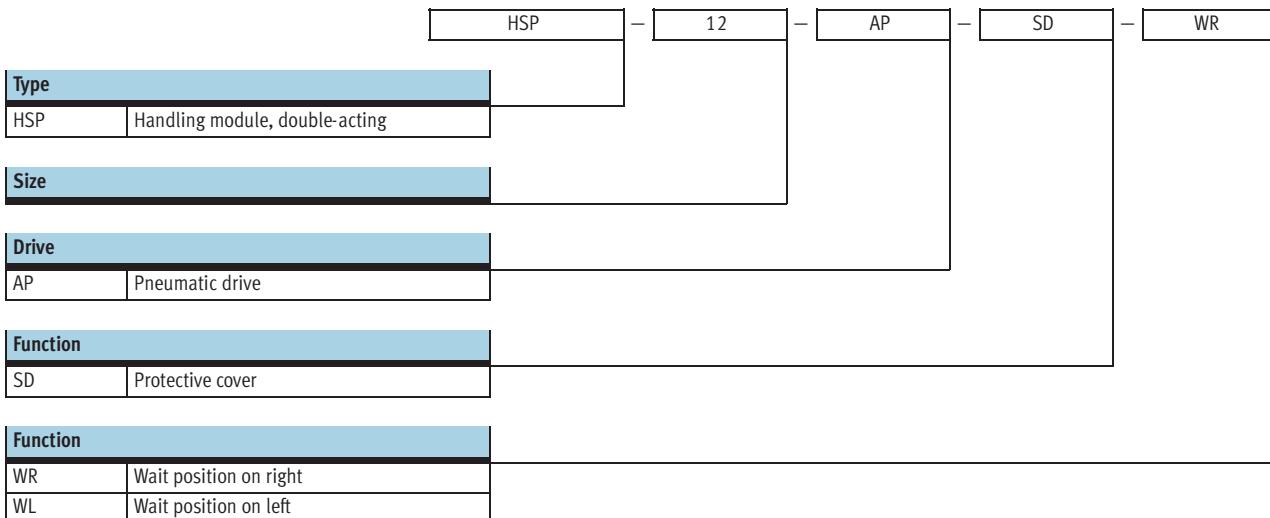

# Handling modules HSP, pneumatic

Technical data

**FESTO**

## Function



- - [www.festo.com/en/  
Spare\\_parts\\_service](http://www.festo.com/en/Spare_parts_service)

- - Size  
12, 16 and 25
- - Y-stroke length  
52 ... 170
- - Z-stroke length  
20 ... 70



## General technical data


Type	HSP-...-AP
Pneumatic connection	M5
Mode of operation	Double-acting
Operating medium	Filtered compressed air, lubricated or unlubricated
Constructional design	Swivel module Cross-guide Guided motion sequence
Cushioning	Shock absorber at both ends, soft characteristic curve
Position sensing	For proximity sensing
Type of mounting	With through-holes With slot nuts
Mounting position	Guide rail, vertical/horizontal

## Operating and environmental conditions

Type	HSP-...-AP
Operating pressure [bar]	4 ... 8
Ambient temperature [°C]	0 ... +60

## Stroke [mm]

Size	12	16	25
<b>Y-axis</b>			
Stroke	52 ... 68	90 ... 110	130 ... 170
<b>Z-axis</b>			
Stroke Z	20 ... 30	35 ... 50	50 ... 70
Working stroke Za	5 ... 15	5 ... 20	5 ... 25

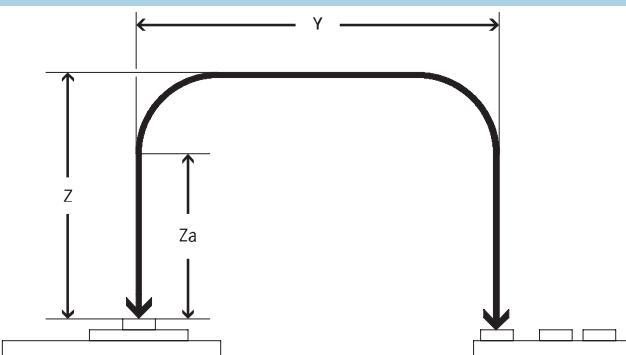

## Forces [N]

Size	12	16	25
<b>Z-axis</b>			
Effective force at 6 bar	40	50	65
<b>Y-axis</b>			
Permissible process force	30	35	50

# Handling modules HSP, pneumatic

FESTO

Technical data


Weight [g]			
Size	12	16	25
HSP-....-AP	1900	2900	6400
HSP-....-AP-SD	2600	3400	7600
HSP-....-AP-SD-WR	2800	3600	8100
HSP-....-AP-SD-WL	2800	3600	8100

## Repetition accuracy [mm]

To ensure low-vibration operation, the working load should be mounted as close as possible to the guide rail of the handling module.

Repetition accuracy is guaranteed by

mounting the working load (adapter plate, rotary drive and/or gripper, gripper finger, workpiece) within the mounting surface of the adapter kit HAPG.

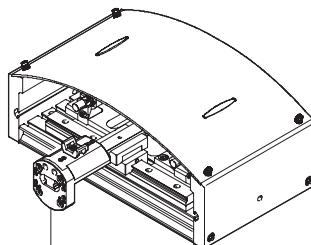


Mounting surface of HAPG

Size	12	16	25
Repetition accuracy at end positions	$\pm 0.01$	$\pm 0.01$	$\pm 0.02$

## Travel times t as a function of working load m

The travel time t is the time taken for the handling module to move from one end position to the other and back again.

The working load m is the load attached to the vertical guide rail (e.g. adapter, gripper, semi-rotary drive and workpiece).

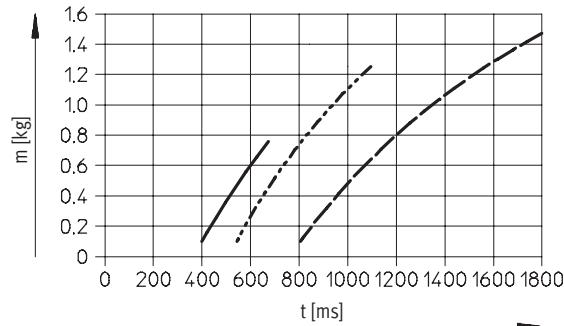

— HSP-12-AP  
 - - HSP-16-AP  
 - · - HSP-25-AP

## Cycle times [s]

The cycle time  $t_c$  comprises the travel time t and the dwell time  $t_e$  at the end positions.

$t_c = t + t_e$   
The value must not fall below the minimum cycle time.

Size	12	16	25
Min. cycle time	0.6	0.8	1.0

## Example for HSP-12-AP

Step 1:  
The following values are assumed:  
Working load m = 0.15 kg  
Dwell time  $t_e = 2 \times 50$  ms  
(50 ms per end position)

Step 2:  
The travel time can be determined from the graph:  
 $t = 400$  ms

Step 3:  
This gives us a cycle time:  
 $t_c = 400$  ms + 100 ms = 500 ms

Step 4:  
The table gives us a min. cycle time of 600 ms. This means that the movement has to be controlled.


# Handling modules HSP, pneumatic

FESTO

Technical data

## Permissible static/dynamic characteristic load values

Cross-guide

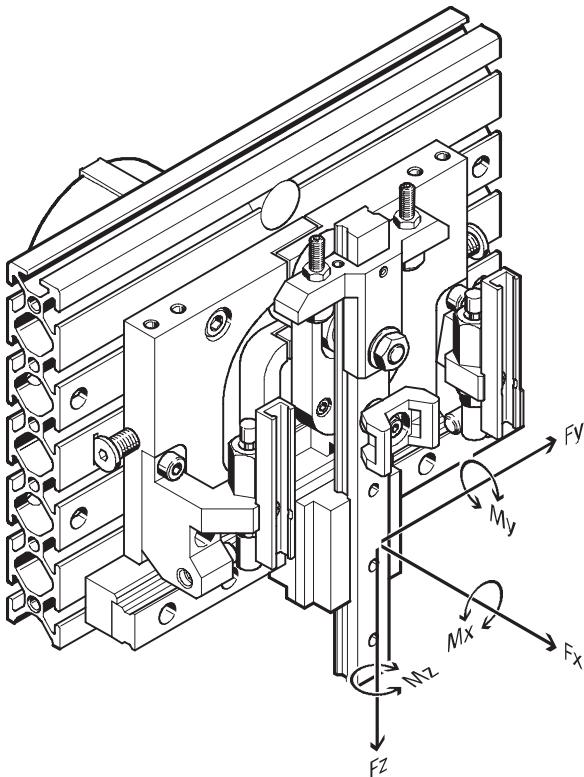

- - Note

The torques apply to the centre of the vertical guide.

### Combined load

The following torque equation must be satisfied with combined load:

$$\frac{M_x}{M_{x\text{perm.}}} + \frac{M_y}{M_{y\text{perm.}}} + \frac{M_z}{M_{z\text{perm.}}} \leq 1$$

### Dynamic characteristic load values

Size	12	16	25
Max. torques [Nm] M <sub>x<sub>perm.</sub></sub> , M <sub>y<sub>perm.</sub></sub> , M <sub>z<sub>perm.</sub></sub>	1.1	2.4	3.2

### Combined load

The following torque equation must be satisfied with combined load:

$$\frac{M_{ox}}{M_{ox\text{perm.}}} + \frac{M_{oy}}{M_{oy\text{perm.}}} + \frac{M_{oz}}{M_{oz\text{perm.}}} \leq 1$$

### Static characteristic load values

Size	12	16	25
Max. torques [Nm] M <sub>ox<sub>perm.</sub></sub> , M <sub>oy<sub>perm.</sub></sub> , M <sub>oz<sub>perm.</sub></sub>	5	10	15

# Handling modules HSP, pneumatic

Technical data

FESTO


## Stroke adjustment

### Y stroke:


- Once the HSP has been mounted, the Y strokes of the pick and place position can be set independently of each other.

### Z stroke:


- Differences in height, for example between a rotary indexing table and a transfer system, can be compensated after mounting.

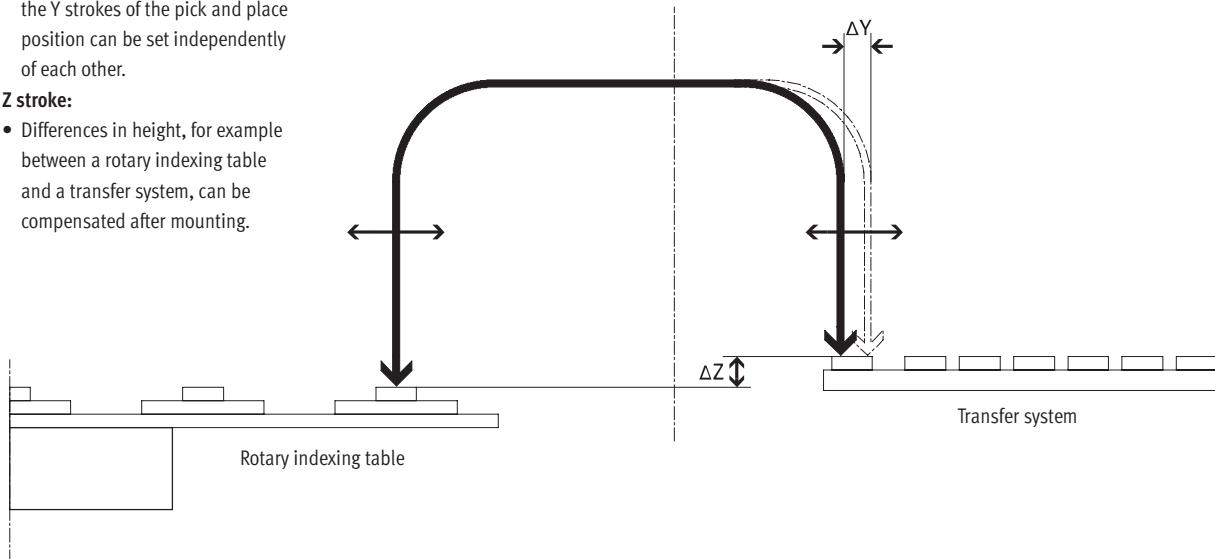

### Y-axis (horizontal)

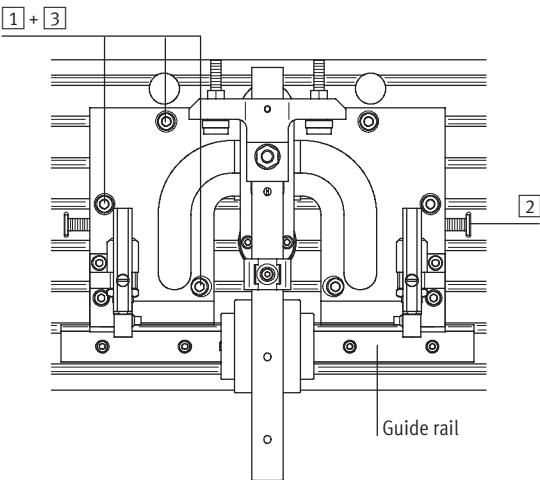

### Z-axis (vertical)

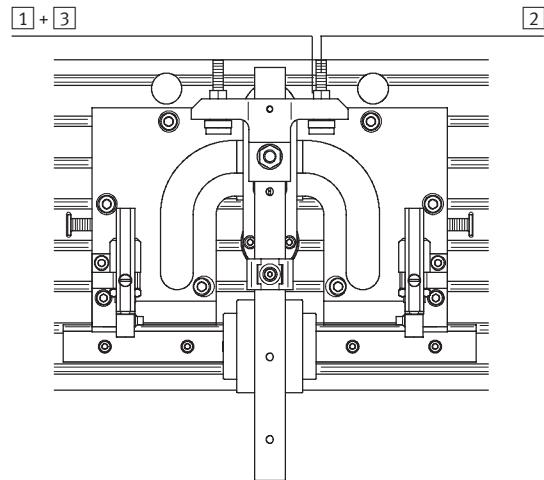

#### Procedure:

- 1 Loosen the screws
- 2 Adjust the slotted guide plate using the adjustment screw (the slotted guide plate must always make contact with the guide rail)
- 3 Tighten the screws

#### Procedure:

- 1 Loosen the lock nut
- 2 Set the desired Z stroke using the set screw
- 3 Tighten the lock nut

# Handling modules HSP, pneumatic

FESTO

Technical data

## Wait position module

Application and mode of operation

Figure 1:



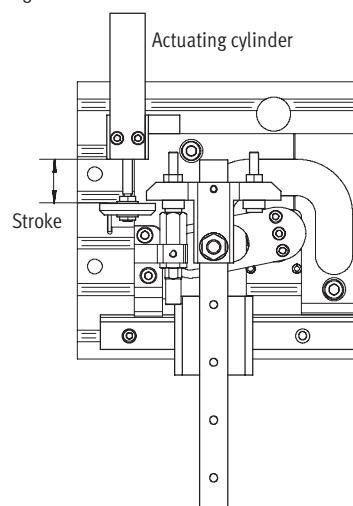


Figure 2:

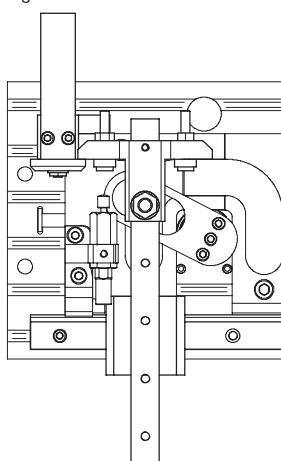

Circuit diagram for HSP with wait position module

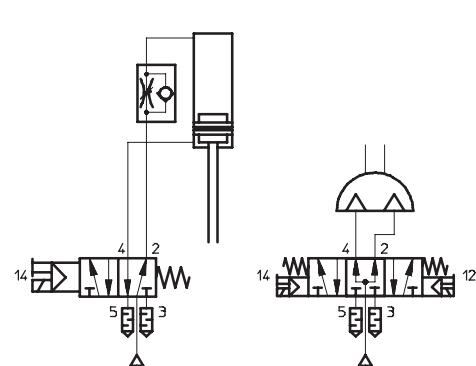


- - Note

When used in combination with the wait position module, the handling module HSP must be actuated using a 5/3-way valve (normally pressurised). The actuating cylinder is actuated using a 5/2-way valve. The actuating cylinder may only be used for "pulling" applications.


- [1] The handling module HSP is at the right-hand end position. The actuating cylinder is extended in its initial position.
- [2] The 5/3-way valve is reset once the handling module reaches the left-hand end position. (Figure 1)
- [3] During retraction, the actuating

- cylinder pulls the handling module upwards to its wait position. The operating area is then free. (Figure 2)
- [4] From the wait position, the handling module can move either to the initial position or to the other end position.

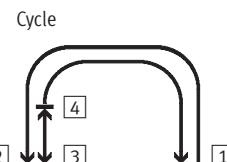

Size	HSP-12	HSP-16	HSP-25
Max. Z stroke of wait position module	15	25	25


## Mounting options

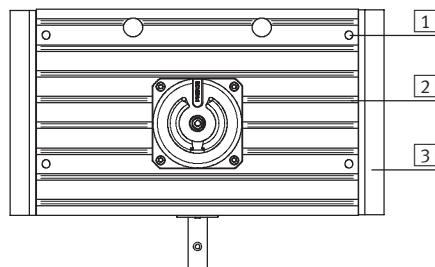


- [1] Direct mounting via through-holes
- [2] Via slot nuts
- [3] User-specific

## Examples:

With adapter kit HMBV

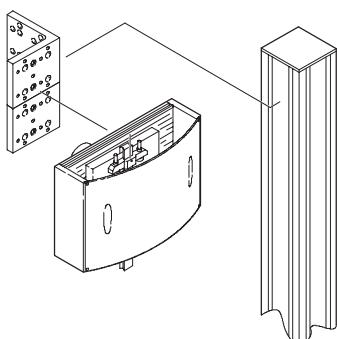

User-specific

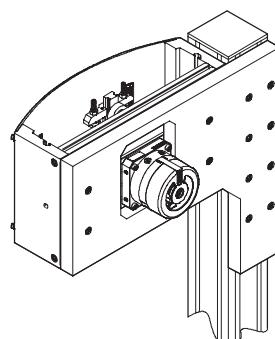


# Handling modules HSP, pneumatic

FESTO

Technical data

## Materials

Sectional view of handling module HSP

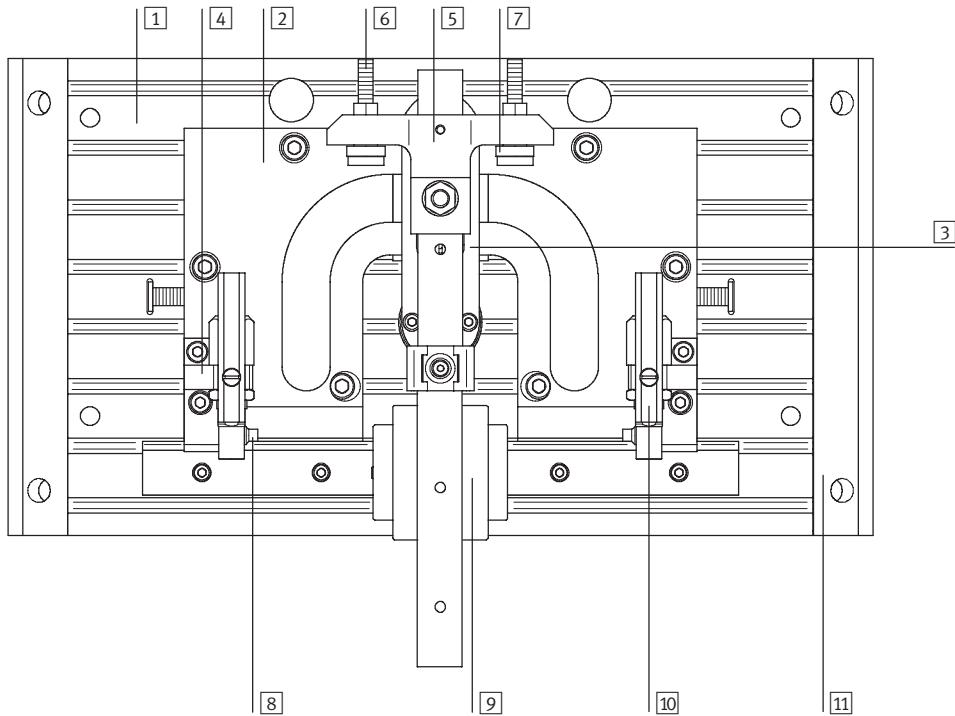

## Handling module

[1] Back plate	Wrought aluminium alloy, anodised
[2] Slotted guide plate	Case-hardened steel, burnished
[3] Swivel lever	Case-hardened steel, burnished
[4] Retainer	Wrought aluminium alloy, anodised
[5] Flange	Wrought aluminium alloy, anodised
[6] Adjusting screw	High-alloy steel
[7] Stop sleeve	High-alloy steel
[8] Pressure piece	High-alloy steel
[9] Cross-guide	Tempered steel
[10] Sensor rail	Wrought aluminium alloy, anodised
[11] Housing	Wrought aluminium alloy, anodised
Material note	Copper, PTFE and silicone-free


# Handling modules HSP, pneumatic

FESTO

Technical data

## Materials

Sectional view of swivel module DSM

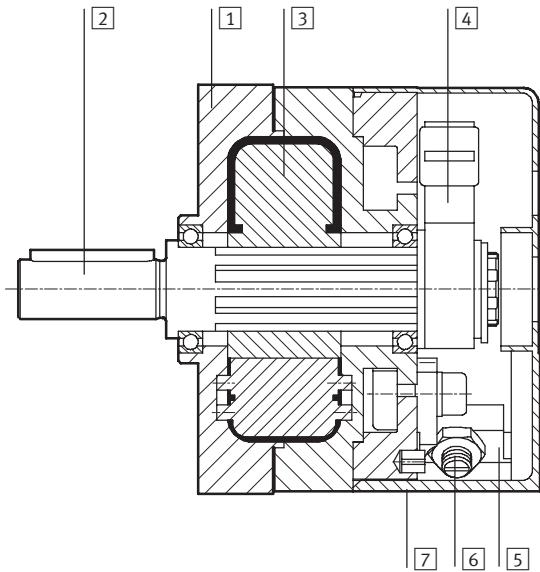

## Swivel module

[1]	Housing	Wrought aluminium alloy
[2]	Shaft	Steel with nickel-plated surface
[3]	Rotary vane	Fibreglass reinforced plastic
[4]	Stop lever	Anodised aluminium
[5]	Stop/shock absorber retainer	Stainless steel
[6]	Stop screw	Stainless steel
[7]	Cap	Fibreglass reinforced plastic
-	Seals	Polyurethane
Material note		Copper, PTFE and silicone-free

# Handling modules HSP, pneumatic


Technical data

**FESTO**


## Dimensions

With swivel module DSM


Download CAD data → [www.festo.com/en/engineering](http://www.festo.com/en/engineering)

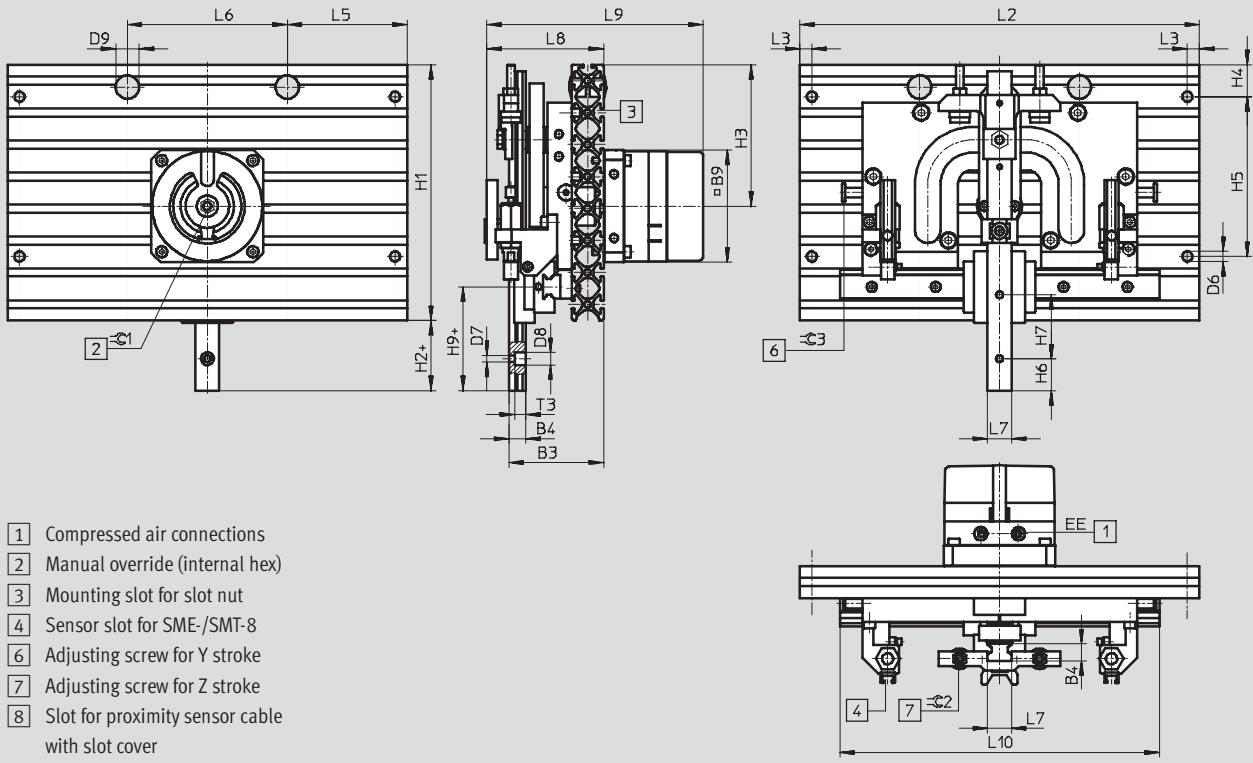

With swivel module DSM and protective cover

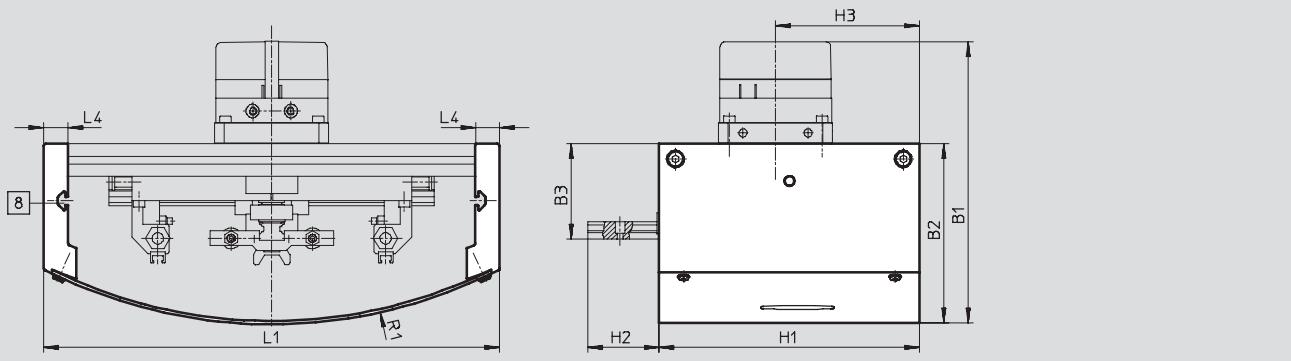

With wait position on right

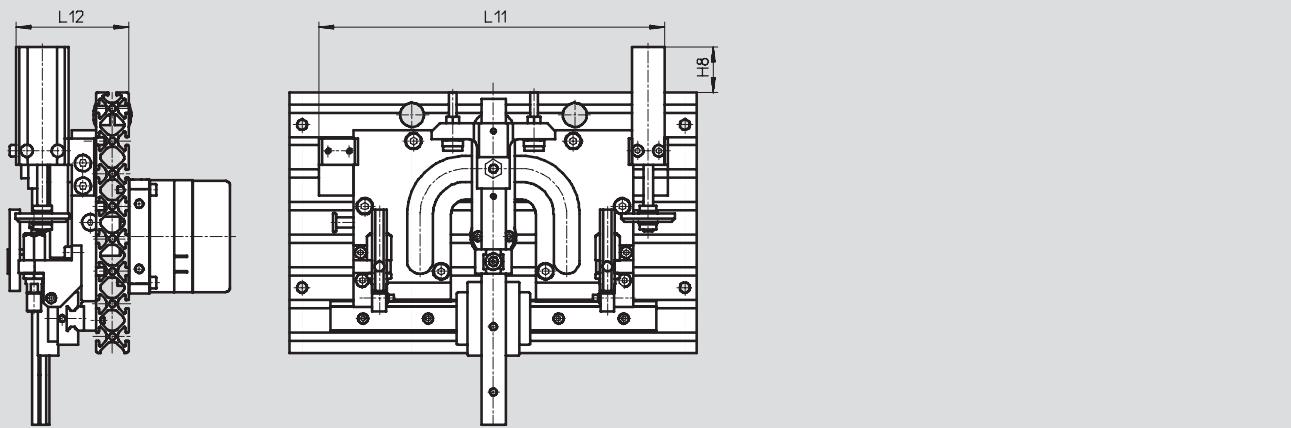

# Handling modules HSP, pneumatic

**FESTO**

Technical data

Size	B1	B2	B3	B4	B9	D6	D7	D8	D9
	±3	±2	±0.5			Ø	Ø	Ø	Ø
12	146	93	56	9 -0.03	56	6.3	3.5	6.2	13
16	173	111	60	10.6 -0.03	70	6.3	4.3	8	13
25	184	115	62	10 ±0.05	83	6.3	4.5	10	13

Size	EE	H1	H2	H3	H4	H5	H6	H7	H8
			±0.2			±0.2			
12	M5	120	34	66	40	40	12.5	25	30
16	M5	160	44	88.5	20	100	20	40	33
25	M5	200	75	110	40	100	20	30	13

Size	H9	L1	L2	L3	L4	L5	L6	L7	L8
		±0.6	±0.2						±1.2
12	44	200	170	7.5	15	85	–	12 -0.01/-0.05	65
16	65	280	250	7.5	15	75	100	15 -0.01/-0.05	73
25	101	370	340	7.5	15	30	280	23.2 ±0.05	80


Size	L9	L10	L11 <sup>1)</sup>	L12	R1	T3	=C1	=C2	=C3
	±3								
12	118	150	141.5	64	200	6	6	2	3
16	136	200	210	69	306	6.5	8	2.5	3
25	136	250	277	79	484	6.3	8	2.5	4

1) If the Y stroke is increased, the change in stroke must be added to the dimension.

Ordering data for HSP-...-AP									
Size	12	Part No.	Type	16	Part No.	Type	25	Part No.	Type
Without protective cover									
–	533 599	HSP-12-AP		533 607	HSP-16-AP		533 615	HSP-25-AP	
Wait position on right	533 603	HSP-12-AP-WR		533 611	HSP-16-AP-WR		533 619	HSP-25-AP-WR	
Wait position on left	533 604	HSP-12-AP-WL		533 612	HSP-16-AP-WL		533 620	HSP-25-AP-WL	
With protective cover									
–	533 600	HSP-12-AP-SD		533 608	HSP-16-AP-SD		533 616	HSP-25-AP-SD	
Wait position on right	533 601	HSP-12-AP-SD-WR		533 609	HSP-16-AP-SD-WR		533 617	HSP-25-AP-SD-WR	
Wait position on left	533 602	HSP-12-AP-SD-WL		533 610	HSP-16-AP-SD-WL		533 618	HSP-25-AP-SD-WL	

## Handling modules HSP, electric

Type codes

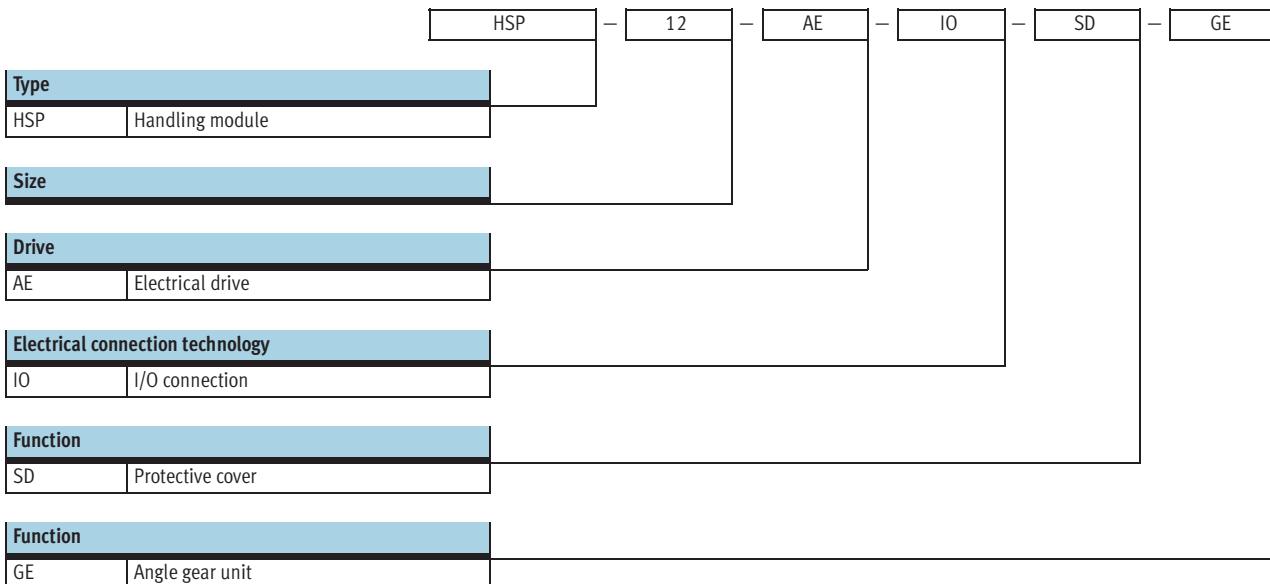

# Handling modules HSP, electric

Technical data

## Function



- - www.festo.com/en/  
Spare\_parts\_service

- - Diameter  
12, 16 and 25
- - Y-stroke length  
52 ... 170
- - Z-stroke length  
20 ... 70



## General technical data


Type	HSP-...-AE
Constructional design	Motor unit
	Cross-guide
	Guided motion sequence
Cushioning	Noise reduction via buffers
Type of mounting	With through-holes
	With slot nuts
Mounting position	Guide rail, vertical/horizontal

## Operating and environmental conditions

Type	HSP-...-AE
Ambient temperature [°C]	0 ... +50
Protection class handling module	IP40
Protection class motor	IP54
CE marking symbol (see conformity declaration)	As per EU EMC directive

## Stroke [mm]

Size	12	16	25
Y-axis			
Stroke	52 ... 68	90 ... 110	130 ... 170
Z-axis			
Stroke Z	20 ... 30	35 ... 50	50 ... 70
Working stroke Za	5 ... 15	5 ... 20	5 ... 25

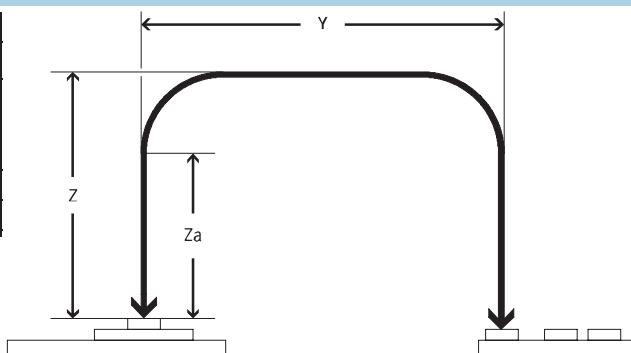

## Forces [N]

Size	12	16	25
Stroke [mm]	52	68	90
Z-axis			
Effective force at 40% of drive torque (preset)	10	10	15
Max. effective force relative to stroke	22	17	24
Y-axis			
Permissible process force	30	35	50

## Handling modules HSP, electric

Technical data


Weight [g]			
Size	12	16	25
HSP-...-AE	3700	5300	9000
HSP-...-AE-SD	4500	6600	10700
HSP-...-AE-GE	4000	5700	10100
HSP-...-AE-SD-GE	4800	7000	11800

### Repetition accuracy [mm]

To ensure low-vibration operation, the working load should be mounted as close as possible to the guide rail of the handling module.

Repetition accuracy is guaranteed by

mounting the working load (adapter plate, rotary drive and/or gripper, gripper finger, workpiece) within the mounting surface of the adapter kit HAPG.

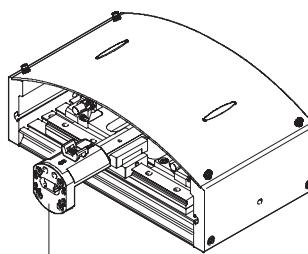


Mounting surface of HAPG

Size	12	16	25
Repetition accuracy	At end positions ±0.01	±0.01	±0.02
	Intermediate positions < 1.5	< 1.5	< 2

### Travel times t as a function of working load m

The travel time t is the time taken for the handling module to move from one end position to the other and back again.

The working load m is the load attached to the vertical guide rail (e.g. adapter, gripper, semi-rotary drive and workpiece)

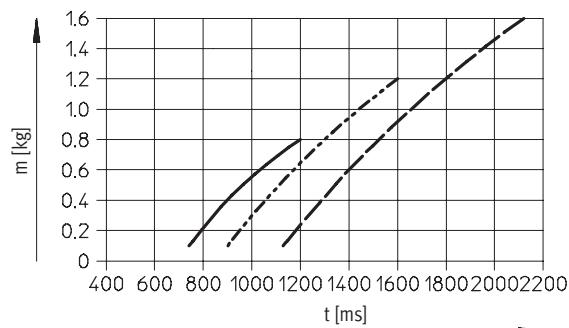


HSP-12-AE  
 HSP-16-AE  
 HSP-25-AE

# Handling modules HSP, electric

Technical data

## Permissible static/dynamic characteristic load values

Cross-guide

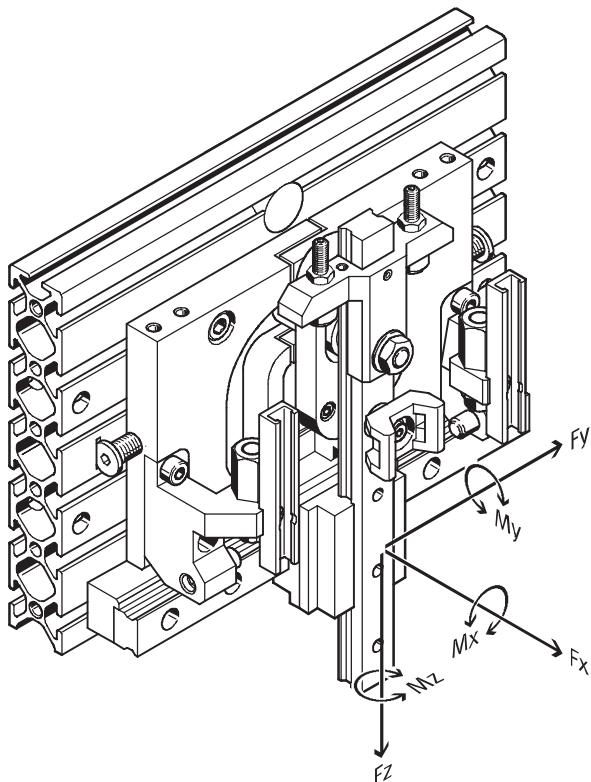

- - Note

The torques apply to the centre of the vertical guide.

### Combined load

The following torque equation must be satisfied with combined load:

$$\frac{M_x}{M_{x\text{perm.}}} + \frac{M_y}{M_{y\text{perm.}}} + \frac{M_z}{M_{z\text{perm.}}} \leq 1$$

#### Dynamic characteristic load values

Size	12	16	25
Max. torques [Nm] $M_{x\text{perm.}}, M_{y\text{perm.}}, M_{z\text{perm.}}$	1.1	2.4	3.2

### Combined load

The following torque equation must be satisfied with combined load:

$$\frac{M_{ox}}{M_{ox\text{perm.}}} + \frac{M_{oy}}{M_{oy\text{perm.}}} + \frac{M_{oz}}{M_{oz\text{perm.}}} \leq 1$$

#### Static characteristic load values

Size	12	16	25
Max. torques [Nm] $M_{ox\text{perm.}}, M_{oy\text{perm.}}, M_{oz\text{perm.}}$	5	10	15

## Handling modules HSP, electric

Technical data


### Stroke adjustment

#### Y stroke:


- Once the HSP has been mounted, the Y strokes of the pick and place position can be set independently of each other.

#### Z stroke:

- Differences in height, for example between a rotary indexing table and a transfer system, can be compensated after mounting.

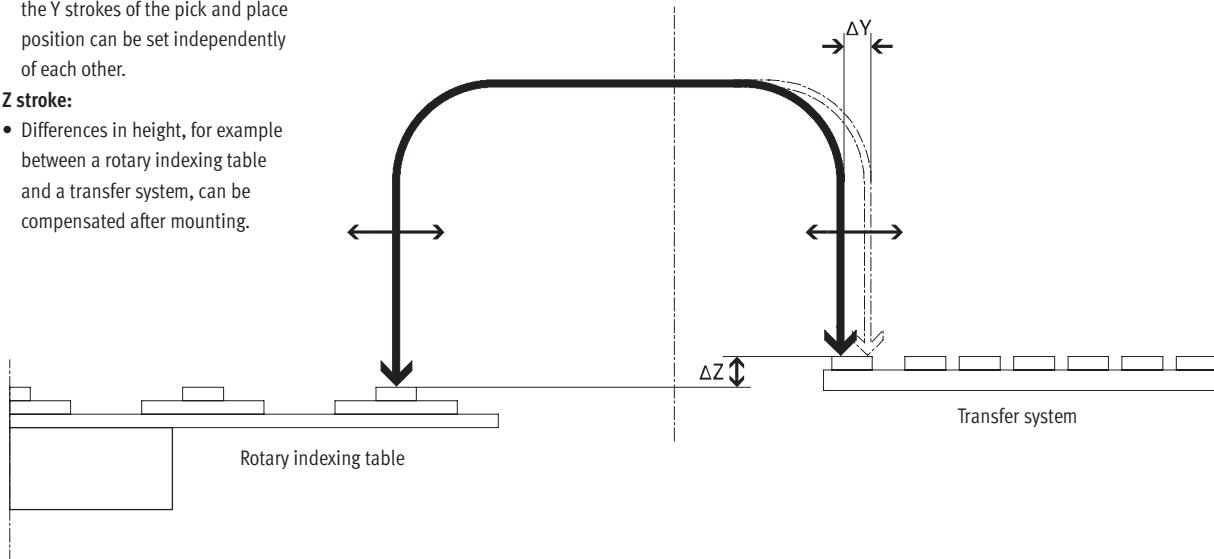


### Y-axis (horizontal)

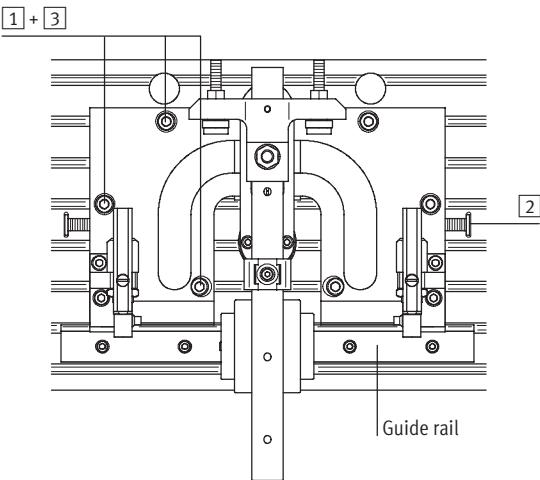

#### Procedure:

- 1 Loosen the screws
- 2 Adjust the slotted guide plate using the adjustment screw (the slotted guide plate must always make contact with the guide rail)
- 3 Tighten the screws

### Z-axis (vertical)

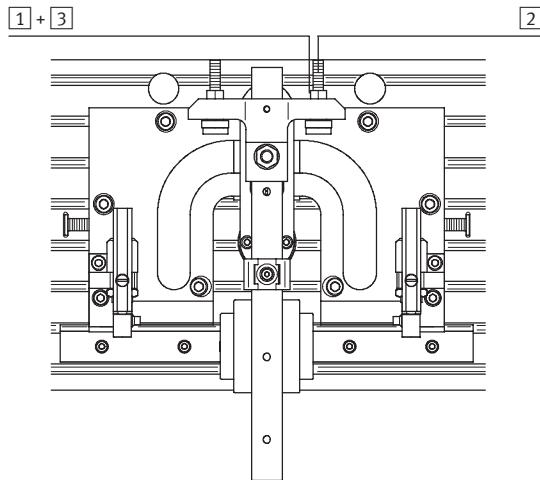

#### Procedure:


- 1 Loosen the lock nut
- 2 Set the desired Z stroke using the set screw
- 3 Tighten the lock nut

# Handling modules HSP, electric

Technical data

**Materials**

Sectional view

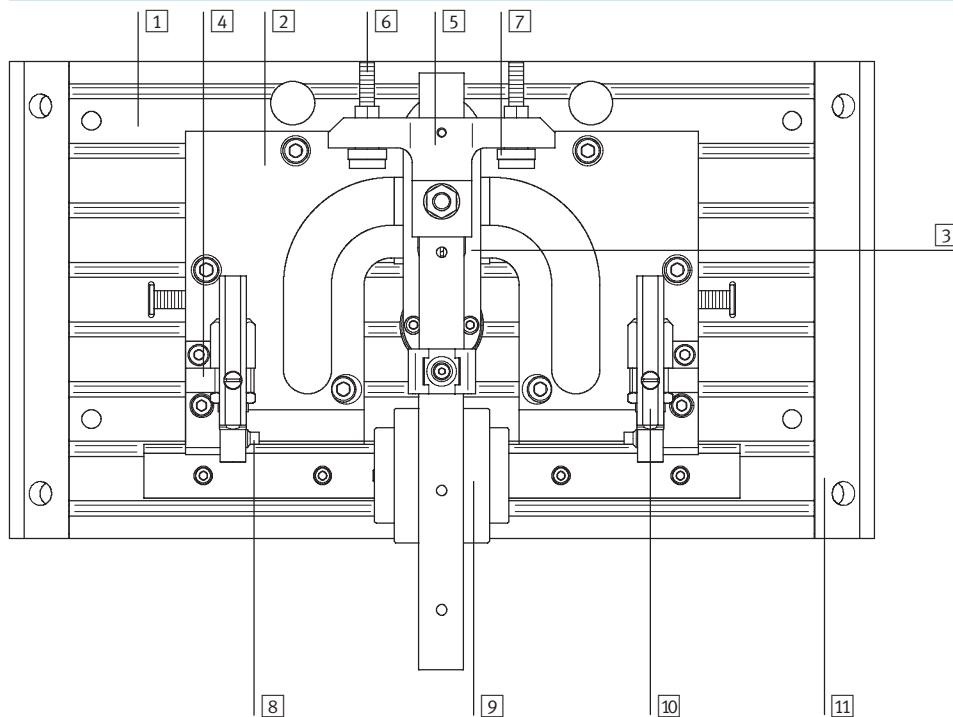**Handling module**


[1]	Back plate	Wrought aluminium alloy, anodised
[2]	Slotted guide plate	Case-hardened steel, burnished
[3]	Swivel lever	Case-hardened steel, burnished
[4]	Retainer	Wrought aluminium alloy, anodised
[5]	Flange	Wrought aluminium alloy, anodised
[6]	Adjusting screw	High-alloy steel
[7]	Stop sleeve	High-alloy steel
[8]	Pressure piece	High-alloy steel
[9]	Cross-guide	Tempered steel
[10]	Sensor rail	Wrought aluminium alloy, anodised
[11]	Housing	Wrought aluminium alloy, anodised
Material note		Copper, PTFE and silicone-free

## Handling modules HSP, electric


Technical data

### Motor mounting variants


Motor pointing upwards/to side

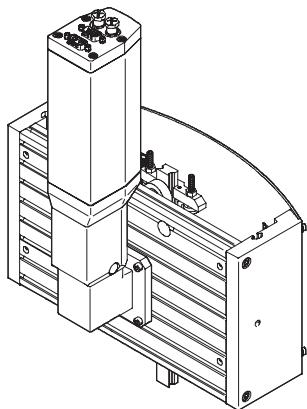


Control panel and access to the connections can be rotated according to space requirements.

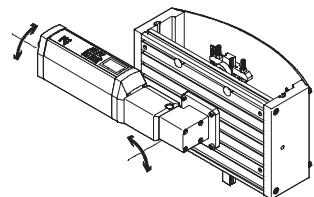

Motor towards rear

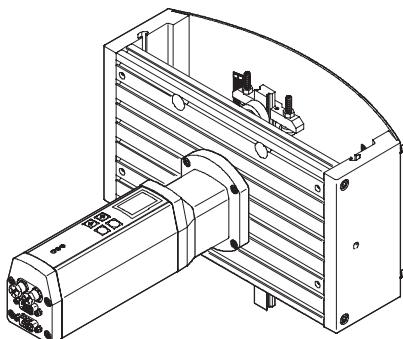

### Mounting options

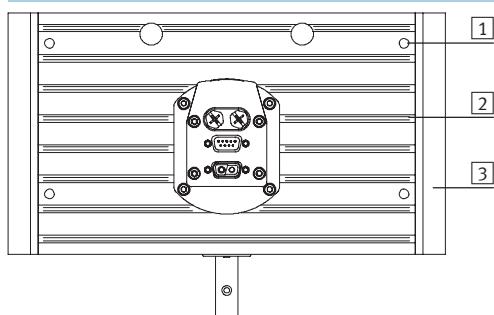

[1] Direct mounting via through-holes



[2] Via slot nuts

[3] User-specific

### Examples:

With adapter kit HMBV

User-specific

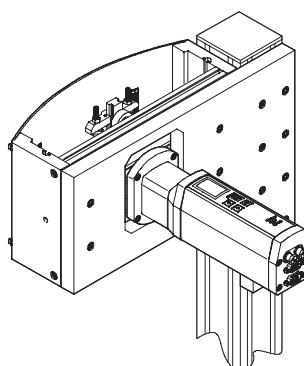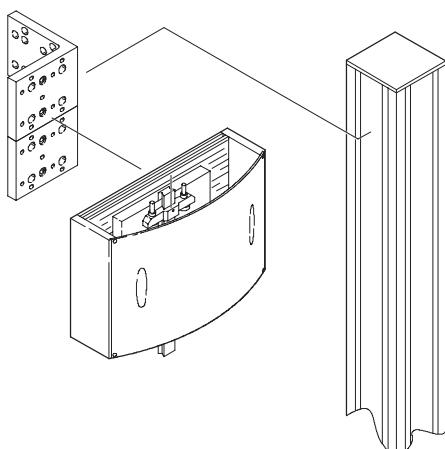

# Handling modules HSP, electric

Technical data


Servo-motor unit MTR-DCI-...-HM



General technical data			→ Volume 5
Type for handling module	MTR-DCI-...	HSP-12-AE	HSP-16/25-AE
Rotary position generator	Optical encoder		
No. of increments/revolution	500		
Temperature monitoring	Silicon absolute temperature sensor, switches off at temperatures >70 °C		
Display resolution	128 x 64 pixels		
Type of mounting	Can be screwed on or clamped to gearing flange		
Gearing type	Planetary gear unit		
Gear reduction ratio	6.752 (7:1); 1-stage	13.73 (14:1); 2-stage	

Electrical data			→ Volume 5
Type for handling module	MTR-DCI-42-HM	HSP-12/16-AE	MTR-DCI-52-HM
Nominal voltage [V DC]	24 ±10%	24 ±10%	24 ±10%
Nominal current (motor) [A]	2	5.1	5.1
Peak current [A]	3.8	7.7	7.7
Nominal power (motor) [W]	48	122.4	122.4
Max. current [mA] (digital logic outputs)	200	60	60
No. of digital logic inputs (with I/O connection)	6		
No. of digital logic outputs (with I/O connection)	2		
Parameterisation interface	RS232, 9600 baud		

## Pin allocation

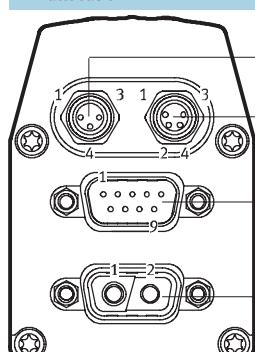

[1]

## [1] 3-pin M8 socket

Pin	Function
1	Unused
3	Unused
4	Unused
-	-

[2]

## [2] RS 232 interface, 4-pin M8 socket

Pin	Function
1	0 V
2	Transmitted Data (TxD)
3	Received Data (RxD)
4	-

[3]

## [3] I/O interface, 9-pin SUB-D plug

Pin	Function
1	Travel time coding, bit 0
2	Travel time coding, bit 1
3	Travel time coding, bit 2
4	Travel time coding, bit 3
5	Start bit
6	Enable bit
7	Ready signal output
8	MC signal output
9	0 V

[4]

## [4] Power supply, 2-pin plug

Pin	Function
1	24 V DC
2	0 V
-	-
-	-
-	-
-	-
-	-
-	-
-	-

## Handling modules HSP, electric

Technical data


### Simple solution for your application

Advantages of handling module HSP-....AE – Installation and commissioning

- Handling module is supplied with motor already attached.
- Less wiring required thanks to integration of controller concept.
- Motor with gear unit, controller and power electronics are all fitted in one housing. This means that only one unit has to be taken into consideration when planning the system.
- Only one voltage supply of 24 V is required for commissioning.
- Commissioning via:
  - control panel on handling module
  - PC using FESTO Configuration Tool (FCT) software

### Installation and commissioning


Step 1: Mount the handling module

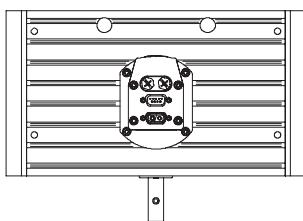

- Wide choice of mounting options

→ 1 / 7.2-24


Step 2: Mechanically adjust the end positions

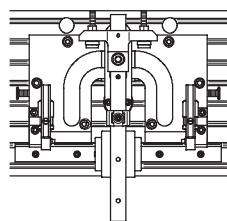

- End positions of strokes along Y- and Z-axes can be adjusted independently of each other

→ 1 / 7.2-22

Step 3: Connect the 24 V voltage supply

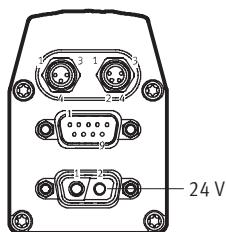

- Plug and work:  
Connect voltage –  
HSP is ready for operation

→ 1 / 7.2-25


### Step 4: Parameterisation either via control panel on motor or using FCT software

Control panel on motor



- Clearly arranged LCD display
- All data is entered and saved using 4 keys:
  - menu key
  - arrow keys for changing parameter values or traversing records
  - key for confirming the entered actions

FCT software – Festo Configuration Tool

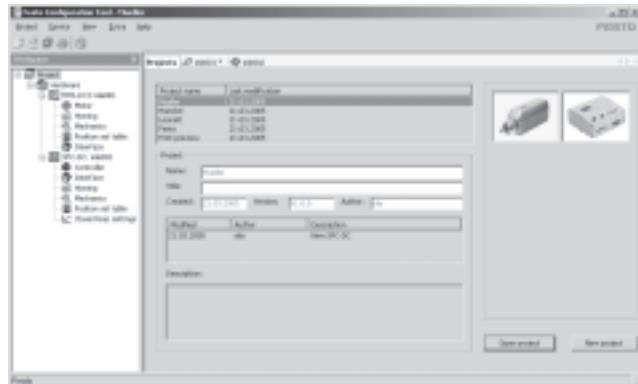


- All the drives in a system can be managed and archived in the common project
- Project and data management for all supported device types
- Simple to use thanks to graphically supported parameter entry
- Universal mode of operation for all drives
- Working offline at your desk or online at the machine

## Handling modules HSP, electric

Technical data

Step 5: Selection of predefined motion sequences (HSP mode) via the control panel or using the FCT software

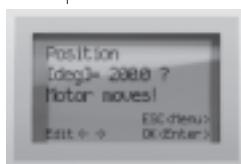

HSP mode 1



- Precise travel to the mechanical end position

HSP mode 2




- Additional adjustable wait position module directly above workpiece/workpiece carrier
- Handling of parts with different heights
- Insertion procedures at different speeds

HSP mode 3



- Additional ejector station for reject parts or quality inspection
- Precise travel to end position with setup position

HSP mode 4

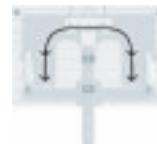

- Insertion procedures with defined force
- Continued travel from wait position with adjustable torque

HSP mode 5



- Insertion procedures with defined force and additional intermediate position
- Continued travel from wait position with adjustable torque

Step 6: Fine adjustment

- Adjustment of preset positions, speeds and torques
- Addition of new traversing records (where necessary)


## Handling modules HSP, electric

Technical data


### Dimensions

With motor unit pointing upwards

Download CAD data → [www.festo.com/en/engineering](http://www.festo.com/en/engineering)

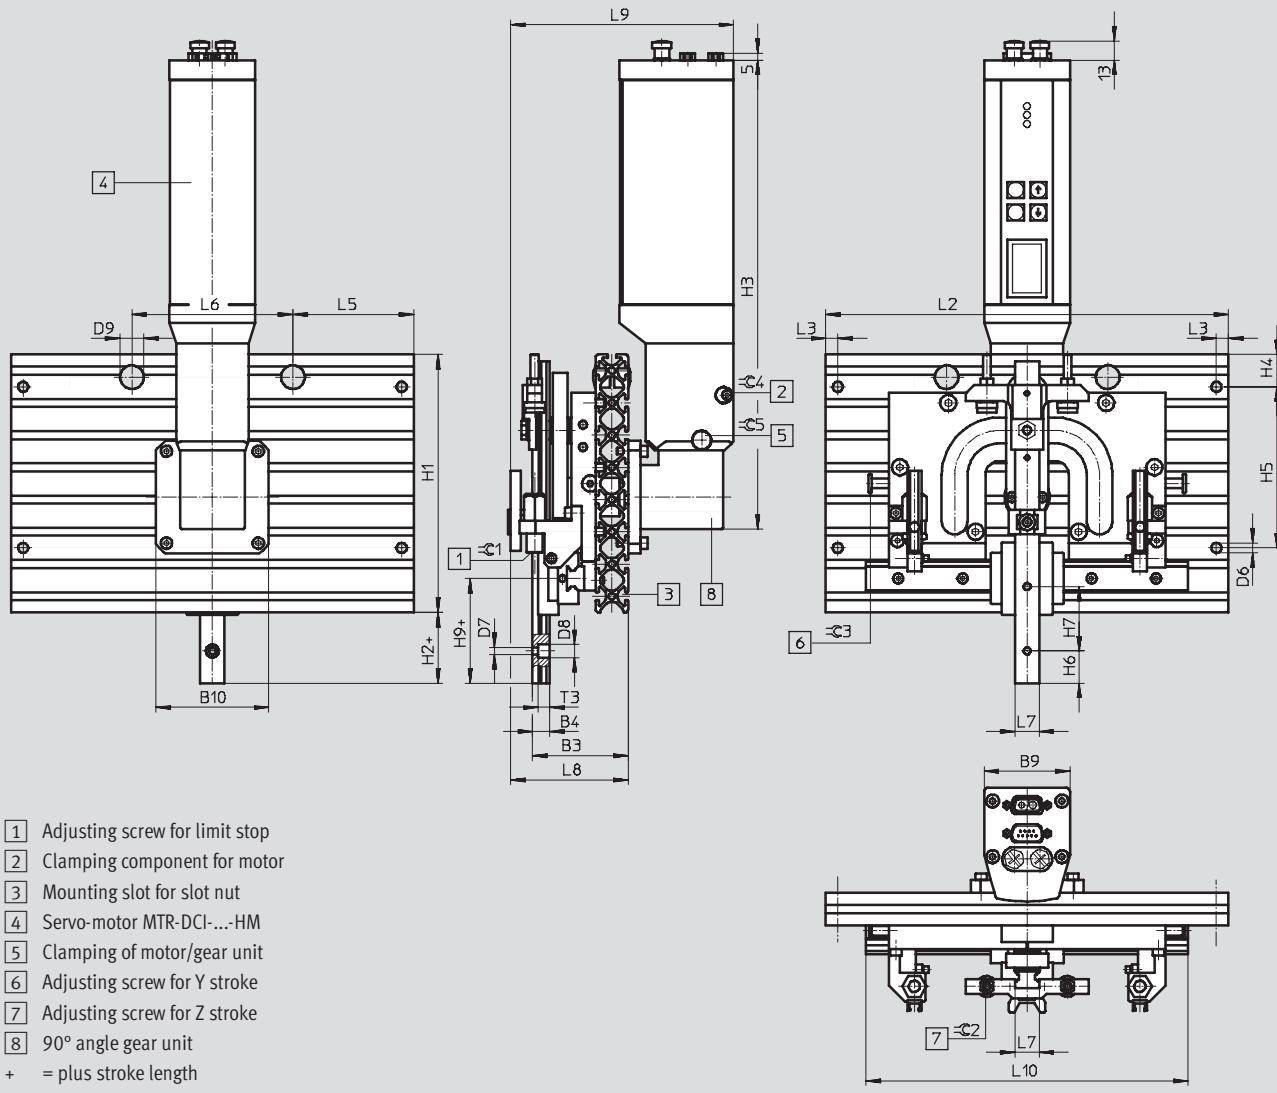

With motor unit pointing sideways

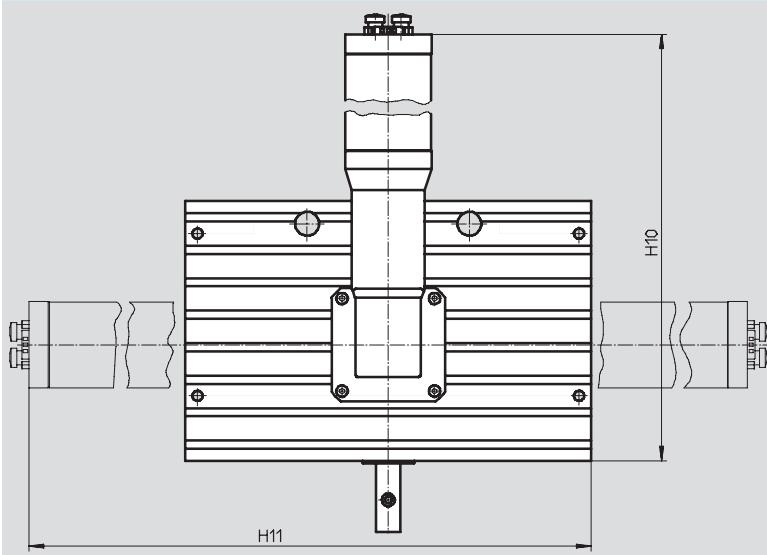


# Handling modules HSP, electric

Technical data

## Dimensions

With motor unit pointing upwards and protective cover

Download CAD data → [www.festo.com/en/engineering](http://www.festo.com/en/engineering)

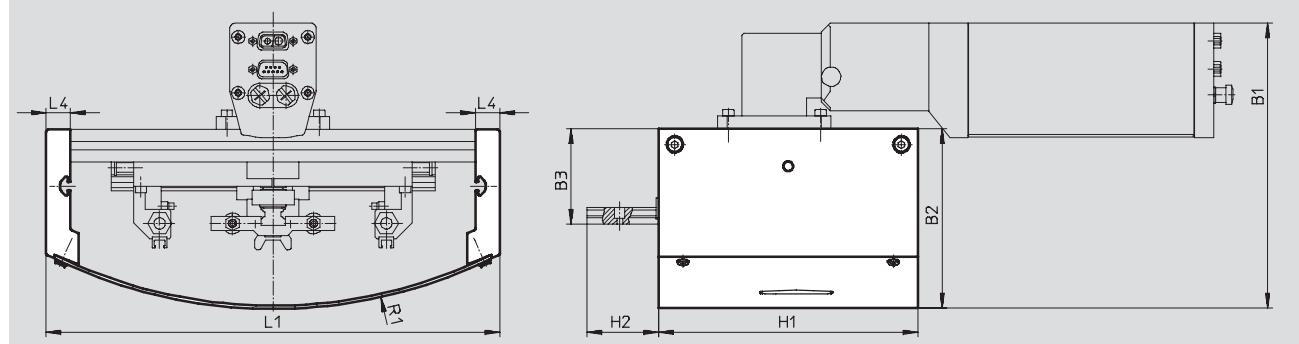

Size	B1	B2	B3	B4	B9	B10	D6	D7	D8
	±3	±2	±0.5				Ø	Ø	Ø
12	159	93	56	9 -0.03	53.3	59	6.3	3.5	6.2
16	178	111	60	10.6 -0.03	53.3	70	6.3	4.3	8
25	203	115	62	10 ±0.05	69.5	100	6.3	4.5	10

Size	D9 Ø	H1	H2	H3	H4	H5	H6	H7	H9	H10
			±0.2			±0.2				
12	13	120	34	278	40	40	12.5	25	44	312
16	13	160	44	291	20	100	20	40	65	343
25	13	200	75	321	40	100	20	30	101	391

Size	H11	L1	L2	L3	L4	L5	L6	L7	L8
		±0.6	±0.2						±1.2
12	344	200	170	7.5	15	85	-	12 -0.01/-0.05	65
16	397	280	250	7.5	15	75	100	15 -0.01/-0.05	73
25	485	370	340	7.5	15	30	280	23.2 ±0.05	80

Size	L9 ±3	L10	R1	T3	=C1	=C2	=C3	=C4	=C5	Woodruff key to DIN 6885 <sup>1)</sup>
12	118	150	200	6	2.5	2	3	2.5	2.5	A2x2x12
16	136	200	306	6.5	3	2.5	3	2.5	2.5	A3x3x18
25	136	250	484	6.3	3	2.5	4	5	3	A4x4x25

1) included in scope of delivery

## Handling modules HSP, electric


Technical data

**FESTO**


### Dimensions

With motor unit towards the rear

Download CAD data → [www.festo.com/en/engineering](http://www.festo.com/en/engineering)

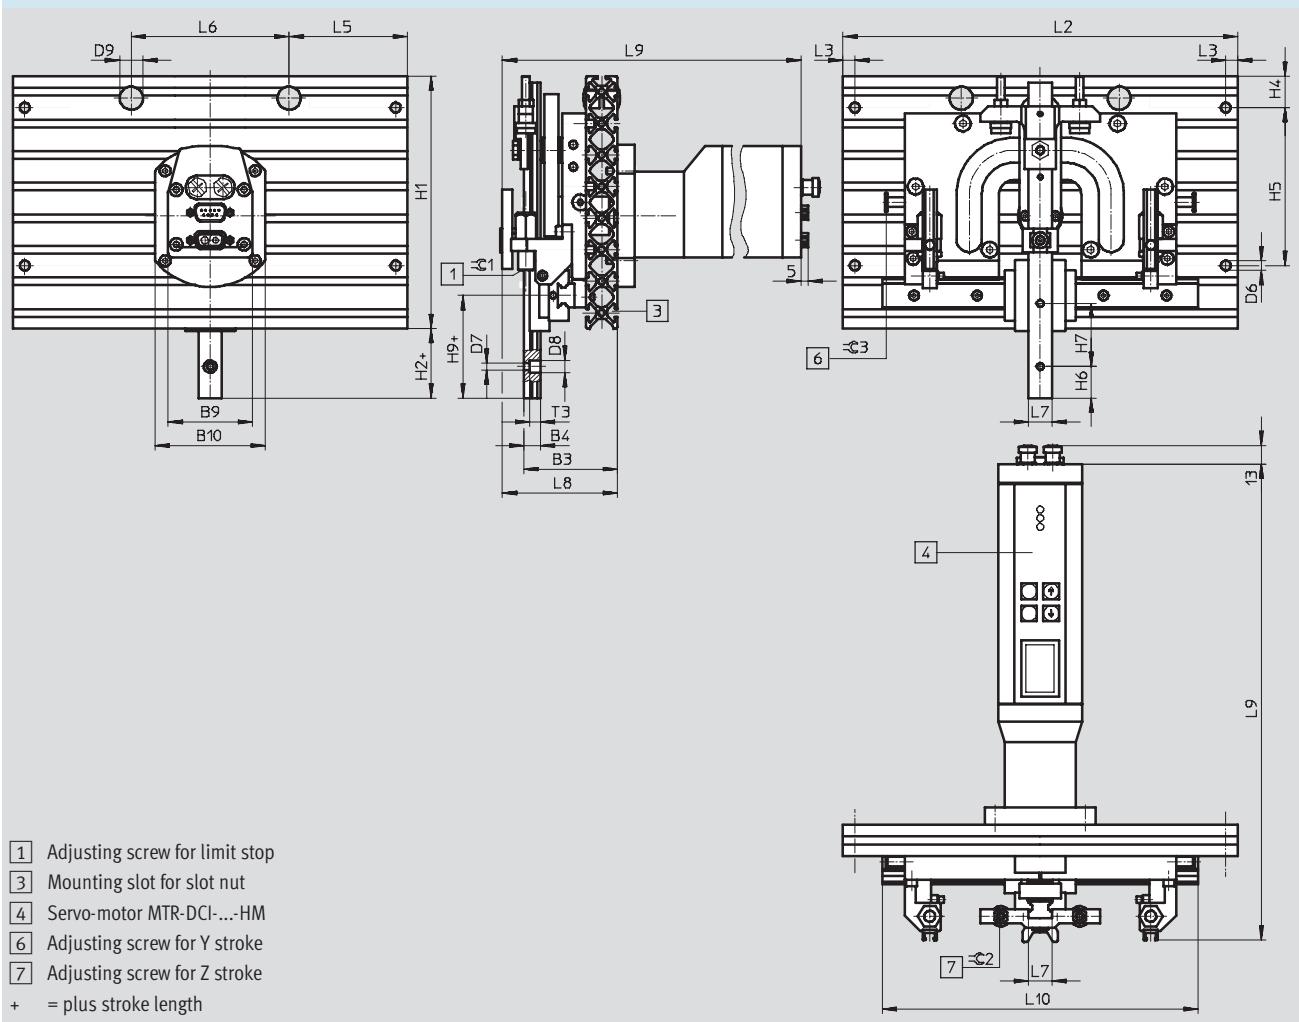

With motor unit towards the rear and protective cover

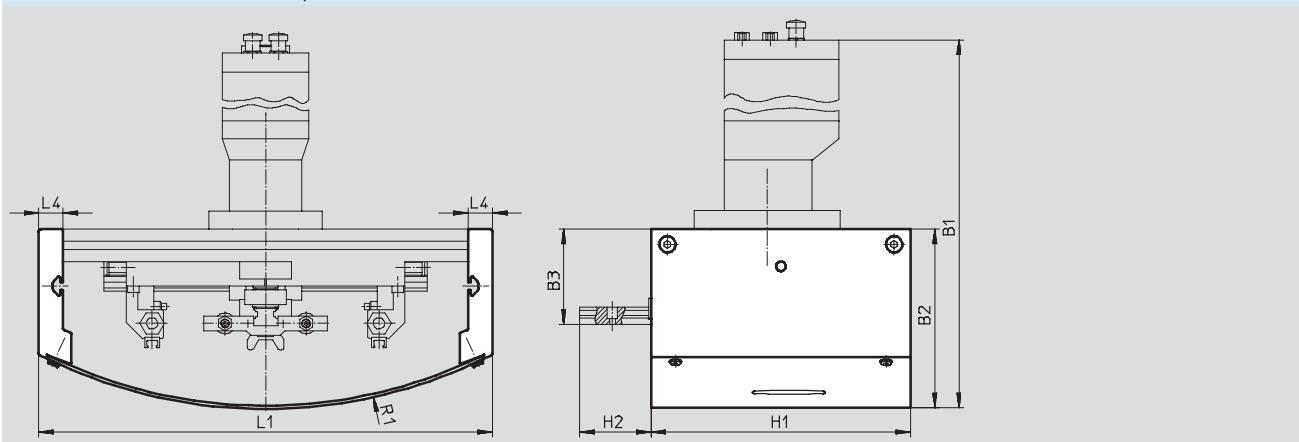

**Handling modules HSP, electric**

Technical data

Size	B1	B2	B3	B4	B9	B10	D6 Ø	D7 Ø
	±3	±2	±0.5					
12	308	93	56	9 -0.03	53.3	71	6.3	3.5
16	339	111	60	10.6 -0.03	53.3	70	6.3	4.3
25	372	115	62	10 ±0.05	69.5	90	6.3	4.5

Size	D8 Ø	D9 Ø	H1	H2	H4	H5	H6	H7
				±0.2		±0.2		
12	6.2	13	120	34	40	40	12.5	25
16	8	13	160	44	20	100	20	40
25	10	13	200	75	40	100	20	30

Size	H9	L1	L2	L3	L4	L5	L6	L7
		±0.6	±0.2					
12	44	200	170	7.5	15	85	–	12 -0.01/-0.05
16	65	280	250	7.5	15	75	100	15 -0.01/-0.05
25	101	370	340	7.5	15	30	280	23.2 ±0.05

Size	L8	L9	L10	R1	T3	=C1	=C2	=C3
	±1.2	±3						
12	65	280	150	200	6	6	2	3
16	73	301	200	306	6.5	8	2.5	3
25	80	337	250	484	6.3	8	2.5	4


**Ordering data for HSP-...-AE**

Size	12 Part No.	Type	16 Part No.	Type	25 Part No.	Type
I/O connection						
Without gear unit						
Without protective cover	539 536	HSP-12-AE-IO	539 544	HSP-16-AE-IO	539 552	HSP-25-AE-IO
With protective cover	539 538	HSP-12-AE-IO-SD	539 546	HSP-16-AE-IO-SD	539 554	HSP-25-AE-IO-SD
With angle gear unit						
Without protective cover	539 537	HSP-12-AE-IO-GE	539 545	HSP-16-AE-IO-GE	539 553	HSP-25-AE-IO-GE
With protective cover	539 539	HSP-12-AE-IO-SD-GE	539 547	HSP-16-AE-IO-SD-GE	539 555	HSP-25-AE-IO-SD-GE

## Handling modules HSP, without drive

Type codes

**FESTO**

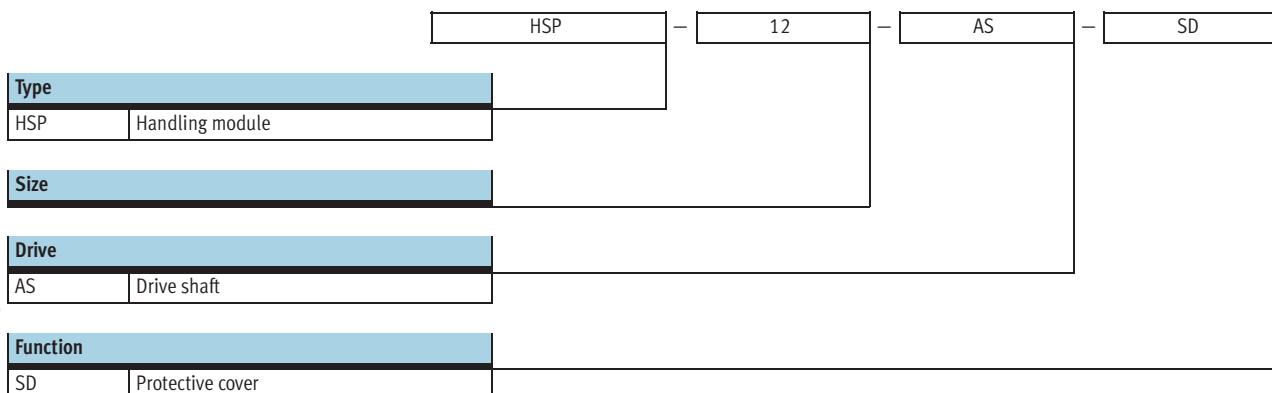


# Handling modules HSP, without drive

Technical data

**FESTO**

## Function

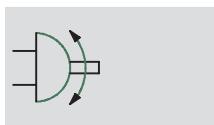

- - www.festo.com/en/  
Spare\_parts\_service

- - Diameter  
12, 16 and 25
- - Y-stroke length  
52 ... 170
- - Z-stroke length  
20 ... 70




## General technical data

Type	HSP-...-AS
Constructional design	Drive shaft
	Cross-guide
	Guided motion sequence
Cushioning	Noise reduction via buffers
Type of mounting	With through-holes
	With slot nuts
Mounting position	Guide rail, vertical/horizontal

## Weight [g]

Size	12	16	25
HSP-...-AS	1800	2700	6200
HSP-...-AS-SD	2500	3200	7400

## Permissible static/dynamic characteristic load values

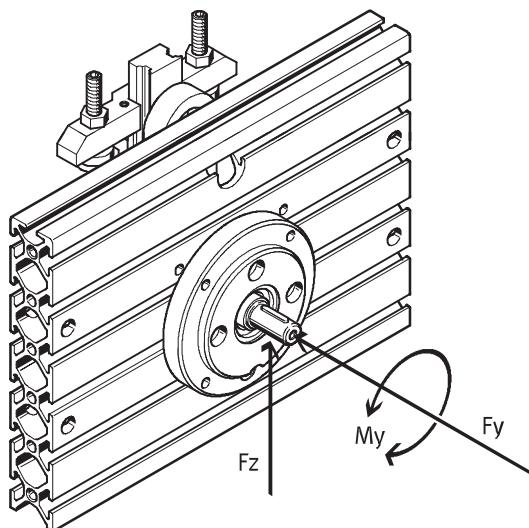

- - Note

Technical data for mechanical  
components ➔ 1 / 7.2-21.

## Characteristic load values


Size	12	16	25
Max. axial force $F_{Yperm.}$ [N]	18	30	50
Max. radial force $F_{Zperm.}$ [N]	45	75	120
Max. drive torque $M_{Yperm.}$ [Nm]	1.25	2.5	5

# Handling modules HSP, without drive

FESTO


Technical data

Mass moment of inertia  $J_0$  as a function of working load  $m$  (for cylinder sizing)

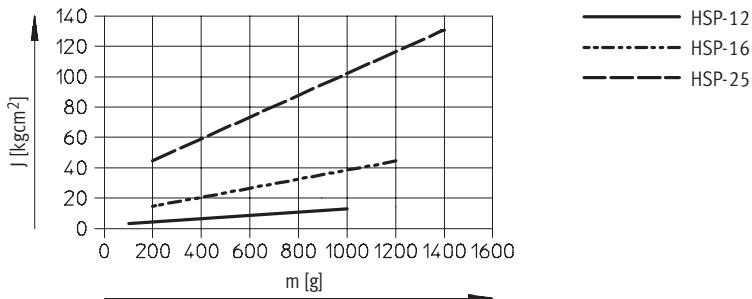

## Dimensions

Download CAD data → [www.festo.com/en/engineering](http://www.festo.com/en/engineering)

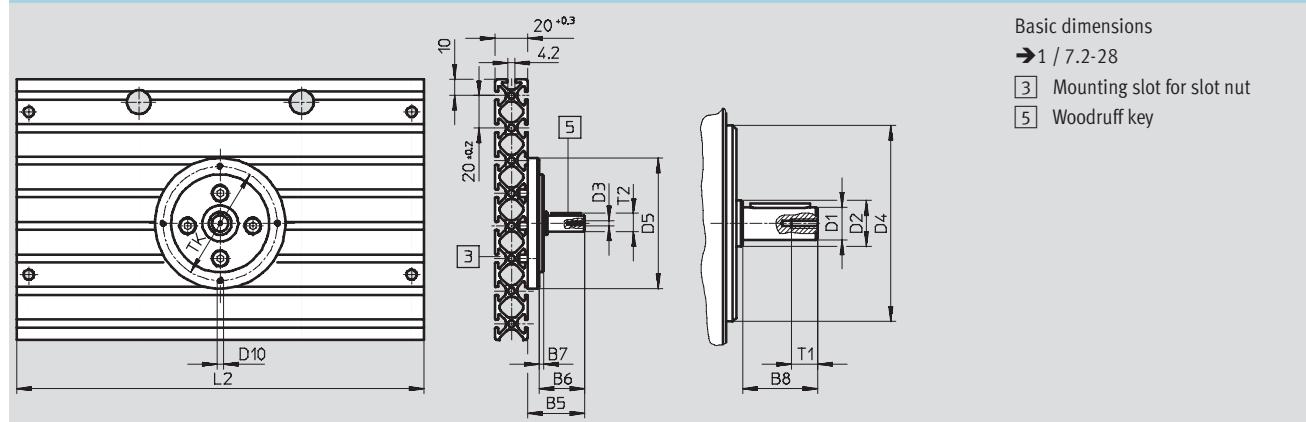

Basic dimensions

→ 1 / 7.2-28

[3] Mounting slot for slot nut

[5] Woodruff key

Size	B5	B6	B7	B8	D1 ∅ g7	D2 ∅	D3
12	29	22	3	17.5	8	12.5	M3
16	35	28	3	23	10	14	M3
25	44	36	4	30	12	17	M4

Size	D4 ∅ f8	D5 ∅	D10	L2 ±0.2	T1	T2	TK max. ±0.1
12	45	65	M4	170	9	8.8	55
16	60	80	M4	250	9	11.2	70
25	70	95	M5	340	10	13.5	82

# Handling modules HSP, without drive

**FESTO**

Technical data

Ordering data for HSP-...-AS											
Size	12			16			25			Part No.	Type
	Part No.	Type	Part No.	Type	Part No.	Type	Part No.	Type	Part No.		
Without protective cover	533 605	HSP-12-AS	533 613	HSP-16-AS	533 621	HSP-25-AS					
With protective cover	533 606	HSP-12-AS-SD	533 614	HSP-16-AS-SD	533 622	HSP-25-AS-SD					

# Handling modules HSP


Accessories

**FESTO**

## Adapter kit HAPG-B

Material:

Wrought aluminium alloy, anodised

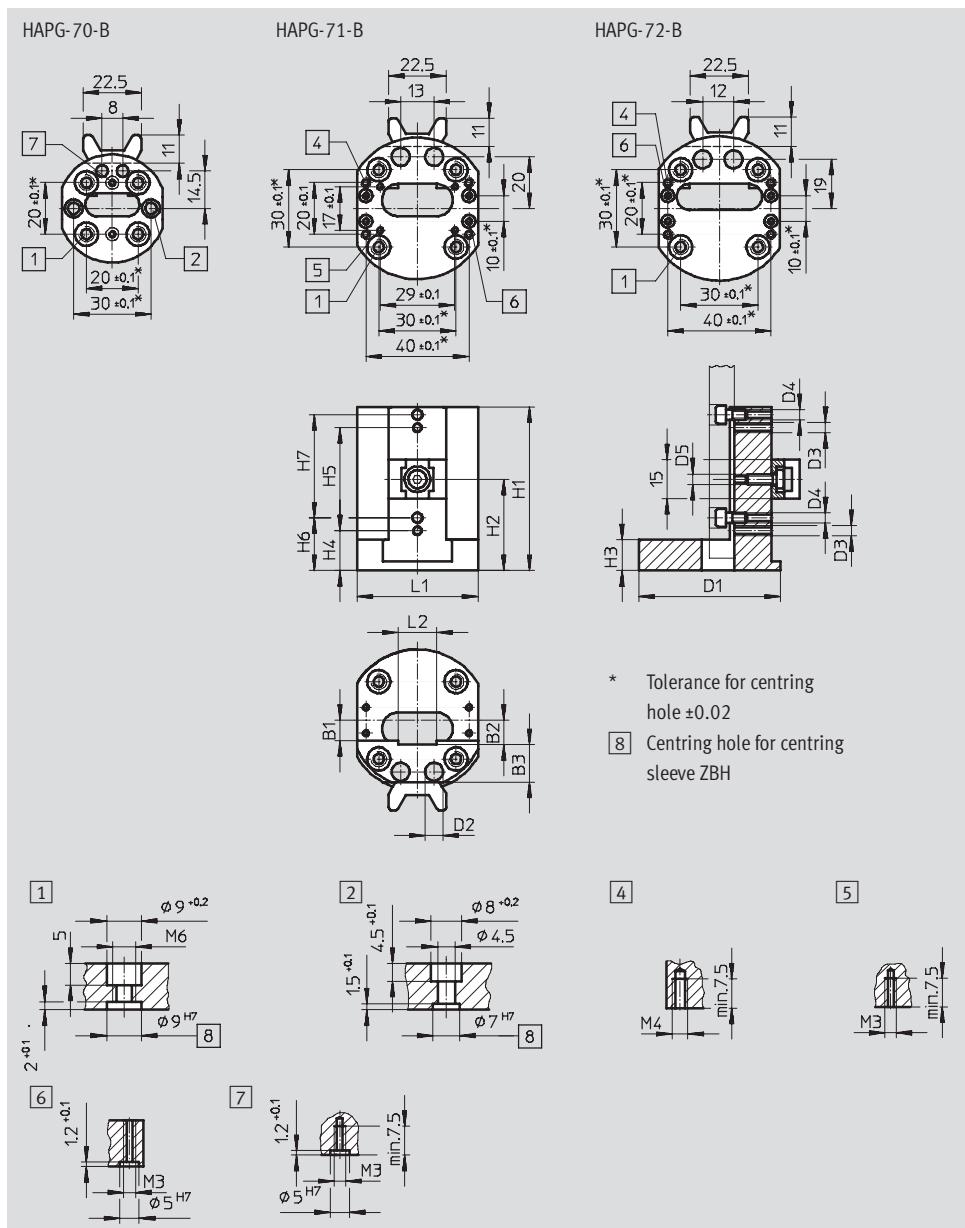

\* Tolerance for centring hole  $\pm 0.02$

[8] Centring hole for centring sleeve ZBH

### Dimensions and ordering data

Type	B1	B2	B3	D1 Ø	D2 Ø	D3	D4	D5	H1	H2
HAPG-70-B	5	6	11.5	42	4.5	—	M3	M4	50	28.5
HAPG-71-B	8	9.5	14.5	56	7	M4	M4	M4	63.5	35.5
HAPG-72-B	8	9.5	15	56	7	—	M4	M4	60	41.5

Type	H3	H4	H5	H6	H7	L1	L2	Weight [g]	Part No.	Type
HAPG-70-B	12	—	—	15	25	39	12	55	540 881	HAPG-70-B
HAPG-71-B	12	15.5	40	20.5	40	47	15	110	540 882	HAPG-71-B
HAPG-72-B	12	—	—	20.5	30	47	23.2	115	540 883	HAPG-72-B


## Handling modules HSP

Accessories

FESTO

### Installation kit MKRP

Material:  
Conduit/fitting: Polyamide  
Reducer/lock nut:  
Nickel-plated brass  
Adapter plate/bracket:  
Powder-coated steel

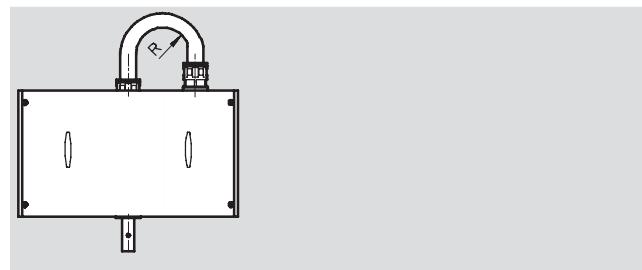

#### Ordering data

For size	Max. bending radius for conduit <sup>1)</sup> R	Tubing I.D. [mm]	Weight [g]	Part No.	Type
12	55	12	150	533 632	MKRP-1
16	75	16.5	160	533 633	MKRP-2
25	75	16.5	160	533 634	MKRP-3

1) The conduit must not be filled beyond 70%.

### Cover kit BSD-HSP

Material:  
Wrought aluminium alloy, anodised



Dimensions      HSP-...-AP → 1 / 7.2-16  
                  HSP-...-AE → 1 / 7.2-30  
                  HSP-...-AS → 1 / 7.2-30

7.2

Handling units  
Handling modules

#### Ordering data

For size	Weight [g]	Part No.	Type
12	825	533 635	BSD-HSP-12
16	1 350	533 636	BSD-HSP-16
25	1 770	533 637	BSD-HSP-25

### Wait position module BWL-/BWR-HSP for HSP-...-AP

Material:  
Wrought aluminium alloy, anodised



Dimensions → 1 / 7.2-16

#### Ordering data

For size	Wait position	Weight [g]	Part No.	Type
12	Right	75	533 623	BWR-HSP-12
	Left	75	533 624	BWL-HSP-12
16	Right	135	533 625	BWR-HSP-16
	Left	135	533 626	BWL-HSP-16
25	Right	275	533 627	BWR-HSP-25
	Left	275	533 628	BWL-HSP-25


## Handling modules HSP

Accessories

**FESTO**

### Adapter kits for grippers

For combining HSP with grippers HG... or semi-rotary drive DRQD

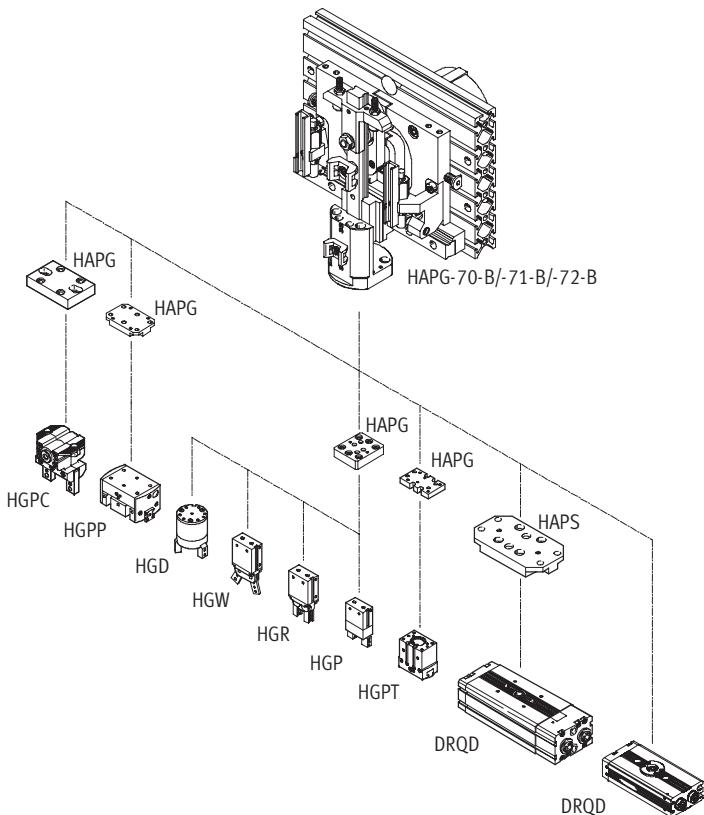

Gripper Part No.	Type	Adapter kit Part No.	Type	Required mounting components	B1	D1	D2	H1	L1
HSP-12... with HAPG-70-B									
174 815	HGP-06-A	192 709	HAPG-60-S1	-	12	M3	M5	30	30
174 817	HGR-10-A								
174 818	HGW-10-A								
535 858	HGPT-16-A	537 169	HAPG-75		8	M2.5	3	27	49.6
1)	DRQD-6...	-		M4 x 20	-				
HSP-16... with HAPG-71-B									
174 815	HGP-06-A	192 706	HAPG-37-S1	-	12	M3	M5	42	50
174 817	HGR-10-A								
174 818	HGW-10-A	192 705	HAPG-36-S1		12	M3	M5	42	50
197 542	HGP-10-A-B				12	M3	M5	42	50
174 819	HGD-16-A				12	M3	M5	42	50
161 829	HGR-16-A				12	M3	M5	42	50
161 833	HGW-16-A								
525 658	HGPP-10-A	529 017	HAPG-57 <sup>2)</sup>		8	M3	M4	33	49.6
187 867	HGPP-12-A	191 900	HAPG-54		12	M3	M5	44	52
535 858	HGPT-16-A	537 169	HAPG-75		8	M2.5	3	27	49.6
535 861	HGPT-20-A								
539 269	HGPC-16-A	191 901	HAPG-55		10	M3	M5	40	62
1)	DRQD-8...	178 448	HAPS-2 <sup>2)</sup>		8	M4	M4	28	48
1)	DRQD-12...								

1) The semi-rotary drive DRQD is a modular product; for information on configuration and ordering → 1 / 4.2-23  
2) The centring sleeves for attaching to the adapter kit HAPG-71-B are not required.

# Handling modules HSP


Accessories

**FESTO**

Gripper Part No.	Type	Adapter kit Part No.	Type	Required mounting components	B1	D1	D2	H1	L1
HSP-25... with HAPG-72-B									
197 542	HGP-10-A-B	192 705	HAPG-36-S1	-	12	M3	M5	42	50
174 819	HGD-16-A				12	M4	M5	42	50
161 829	HGR-16-A				8	M3	M4	33	49.6
161 833	HGW-16-A				12	M3	M5	44	52
197 545	HGP-16-A-B	193 922	HAPG-37-S4		10	M3	M5	40	62
161 830	HGR-25-A				8	M2.5	3	27	49.6
161 834	HGW-25-A				10	M3	M5	40	62
525 658	HGPP-10-A	529 017	HAPG-57 <sup>2)</sup>		8	M4	M4	28	28
187 867	HGPP-12-A	191 900	HAPG-54		12	M4	M5	50	71
187 870	HGPP-16-A	191 901	HAPG-55						
535 858	HGPT-16-A	537 169	HAPG-75						
535 861	HGPT-20-A								
539 271	HGPC-20-A	191 901	HAPG-55						
1)	DRQD-12...	178 448	HAPS-2 <sup>2)</sup>						
1)	DRQD-16...	192 707	HAPG-38						


- 1) The semi-rotary drive DRQD is a modular product; for information on configuration and ordering → 1 / 4.2-23  
 2) The centring sleeves for attaching to the adapter kit HAPG-71-B are not required.

Adapter kit HAPG-36/-37/-38/-60

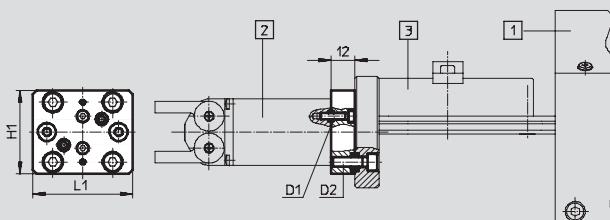


- [1] Handling module HSP
- [2] Gripper HG...
- [3] Adapter kit HAPG

Adapter kit HAPG38/-54/-55/-57

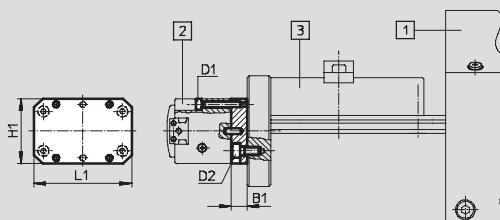


- [1] Handling module HSP
- [2] Parallel gripper HGP...
- [3] Adapter kit HAPG

Adapter kit HAPG-75

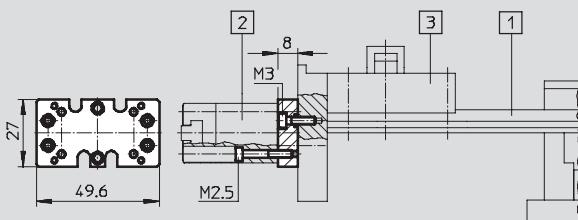

- [1] Handling module HSP
- [2] Parallel gripper HGPT
- [3] Adapter kit HAPG

Adapter kit HAPS-2


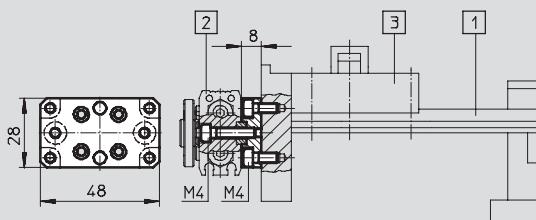



- [1] Handling module HSP
- [2] Semi-rotary drive DRQD
- [3] Adapter kit HAPG


## Handling modules HSP

**FESTO**

Accessories

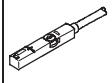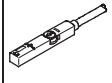Ordering data – Proximity switches for T-slot, magneto-resistive					Technical data → <a href="http://www.festo.com/catalogue/sm">www.festo.com/catalogue/sm</a>	
	Type of mounting	Switch output	Electrical connection	Cable length [m]	Part No.	Type
<b>N/O contact</b>						
	Insertable in the slot from above, flush with cylinder profile	PNP	Cable, 3-wire	2,5	543 867	SMT-8M-PS-24V-K-2,5-OE
			Plug M8x1, 3-pin	0,3	543 866	SMT-8M-PS-24V-K-0,3-M8D
		M12x1, 3-pin	Cable, 3-wire	2,5	543 869	SMT-8M-PS-24V-K-0,3-M12
		NPN	Plug M8x1, 3-pin	0,3	543 870	SMT-8M-NS-24V-K-2,5-OE
	Insertable in the slot lengthwise, flush with the cylinder profile	PNP	Cable, 3-wire	2,5	175 436	SMT-8-PS-K-LED-24-B
			Plug M8x1, 3-pin	0,3	175 484	SMT-8-PS-S-LED-24-B
<b>N/C contact</b>						
	Insertable in the slot from above, flush with cylinder profile	PNP	Cable, 3-wire	7,5	543 873	SMT-8M-PO-24V-K7,5-OE

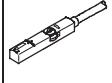Ordering data – Proximity switches for T-slot, magnetic reed					Technical data → <a href="http://www.festo.com/catalogue/sm">www.festo.com/catalogue/sm</a>	
	Type of mounting	Switch output	Electrical connection	Cable length [m]	Part No.	Type
<b>N/O contact</b>						
	Insertable in the slot from above, flush with cylinder profile	Contacting	Cable, 3-wire	2,5	543 862	SME-8M-DS-24V-K-2,5-OE
				5,0	543 863	SME-8M-DS-24V-K-5,0-OE
		M12x1, 3-pin	Cable, 3-wire	2,5	543 872	SME-8M-ZS-24V-K-2,5-OE
		PNP	Plug M8x1, 3-pin	0,3	543 861	SME-8M-DS-24V-K-0,3-M8D
	Insertable in the slot lengthwise, flush with the cylinder profile	Contacting	Cable, 3-wire	2,5	150 855	SME-8-K-LED-24
			Plug M8x1, 3-pin	0,3	150 857	SME-8-S-LED-24
<b>N/C contact</b>						
	Insertable in the slot lengthwise, flush with the cylinder profile	Contacting	Cable, 3-wire	7,5	160 251	SME-8-O-K-LED-24

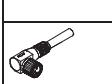Ordering data – Connecting cables					Technical data → <a href="http://www.festo.com/catalogue/nebu">www.festo.com/catalogue/nebu</a>	
	Electrical connection, left	Electrical connection, right	Cable length [m]	Part No.	Type	
	Straight socket, M8x1, 3-pin	Cable, open end, 3-wire	2,5	541 333	NEBU-M8G3-K-2.5-LE3	
			5	541 334	NEBU-M8G3-K-5-LE3	
	Straight socket, M12x1, 5-pin	Cable, open end, 3-wire	2,5	541 363	NEBU-M12G5-K-2.5-LE3	
			5	541 364	NEBU-M12G5-K-5-LE3	
	Angled socket, M8x1, 3-pin	Cable, open end, 3-wire	2,5	541 338	NEBU-M8W3-K-2.5-LE3	
			5	541 341	NEBU-M8W3-K-5-LE3	
	Angled socket, M12x1, 5-pin	Cable, open end, 3-wire	2,5	541 367	NEBU-M12W5-K-2.5-LE3	
			5	541 370	NEBU-M12W5-K-5-LE3	

# Handling modules HSP

Accessories

**FESTO**

Ordering data		Technical data ➔ 1 / 10.1-3	
	Brief description	Part No.	Type
Slot cover for T-slot	 For protecting against ingress of dirt and securing proximity sensor cables. Scope of delivery: 2x 0.5 m	151 680	ABP-5-S

Slot nut for back plate	 Inserted from above	189 654	HMBN-5-M5
-------------------------	---	---------	-----------

Ordering data – Cables for HSP-...-AE		Brief description	Cable length	Part No.	Type
	Supply cable		2.5 m	537 931	KPWR-MC-1-SUB-9HC-2,5
			5 m	537 932	KPWR-MC-1-SUB-9HC-5
			10 m	537 933	KPWR-MC-1-SUB-9HC-10
	Control cable for I/O connection to any PLC controller		2.5 m	537 923	KES-MC-1-SUB-9-2,5
			5 m	537 924	KES-MC-1-SUB-9-5
			10 m	537 925	KES-MC-1-SUB-9-10
	Programming cable		2.5 m	537 926	KDI-MC-M8-SUB-9-2,5

Ordering data – Software for HSP-....-AE		Brief description	Part No.	Type
	The operator's package: – CD-ROM – With user's manual in the languages DE, EN, ES, FR, IT, SV – With configuration package FCT (Festo Configuration Tool) – Brief description The operator's package is included in the delivery.		707 753	P.BP-HSP-AE

Ordering data – Documentation for HSP-...-AE		Brief description	Language	Part No.	Type
	Description User's manual in paper form is not included in the scope of delivery.		DE	541 945	P.BE-HSP-AE-IO-DE
			EN	541 946	P.BE-HSP-AE-IO-EN
			ES	541 947	P.BE-HSP-AE-IO-ES
			FR	541 948	P.BE-HSP-AE-IO-FR
			IT	541 949	P.BE-HSP-AE-IO-IT
			SV	541 950	P.BE-HSP-AE-IO-SV

