

# Sensor testers SM-TEST-1


Technical data

## Description

The sensor tester is used to test and adjust sensors and proximity switches. The sensor tester also facilitates commissioning and servicing work.

Functions:

- Testing of operation of proximity sensors using the integrated voltage supply
- Adjustment of proximity switches whilst attached to cylinders
- Identification of switching outputs of proximity switches and sensors with PNP, NPN, NC and NO functions by means of the appropriate LED

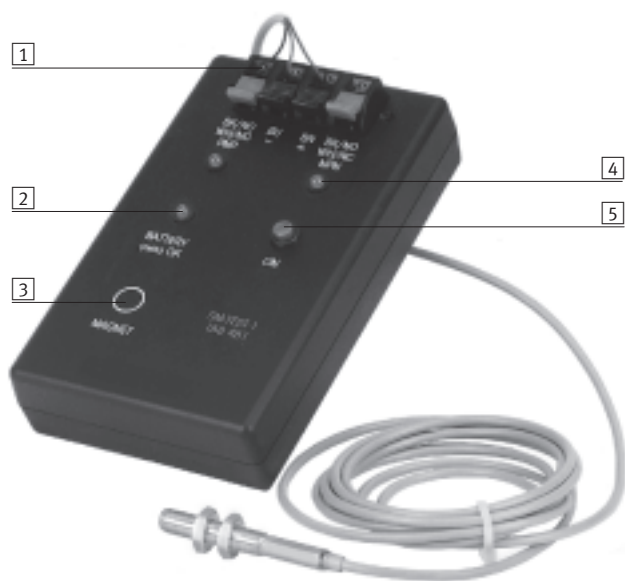

- 1 Terminal strip for connecting cable
- 2 LED for battery check
- 3 Magnet for testing of proximity sensors
- 4 LED for indicating switching status
- 5 On-off button

**Note**  
The tester is powered by two 9 V block batteries, which are not included in the scope of delivery.

Ordering data	
Part No.	Type
158 481	SM-TEST-1