

## Data sheet

### Description


The sensor tester is used to test and adjust sensors and proximity switches.

The sensor tester makes commissioning and servicing easier.

Functions:

- Testing the performance of proximity switches using the integrated voltage supply
- Adjusting proximity switches mounted on cylinders

- Identifying the switching output of proximity switches and sensors with the functions PNP, NPN, N/C, N/O with corresponding LEDs.

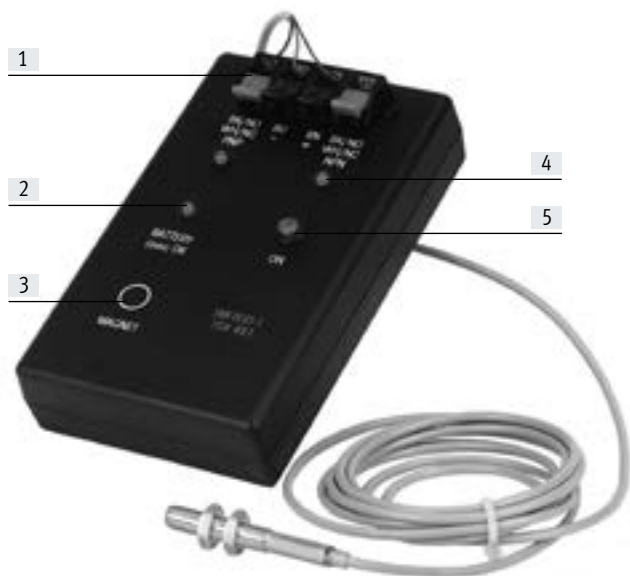

- [1] Terminal strip for connecting cable
- [2] LED for battery check
- [3] Magnet for testing proximity switches
- [4] LED for indicating switching status
- [5] ON button



#### Note

Power is supplied via two 9 V block batteries, which are not included in the scope of delivery.

### Ordering data

Part no.	Type
158481	SM-TEST-1