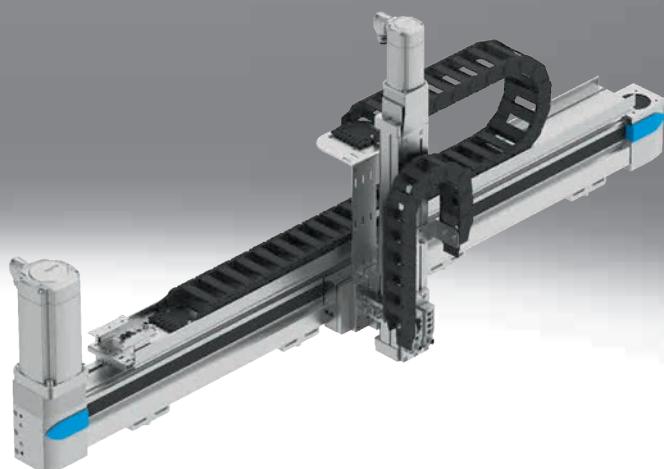


## Linear gantries

FESTO



## Key features

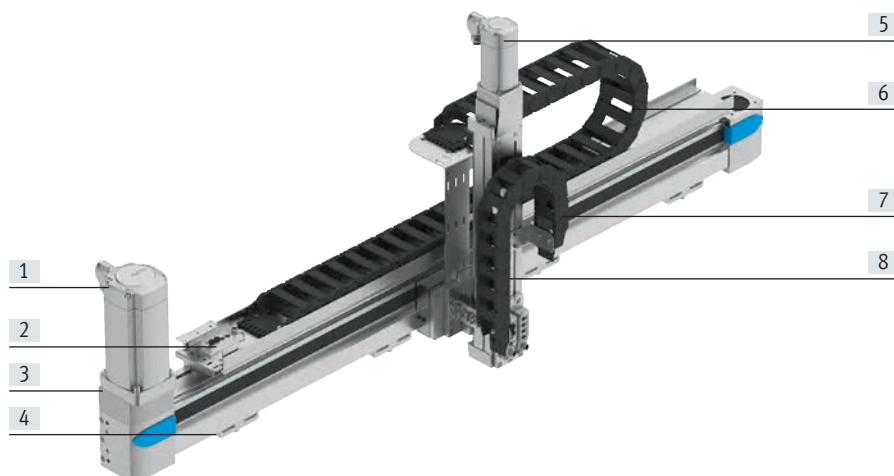
### At a glance

A linear gantry (YXCL) is an assembly of several axis modules (EHM.../DHMZ) to produce a movement in 2D space.

The linear gantry facilitates movement in 2D space.

Depending on the requirements, the gantry is either composed of several axis modules (YXCL) or using the linear gantry EXCT (YXML). All of these are tried-and-tested components from Festo.

- Very demanding requirements for precision and/or very heavy workpieces combined with long strokes (YXCR)
- Cost-effective handling unit in a compact format for small parts handling and simple tasks (YXCR-B)
- Frequently used in feeding or loading applications
- Use of tried-and-tested drives/axes from Festo



- [1] Servo motor for the Y-module
- [2] Multi-pin plug distributor which transfers all the electrical signals such as for end-position sensing
- [3] Y-axis
- [4] Profile mounting/adjusting kit
- [5] Servo motor for the Z-module
- [6] Energy chain for the Y-module
- [7] Energy chain for the Z-module
- [8] Z-axis

### Description of the modules

#### Y-module

Design:

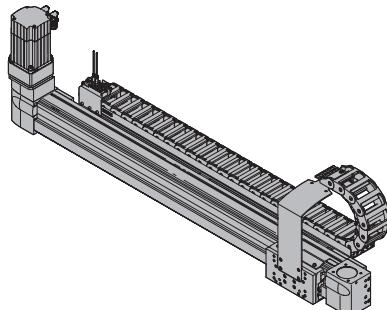
The Y-module EHMY comprises a linear axis which is powered by a servo or stepper motor.

Adapters are mounted on the slides of the Y-axis to connect the Z-module.

The following components are located on the side of the motor:

- Energy chain (optional)
- Multi-pin plug distributor for proximity switch (if a sensor package has been selected)

Sample image:

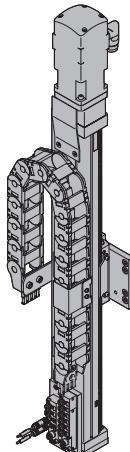


#### Z-module

Design:

The Z-module EHMZ comprises an electric drive, the DHMZ comprises a pneumatic drive. Based on the configuration, an energy chain is optionally installed as a cable guide depending on the axis type and stroke. The Z-module can be selected using the configurator, depending on the application.

Sample image:



## Key features

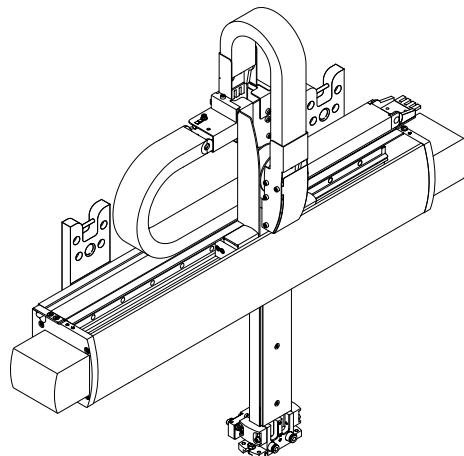
### Description of the modules

#### YZ-module (EXCT)

##### Design:

Two fixed servo motors drive a toothed belt arranged in a T-shape. The toothed belt moves the slide of the Y-axis and the interface located on the Z-axis in a two-dimensional space. A controller calculates the position of the interface. The controlled interaction of the motors results in the movement of the interface. Attachment components enable additional processes to be carried out.

##### Sample image:



### Dispatch options

#### Fully assembled:

The linear gantry is fully assembled. All cables and tubing are installed and connected.

#### Partially assembled:

The linear gantry is delivered partially assembled. This means that both axis modules (Y-/Z-axis) are assembled, each with the optional motors. The partially assembled system must be completed by the customer. Help can be found in the assembly instructions provided.

Optional accessories (→ page 10) are enclosed.

Note flatness → table below.

### System overview<sup>1)</sup>

Size	YXCL-1	YXCL-2	YXCL-3	YXCL-4	YXML-1	YXML-2	YXML-3				
Max. working stroke	Y: 1900 mm Z: 50 mm	Y: 3000 mm Z: 1000 mm	Y: 3000 mm Z: 1200 mm	Y: 3000 mm Z: 1200 mm	Y: 1000 mm Z: 200 mm	Y: 1500 mm Z: 500 mm	Y: 2000 mm Z: 800 mm				
Max. payload	Dependent on the selected dynamic response										
Mounting position	Horizontal										
Size	YXCL-1-B			YXCL-2-B							
Max. working stroke	Y: 800 mm Z: 150 mm			Y: 1200 mm Z: 200 mm							
Max. payload	Dependent on the selected dynamic response										
Mounting position	Horizontal										

1) Drive package depends on the configuration selected.

## Linear gantries

### Key features

#### Configurator: Handling Guide Online (HGO)

##### Selecting a handling system

Planning complex handling systems takes a lot of time. You can use the configurator "Handling Guide Online" (HGO) to design a customised handling system for your application in just a few steps.

You can choose from the following systems:

- Single-axis system
- 2D linear gantry
- 2D planar surface gantry
- Three-dimensional gantry
- 3D cantilever system

##### Advantages:

- Automatic selection of all relevant components
- Automatic design and calculation of the workload
- Quote created automatically
- CAD model available immediately
- Configuration-specific parameters for servo drives available immediately
- Complete Eplan project can be ordered according to the individual configuration
- Fully automated processing
- You can order fully or partially assembled systems through the Online Shop
- Lots of possible options

**Selecting the handling solution**

**Single-axis system**

Single-axis movement  
Single-axis movement is a component system.  
Easily to connect to your own base load.

**2D linear gantry**

Movement in 2D in the vertical working plane.  
Linear gantry-based handling systems.  
Conveniently designed, simple to assemble.

**2D planar surface gantry**

Movement in 2D in the horizontal working plane.  
Planar surface gantries are complete systems.  
Covering entire areas.  
Easy to assemble by hand even if you're not a specialist.

**3D gantry**

Movement in 3D.  
Three-dimensional gantries are complete systems.  
Electric and pneumatic axes can be combined.

**3D cantilever system**

Movement in 3D.  
Cantilever systems are complete systems.  
Horizontal and vertical axes can be combined.

##### Entering the application data

- Payload
- Drive system of the axis
- Distance from the centre of the load
- Working stroke
- Reference cycle

**Axis definition and payload**

**Axis length of the axis**

1000 mm  
1000 mm, round position

**Max. loading weight**

100 kg

**Working stroke X Z direction**

1000 mm  
1000 mm

(Take into account the stroke will account to open space dimension)

**Method**

**Run off the example of the movement area**

**3D workspace**

**Desired movement center of the work**

X: 1000 mm  
Y: 1000 mm  
Z: 1000 mm

**Data preview**

## Key features

Configurator: Handling Guide Online (HGO)

## Result of calculation

You will be offered a selection of systems calculated based on the application data you entered.

The following are available immediately:

- CAD model
  - Datasheet of the selected system
  - Price information

## System overview

You will be given an overview of the complete system.

You will also have the following options:

- Show price
  - Send request
  - Add to basket

The screenshot shows a CADENAS search result for a handle component. The main image is a 3D model of a black metal handle with a central vertical bar and two curved arms extending from the top. To the left of the image is a navigation menu with icons for Home, Search, Categories, and Help. To the right is a detailed product card. The card includes the part number 'Handle 00 C2534095', a 'View 3D Model' button, a 'Download CAD' button, and a 'Print' button. At the bottom of the card is the text 'VDAF 14-01-1996'. Below the product card is a row of five circular icons representing different search filters or categories.

## Key features

### Standard components within the handling system

The handling system comprises a number of tried-and-tested standard components from Festo. Different components are used depending on the configuration. The single axes installed will be displayed in the configurator HGO on the "Result of calculation" page.

#### Y-axis

##### Toothed belt axis EGC-TB-KF



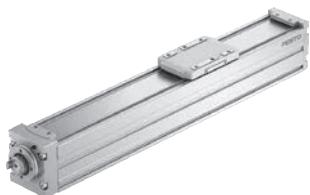
- Electric system
- Rigid, closed profile
- Recirculating ball bearing guide for high loads and torques
- High dynamic response and minimum vibration

##### Toothed belt axis ELGC-TB



- Electric system
- Optimal installation space to working space ratio
- Protected against external influences by internal guide
- High dynamic response

##### Spindle axis ELGC-BS



- Electric system
- Optimal installation space to working space ratio
- Protected against external influences by internal guide
- Various spindle pitches

##### Toothed belt axis EGC-HD-TB



- Electric system
- Flat drive unit with rigid, closed profile
- Duo guide rail
- For maximum loads and torques, high feed forces and speeds and long service life

#### Z-axis

##### Mini slide EGSC



- Electric system
- Compact design
- High load capacity
- Precision guide and ball screw
- Easy adjustment of the end positions

##### Mini slide EGSL



- Electric system
- Compact design
- High load capacity
- High dynamic response
- Easy adjustment of the end positions

##### Mini slide DGST



- Pneumatic system
- Precise and resilient roller bearing guide
- Slide and yoke plate as a single component
- High dynamic response

##### Mini slide DGSL



- Pneumatic system
- Flat design
- High load capacity
- High dynamic response
- Easy adjustment of the end positions

##### Spindle axis EGC-BS-KF



- Electric system
- Rigid, closed profile
- Recirculating ball bearing guide for high loads and torques
- High dynamic response and minimum vibration
- Various spindle pitches

##### Cantilever axis ELCC



- Stationary drive head
- Toothed belt drive with recirculating ball bearing guide
- High rigidity thanks to the innovative design principle
- Very low moving mass

## Key features

<b>Possible axis combinations<sup>1)</sup></b>		
Size	Y-module	Z-module
YXCL-1	<ul style="list-style-type: none"> <li>Toothed belt axis EGC-50-TB-KF</li> </ul>	<ul style="list-style-type: none"> <li>Mini slide pneumatic: DGSL-6 electric: EGSL-35</li> </ul>
YXCL-1-B	<ul style="list-style-type: none"> <li>Toothed belt axis ELGC-60-TB</li> <li>Spindle axis ELGC-60-BS</li> </ul>	<ul style="list-style-type: none"> <li>Mini slide pneumatic: DGST-12/16 electric: EGSC-45</li> </ul>
YXCL-2	<ul style="list-style-type: none"> <li>Toothed belt axis EGC-80-TB-KF</li> <li>Toothed belt axis with heavy-duty guide EGC-HD-125-TB</li> </ul>	<ul style="list-style-type: none"> <li>Mini slide pneumatic: DGSL-12/16 electric: EGSL-45/55</li> <li>Cantilever axis ELCC-60</li> <li>Spindle axis EGC-70-BS-KF</li> </ul>
YXCL-2-B	<ul style="list-style-type: none"> <li>Toothed belt axis ELGC-80-TB</li> <li>Spindle axis ELGC-80-BS</li> </ul>	<ul style="list-style-type: none"> <li>Mini slide pneumatic: DGST-16/20 electric: EGSC-60</li> </ul>
YXCL-3	<ul style="list-style-type: none"> <li>Toothed belt axis EGC-120-TB-KF</li> <li>Toothed belt axis with heavy-duty guide EGC-HD-160-TB</li> </ul>	<ul style="list-style-type: none"> <li>Mini slide pneumatic: DGSL-20/25 electric: EGSL-75</li> <li>Cantilever axis ELCC-70</li> <li>Spindle axis EGC-80-BS-KF</li> </ul>
YXCL-4	<ul style="list-style-type: none"> <li>Toothed belt axis EGC-185-TB-KF</li> <li>Toothed belt axis with heavy-duty guide EGC-HD-220-TB</li> </ul>	<ul style="list-style-type: none"> <li>Cantilever axis ELCC-90</li> <li>Spindle axis EGC-120-BS-KF</li> </ul>
YXML-1	<ul style="list-style-type: none"> <li>Linear gantry EXCT-15</li> </ul>	<ul style="list-style-type: none"> <li>Linear gantry EXCT-15</li> </ul>
YXML-2	<ul style="list-style-type: none"> <li>Linear gantry EXCT-30</li> </ul>	<ul style="list-style-type: none"> <li>Linear gantry EXCT-30</li> </ul>
YXML-3	<ul style="list-style-type: none"> <li>Linear gantry EXCT-100</li> </ul>	<ul style="list-style-type: none"> <li>Linear gantry EXCT-100</li> </ul>

1) Drive package depends on the configuration selected.

### Key features

#### Standard components within the handling system

The handling system comprises a number of tried-and-tested standard components from Festo. Different components are used depending on the configuration. You can alter the scope and design of the drive package in the configurator HGO on the "System configuration" page.

#### Motors and controllers

##### Servo motors EMMT-AS



- Dynamic, brushless, permanently excited servo motor
- Digital absolute displacement encoder in single-turn or multi-turn version
- With optional brake

##### Servo motors EMMB-AS



- Dynamic, brushless, permanently excited servo motor
- Digital absolute displacement encoder in single-turn or multi-turn version
- With optional brake

##### Gear unit EMGA



- Low-backlash planetary gear
- Gear ratio  $i = 3$  and  $5$
- Life-time lubrication

##### Servo motors EMME-AS



- Dynamic, brushless, permanently excited servo motor
- Digital absolute displacement encoder in single-turn or multi-turn version
- With optional brake

##### Stepper motors EMMS-ST



- Two-phase hybrid technology
- Step angle  $1.8^\circ$
- With optional brake

## Key features

### Standard components within the handling system

The handling system comprises a number of tried-and-tested standard components from Festo. Different components are used depending on the configuration. You can alter the scope and design of the drive package in the configurator HGO on the "System configuration" page.

#### Servo drive CMMT-AS, for servo motor



- Universal servo drive
- For synchronous servo motors
- Integrated EMC filters
- Integrated brake chopper
- Integrated braking resistor
- Position controller
- Speed controller
- Force controller
- Range of control functions

#### Options:

- Safety function: safe torque off (STO)/category 4, Performance Level e
- Safe stop 1 (SS1)
- Safe brake control (SBC) up to SIL3/category 3, Performance Level e

- Bus protocols
  - EtherCAT
  - PROFINET RT/IRT
  - EtherNet/IP
  - Modbus TCP

#### Servo drive CMMT-ST, for stepper motor



- Servo drive for operating stepper motors and brushless direct current motors
- Options for point-to-point and interpolating motion and for precise positioning
- Primary voltage from 24 ... 48 V DC
- Position controller
- Speed controller
- Force controller
- Range of control functions

#### Options:

- Safety function: safe torque off (STO)/category 3, Performance Level e
- Safe stop 1 time controlled (SS1-t)

- Bus protocols
  - EtherCAT
  - PROFINET RT/IRT
  - EtherNet/IP
  - Modbus TCP

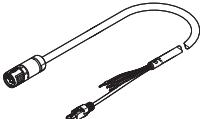
## Ordering data – Accessories

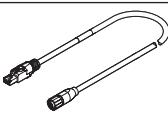
## Module/motor combinations

We recommend that the linear gantry is operated with the proposed motors from Festo. These precisely match the mechanical system. When using third-party motors, it is essential that the technical limits are observed.

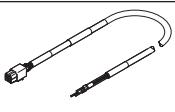
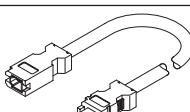
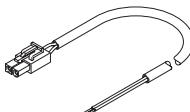
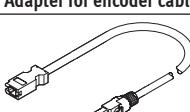
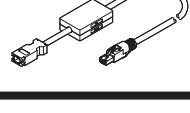
Module	Motor	Servo motor	Stepper motor
<b>Y-module</b>			
EHMY-...-EGC-50-TB-KF	-	EMME-AS-40-S-LV...	-
EHMY-...-EGC-80-TB-KF	EMMT-AS-60-S-LS...	EMME-AS-60-M-LS...	-
EHMY-...-EGC-120-TB-KF	EMMT-AS-80-L-LS...	EMME-AS-80-S-LS...	-
	EMMT-AS-80-L-HS...	-	-
EHMY-...-EGC-125-TB-HD	EMMT-AS-60-L-LS...	EMME-AS-60-M-LS...	-
EHMY-...-EGC-160-TB-HD	EMMT-AS-80-M-LS...	EMME-AS-80-S-LS...	-
	EMMT-AS-80-L-HS...	-	-
EHMY-...-EGC-185-TB-KF	EMMT-AS-100-L-HS...	EMME-AS-100-M-HS...	-
	EMMT-AS-100-H-HS...	-	-
	EMMT-AS-150-M-HV-R3...	-	-
EHMY-...-EGC-220-TB-HD	EMMT-AS-100-L-HS...	EMME-AS-100-M-HS...	-
	EMMT-AS-100-H-HS...	-	-
	EMMT-AS-150-M-HV-R3...	-	-
EHMY-LP-ELGC-60-BS	-	-	EMMB-AS-60-04
EHMY-LP-ELGC-80-BS	-	-	EMMB-AS-60-04
EHMY-LP-ELGC-60-TB	-	-	EMMB-AS-80-07
EHMY-LP-ELGC-80-TB	-	-	EMMB-AS-80-07
<b>Z-module</b>			
EHMZ-ELCC-60-TB-KF	EMMT-AS-60-M-LS...	-	-
	EMMT-AS-80-L-LS...	-	-
	EMMT-AS-100-S-HS...	-	-
EHMZ-ELCC-70-TB-KF	EMMT-AS-80-M-LS...	-	-
	EMMT-AS-80-L-HS...	-	-
EHMZ-ELCC-90-TB-KF	EMMT-AS-80-L-HS...	-	-
	EMMT-AS-100-L-HS...	-	-
	EMMT-AS-100-H-HS...	-	-
EHMZ-EGC-70-BS-KF	EMMT-AS-60-S-LS...	EMME-AS-60-M-LS...	-
EHMZ-EGC-80-BS-KF	EMMT-AS-60-M-LS...	EMME-AS-60-M-LS...	-
EHMZ-EGC-120-BS-KF	EMMT-AS-80-S-LS...	EMME-AS-80-S-LS...	-
	EMMT-AS-80-M-LS...	-	-
	EMMT-AS-80-S-HS...	-	-
	EMMT-AS-80-L-HS...	-	-
EHMZ-EGSL-35-BS-KF	-	EMME-AS-40-S-LV...	-
EHMZ-EGSL-45-BS-KF	EMMT-AS-60-S-LS...	EMME-AS-40-S-LV...	-
EHMZ-EGSL-55-BS-KF	EMMT-AS-60-S-LS...	EMME-AS-60-M-LS...	-
EHMZ-EGSL-75-BS-KF	EMMT-AS-80-S-LS...	EMME-AS-80-S-LS...	-
EHMZ-EGSC-45	-	-	EMMB-AS-40-01
EHMZ-EGSC-60	-	-	EMMB-AS-60-02
<b>YZ-module (EXCT)</b>			
EXCT-15	EMMT-AS-80-M-LS...	-	-
EXCT-30	EMMT-AS-100-M-HS...	-	-
EXCT-100	EMMT-AS-100-M-HS...	-	-

## Ordering data – Accessories

Ordering data		Description	Cable length [m]	Part no.	Type
<b>For servo motor EMMT-AS</b>					
<b>Motor cable</b>					
	• For EMMT-AS-60/80-...-R2... with CMMT-AS	2.5 5 7.5 10 15 20	5251374 5251375 5251376 5251377 5251378 5251379	NEBM-M23G15-EH-2.5-Q7N-R3LEG14 NEBM-M23G15-EH-5-Q7N-R3LEG14 NEBM-M23G15-EH-7.5-Q7N-R3LEG14 NEBM-M23G15-EH-10-Q7N-R3LEG14 NEBM-M23G15-EH-15-Q7N-R3LEG14 NEBM-M23G15-EH-20-Q7N-R3LEG14	
	• For EMMT-AS-100-...-R2... with CMMT-AS	2.5 5 7.5 10 15 20	5251381 5251382 5251383 5251384 5251385 5251386	NEBM-M23G15-EH-2.5-Q9N-R3LEG14 NEBM-M23G15-EH-5-Q9N-R3LEG14 NEBM-M23G15-EH-7.5-Q9N-R3LEG14 NEBM-M23G15-EH-10-Q9N-R3LEG14 NEBM-M23G15-EH-15-Q9N-R3LEG14 NEBM-M23G15-EH-20-Q9N-R3LEG14	
	• For EMMT-AS-150-...-R3... with CMMT-AS	2.5 5 7.5 10 15 20	5251395 5251396 5251397 5251398 5251399 5251400	NEBM-M40G15-EH-2.5-Q11N-R3LEG14 NEBM-M40G15-EH-5-Q11N-R3LEG14 NEBM-M40G15-EH-7.5-Q11N-R3LEG14 NEBM-M40G15-EH-10-Q11N-R3LEG14 NEBM-M40G15-EH-15-Q11N-R3LEG14 NEBM-M40G15-EH-20-Q11N-R3LEG14	

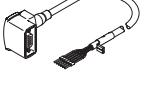
Ordering data		Description	Cable length [m]	Part no.	Type
<b>For servo motor EMME-AS</b>					
<b>Motor cable</b>					
	• For EMME-AS-40/60 with CMMT-AS	2.5 5 7.5 10 15 20	5391541 5391543 5391548 8085952 8085953 611113	NEBM-M16G8-E-2.5-Q7-LE8-1 NEBM-M16G8-E-5-Q7-LE8-1 NEBM-M16G8-E-7.5-Q7-LE8-1 NEBM-M16G8-E-10-Q7-LE8-1 NEBM-M16G8-E-15-Q7-LE8-1 NEBM-M16G8-E-20-Q7-LE8-1	
	• For EMME-AS-80/100 with CMMT-AS	2.5 5 7.5 10 15 20	5391540 5391545 5391547 5391549 5391550 611114	NEBM-M16G8-E-2.5-Q9-LE8-1 NEBM-M16G8-E-5-Q9-LE8-1 NEBM-M16G8-E-7.5-Q9-LE8-1 NEBM-M16G8-E-10-Q9-LE8-1 NEBM-M16G8-E-15-Q9-LE8-1 NEBM-M16G8-E-20-Q9-LE8-1	
<b>Encoder cable</b>					
	• For EMME-AS-40/60/80/100 with CMMT-AS	2.5 5 7.5 10 15 20	5212312 5212313 5212314 5212315 5212316 611112	NEBM-M12G8-E-2.5-N-R3G8 NEBM-M12G8-E-5-N-R3G8 NEBM-M12G8-E-7.5-N-R3G8 NEBM-M12G8-E-10-N-R3G8 NEBM-M12G8-E-15-N-R3G8 NEBM-M12G8-E-20-N-R3G8	

## Ordering data – Accessories

Ordering data		Cable length [m]	Part no.	Type
<b>For servo motor EMMB-AS</b>				
<b>Motor cable</b>				
	• For EMMB-AS-40/60/80 with CMMT-AS	2.5	5219197	NEBM-H6G4-E-2.5-Q13N-LE4
		5	5219198	NEBM-H6G4-E-5-Q13N-LE4
		7.5	5219199	NEBM-H6G4-E-7.5-Q13N-LE4
		10	5219200	NEBM-H6G4-E-10-Q13N-LE4
		15	8097203	NEBM-H6G4-E-15-Q13N-LE4
<b>Encoder cable</b>				
	• For EMMB-AS-40/60/80 with CMMT-AS	2.5	5219213	NEBM-REG6-E-2.5-Q14N-REG6
		5	5219214	NEBM-REG6-E-5-Q14N-REG6
		7.5	5219215	NEBM-REG6-E-7.5-Q14N-REG6
		10	5219216	NEBM-REG6-E-10-Q14N-REG6
		15	8097200	NEBM-REG6-E-15-Q14N-REG6
<b>Connecting cable for brake</b>				
	• For EMMB-AS-40/60/80 with CMMT-AS	2.5	5219205	NEBM-H7G2-E-2.5-Q14N-LE2
		5	5219206	NEBM-H7G2-E-5-Q14N-LE2
		7.5	5219207	NEBM-H7G2-E-7.5-Q14N-LE2
		10	5219208	NEBM-H7G2-E-10-Q14N-LE2
		15	8097206	NEBM-H7G2-E-15-Q14N-LE2
<b>Adapter for encoder cable (absolutely essential)</b>				
	• For EMMB-AS-40/60/80 with CMMT-AS	<b>For single-turn version with CMMT-AS</b>		
		0.5	8097197	NEFM-REG6-K-0.5-R3G8
	• For EMMB-AS-40/60/80 with CMMT-AS	<b>For multi-turn version with CMMT-AS<sup>1)</sup></b>		
		0.5	8097195	NEFM-REG6-K-0.5-B-R3G8
		<b>For multi-turn version with CMMB-AS<sup>1)</sup></b>		
		0.5	8097196	NEFM-REG6-K-0.5-B-REG6

1) The required battery is not included in the scope of delivery

## Ordering data – Accessories

Designation	Description	Cable length [m]	Part no.	Type
<b>For stepper motor EMMS-ST</b>				
<b>Motor cable<sup>1)</sup></b>				
	• For stepper motor EMMS-ST-28 with CMMT-ST	1.5	1449600	NEBM-SM12G8-E-1.5-Q5-LE6
		2.5	1449601	NEBM-SM12G8-E-2.5-Q5-LE6
		5	1449602	NEBM-SM12G8-E-5-Q5-LE6
		7	1449603	NEBM-SM12G8-E-7-Q5-LE6
		10	1449604	NEBM-SM12G8-E-10-Q5-LE6
		15	5105618	NEBM-SM12G8-E-15-Q5-LE6
		20	5105619	NEBM-SM12G8-E-20-Q5-LE6
	• For stepper motor EMMS-ST-42/57 with CMMT-ST • Straight plug	2.5	1450369	NEBM-S1G9-E-2.5-Q5-LE6
		5	1450370	NEBM-S1G9-E-5-Q5-LE6
		7	1450371	NEBM-S1G9-E-7-Q5-LE6
		10	1450372	NEBM-S1G9-E-10-Q5-LE6
		15	5085055	NEBM-S1G9-E-15-Q5-LE6
		20	5085056	NEBM-S1G9-E-20-Q5-LE6
	• For stepper motor EMMS-ST-42/57 with CMMT-ST • Angled plug	2.5	1450737	NEBM-S1W9-E-2.5-Q5-LE6
		5	1450738	NEBM-S1W9-E-5-Q5-LE6
		7	1450739	NEBM-S1W9-E-7-Q5-LE6
		10	1450740	NEBM-S1W9-E-10-Q5-LE6
		15	610856	NEBM-S1W9-E-15-Q5-LE6
	• For stepper motor EMMS-ST-87 with CMMT-ST • Angled plug	2.5	1450944	NEBM-S1W15-E-2.5-Q7-LE6
		5.0	1450945	NEBM-S1W15-E-5-Q7-LE6
		7.0	1450946	NEBM-S1W15-E-7-Q7-LE6
		10	1450947	NEBM-S1W15-E-10-Q7-LE6
		15	610857	NEBM-S1W15-E-15-Q7-LE6
<b>Encoder cable<sup>1)</sup></b>				
	• For stepper motor EMMS-ST-28/42/57/87 with CMMT-ST • Straight plug	2.5	1451587	NEBM-M12G8-E-2.5-LE8
		5	1451588	NEBM-M12G8-E-5-LE8
		7	1451589	NEBM-M12G8-E-7-LE8
		10	1451590	NEBM-M12G8-E-10-LE8
		15	611110	NEBM-M12G8-E-15-LE8
		20	611111	NEBM-M12G8-E-20-LE8
	• For stepper motor EMMS-ST-28/42/57/87 with CMMT-ST • Angled plug	2.5	1451675	NEBM-M12W8-E-2.5-LE8
		5	1451676	NEBM-M12W8-E-5-LE8
		7	1451677	NEBM-M12W8-E-7-LE8
		10	1451678	NEBM-M12W8-E-10-LE8
		15	610858	NEBM-M12W8-E-15-LE8

1) Cables especially suitable for the motor controller and motor.

Degree of protection to IP65 (in assembled state)

**Possible cable and tube lengths**

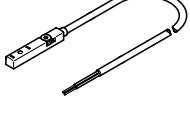
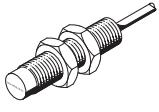
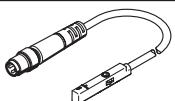
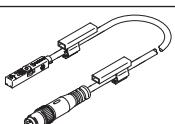
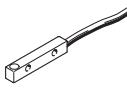
- Cables and tubing are selected so that the length specified when ordering will be the minimum connection length from the energy chain output.
- Cables and tubing are only available in fixed lengths as stated in the table below. This can mean that the cable plugs of the different cables do not end at the same point.

Length	1 m	2 m	5 m	7 m	10 m
Motor cable	–	■	■	■	■
Encoder cable	–	■	■	■	■
Multi-pin plug connecting cable	–	■	■	■	■
Tubing (for DHMZ only)	■	■	■	–	–

## Ordering data – Accessories

### Standard components within the handling system

The handling system comprises a number of tried-and-tested standard components from Festo. Different components are used depending on the configuration. You can alter the scope and design of the accessories in the configurator HGO on the "System configuration" page.

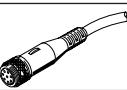
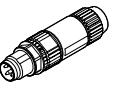
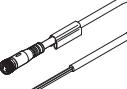
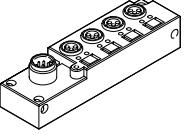
Designation	Description	Cable length [m]	Part no.	Type
<b>Proximity switch (inductive) for sensing the position of the slide on the Y-/Z-axis</b>				
	<b>Cable with open end</b> <ul style="list-style-type: none"> <li>For toothed belt axis EGC-TB, EGC-HD-TB</li> <li>For toothed belt axis ELGC-TB</li> <li>For spindle axis ELGC-BS</li> <li>For spindle axis EGS</li> <li>For mini slide EGSL</li> <li>For mini slide EGSC</li> <li>For DC voltage</li> </ul> <p>Included if the "Festo sensor package" is selected:</p> <ul style="list-style-type: none"> <li>For EGC: 2 pieces</li> <li>For EGSL, EGSC: 1 piece</li> </ul>	PNP, N/C contact 7.5	551391	SIES-8M-PO-24V-K-7.5-OE
		PNP, N/O contact 7.5	551386	SIES-8M-PS-24V-K-7.5-OE
		NPN, N/C contact 7.5	551401	SIES-8M-NO-24V-K-7.5-OE
		NPN, N/O contact 7.5	551396	SIES-8M-NS-24V-K-7.5-OE
<b>Proximity switch (inductive) for sensing the position of the slide on the Z-axis</b>				
	<b>Cable with open end</b> <ul style="list-style-type: none"> <li>For cantilever axis ELCC</li> <li>For DC voltage</li> </ul> <p>Included if the "Festo sensor package" is selected:</p> <ul style="list-style-type: none"> <li>2 pieces</li> </ul>	PNP, N/C contact 2.5	150398	SIEN-M8NB-PO-K-L
		PNP, N/O contact 2.5	150394	SIEN-M8NB-PS-K-L
		NPN, N/C contact 2.5	150396	SIEN-M8NB-NO-K-L
		NPN, N/O contact 2.5	150392	SIEN-M8NB-NS-K-L
<b>Proximity switches (magnetoresistive) for sensing the position of the slide on the Z-axis</b>				
	<b>Cable with open end</b> <ul style="list-style-type: none"> <li>For mini slide DGSL</li> <li>For DC voltage</li> </ul> <p>Included if the "Festo sensor package" is selected:</p> <ul style="list-style-type: none"> <li>2 pieces</li> </ul>	PNP, N/O contact 2.5	551373	SMT-10M-PS-24V-E-2.5-L-OE
		NPN, N/O contact 2.5	551377	SMT-10M-NS-24V-E-2.5-L-OE
<b>Proximity switches (magnetoresistive) for sensing the position of the slide on the Z-axis</b>				
	<ul style="list-style-type: none"> <li>For mini slide DGST-8/-12</li> <li>For DC voltage</li> </ul> <p>Included if the "Festo sensor package" is selected:</p> <ul style="list-style-type: none"> <li>2 pieces</li> </ul>	PNP, N/O contact 2.5	551375	SMT-10M-PS-24V-E-0.3-L-M8D
		NPN, N/O contact 2.5	551379	SMT-10M-NS-24V-E-0.3-L-M8D
	<ul style="list-style-type: none"> <li>For mini slide DGST-16/-20</li> <li>For DC voltage</li> </ul> <p>Included if the "Festo sensor package" is selected:</p> <ul style="list-style-type: none"> <li>2 pieces</li> </ul>	PNP, N/O contact 2.5	574334	SMT-8M-A-PS-24V-E-0.3-M8D
		NPN, N/O contact 2.5	574339	SMT-8M-A-NS-24V-E-0.3-M8D
<b>Proximity switch for sensing the position of the slide on the Y-/Z-axis</b>				
	<ul style="list-style-type: none"> <li>For EXCT</li> <li>For DC voltage</li> <li>For sensing kit EAPR-E17</li> </ul>	PNP, N/C contact 2.5	174552	SIES-Q8B-PO-K-L
		PNP, N/O contact 2.5	178294	SIES-Q8B-PS-K-L
		NPN, N/C contact 2.5	174550	SIES-Q8B-NO-K-L
		PNP, N/O contact 2.5	178292	SIES-Q8B-NS-K-L

## Ordering data – Accessories

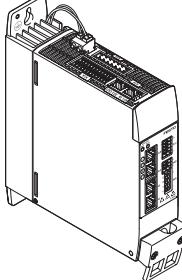
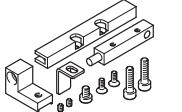
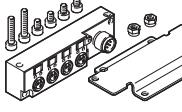
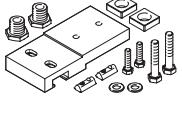
### Standard components within the handling system

The handling system comprises a number of tried-and-tested standard components from Festo. Different components are used depending on the configuration.

You can alter the scope and design of the accessories in the configurator HGO on the "System configuration" page.

Designation	Description	Cable length [m]	Part no.	Type
<b>Plug socket with cable</b>				
	• Connection between multi-pin plug distributor NEDU and control cabinet	5	525618	SIM-M12-8GD-5-PU
		10	570008	SIM-M12-8GD-10-PU
<b>Plug socket with cable</b>				
	• For EXCT • For multi-pin SET EADH	15	8048086	NEBU-M12W8-K-15-N-LE8
<b>Plug</b>				
	• For connection to the multi-pin plug distributor NEDU / distributor NEDY	-	562024	NECU-S-M8G3-HX
<b>Connecting cable</b>				
	• Connection between distributor NEDY and control cabinet	2.5	541342	NEBU-M8G4-K-2.5-LE4
		5	541343	NEBU-M8G4-K-5-LE4
		7.5	610854	NEBU-M8G4-K-7.5-LE4
		10	589560	NEBU-M8G4-K-10-LE4
		15	610855	NEBU-M8G4-K-15-LE4
<b>Multi-pin plug distributor</b>				
	• With the help of the multi-pin plug distributor, all electrical signals such as for end-position sensing can be transferred Options: – 4 individual connections – 6 individual connections	-	574586	NEDU-L4R1-M8G3L-M12G8
			574587	NEDU-L6R1-M8G3L-M12G8
	• With the help of the distributor, all electrical signals such as for end-position sensing can be transferred – 2 individual connections	-	8005312	NEDY-L2R1-V1-M8G3-N-M8G4

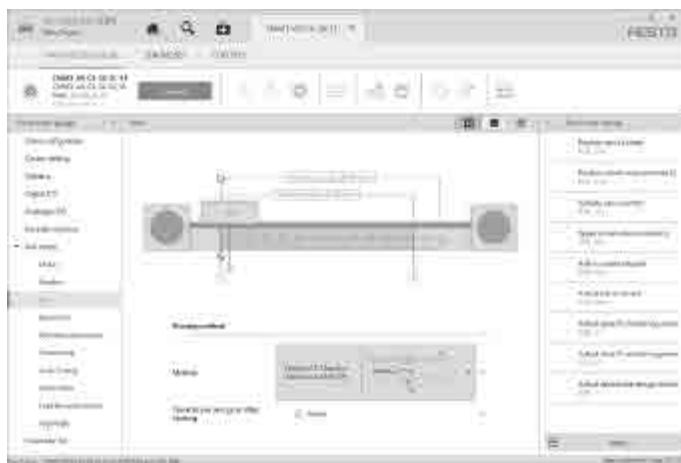
## Ordering data – Accessories

Designation	Description																											
<b>Motor controller/servo drive</b>																												
	<p>The accessories for the relevant motor controllers/servo drives can be found at:</p> <ul style="list-style-type: none"> <li>• <a href="http://www.festo.com/catalogue/cmmt">www.festo.com/catalogue/cmmt</a></li> </ul>																											
Designation	Description																											
<b>Sensing kit</b>																												
	<ul style="list-style-type: none"> <li>• For EXCT</li> <li>• Included in the scope of delivery: proximity switch SIES-Q8B, sensor bracket, switch lug, mounting bracket and screws</li> </ul>																											
	<table> <tr> <td>PNP, N/C contact</td><td><b>8092368</b></td><td>EAPR-E17-S1</td></tr> <tr> <td>PNP, N/O contact</td><td><b>2478427</b></td><td>EAPR-E17-S</td></tr> <tr> <td>NPN, N/C contact</td><td><b>8092369</b></td><td>EAPR-E17-S3</td></tr> <tr> <td>NPN, N/O contact</td><td><b>8092370</b></td><td>EAPR-E17-S4</td></tr> </table>	PNP, N/C contact	<b>8092368</b>	EAPR-E17-S1	PNP, N/O contact	<b>2478427</b>	EAPR-E17-S	NPN, N/C contact	<b>8092369</b>	EAPR-E17-S3	NPN, N/O contact	<b>8092370</b>	EAPR-E17-S4															
PNP, N/C contact	<b>8092368</b>	EAPR-E17-S1																										
PNP, N/O contact	<b>2478427</b>	EAPR-E17-S																										
NPN, N/C contact	<b>8092369</b>	EAPR-E17-S3																										
NPN, N/O contact	<b>8092370</b>	EAPR-E17-S4																										
<b>Multi-pin set</b>																												
	<ul style="list-style-type: none"> <li>• For EXCT</li> <li>• For connecting up to 4 inputs/outputs</li> </ul>																											
	<table> <tr> <td></td><td><b>2972137</b></td><td>EADH-E17-MP1</td></tr> </table>		<b>2972137</b>	EADH-E17-MP1																								
	<b>2972137</b>	EADH-E17-MP1																										
<b>Mounting kit</b>																												
	<ul style="list-style-type: none"> <li>• For EXCT</li> <li>• For mounting and aligning on a supporting surface</li> <li>• The kit is height-adjustable</li> </ul>																											
	<table> <tr> <td>EXCT-15</td><td><b>3838164</b></td><td>EAHM-E17-K2-15</td></tr> <tr> <td>EXCT-30</td><td><b>3838337</b></td><td>EAHM-E17-K2-30</td></tr> <tr> <td>EXCT-100</td><td><b>3838404</b></td><td>EAHM-E17-K2-100</td></tr> </table>	EXCT-15	<b>3838164</b>	EAHM-E17-K2-15	EXCT-30	<b>3838337</b>	EAHM-E17-K2-30	EXCT-100	<b>3838404</b>	EAHM-E17-K2-100																		
EXCT-15	<b>3838164</b>	EAHM-E17-K2-15																										
EXCT-30	<b>3838337</b>	EAHM-E17-K2-30																										
EXCT-100	<b>3838404</b>	EAHM-E17-K2-100																										
<b>Adjusting kit</b>																												
	<ul style="list-style-type: none"> <li>• Used to mount the handling system on a vertical surface</li> <li>• Once mounted, the axis can be aligned horizontally</li> </ul>																											
	<table> <tr> <td>EHMY-...-EGC-50-TB-KF</td><td><b>8047576</b></td><td>EADC-E16-50-E7</td></tr> <tr> <td>EHMY-...-EGC-80-TB-KF</td><td><b>8047577</b></td><td>EADC-E16-80-E7</td></tr> <tr> <td>EHMY-...-EGC-120-TB-KF</td><td><b>8047578</b></td><td>EADC-E16-120-E7</td></tr> <tr> <td>EHMY-...-EGC-185-TB-KF</td><td><b>8047579</b></td><td>EADC-E16-185-E7</td></tr> <tr> <td>EHMY-...-EGC-125-TB-HD</td><td><b>8047580</b></td><td>EADC-E16-125-E14</td></tr> <tr> <td>EHMY-...-EGC-160-TB-HD</td><td><b>8047581</b></td><td>EADC-E16-160-E14</td></tr> <tr> <td>EHMY-...-EGC-220-TB-HD</td><td><b>8047582</b></td><td>EADC-E16-220-E14</td></tr> <tr> <td>EHMY-...-ELGC-60-BS</td><td><b>8142654</b></td><td>EADC-E16-60-E22</td></tr> <tr> <td>EHMY-...-ELGC-80-BS</td><td><b>8142655</b></td><td>EADC-E16-80-E22</td></tr> </table>	EHMY-...-EGC-50-TB-KF	<b>8047576</b>	EADC-E16-50-E7	EHMY-...-EGC-80-TB-KF	<b>8047577</b>	EADC-E16-80-E7	EHMY-...-EGC-120-TB-KF	<b>8047578</b>	EADC-E16-120-E7	EHMY-...-EGC-185-TB-KF	<b>8047579</b>	EADC-E16-185-E7	EHMY-...-EGC-125-TB-HD	<b>8047580</b>	EADC-E16-125-E14	EHMY-...-EGC-160-TB-HD	<b>8047581</b>	EADC-E16-160-E14	EHMY-...-EGC-220-TB-HD	<b>8047582</b>	EADC-E16-220-E14	EHMY-...-ELGC-60-BS	<b>8142654</b>	EADC-E16-60-E22	EHMY-...-ELGC-80-BS	<b>8142655</b>	EADC-E16-80-E22
EHMY-...-EGC-50-TB-KF	<b>8047576</b>	EADC-E16-50-E7																										
EHMY-...-EGC-80-TB-KF	<b>8047577</b>	EADC-E16-80-E7																										
EHMY-...-EGC-120-TB-KF	<b>8047578</b>	EADC-E16-120-E7																										
EHMY-...-EGC-185-TB-KF	<b>8047579</b>	EADC-E16-185-E7																										
EHMY-...-EGC-125-TB-HD	<b>8047580</b>	EADC-E16-125-E14																										
EHMY-...-EGC-160-TB-HD	<b>8047581</b>	EADC-E16-160-E14																										
EHMY-...-EGC-220-TB-HD	<b>8047582</b>	EADC-E16-220-E14																										
EHMY-...-ELGC-60-BS	<b>8142654</b>	EADC-E16-60-E22																										
EHMY-...-ELGC-80-BS	<b>8142655</b>	EADC-E16-80-E22																										

## Programming aid

### Festo Automation Suite

Parameterisation and programming software for electronic devices from Festo



- Parameterisation, programming and commissioning in a clear and user-friendly interface
- Optimum support for complex processes thanks to guided wizards (e.g. for commissioning, drive configuration, etc.)
- Fast access to the required documents and additional information
- Easy integration of electric drives in the controller programming

# Festo - Your Partner in Automation



## 1 Festo Inc.

5300 Explorer Drive  
Mississauga, ON L4W 5G4  
Canada

### Festo Customer Interaction Center

Tel: 1 877 463 3786  
Fax: 1 877 393 3786  
Email: [customer.service.ca@festo.com](mailto:customer.service.ca@festo.com)

## 2 Festo Pneumatic

Av. Ceylán 3,  
Col. Tequesquínáhuac  
54020 Tlalnepantla,  
Estado de México

### Multinational Contact Center

01 800 337 8669  
[ventas.mexico@festo.com](mailto:ventas.mexico@festo.com)

## 3 Festo Corporation

1377 Motor Parkway  
Suite 310  
Islandia, NY 11749

### Festo Customer Interaction Center

1 800 993 3786  
1 800 963 3786  
[customer.service.us@festo.com](mailto:customer.service.us@festo.com)

## 4 Regional Service Center

7777 Columbia Road  
Mason, OH 45040

### Connect with us



[www.festo.com/socialmedia](http://www.festo.com/socialmedia)



[www.festo.com](http://www.festo.com)