

# Sensor testers SM-TEST-1


Technical data

## Description

The sensor tester is used to test and adjust sensors and proximity switches. The sensor tester also facilitates commissioning and servicing work.

Functions:

- Testing of operation of proximity sensors using the integrated voltage supply
- Adjustment of proximity switches whilst attached to cylinders
- Identification of switching outputs of proximity switches and sensors with PNP, NPN, NC and NO functions by means of the appropriate LED

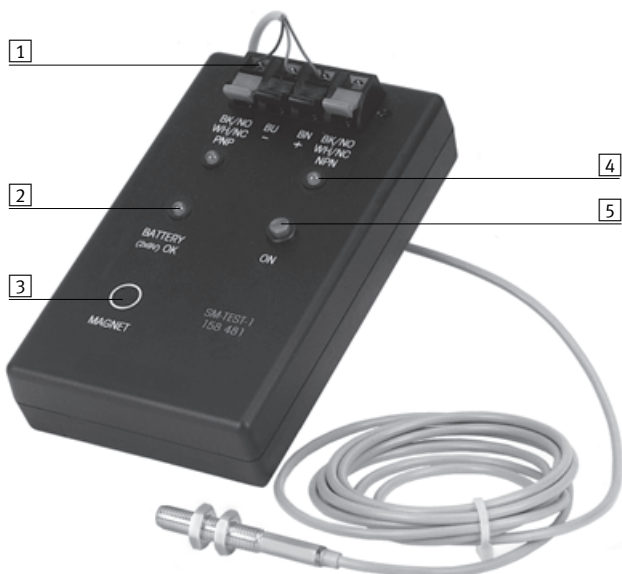

- 1 Terminal strip for connecting cable
- 2 LED for battery check
- 3 Magnet for testing of proximity sensors
- 4 LED for indicating switching status
- 5 On-off button

 Note

The tester is powered by two 9 V block batteries, which are not included in the scope of delivery.

## Ordering data

Part No.	Type
158481	SM-TEST-1

# Festo - Your Partner in Automation



**1 Festo Inc.**  
5300 Explorer Drive  
Mississauga, ON L4W 5G4  
Canada

**Festo Customer Interaction Center**  
Tel: 1 877 463 3786  
Fax: 1 877 393 3786  
Email: [customer.service.ca@festo.com](mailto:customer.service.ca@festo.com)



**2 Festo Pneumatic**  
Av. Ceylán 3,  
Col. Tequesquináhuac  
54020 Tlalnepantla,  
Estado de México

**Multinational Contact Center**  
01 800 337 8669  
[ventas.mexico@festo.com](mailto:ventas.mexico@festo.com)



**3 Festo Corporation**  
1377 Motor Parkway  
Suite 310  
Islandia, NY 11749

**Festo Customer Interaction Center**  
1 800 993 3786  
1 800 963 3786  
[customer.service.us@festo.com](mailto:customer.service.us@festo.com)



**4 Regional Service Center**  
7777 Columbia Road  
Mason, OH 45040

Connect with us



[www.festo.com/socialmedia](http://www.festo.com/socialmedia)



[www.festo.com](http://www.festo.com)

Subject to change