

Sensor testers SM-TEST-1


Technical data

Description

The sensor tester is used to test and adjust sensors and proximity switches. The sensor tester also facilitates commissioning and servicing work.

Functions:

- Testing of operation of proximity sensors using the integrated voltage supply
- Adjustment of proximity switches whilst attached to cylinders
- Identification of switching outputs of proximity switches and sensors with PNP, NPN, NC and NO functions by means of the appropriate LED

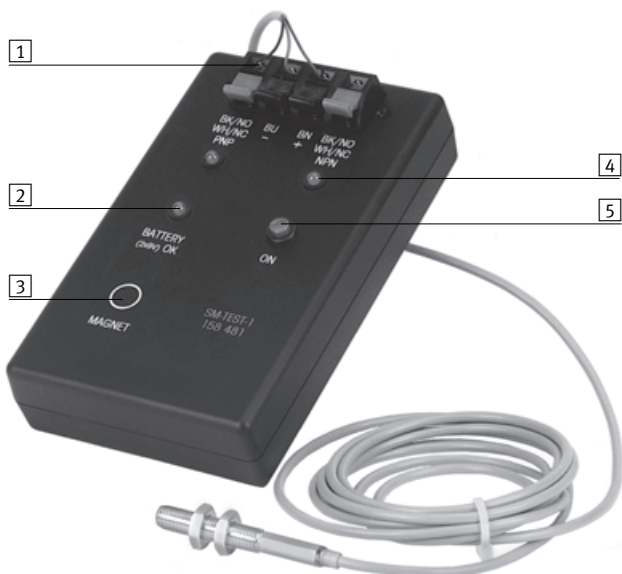

- 1 Terminal strip for connecting cable
- 2 LED for battery check
- 3 Magnet for testing of proximity sensors
- 4 LED for indicating switching status
- 5 On-off button

-  - Note

The tester is powered by two 9 V block batteries, which are not included in the scope of delivery.

Ordering data

| Part No. | Type |
|----------|-----------|
| 158481 | SM-TEST-1 |

Festo - Your Partner in Automation



1 Festo Inc.
5300 Explorer Drive
Mississauga, ON L4W 5G4
Canada

Festo Customer Interaction Center
Tel: 1 877 463 3786
Fax: 1 877 393 3786
Email: customer.service.ca@festo.com



2 Festo Pneumatic
Av. Ceylán 3,
Col. Tequesquináhuac
54020 Tlalnepantla,
Estado de México

Multinational Contact Center
01 800 337 8669
ventas.mexico@festo.com



3 Festo Corporation
1377 Motor Parkway
Suite 310
Islandia, NY 11749

Festo Customer Interaction Center
1 800 993 3786
1 800 963 3786
customer.service.us@festo.com



4 Regional Service Center
7777 Columbia Road
Mason, OH 45040

Connect with us



www.festo.com/socialmedia



www.festo.com

Subject to change