## Pipe and tubing cutters


# **FESTO**



### **Tubing cutter PAN-VOS**

for flame retardant PAN-V0 tubing The integrated stop assures that the PVC sheath for PAN-V0 tubing is always cut to the correct length. The blade design prevents damage to the inner, polyamide tubing.



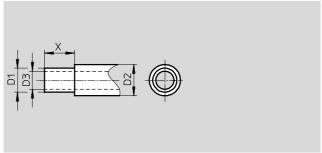

Dimensions and ordering data						
For tubing O.D.	D1	D2	D3	Х	Part No.	Туре
	Ø	Ø	Ø			
[mm]	[mm]					
6	6	8	4	17	160554	PAN-VOS-6/8
8	ρ	10	6	18		
o o	U	10	Ü	10		
10	10	12	7.5	20	160555	PAN-V0S-10/12

### Disconnecting pliers ZDS

with cutter, for removing plastic tubing PP-3, PU-3, PP-4, PU-4 from barbed nipples



Ordering data		
	Part No.	Туре
for 3 mm tubing	9090	ZDS-PK-3
for 4 mm tubing	9522	ZDS-PK-4

# Pipe and tubing cutters Technical data

**FESTO** 

### Connecting pliers ZMS-PK-3/4

with cutter, for connecting plastic tubing PP-3, PU-3, PP-4, PU-4 to barbed nipples ZDS-PK-4 is only suitable for single barbed fittings.



Ordering data		
	Part No.	Туре
Connecting pliers	9341	ZMS-PK-3/4

#### Pipe cutter ZR

The pipe cutter ZR is used for cutting PQ-PA plastic piping with outside diameters of up to 28 mm to length. It is not suitable for tubing with metal casing.



Ordering data		
	Part No.	Туре
Pipe cutter	194592	ZR

#### Pipe and tubing cutter ZRS

The pipe and tubing cutter ZRS is used for cutting plastic and nitrile rubber tubing with outer diameters of up to 20 mm, with or without textile insert. It is not suitable for tubing with metal casing. It also has an integrated safety catch to prevent unauthorised opening.



Ordering data				
	Part No.	Туре		
Pipe and tubing cutter with 2 spare blades	7658	ZRS		
10 spare blades for pipe and tubing cutter	218606	ZRS 10-pack		