


Manual override AHB

FESTO



Datasheet

General technical data

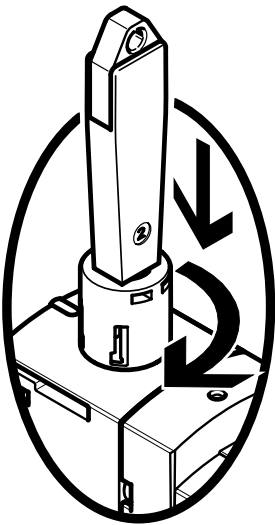

Manual override attachments can be used to lock an existing, automatically resetting manual override in the actuated position.

Mounting position	optional
Type of mounting	Snapping in

Materials				
Size	Size 2	Size 3	Size 4	Size 5
Material housing	PA6 reinforced			
LABS (PWIS) conformity	VDMA24364-B2-L			


Operating and environmental conditions	
Ambient temperature	-5 ... 60°C
Corrosion resistance class CRC ¹⁾	2 - Moderate corrosion stress

1) More information www.festo.com/x/topic/crc

Dimensions

Dimensions – AHB-MZB, AHB-MEB, AHB-MD/MF/MV

Download CAD data www.festo.com

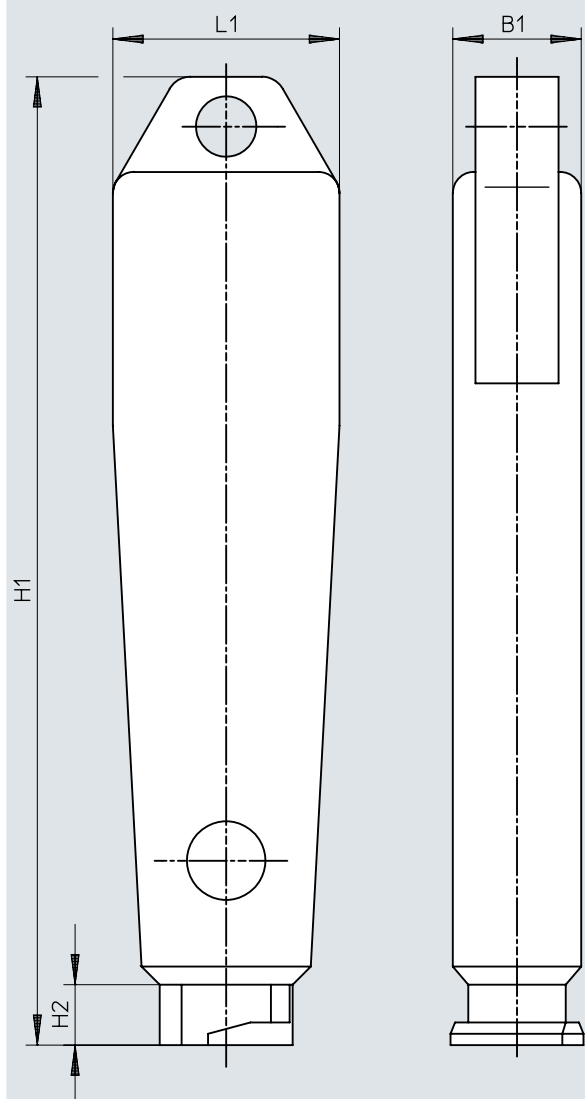

	B1	H1	H2	L1
AHB-MZB	5,5	36,9	2,2	8,8
AHB-MEB	6,6	48,4	3,3	11
AHB-MD/MF/MV	8,5	64,1	4	14

Ordering data

Ordering data – Actuator attachments			
	Size	Part no.	Type
	Size 2	157600	AHB-MZB
	Size 3	157601	AHB-MEB
	Size 4	157651	AHB-MD/MF/MV
	Size 5	1662543	AHB-MEB-B