Adding counters CCES Technical data

FESTO

Function:

The electric adding counter CCES can be used in combination with a proximity sensor to count the number of switching cycles performed by a cylinder.

Recommended proximity sensors SME/SMT → 2

Features:

- 8-digit LCD display
- Own power supply
- Designed for front panel mounting
- Connection via terminal strip
- Reset button




General technical data						
Constructional design		Electric adding counter with battery				
Type of mounting		Front panel mounting				
Power supply		Lithium battery (nominal value retention 7 years)				
Display		8-digit				
Reset method		Pushbutton or electric signal				
Min. pulse length for drive [ms]		15				
Min. pulse length for reset	[ms]	15				
Product weight	[g]	30				
Electrical data						
Lower threshold value	[V DC]	< 0.7				
Upper threshold value	[V DC]	5 30				
Clock pulse input		Programmable				
Clock pulse input setting		Negative edge 30 Hz				
Max. counting rate	[kHz]	7.5				
Max. attenuated counting rate	[Hz]	30				
Materials						
Housing		PC				
Note on materials		RoHS-compliant				

Operating and environmental conditions					
Ambient temperature	[°C]	-10 +50			
Corrosion resistance class CRC ¹⁾		2			

¹⁾ Corrosion resistance class 2 as per Festo standard 940 070 Components subject to moderate corrosion stress. Externally visible parts with primarily decorative surface requirements which are in direct contact with a normal industrial environment or media such as coolants or lubricating agents.

Adding counters CCES Technical data

FESTO

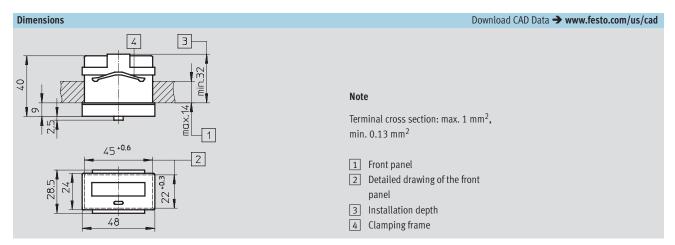

Ordering data		
	Part No.	Туре
Adding counter	549403	CCES-P-C8-E

Ordering data – Pr	oximity sensor SME/SMT				Technical c	lata → Internet: sme-8m, smt-8m
	Switching element	Switch output	Electrical connection	Cable length	Part No.	Туре
	function			[m]		
	N/O contact	Contacting, bipolar	Cable, 3-wire	2.5	F/20/2	CME ON DC 24V V 2 F OF
		Contacting, Dipotal	Cable, 5-wife	2.5	543862	SME-8M-DS-24V-K-2,5-OE
		PNP	Cable, 3-wire	2.5	543862	SMT-8M-PS-24V-K-2,5-OE

Note

Please note the following points:

- The abovementioned proximity sensor SME can be connected to the adding counter as a 2-wire switch without additional power
- If using other proximity sensors, an additional power supply is needed

and the clock pulse input of the adding counter must be reprogrammed from NPN to PNP.

- Screened cables must be used for cables longer than 3 m.
- The maximum permissible cable length is 30 m.

Festo - Your Partner in Automation





1 Festo Inc.

5300 Explorer Drive Mississauga, ON L4W 5G4 Canada

Festo Customer Interaction Center

Tel: 1877 463 3786 Fax: 1877 393 3786



2 Festo Pneumatic

Av. Ceylán 3, Col. Tequesquináhuac 54020 Tlalnepantla, Estado de México

Multinational Contact Center

01 800 337 8669



3 Festo Corporation

1377 Motor Parkway Suite 310 Islandia, NY 11749



Regional Service Center

7777 Columbia Road Mason, OH 45040

Festo Customer Interaction Center

1 800 993 3786 1 800 963 3786 customer.service.us@festo.com

Connect with us









Subject to change