


Manual override tools AHB

FESTO

Technical data

- Temperature range
-5 ... +60°C

- Manual override tools can be used to lock a detenting manual override in the actuated position.

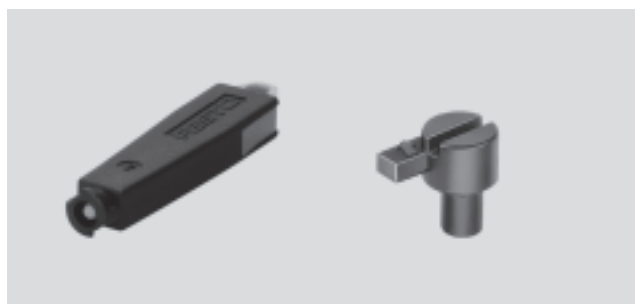

General technical data	
Type of mounting	Push into existing manual override until it engages
Mounting position	Any
Ambient temperature [°C]	-5 ... +60
Corrosion resistance class CRC ¹⁾	2

- 1) Corrosion resistance class 2 according to Festo standard 940 070
Components requiring moderate corrosion resistance. Externally visible parts with primarily decorative surface requirements which are in direct contact with a surrounding industrial atmosphere or media such as cooling or lubricating agents.

Dimensions		Download CAD data → www.festo.com
AHB-MZB, AHB-MEB, AHB-MD/MF/MV		AHB-ME-1/8

Type	B1	H1	H2	L1
AHB-MZB	5.5	36.9	2.2	8.8
AHB-MEB	6.6	48.4	3.3	11
AHB-MD/MF/MV	8.5	64.1	4	14

Ordering data				
	Materials	Function	Part No.	Type
	Housing: Polyamide Spring: High-alloy stainless steel	Turn 90° to actuate and lock manual override	157 600	AHB-MZB
			157 601	AHB-MEB
			157 651	AHB-MD/MF/MV
	Polyamide	Turn approx. 90 to 180° to actuate and lock manual override	152 797	AHB-ME-1/8

Festo - Your Partner in Automation



1 Festo Inc.
5300 Explorer Drive
Mississauga, ON L4W 5G4
Canada

Festo Customer Interaction Center
Tel: 1 877 463 3786
Fax: 1 877 393 3786
Email: customer.service.ca@festo.com



2 Festo Pneumatic
Av. Ceylán 3,
Col. Tequesquináhuac
54020 Tlalnepantla,
Estado de México

Multinational Contact Center
01 800 337 8669
ventas.mexico@festo.com



3 Festo Corporation
1377 Motor Parkway
Suite 310
Islandia, NY 11749

Festo Customer Interaction Center
1 800 993 3786
1 800 963 3786
customer.service.us@festo.com



4 Regional Service Center
7777 Columbia Road
Mason, OH 45040

Connect with us

www.festo.com/socialmedia



www.festo.com

Subject to change