


Quickstepper FSS

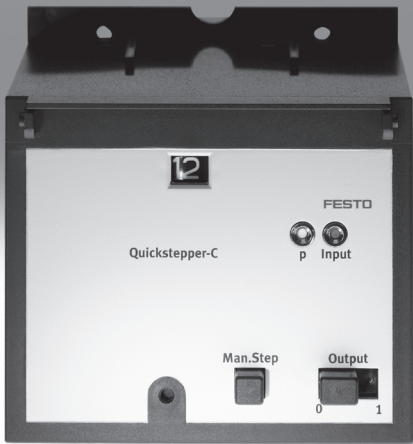

Quickstepper FSS

Key features

FESTO

Description			
• Pneumatic/mechanical sequencer with 12 steps and start logic circuits • Ready-to-install sequence controller • Acknowledgement-controlled motion sequences	The Quickstepper is a mini control system with 12 switching steps. Each input Xn is assigned an output An. Only one output at a time is fed with compressed air, in an order corresponding to the sequence of the	switching steps. The other outputs are exhausted at this time. The Quickstepper features a highly safe mode of operation as each given switching step cannot begin until the preceding step has been executed and acknowledged.	If the pulses fed to the input L are too short, the output A is disabled.
Functions			
• Step counter for steps 1 to 12 with upward counting function. • White pressure indicator for activated output Pn. • Blue pressure indicator for acknowledgement signal from last step to be executed (INPUT). • Slide switch OUTPUT: When the switch is at 0, the outputs are disabled. The control steps can be worked through manually. Only the selected step is activated. When the switch is set to 1, pressure is fed to the activated output.	• Pushbutton MAN.STEP (inching operation): Advance to next step or select a switching step. • Port MAN/P: Port for pilot air P. This signal can also be obtained from an external MAN preselect. • Safety: When the port L (reset) is activated, the step indicator always advances	to the last step (12). This is important when the controller is at a standstill. The Quickstepper has the additional safety feature that it will switch only when a continuous signal is present at the AUTO port. When an AUTO signal is present, inching operation (step-by-step manual switching) is not possible. The OUTPUT preselect is then disabled. This ensures that no manual	intervention can be made while the Quickstepper is running in AUTOMATIC mode. Only one output at a time is fed with compressed air. All other outputs are exhausted.

Quickstepper FSS

Technical data

FESTO

Quicksteppers can be replaced quickly. The tubing is left in place.



General technical data		
Pneumatic connection	P	Barbed fitting for plastic tubing with 4 mm standard ID
	L	Barbed fitting for plastic tubing with 3 mm standard ID
	Inputs	
	AUTO	
	MAN/P	
Nominal size of inputs and outputs	[mm]	2.5
Design		Sequencer with 12 switching steps (additive)
Type of mounting		On mounting frame 2n
		Front panel mounting
Standard nominal flow rate	[l/min]	60
Acknowledgement response pressure	[bar]	≥ 1.5
Acknowledgement drop-off pressure	[bar]	≤ 0.5
Min. acknowledgement pulse length	[ms]	50
Max. step frequency	[Hz]	12
Weight	[g]	450
Materials		
Housing		ABS
Seals		NBR

Operating and environmental conditions		
Operating pressure	[bar]	2.5 ... 6
Operating medium		Compressed air in accordance with ISO 8573-1:2010 [6:4:4]
Note on operating/pilot medium		Operation with lubricated medium not possible
Ambient temperature	[°C]	+5 ... +40
Storage temperature	[°C]	−40 ... +60

ATEX	
ATEX category gas	II 2G
Ex-ignition protection type gas	Ex h IIC T4 Gb
ATEX category dust	II 3D
Ex-ignition protection type dust	Ex h IIIC T125°C Dc
ATEX ambient temperature	+5°C ≤ Ta ≤ +40°C
CE mark (see declaration of conformity) ¹⁾	To EU Explosion Protection Directive (ATEX)

1) Additional information www.festo.com/sp → Certificates.

Quickstepper FSS


Technical data

FESTO

Example of control application

Shown in initial position

Circuit diagram

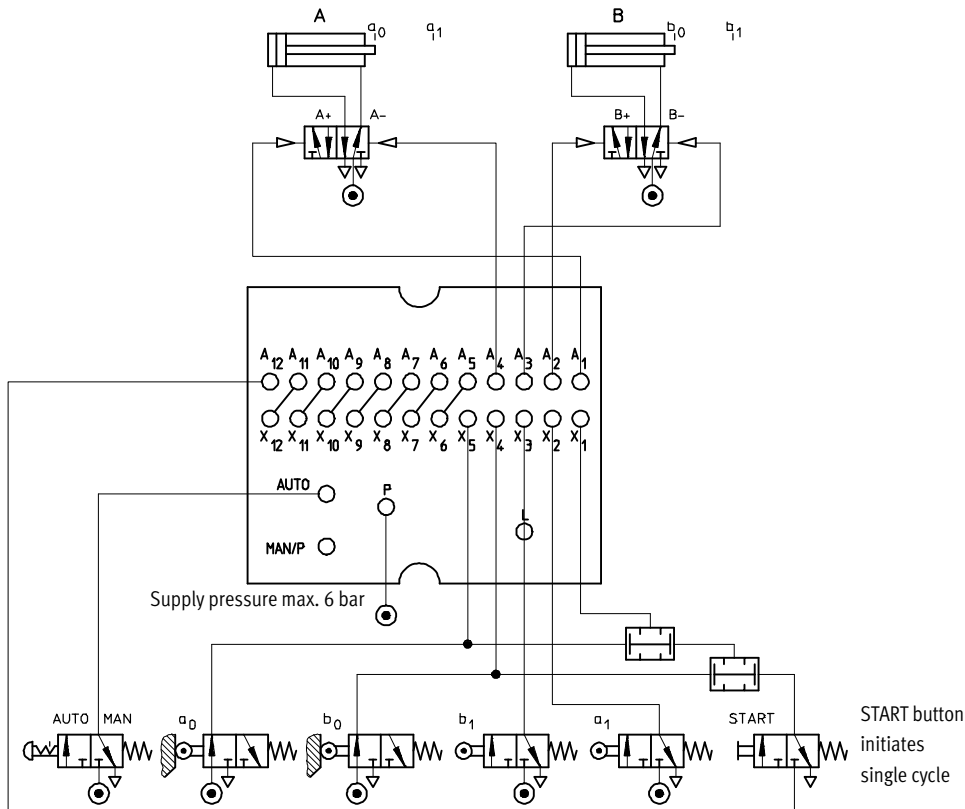

- P = Compressed air supply line
- L = Reset signal
- X₁–X₁₂ = Inputs
- A₁–A₁₂ = Outputs
- AUTO = Start signal
- MAN/P = Pilot air supply line

Circuit diagram

Rear side of Quickstepper-C

- MAN/P
Pilot air port. This signal can also be obtained from an external MAN preselect.


Note

If an external start is used, the START button on the front panel must be locked out (to disable the internal START function). This is important, since safety regulations specify that it must be possible to initiate a start from one place only.

- L_{IN}
For an external reset signal.
Note: The RESET button on the front panel can be locked out to disable the internal RESET function.
- EMERGENCY-STOP
If no signal is present or the pilot air supply fails, the outputs A1 ... A12 are blocked. They remain disabled even if an emergency stop pushbutton which has been pressed is released.
- P_{IN}
Pilot pressure.
- Stop_{IN}
External signal for stop within cycle.
- 0 position_{IN}
Direct common initial position.
- END_{IN}
External signal for stop at end of cycle.

Quickstepper FSS

Technical data

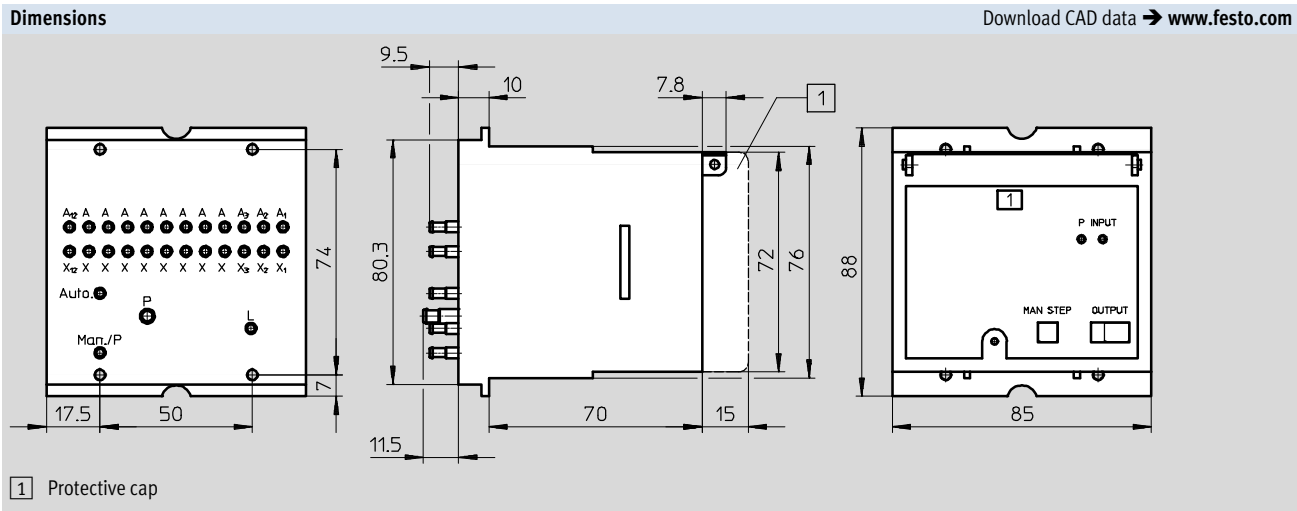

Ordering data		
	Part No.	Type
Quickstepper	15609	FSS-12-C

Quickstepper FSS

Accessories

FESTO



Panel frame FSS-F-12

For front panel mounting

Required front panel aperture

□ 92 mm

Panel thickness max. 13 mm

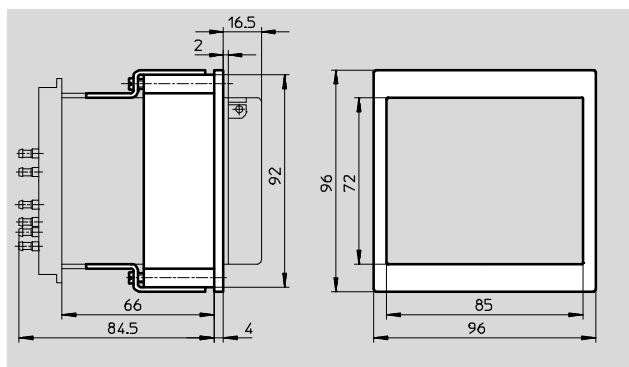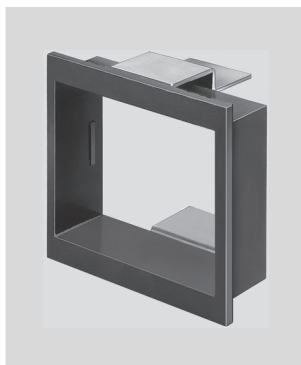

Ordering data			
	Weight [g]	Part No.	Type
Panel frame	110	11570	FSS-F-12

Adapter FSS-KM-8-12

For bridging unused Quickstepper inputs and outputs. The blanking strip is cut to length according to the number of unused steps and pushed onto the barbed fittings.

The P connection is made via a tubing connector to the lowest step which is to be bypassed. The plug is always inserted at step 12.



Ordering data			
		Part No.	Type
Adapter		13830	FSS-KM-8-12

Festo - Your Partner in Automation



1 Festo Inc.
5300 Explorer Drive
Mississauga, ON L4W 5G4
Canada

Festo Customer Interaction Center

Tel: 1 877 463 3786
Fax: 1 877 393 3786
Email: customer.service.ca@festo.com



2 Festo Pneumatic
Av. Ceylán 3,
Col. Tequesquináhuac
54020 Tlalneptla,
Estado de México

Multinational Contact Center

01 800 337 8669
ventas.mexico@festo.com



3 Festo Corporation
1377 Motor Parkway
Suite 310
Islandia, NY 11749

Festo Customer Interaction Center

1 800 993 3786
1 800 963 3786
customer.service.us@festo.com



4 Regional Service Center
7777 Columbia Road
Mason, OH 45040

Connect with us



www.festo.com/socialmedia



www.festo.com