

## Mounting instructions click fittings NPKA


**FESTO**



## Mounting instructions click fittings NPKA

### Mounting and removal


#### Mounting

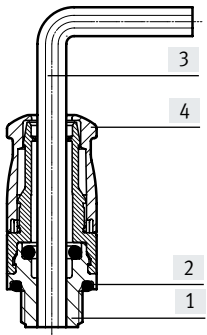

- [1] Screwed trunnion
- [2] Sealing ring
- [3] Allen key
- [4] Sleeve

- Screw the screwed plug and the sealing ring on to the counterpart and tighten in accordance with the nominal tightening torque.


- Special feature of the straight design NPKA-D: insert the long side of an Allen key completely into the click fitting through the sleeve. Use the entire contact surface of the internal hexagon.

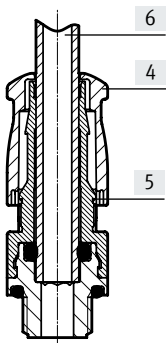

- [4] Sleeve
- [5] Stop contour 1
- [6] Plastic tubing

- Pull the sleeve as far as the stop contour 1 of the clamping collet, until you hear and feel the sleeve click in.

- Insert the plastic tubing through the open sleeve, clamping collet and tubing seal as far as the tube bearing shoulder.

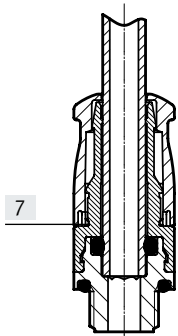

- [7] Stop contour 2

- Push the sleeve as far as the stop contour 2 of the clamping collet, until you hear and feel the sleeve click in.

- The closed sleeve pushes the clamping segment of the clamping collet against the plastic tubing, holding it in place.

#### Removal

In order to disassemble it, follow the steps in reverse order.