

## Handling modules HSW

**FESTO**



## Handling modules HSW

Key features at a glance


### Range of applications

The handling module is a new generation of function modules for the automatic transfer, feed and removal of small parts in extremely confined spaces. This is achieved by means of a guided swivel and linear motion sequence. A backlash-free guide with recirculating

ball bearing elements ensures high precision and good rigidity. The combination of a semi-rotary drive and a slotted guide system produces a compact unit for a complete pick & place cycle at an operating angle of 90°.

### Special features

- Compact design
- Extremely short cycle times
- Cost optimised
- Simple commissioning
- For effective loads up to 1.6 kg
- Angle and stroke adjustment
- Wait positions possible
- No planning costs

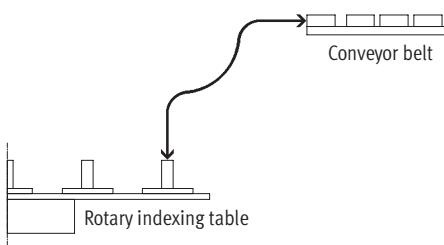

### Product range overview – Two drive variants are available

	Pneumatic: HSW-...-AP, with swivel module DSM	Electrical: HSW-...-AE, with motor unit MTR-DCI	Without drive: HSW-...-AS, with drive shaft
Advantages	<ul style="list-style-type: none"> <li>• Fast</li> <li>• Cost effective</li> <li>• Ready to install</li> <li>• No system planning required</li> <li>• Simple commissioning</li> </ul>	<ul style="list-style-type: none"> <li>• Freely positionable</li> <li>• Freely selectable speed</li> <li>• Smooth motion sequence</li> <li>• Ready to install</li> <li>• No system planning required</li> <li>• Simple commissioning using teach-in procedure</li> </ul>	<ul style="list-style-type: none"> <li>• Compact</li> <li>• Universal applications</li> <li>• Variable drive interface</li> <li>• On request: Drive options in combination with servo motors MTR-AC</li> </ul>

### Technical data

Max. linear stroke at 90° swivel angle	[mm]	90 ... 175	
Working stroke	[mm]	9 ... 35	
Min. cycle time	[s]	0.6 ... 1.0	0.8 ... 1.2 Dependent on drive
Effective load	[g]	0 ... 1,600	
Repetition accuracy at end positions	[mm]	±0.02	±0.02
Wait positions		Max. 2	Any Dependent on drive
Function of wait position		Pushing via actuating cylinder	Freely approachable Dependent on drive
Repetition accuracy at wait positions	[mm]	< 1	< 2 Dependent on drive
Technical data		➔ 9	➔ 26 ➔ 36


# Handling modules HSW

Application examples

FESTO


## HSW-...-AP, pneumatic / HSW-...-AE, electrical

Rotary indexing table

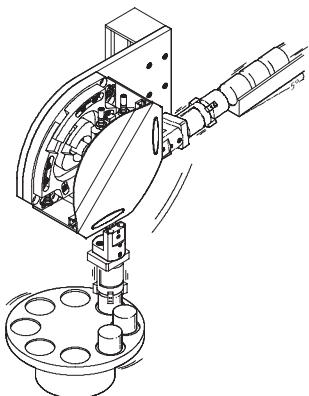

- Fast feed and removal at a linear transfer unit or rotary indexing table, for example


Machine equipment

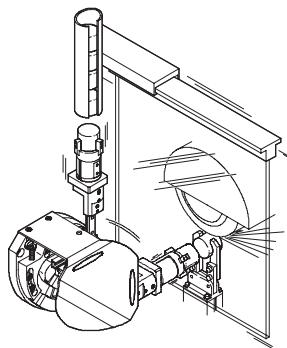

- Loading and unloading of small parts on a grinding or injection moulding machine, for example


## Planar surface gantry

- Fast equipping of pallets

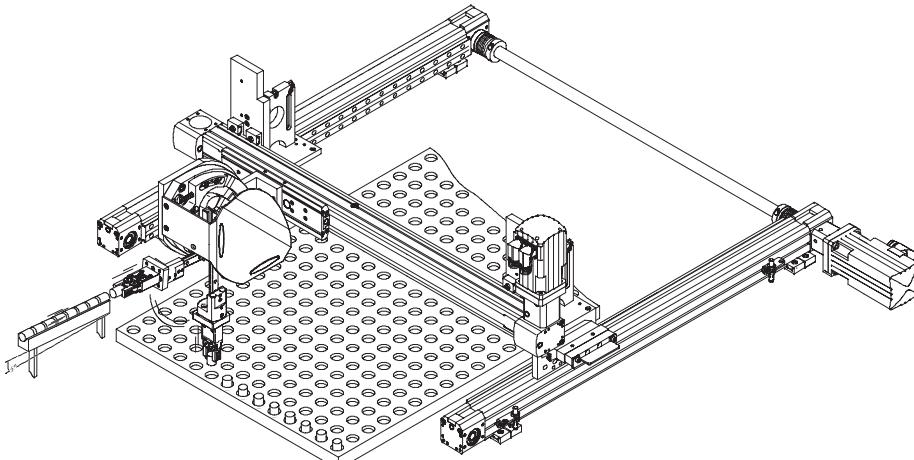

## HSW-...-AS, without drive

Rotary indexing table, linear transfer

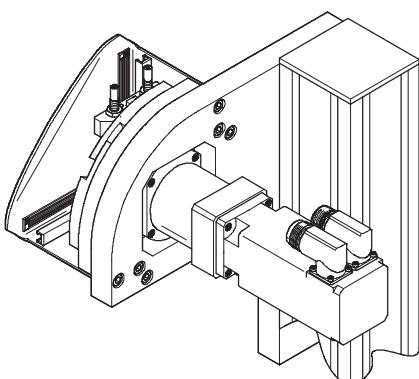


- Fast and flexible 90° pick & place unit with servo motor MTR-AC
- Electrical variant using third-party motor

# Handling modules HSW

Key features at a glance


FESTO

## Design of HSW-...-AP – pneumatic variant with swivel module DSM

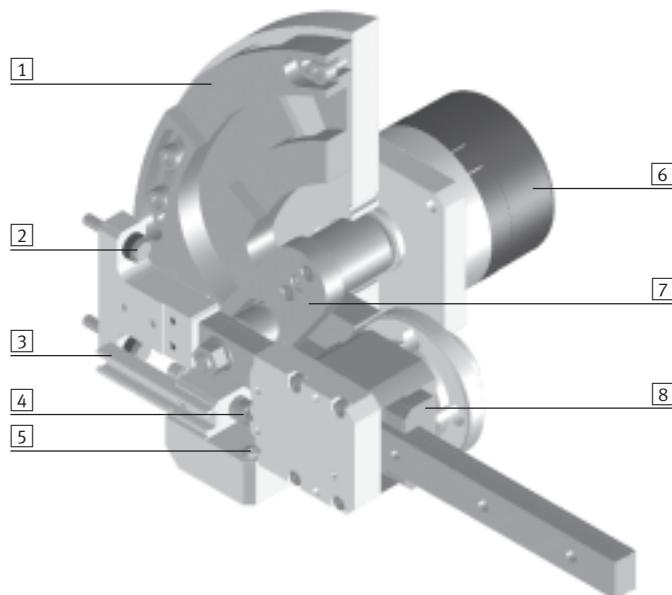

- [1] Slotted guide plate
- [2] Adjustable stop
- [3] Sensor rail
- [4] Shock absorber
- [5] Pressure piece
- [6] Swivel module DSM
- [7] Swivel lever
- [8] Guide with recirculating ball bearing element

## Design of HSW-...-AS – variant without drive (rear side)

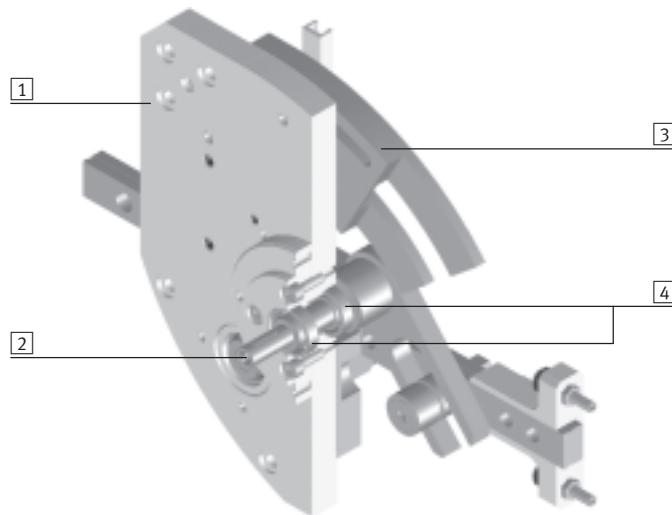


- [1] Base plate
- [2] Shaft with Woodruff key
- [3] Slotted guide plate
- [4] Ball bearings

# Handling modules HSW

FESTO

Key features at a glance

Design of HSW-...-AE – electrical variant with motor unit MTR-DCI-...-HM

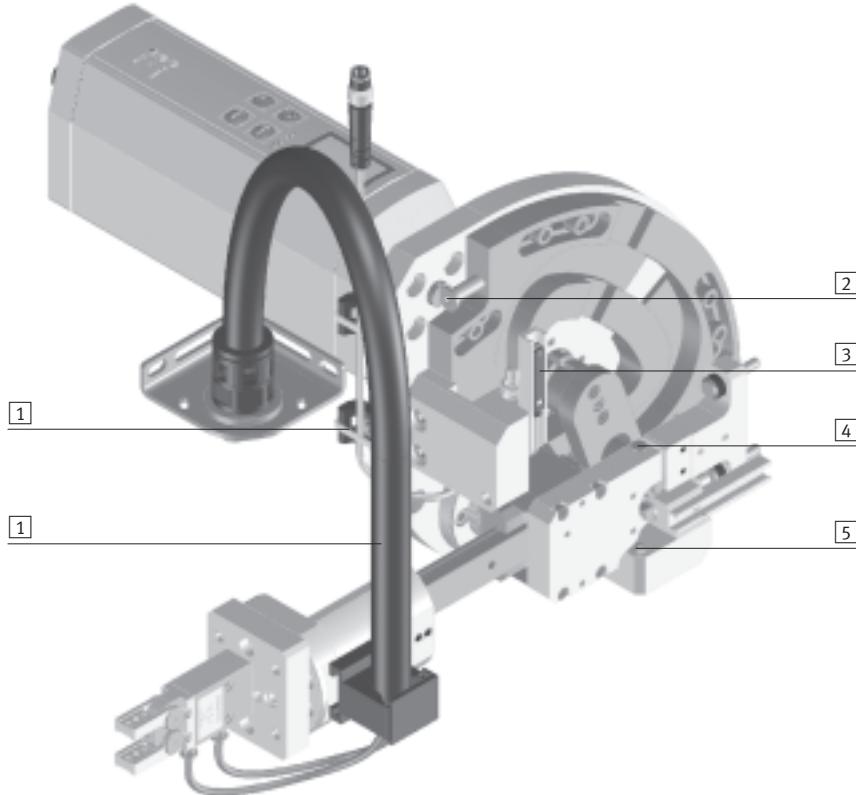

Cable binder holder and protective conduit



[1] Holder and protective conduit facilitate the secure routing of tubing and cables.

Stroke adjustment



[2] The adjustable slotted guide plate permits precise adjustment of the swivel angle.

Adjustment of proximity sensors



[3] The sensor rail facilitates readily accessible and easy adjustment of the proximity sensors.

Stop element and pressure piece




[4+5] The stop element and pressure piece guarantee freedom from backlash and precision in the end positions and in the effective linear stroke.

# Handling modules HSW

Peripherals overview

FESTO

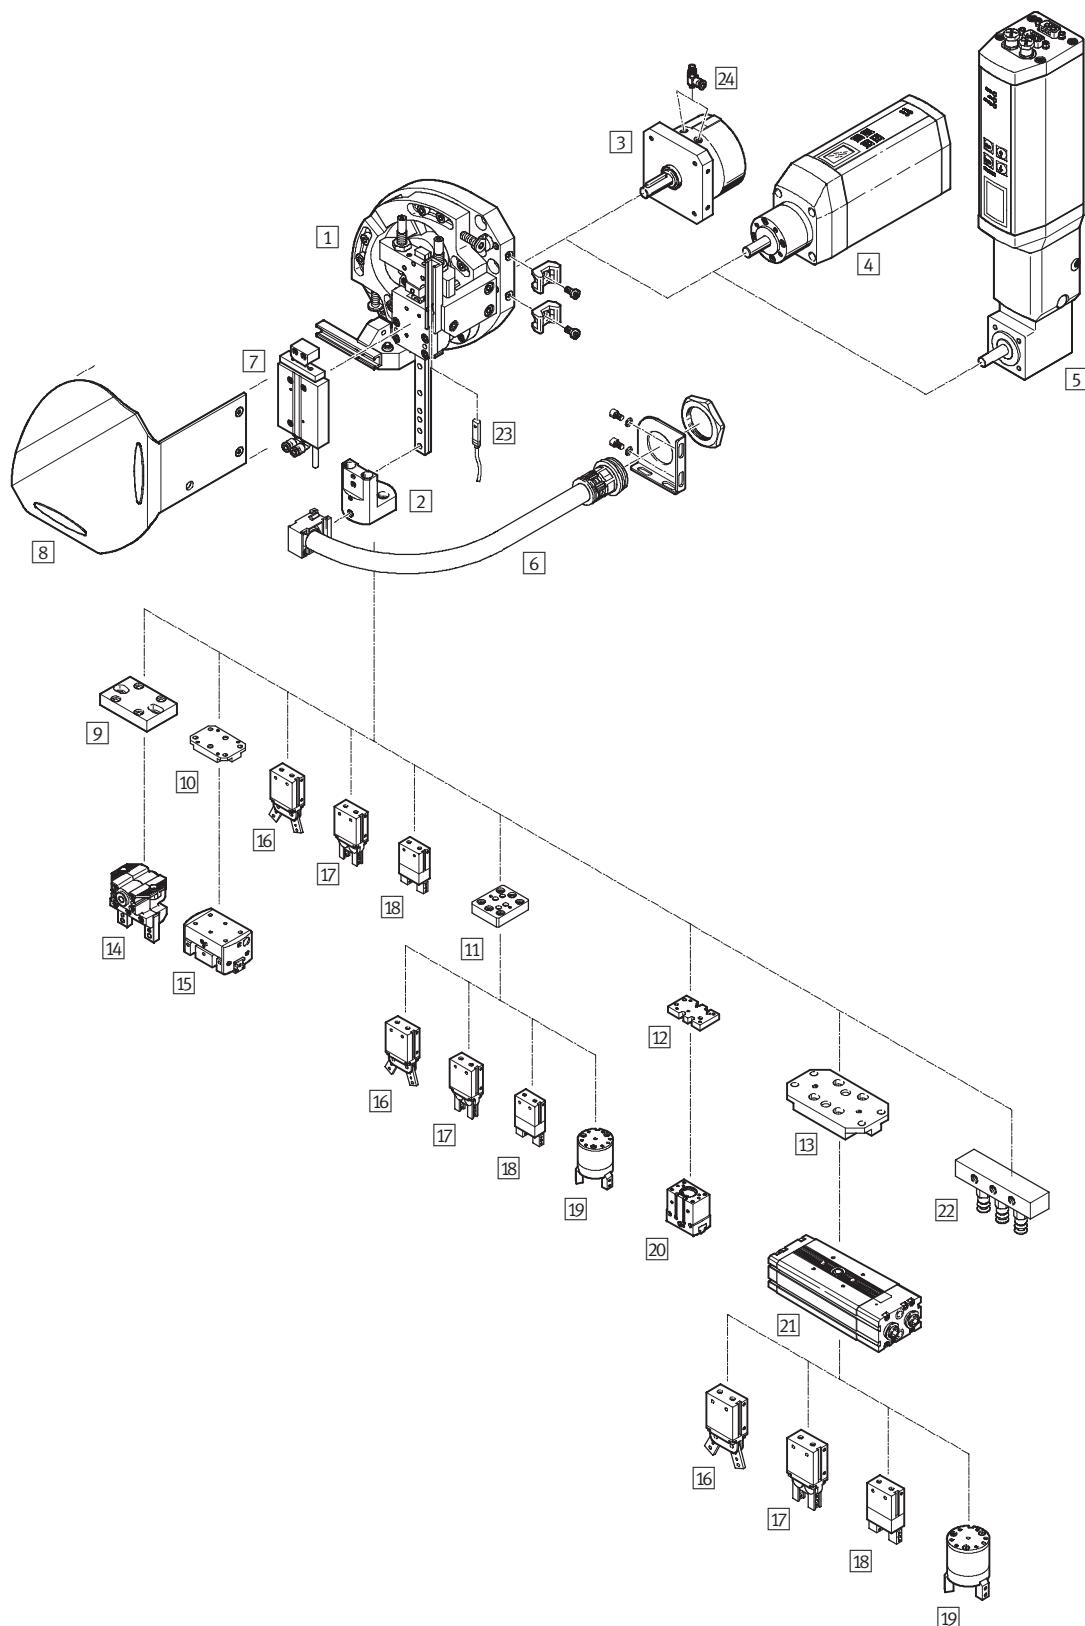

# Handling modules HSW

**FESTO**


Peripherals overview

Accessories		Brief description	10	12	16	➔ Page/Internet
[1]	Handling module HSW	Standard module without accessories	■	■	■	9
[2]	Adapter kit HAPG-...-B	Interface for grippers, semi-rotary drive, etc.	■	■	■	38
[3]	Swivel module DSM	Pneumatic drive, adapted to each size	■	■	■	dsm
[4]	Motor unit MTR-DCI-...-HM	Servo motor with integrated power electronics	■	■	■	26
[5]	Motor unit MTR-DCI-...-HM	Servo motor with right-angle gear unit and integrated power electronics	■	■	■	26
[6]	Installation kit MKRP	Conduit to protect electrical cables and tubing	■	■	■	39
[7]	Wait position module BW-HSW	With pneumatic drive: Pushes the swivel arm from the operating area	■	■	■	39
[8]	Cover kit BSD-HSW	To protect against accidental contact	■	■	■	39
[9]	Adapter kit HAPG	Interface between HSW and parallel gripper HGPC	–	■	■	40
[10]	Adapter kit HAPG	Interface between HSW and parallel gripper HGPP	–	■	■	40
[11]	Adapter kit HAPG	Interface between HSW and gripper	■	■	■	40
[12]	Adapter kit HAPG	Interface between HSW and parallel gripper HGPT	–	■	■	40
[13]	Adapter kit HAPS	Interface between HSW and semi-rotary drive DRQD	–	■	■	40
[14]	Parallel gripper HGPC	Appropriate gripper for every application	–	■	■	40
[15]	Parallel gripper HGPP		–	■	■	40
[16]	Angle gripper HGW		■	■	■	40
[17]	Radial gripper HGR		■	■	■	40
[18]	Parallel gripper HGP		■	■	■	40
[19]	Three-point gripper HGD		–	–	■	40
[20]	Parallel gripper HGPT		–	■	■	40
[21]	Semi-rotary drive DRQD	Semi-rotary drive for transferring parts	–	■	■	drqd
[22]	Suction cups	Appropriate suction cup for every application	■	■	■	suction cup
[23]	Proximity sensor SME-/SMT-8	Sensing option for end positions	■	■	■	42
[24]	Non-return and flow control valve GRLA	For setting the speed of pneumatic drives	■	■	■	grla

## Handling modules HSW, pneumatic

Type codes

FESTO

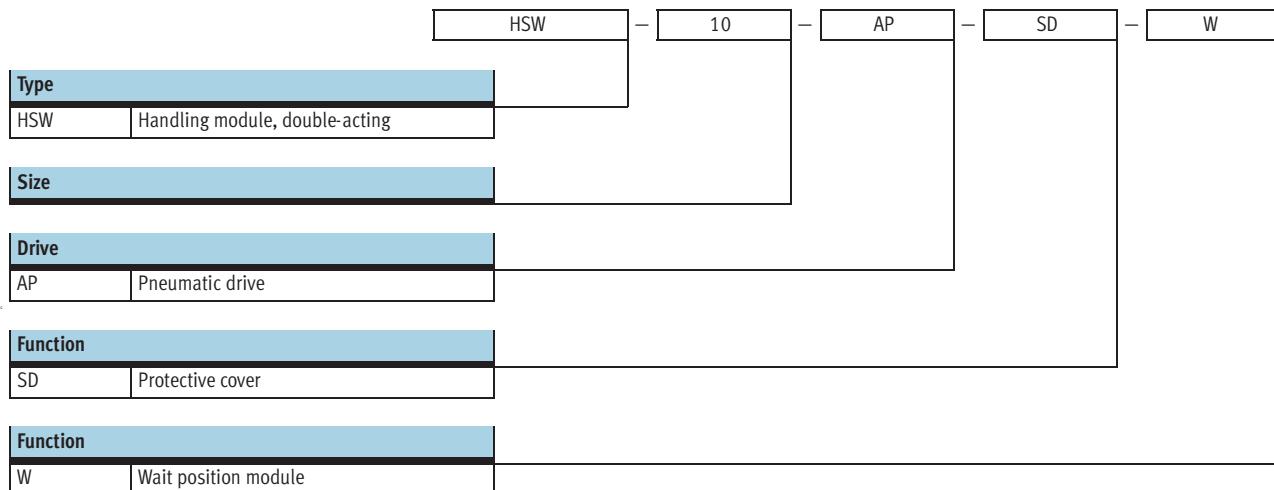


# Handling modules HSW, pneumatic

FESTO

Technical data

Function

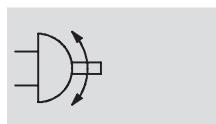

- - www.festo.com

- - Size  
10, 12 and 16
- - Swivel angle  
80 ... 100
- - Stroke range  
90 ... 175



## General technical data


Type	HSW-...-AP
Pneumatic connection	M5
Mode of operation	Double-acting
Constructional design	Swivel module
	Linear guide plus ball bearing
	Force-guided motion sequence
Cushioning	Shock absorber at both ends, soft characteristic curve
Position sensing	Via proximity sensor
Type of mounting	Via through-holes
	Via slot nuts
Mounting position	Any

## Operating and environmental conditions

Type	HSW-...-AP
Operating medium	Filtered compressed air, lubricated or unlubricated
Operating pressure [bar]	4 ... 8
Ambient temperature [°C]	0 ... +60

## Stroke [mm] and angle range [°]

Size	10	12	16
Max. linear stroke at 90° swivel angle	90/90	142/142	175/175
Working stroke	9 ... 15	15 ... 25	20 ... 35
Angle range	$\alpha$	80 ... 100	

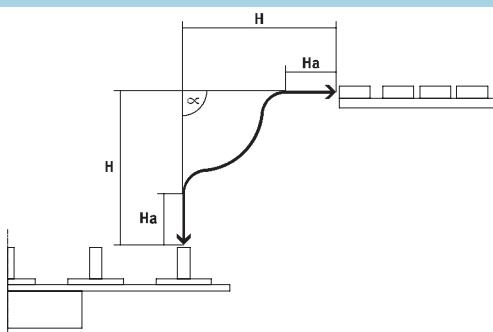

## Forces [N]

Size	10	12	16
Along Y and Z axes (depending on lever position)			
Effective force at 6 bar	30	35	55
Along Y axes			
Permissible process force <sup>1)</sup>	30	35	50

1) Due to the pretension force on the guide

# Handling modules HSW, pneumatic

Technical data

FESTO


Weight [g]			
Size	10	12	16
HSW-...-AP	1,300	3,000	5,400
HSW-...-AP-SD	1,400	3,200	5,700
HSW-...-AP-W	1,350	3,140	5,550
HSW-...-AP-SD-W	1,450	3,340	5,850

## Repetition accuracy [mm]

To ensure low-vibration operation, the effective load should be mounted as close as possible to the guide rail of the handling module.

Repetition accuracy is guaranteed by

mounting the effective load (adapter plate, semi-rotary drive and/or gripper, gripper finger, workpiece) within the mounting surface of the adapter kit HAPG/HAPG-...-B.

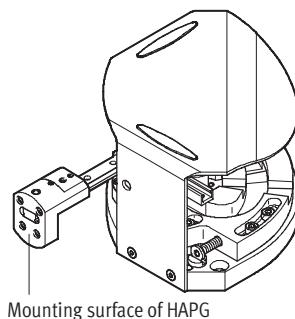


Mounting surface of HAPG

Size	10	12	16
Repetition accuracy at end positions	±0.02		

## Travel times t as a function of effective load m with observance of repetition accuracy

The travel time t is the time taken for the handling module to move from one end position to the other and back again.

The effective load m is the load attached to the guide rail (e.g. adapter, gripper, semi-rotary drive and workpiece).

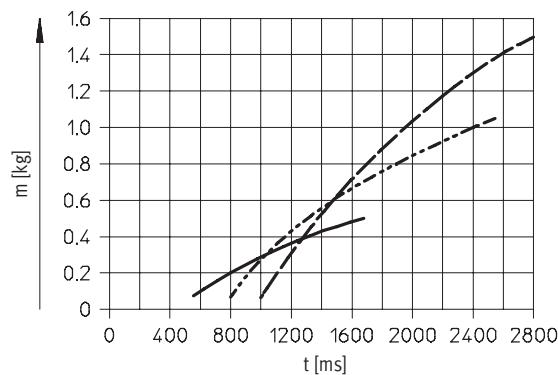

— HSW-10-AP  
- - - HSW-12-AP  
— HSW-16-AP

- - Note

Higher speeds are possible at a constant load with restriction of the repetition accuracy.

## Cycle times [s]

The cycle time  $t_c$  comprises the travel time t and the dwell time  $t_d$  at the end positions.

$t_c = t + t_d$   
The value must not fall below the minimum cycle time.

Size	10	12	16
Min. cycle time	0.6	0.8	1.0

## Example for HSW-10-AP

Step 1:

The following values are assumed:

Effective load m = 0.2 kg

Dwell time  $t_d = 2 \times 350$  ms

(350 ms per end position)

Step 2:

The travel time can be determined

from the graph:

$t = 800$  ms

Step 3:

This gives us a cycle time:

$t_c = 800$  ms + 700 ms

= 1,500 ms


# Handling modules HSW, pneumatic

FESTO

Technical data

## Permissible static/dynamic characteristic load values

Linear guide and ball bearing

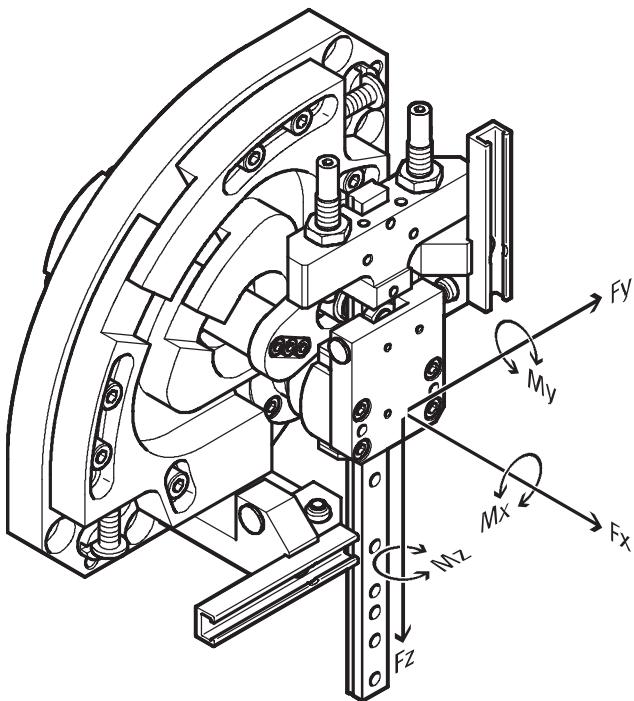

Note  
The torques apply to the centre of the vertical guide.

### Combined load

The following torque equation must be satisfied with combined load:

$$\frac{M_x}{M_{x\text{perm.}}} + \frac{M_y}{M_{y\text{perm.}}} + \frac{M_z}{M_{z\text{perm.}}} \leq 1$$

### Dynamic characteristic load values

Size	10	12	16
Max. torques [Nm] M <sub>x</sub> <sub>perm.</sub> , M <sub>y</sub> <sub>perm.</sub> , M <sub>z</sub> <sub>perm.</sub>	0.6	1.5	2.5

# Handling modules HSW, pneumatic


Technical data

FESTO

## Stroke adjustment


### Swivel angle:

- An angle offset of  $\alpha = \pm 5^\circ$  per end position can be set to adapt the handling module to the transfer system.

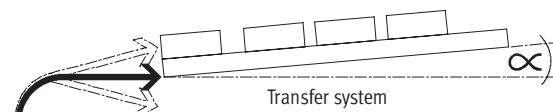


### Linear stroke:

- Once the HSW has been mounted, the linear stroke of the pick and place position can be set independently of each other.

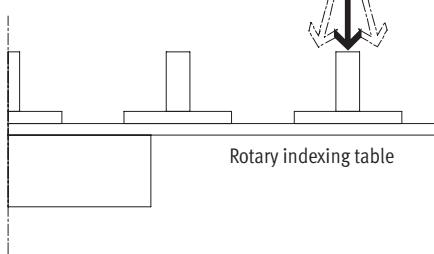


## Swivel angle

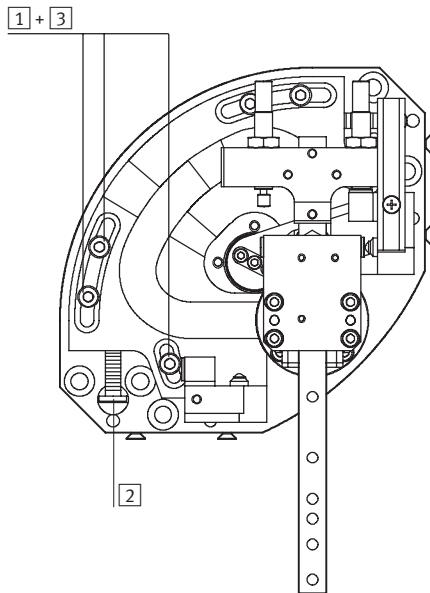

### Procedure:

- Loosen the screws
- Adjust the slotted guide plate using the adjusting screw (the slotted guide plate must always make contact with the guide ring)
- Tighten the screws

## Linear stroke

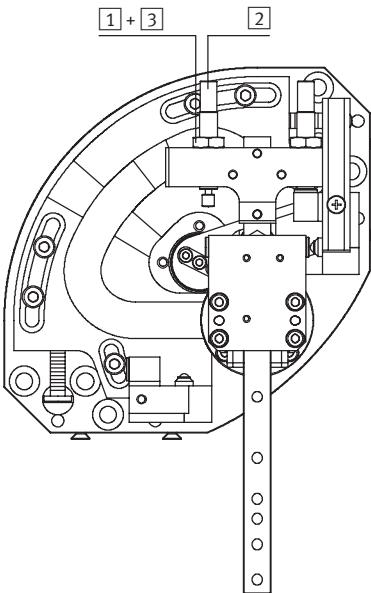

### Procedure:

- Loosen the lock nut
- Set the desired linear stroke using the cushioning component/adjusting screw
- Tighten the lock nut

# Handling modules HSW, pneumatic

Technical data

**FESTO**

## Wait position module

Application and mode of operation

Figure 1:

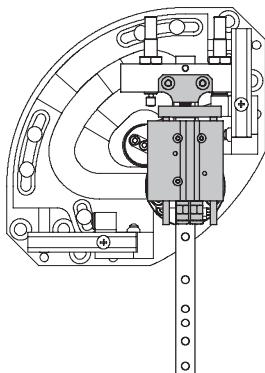


Figure 2:



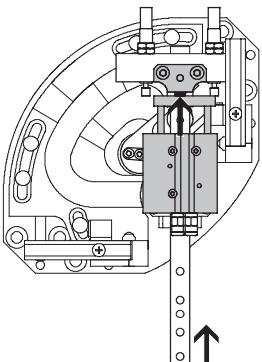


Figure 3:

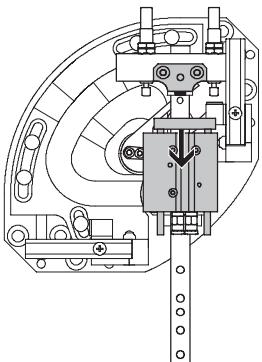


Circuit diagram for HSW with wait position module

Handling modules HSW

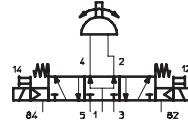

Actuating cylinder

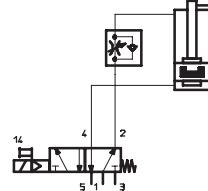


- - Note

When used in combination with the wait position module, the handling module HSW must be actuated using a 5/3-way valve (normally pressurised). The actuating cylinder is actuated using a 5/2-way valve.

- [1] The handling module HSW is in the horizontal end position. The actuating cylinder is retracted in its initial position.
- [2] The 5/3-way valve is reset once the handling module reaches the vertical end position (Figure 1). The actuating cylinder must always be retracted before reaching an end position.


- [3] During extension the actuating cylinder pushes the handling module upwards into its wait position. The operating range is then free (Figure 2). The actuating cylinder can be used at both end positions.
- [4] From the wait position, the handling module can move either to the initial position or to the other end position (Figure 3).

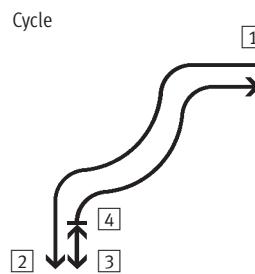


Size	10	12	16
Max. stroke of wait position module	10	15	25

## Mounting options


Directly via through-holes

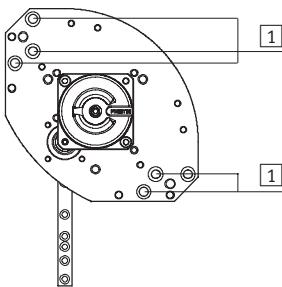

Via slot nuts on profile supports

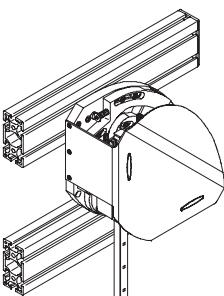

User-specific

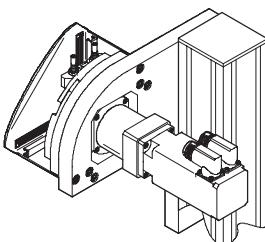

- - Note

The handling module HSW-10 can also be attached with the adjusting unit HMXY-1.

- [1] With or without centring rings


# Handling modules HSW, pneumatic

Technical data

FESTO

## Materials

Sectional view of handling module HSW

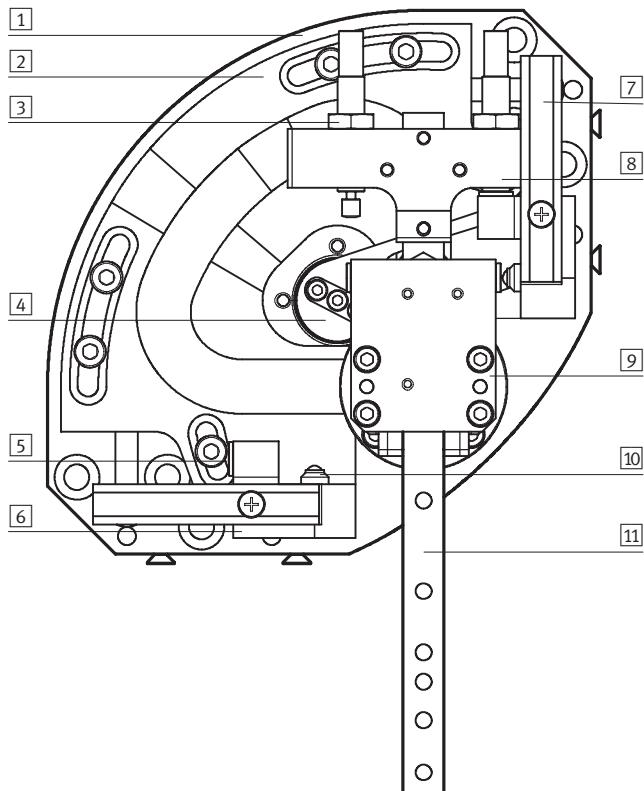

Size	10	12	16
[1] Back plate	Wrought aluminium alloy, anodised		
[2] Slotted guide plate	Case-hardened steel		
[3] Adjusting screw	–	High-alloy steel	
[4] Swivel lever	Case-hardened steel		
[5] Stop sleeve	High-alloy steel		
[6] Retainer	Wrought aluminium alloy, anodised		
[7] Sensor rail	Wrought aluminium alloy, anodised		
[8] Flange	Wrought aluminium alloy, anodised		
[9] Top plate	Wrought aluminium alloy, anodised		
[10] Pressure piece	High-alloy steel		
[11] Guide	Tempered steel		
– Housing	Wrought aluminium alloy, anodised		
Note on materials	Free of copper, PTFE and silicone		


# Handling modules HSW, pneumatic

FESTO

Technical data

## Materials

Sectional view of swivel module DSM

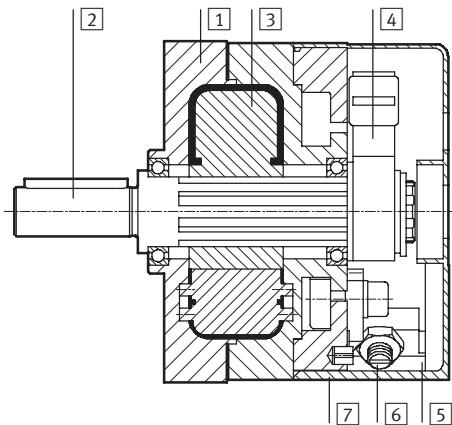

## Swivel module

[1] Housing	Wrought aluminium alloy
[2] Shaft	Steel with nickel-plated surface
[3] Rotary vane	Fibreglass-reinforced plastic
[4] Stop lever	Anodised aluminium
[5] Stop/shock absorber retainer	Stainless steel
[6] Stop screw	Stainless steel
[7] Cap	Fibreglass-reinforced plastic
- Seals	Polyurethane
Note on materials	Free of copper, PTFE and silicone

# Handling modules HSW, pneumatic


Technical data

FESTO

## Dimensions

with swivel module DSM

Download CAD data → [www.festo.com](http://www.festo.com)

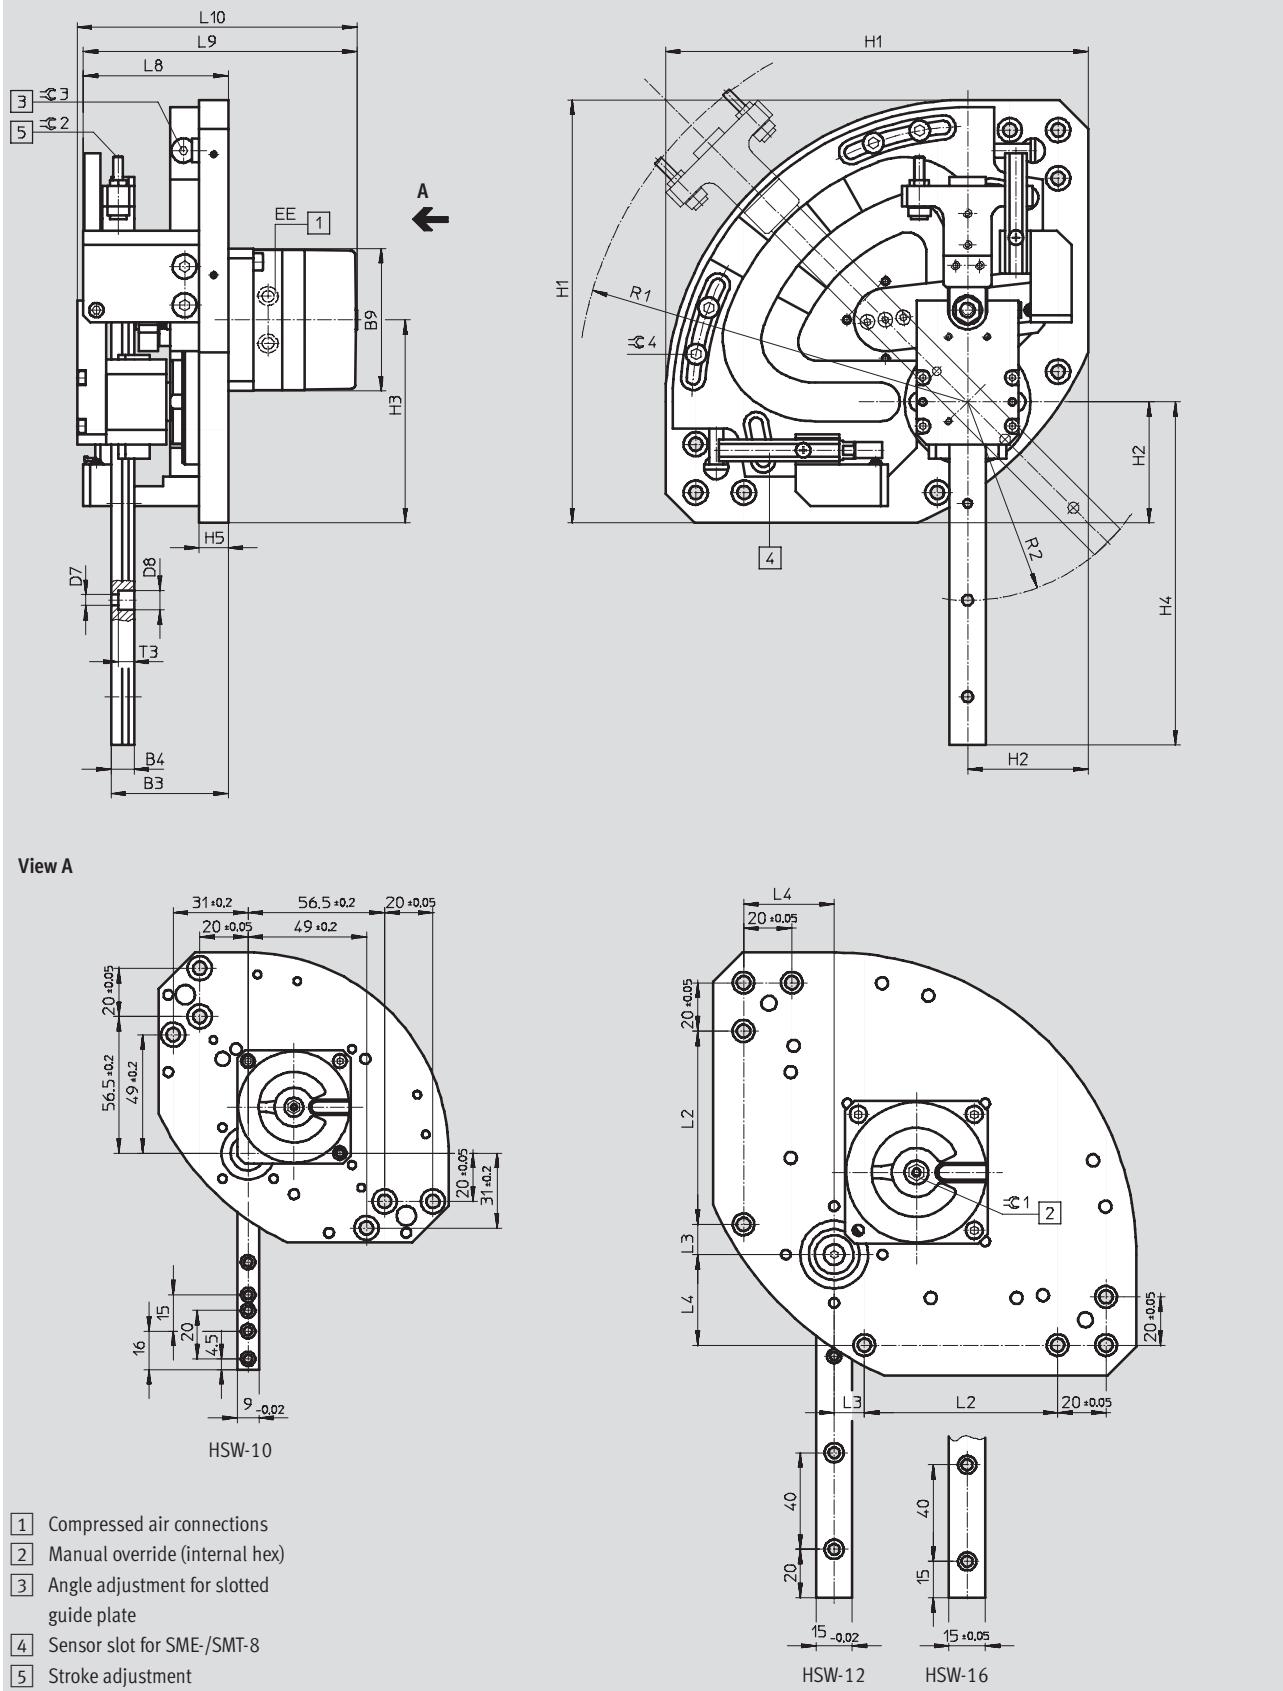


# Handling modules HSW, pneumatic


FESTO

Technical data

with swivel module DSM and protective cover

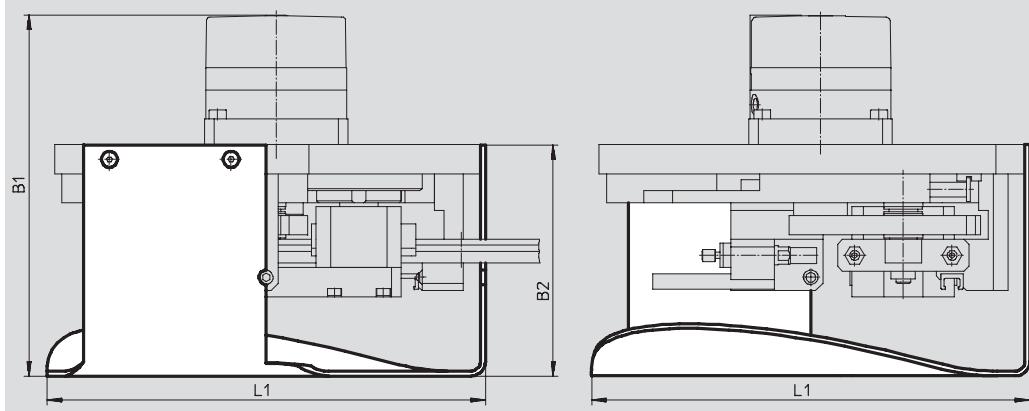

with wait position module

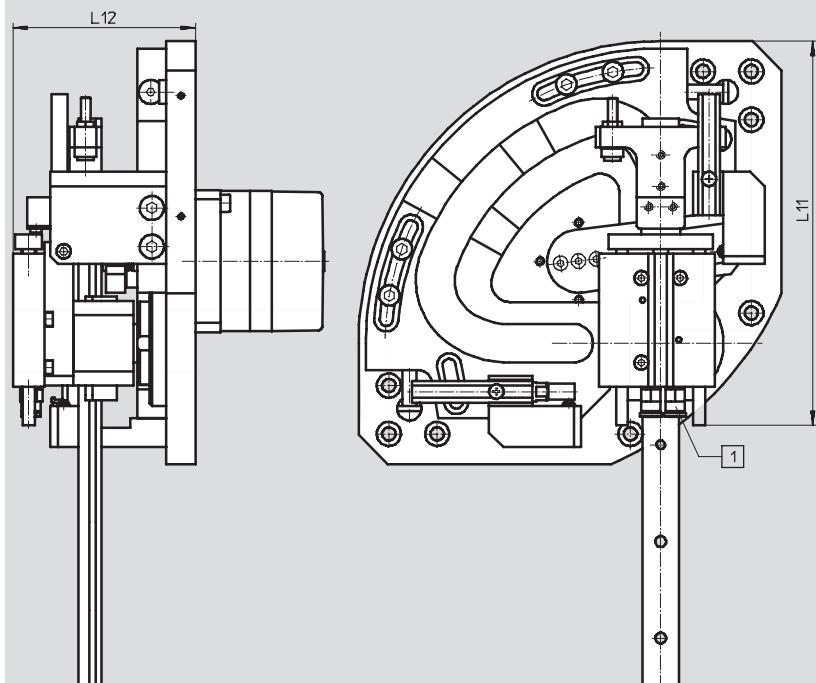

[1] Compressed air connections

Size	B1	B2	B3	B4	B9	D7 ∅	D8 ∅	EE	H1	H2	H3	H4	H5	L1	L2
	±2	±3	±0.5						±0.3	±0.2	±0.5	±1		±2	±0.2
10	121	80	45	5.5	47	3.5	6	M3	120	37	56	89.6	12	123	–
12	148	95	48.5	9.5	59	4.5	8	M5	175	50	84	142	12	180	80
16	168	105	57	12.5	70	4.5	7.5	M5	215	58.5	103.5	174	12	219	100

Size	L3	L4	L8	L9	L10	L11	L12	R1	R2	T3	=C1	=C2	=C3	=C4
	±0.2	±0.2	±2	±3		max.	±2	±3	±3					
10	–	–	62	103	95	102.5	61.8	113	55	3.3	4.5	2	3	3
12	12.5	37.5	60	113	116	159	75.5	162	82	6.5	6	2	3	4
16	12	50	71.5	134	131	202.5	80.8	200	100	5.3	8	2.5	4	4

# Handling modules HSW, pneumatic


Technical data

**FESTO**

Ordering data for HSW-...-AP			
Size	10 Part No.	Type	12 Part No.
Without protective cover	16 Part No.	Type	16 Part No.
–	540 222	HSW-10-AP	540 228
Wait position module	540 225	HSW-10-AP-W	540 231
With protective cover			
–	540 223	HSW-10-AP-SD	540 229
Wait position module	540 224	HSW-10-AP-SD-W	540 230
			540 235
			540 236
			HSW-16-AP-SD
			HSW-16-AP-SD-W

## Handling modules HSW, electrical

Type codes

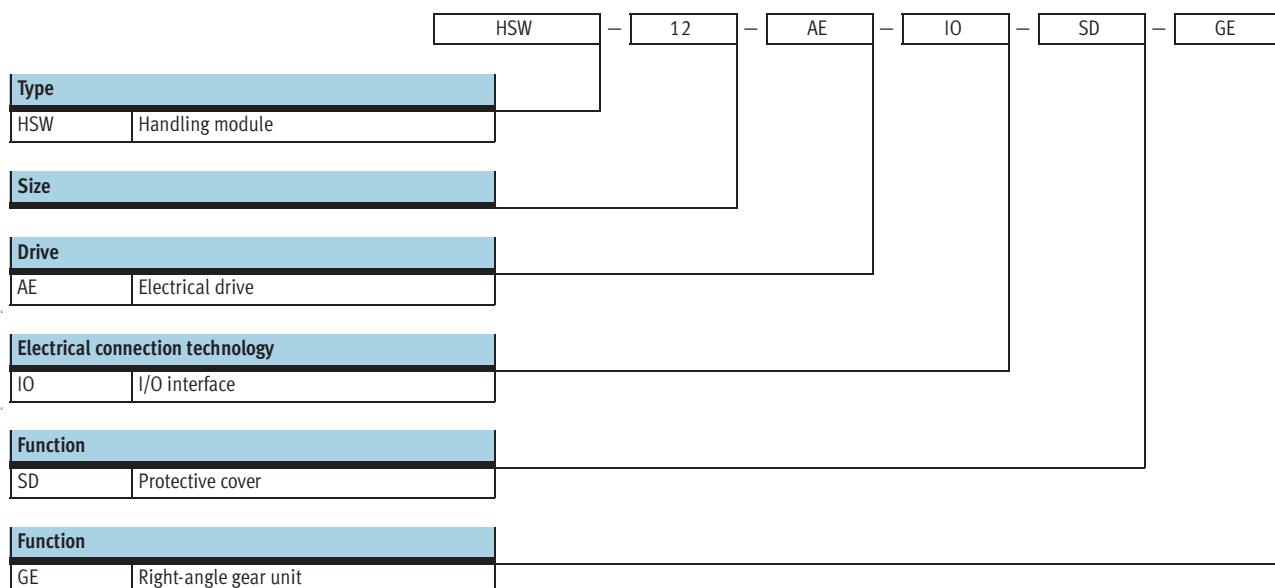


## Handling modules HSW, electrical

Technical data

**FESTO**

Function

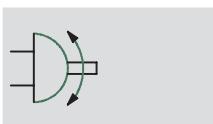

- T - [www.festo.com](http://www.festo.com)

- O - Size  
10, 12 and 16

- C - Swivel angle  
80 ... 100

- I - Stroke range  
90 ... 175



### General technical data


Type	HSW-...-AE
Constructional design	Motor unit Linear guide plus ball bearing Force-guided motion sequence
Cushioning	Noise reduction via buffers
Type of mounting	Via through-holes Via slot nuts
Mounting position	Any

### Operating and environmental conditions

Type	HSW-...-AE
Ambient temperature [°C]	0 ... +50
Protection class of motor	IP54
CE marking (see declaration of conformity)	In accordance with EU EMC directive

### Stroke [mm] and angle range [°]

Size	10	12	16	
Max. linear stroke at 90° swivel angle	H	90/90	142/142	175/175
Working stroke	Ha	9 ... 15	15 ... 25	20 ... 35
Angle range	α	80 ... 100		

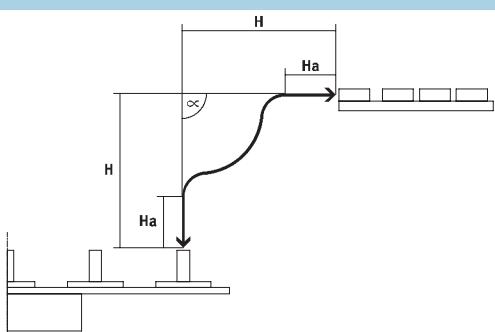

### Forces [N]

Size	10	12	16
<b>Along Y and Z axes (depending on lever position)</b>			
Effective force at 80 % of the nominal motor force	15	30	50
<b>Along Y axes</b>			
Permissible process force <sup>1)</sup>	30	35	50

1) Due to the pretension force on the guide

## Handling modules HSW, electrical

Technical data


Weight [g]			
Size	10	12	16
HSW-...-AE	2,000	4,500	8,900
HSW-...-AE-SD	2,110	4,700	9,200
HSW-...-AE-GE	2,410	5,000	10,000
HSW-...-AE-SD-GE	2,520	5,200	10,300

### Repetition accuracy [mm]

To ensure low-vibration operation, the effective load should be mounted as close as possible to the guide rail of the handling module.

Repetition accuracy is guaranteed by

mounting the effective load (adapter plate, semi-rotary drive and/or gripper, gripper finger, workpiece) within the mounting surface of the adapter kit HAPG/HAPG-...-B.

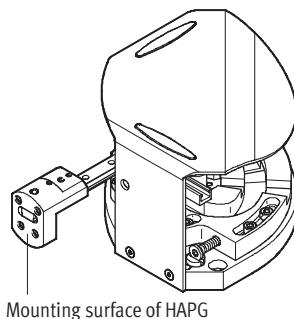


Size	10	12	16
Repetition accuracy	At end positions ±0.02		
	Intermediate positions < 2		

### Travel times t as a function of effective load m

The travel time t is the time taken for the handling module to move from one end position to the other and back again.

The effective load m is the load attached to the vertical guide rail (e.g. adapter, gripper, semi-rotary drive and workpiece)

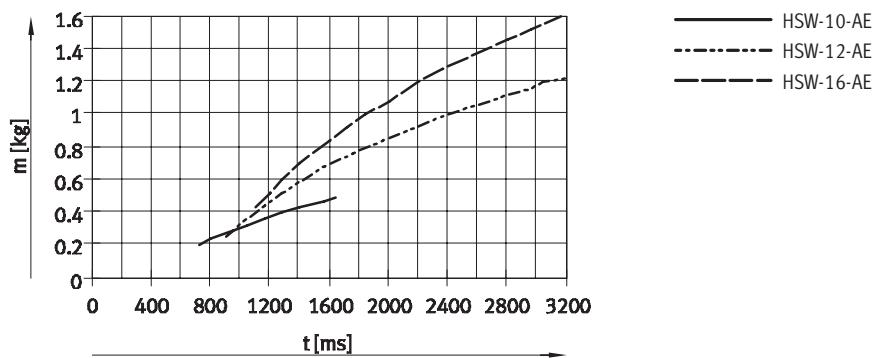


## Handling modules HSW, electrical

Technical data

FESTO

### Permissible static/dynamic characteristic load values

Cross-guide

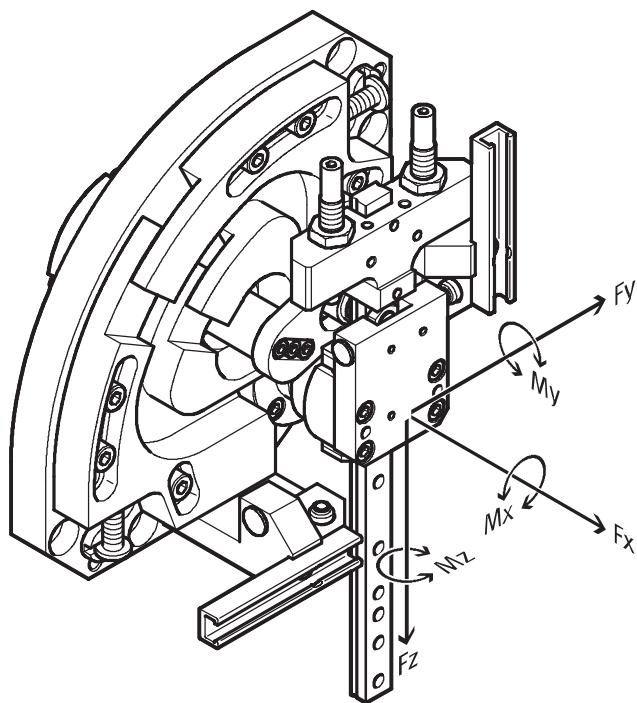

Note  
The torques apply to the centre of the vertical guide.

#### Combined load

The following torque equation must be satisfied with combined load:

$$\frac{M_x}{M_{x\text{perm.}}} + \frac{M_y}{M_{y\text{perm.}}} + \frac{M_z}{M_{z\text{perm.}}} \leq 1$$

#### Dynamic characteristic load values


Size	10	12	16
Max. torques $M_{x\text{perm.}}, M_{y\text{perm.}}, M_{z\text{perm.}}$	0.6	1.5	2.5

# Handling modules HSW, electrical

Technical data

## Materials

Sectional view of handling module HSW

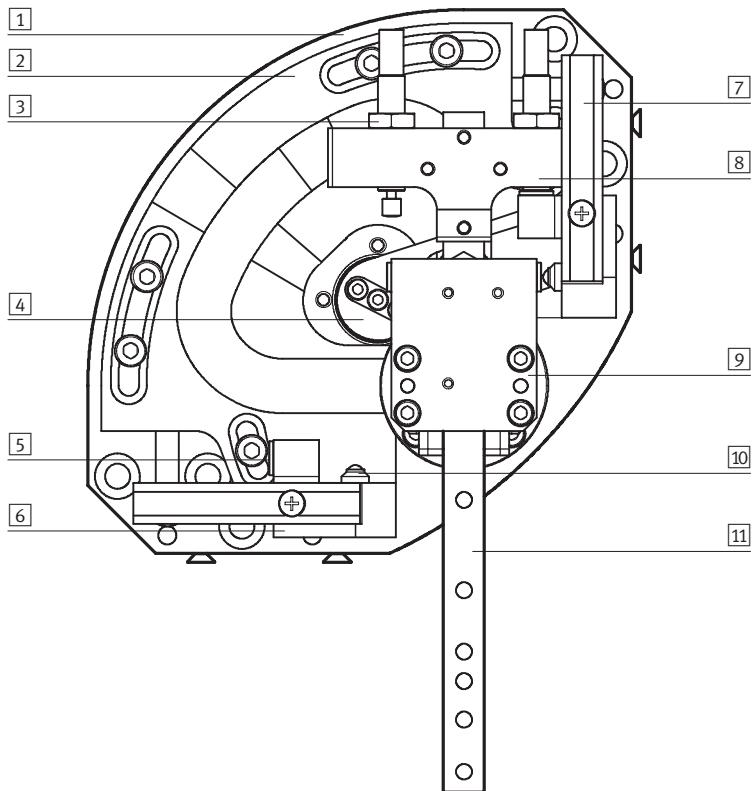

Size	10	12	16
[1] Back plate	Wrought aluminium alloy, anodised		
[2] Slotted guide plate	Case-hardened steel		
[3] Adjusting screw	–	High-alloy steel	
[4] Swivel lever	Case-hardened steel		
[5] Stop sleeve	High-alloy steel		
[6] Retainer	Wrought aluminium alloy, anodised		
[7] Sensor rail	Wrought aluminium alloy, anodised		
[8] Flange	Wrought aluminium alloy, anodised		
[9] Top plate	Wrought aluminium alloy, anodised		
[10] Pressure piece	High-alloy steel		
[11] Guide	Tempered steel		
– Housing	Wrought aluminium alloy, anodised		
Note on materials	Free of copper, PTFE and silicone		

## Handling modules HSW, electrical


Technical data

FESTO

### Stroke adjustment


#### Swivel angle:

- An angle offset of  $\alpha = \pm 5^\circ$  per end position can be set to adapt the handling module to the transfer system.

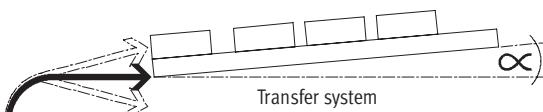


#### Linear stroke:

- Once the HSW has been mounted, the linear stroke of the pick and place position can be set independently of each other.

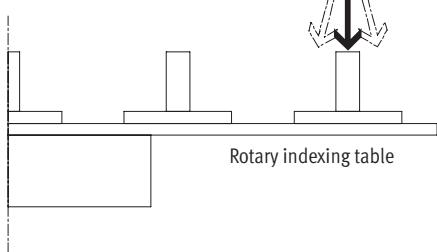


### Swivel angle

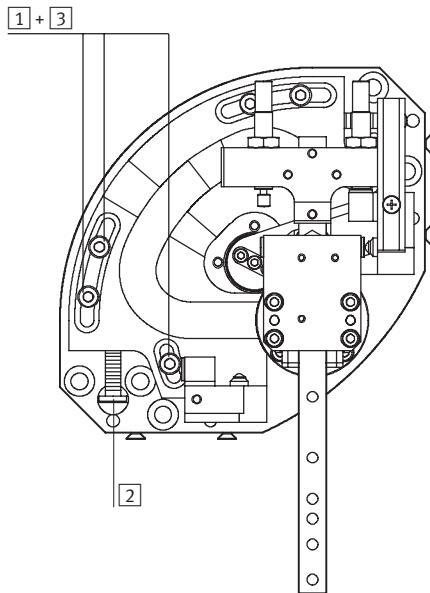

#### Procedure:

- 1 Loosen the screws
- 2 Adjust the slotted guide plate using the adjusting screw (the slotted guide plate must always make contact with the guide ring)
- 3 Tighten the screws

### Linear stroke

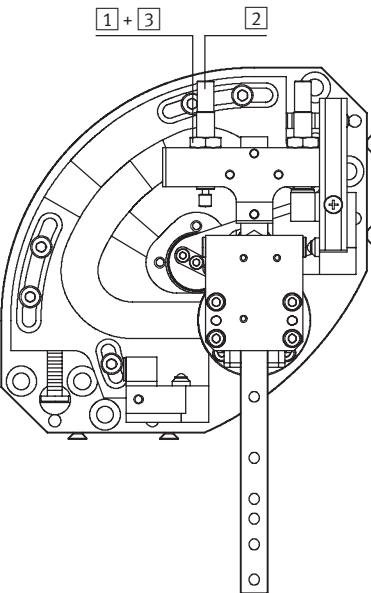

#### Procedure:


- 1 Loosen the lock nut
- 2 Set the desired linear stroke using the cushioning component/adjusting screw
- 3 Tighten the lock nut

## Handling modules HSW, electrical


Technical data

### Motor mounting variants


Motor pointing upwards/to side

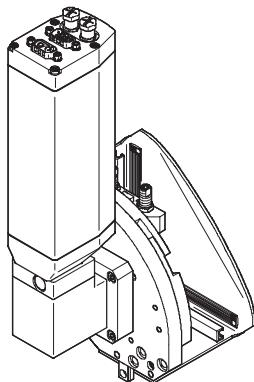


Control panel and access to the connections can be rotated according to space requirements.

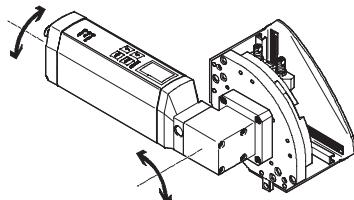

Motor towards rear

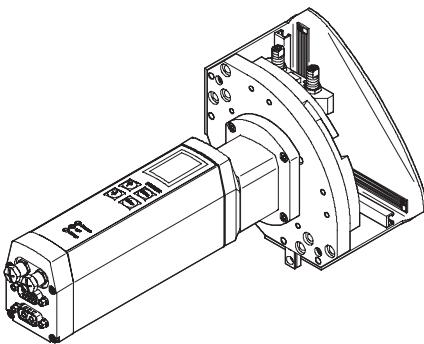

### Mounting options


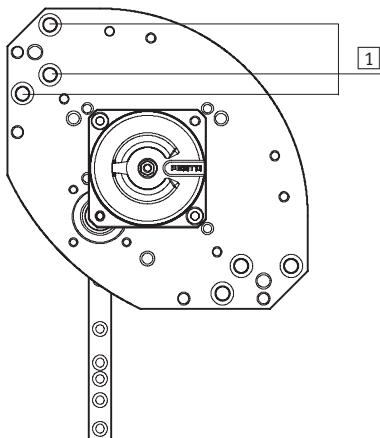


1 Directly via through-holes

### Examples:

Via slot nuts on profile supports

User-specific

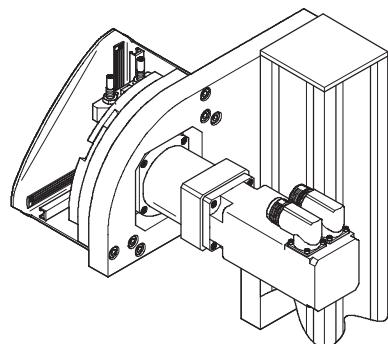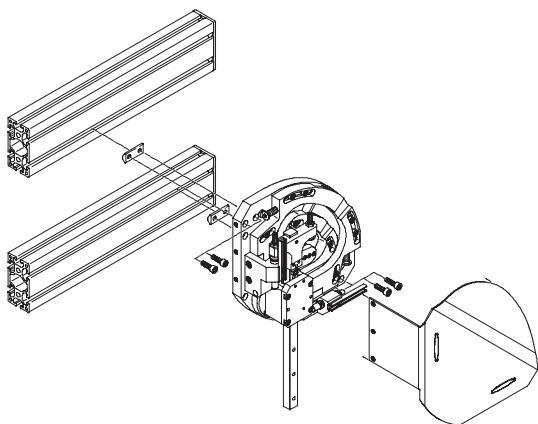

## Handling modules HSW, electrical

Technical data

**FESTO**

Motor unit MTR-DCI-...-HM




General technical data				➔ Internet: mtr-dci
Type	MTR-DCI-32-...-HM	MTR-DCI-42-...-HM	MTR-DCI-52-...-HM	
For handling module	HSW-10-...-AE	HSW-12-...-AE	HSW-16-...-AE	
Rotary position generator	Optical encoder			
No. of increments/revolution	300	500		
Temperature monitoring	Silicon absolute temperature sensor, switches off at temperatures >80 °C			
Display resolution	128 x 64 pixels			
Type of mounting	Can be bolted on or clamped to gear unit flange			
Gear unit type	Planetary gearing			
Gear unit ratio	13.73 (14:1), 2-stage			

Electrical data				➔ Internet: mtr-dci
Type	MTR-DCI-32-...-HM	MTR-DCI-42-...-HM	MTR-DCI-52-...-HM	
For handling module	HSW-10-...-AE	HSW-12-...-AE	HSW-16-...-AE	
Nominal voltage [V DC]	24 ±10%			
Nominal current (motor) [A]	0.73	2	5.1	
Peak current [A]	2.1	3.8	7.7	
Nominal power (motor) [W]	17.5	48	122.4	
Max. current [mA] (digital logic outputs)	200	200	60	
No. of digital logic inputs (with I/O interface)	–	6		
No. of digital logic outputs (with I/O interface)	–	2		
Parameterisation interface	RS232; 9,600 baud			

# Handling modules HSW, electrical

Technical data

## Pin allocation

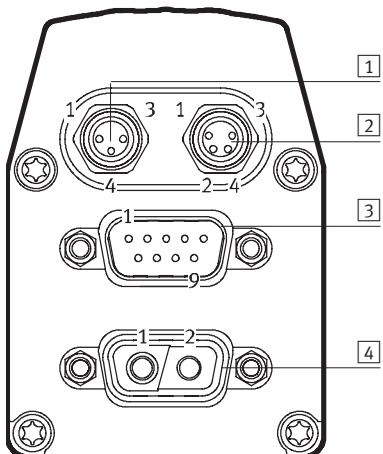

### [1] 3-pin M8 socket

Pin	Function
1	Unused
3	Unused
4	Unused
-	-

### [2] RS232 interface, 4-pin M8 socket

Pin	Function
1	0 V
2	Transmitted data (TxD)
3	Received data (RxD)
4	-

### [3] I/O interface, 9-pin SUB-D plug

Pin	Function
1	Traversing record coding, bit 0
2	Traversing record coding, bit 1
3	Traversing record coding, bit 2
4	Traversing record coding, bit 3
5	Start bit
6	Enable bit
7	Ready signal output
8	MC signal output
9	0 V

### [4] Power supply, 2-pin plug

Pin	Function
1	24 V DC
2	0 V
-	-
-	-
-	-
-	-
-	-
-	-

## Handling modules HSW, electrical

Technical data

FESTO


### Simple solution for your application

Advantages of the handling module HSW-...-AE for installation and commissioning

- Handling module is supplied with motor already attached.
- Less wiring required thanks to integration of controller concept.
- Motor with gear unit, controller and power electronics are all fitted in one housing. This means that only one unit has to be taken into consideration when planning the system.
- Only one voltage supply of 24 V is required for commissioning.
- Commissioning via:
  - Control panel on handling module.
  - PC using FESTO Configuration Tool (FCT) software.

### Installation and commissioning


Step 1: Mount the handling module

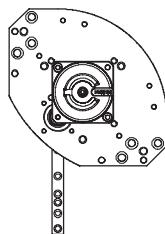

- Wide choice of mounting options

→ 25


Step 2: Mechanically adjust the end positions

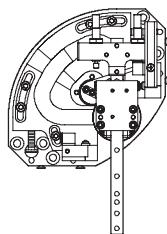

- Set the desired linear stroke using the cushioning component and adjusting screw

→ 24

Step 3: Connect the 24 V voltage supply

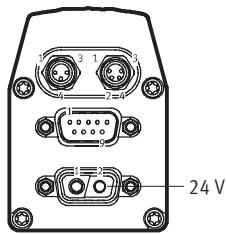

- Plug and work:  
Connect the voltage –  
HSW is ready for operation

→ 26


Step 4: Parameterisation either via control panel on motor or using FCT software

Control panel on motor



- Clearly arranged LCD display
- All data is entered and saved using 4 keys:
  - Menu key
  - Arrow keys for changing parameter values or traversing records
  - Key for confirming the entered actions

FCT software – Festo Configuration Tool

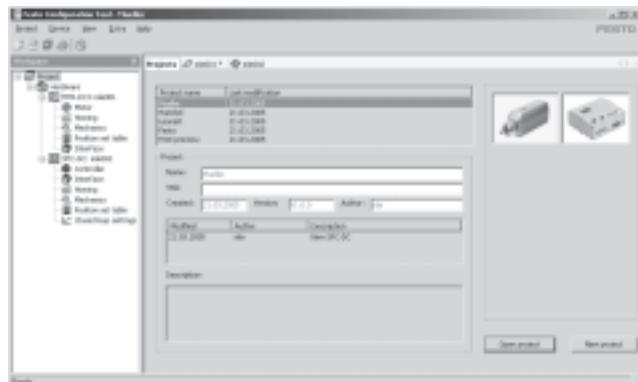

- All the drives in a system can be managed and archived in a common project
- Project and data management for all supported device types
- Simple to use thanks to graphically supported parameter entry
- Universal mode of operation for all drives
- Working offline at your desk or online at the machine


## Handling modules HSW, electrical

Technical data

Step 5: Selection of predefined motion sequences (HSW mode) via the control panel or using the FCT software




HSW mode 1

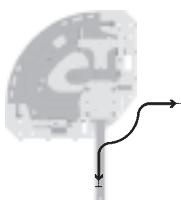


- Precise travel to the mechanical end position

HSW mode 2

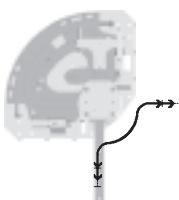


- Additional adjustable wait position module directly above workpiece/workpiece carrier
- Handling of parts with different heights
- Insertion procedures at different speeds

HSW mode 3

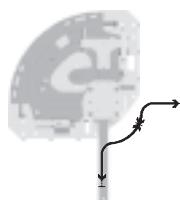


- Additional ejector station for reject parts or quality inspection
- Precise travel to end position via setup position

HSW mode 4

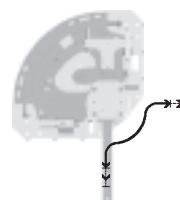

- Insertion procedures with defined force
- Continued travel from wait position with adjustable torque

HSW mode 5

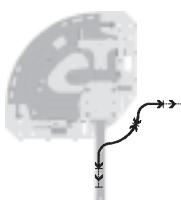

- Insertion procedures with defined force and additional intermediate position
- Continued travel from wait position with adjustable torque

### Step 6: Fine adjustment

- Adjustment of preset positions, speeds and torques
- Addition of new traversing records (where necessary)

## **Handling modules HSW, electrical**


## Technical data

FESTO

Dimensions

with motor unit pointing upwards

Download CAD data → [www.festo.com](http://www.festo.com)

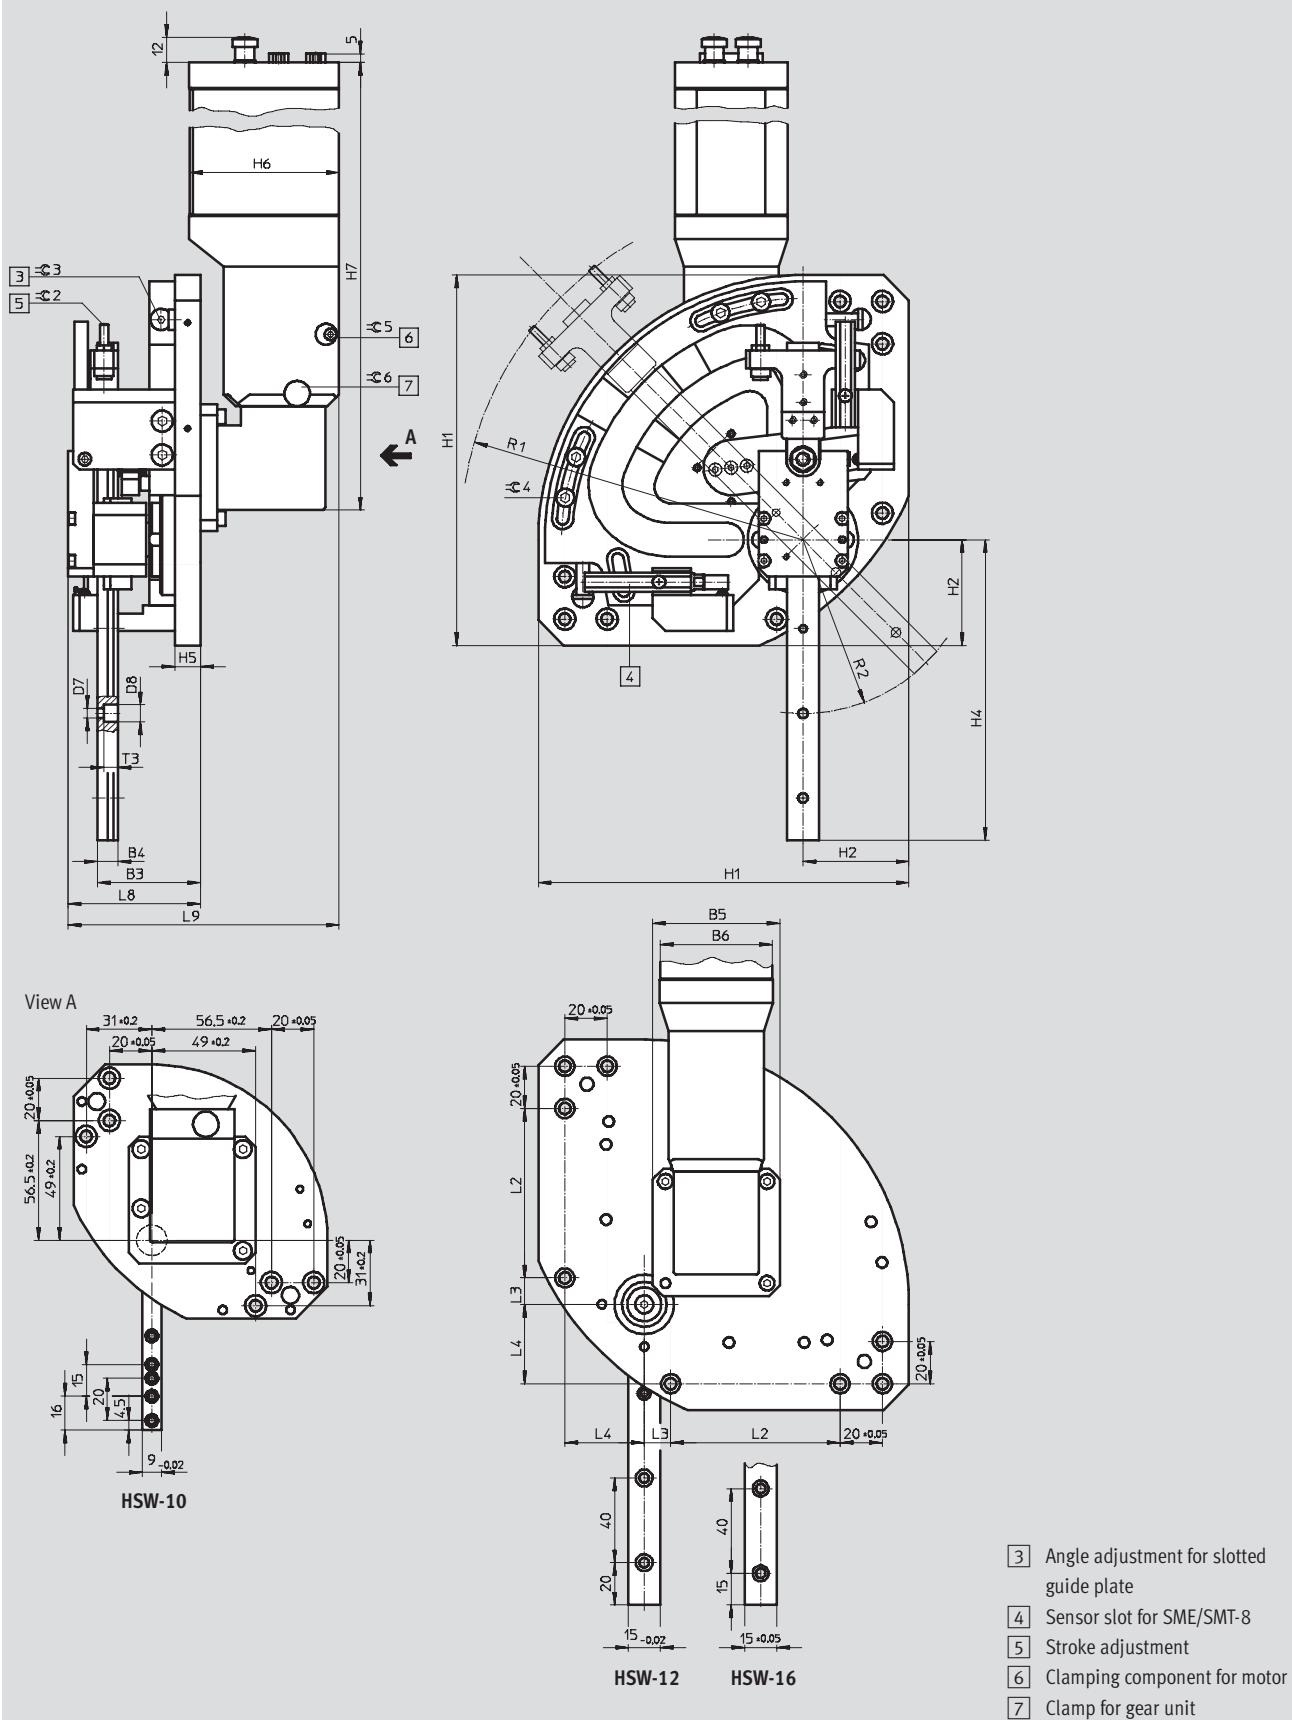


## Handling modules HSW, electrical

Technical data

### Dimensions

with motor unit pointing upwards and protective cover

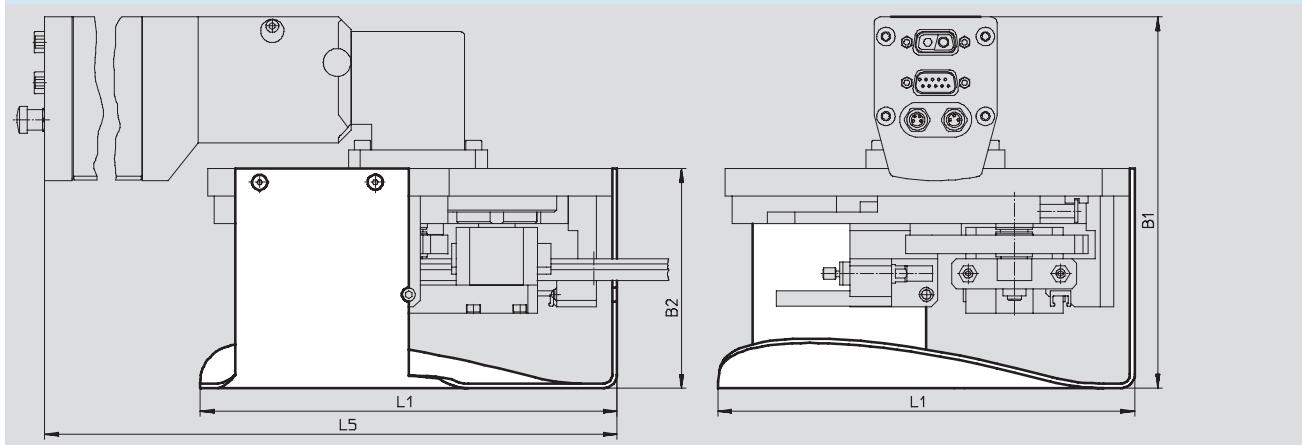Download CAD data → [www.festo.com](http://www.festo.com)

Size	B1	B2	B3	B4	B5	B6	D7 ∅
	±3	±3	±0.5				
10	148	80	45	5.5	60	46	3.5
12	160.5	95	48.5	9.5	60	53.3	4.5
16	193	105	57	12.5	100	69.5	4.5

Size	D8 ∅	H1 ±0.3	H2 ±0.2	H4 <sup>1)</sup> ±1	H5	H6 ±0.4	H7 ±3
10	6	120	37	89.6	12	66	239
12	8	175	50	142	12	70.8	291
16	7.5	215	58.5	174	12	94.8	344.5

Size	L1 ±2	L2 ±0.2	L3 ±0.2	L4 ±0.2	L5 ±3	L8 ±2	L9 ±3
10	123	–	–	–	276	62	121
12	180	80	12.5	37.5	357	60	128
16	219	100	12	50	420	71.5	156

Size	R1 <sup>1)</sup> ±3	R2 <sup>1)</sup> ±3	T3	=C2	=C3	=C4	=C5	=C6
10	113	55	3.3	2	3	3	2.5	2.5
12	162	82	6.5	2	3	4	2.5	2.5
16	200	100	5.3	2.5	4	4	5	3

1) Maximum stroke and 90° angle

## Handling modules HSW, electrical


Technical data

FESTO

### Dimensions

with motor unit towards the rear


Download CAD data → [www.festo.com](http://www.festo.com)

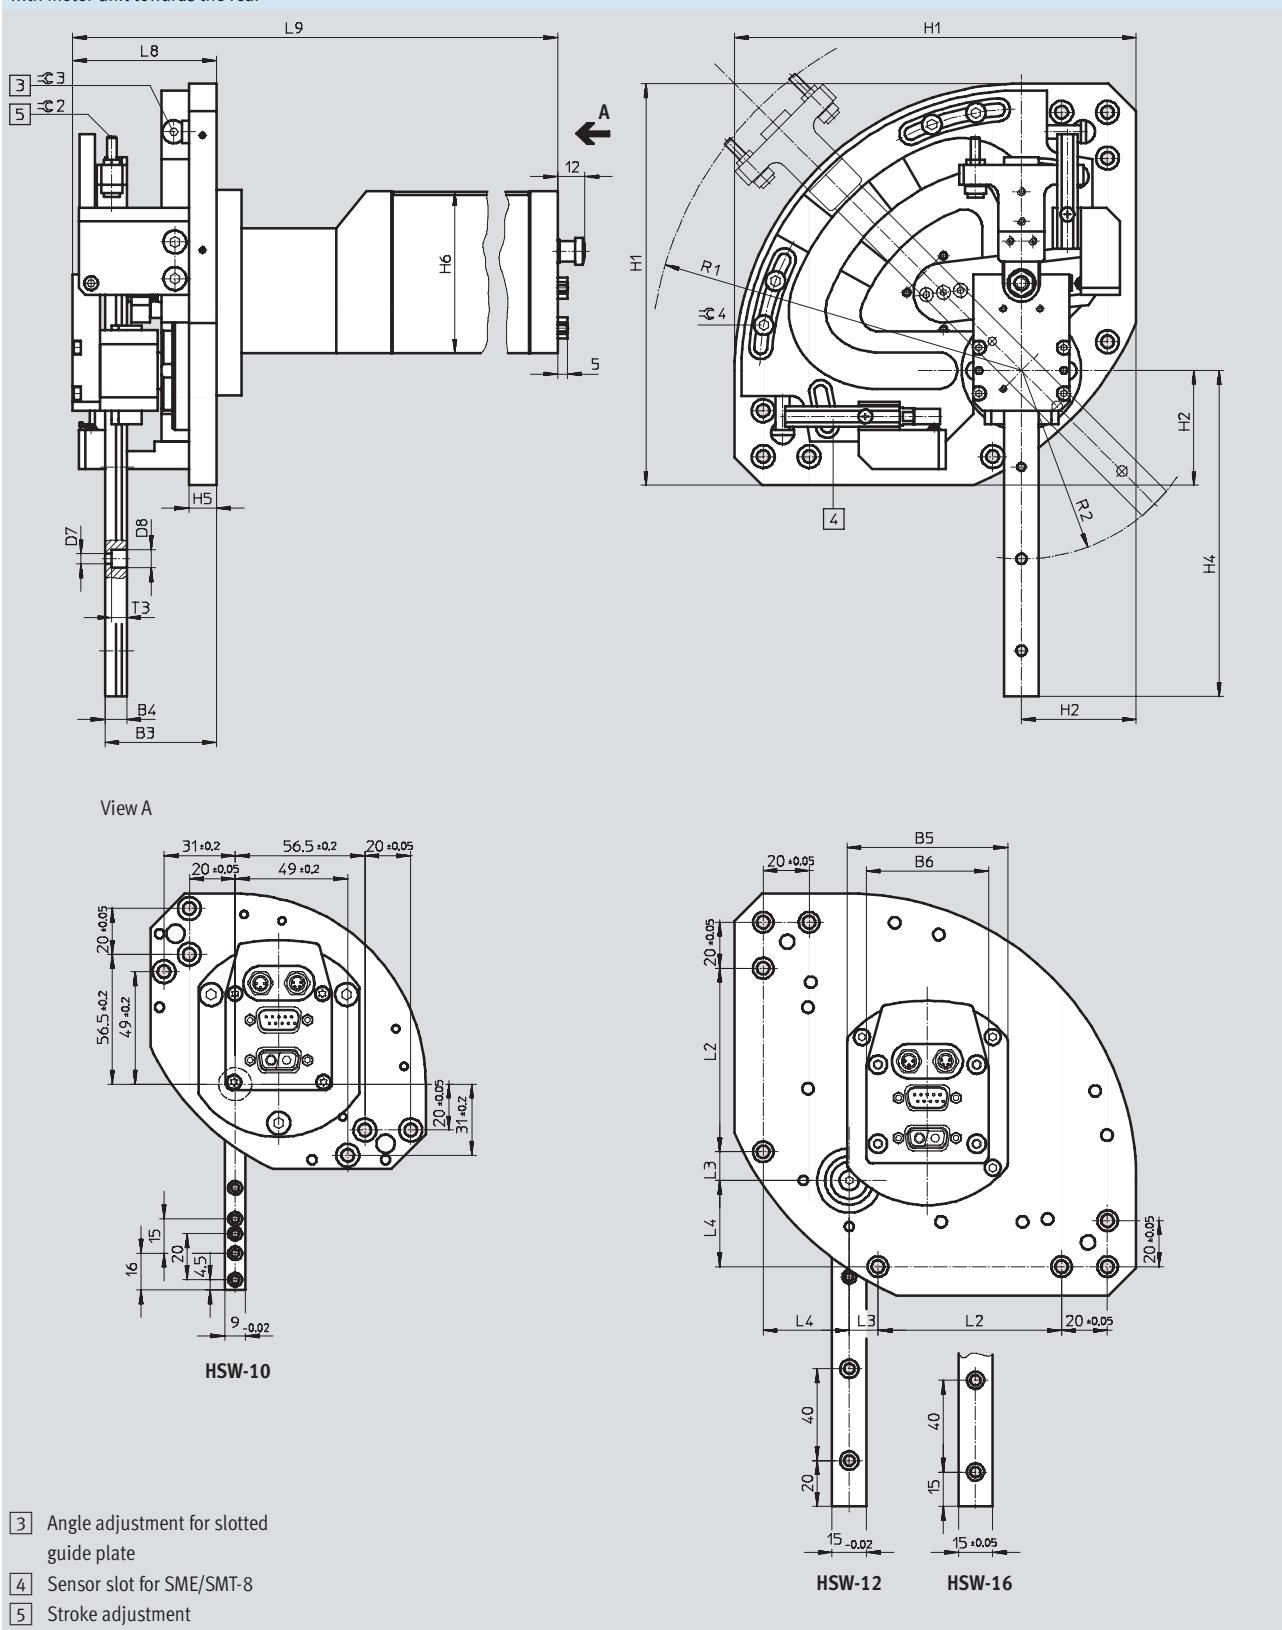

## Handling modules HSW, electrical

Technical data

with motor unit towards the rear and protective cover

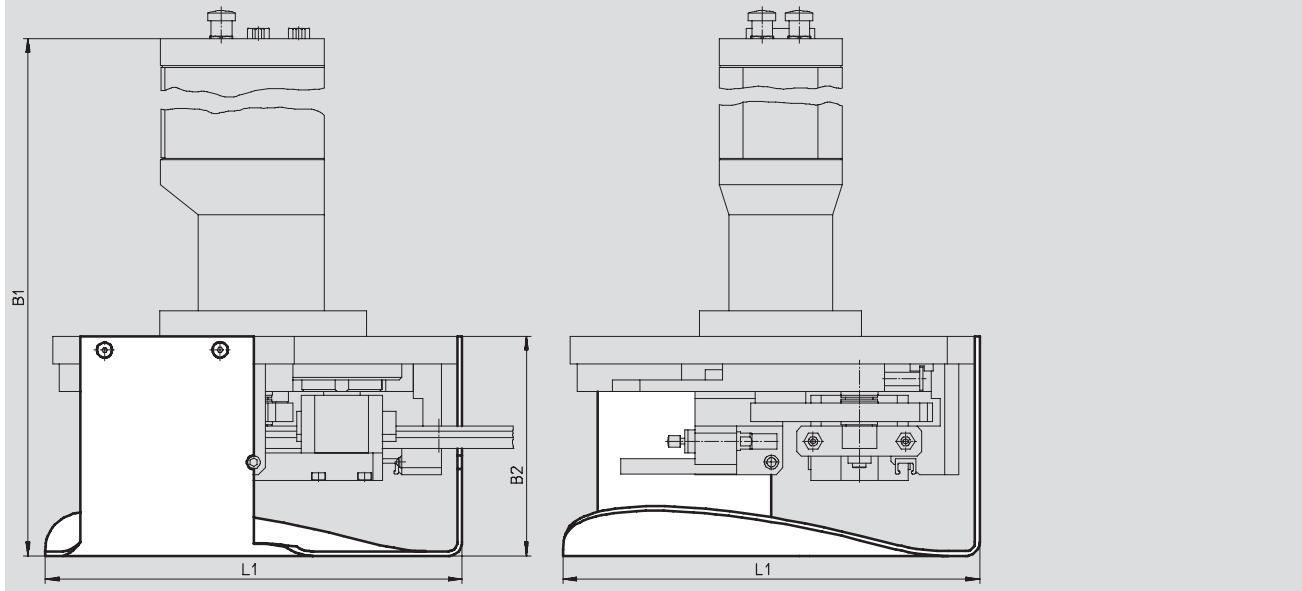

Size	B1 ±3	B2 ±2	B3 ±0.5	B4	B6	D7 Ø
10	263	80	45	5.5	46	3.5
12	323	95	48.5	9.5	53.3	4.5
16	363	105	57	12.5	69.5	4.5

Size	D8	H1 ±0.3	H2 ±0.2	H4 <sup>1)</sup> ±1	H5	H6 ±0.4
10	6	120	37	89.6	12	66
12	8	175	50	142	12	70.8
16	7.5	215	58.5	174	12	94.8

Size	L1 ±2	L2 ±0.2	L3 ±0.2	L4 ±0.2	L8 ±2	L9 ±3
10	123	–	–	–	62	245
12	180	80	12.5	37.5	60	290
16	219	100	12	50	71.5	328.5

Size	R1 <sup>1)</sup> ±3	R2 <sup>1)</sup> ±3	T3	=G2	=G3	=G4
10	113	55	3.3	2	3	3
12	162	82	6.5	2	3	4
16	200	100	5.3	2.5	4	4

## Handling modules HSW, electrical


Technical data

Ordering data for HSW-...-AE					
Size	10 Part No.	Type	12 Part No.	Type	16 Part No.
I/O interface					
without gear unit					
without protective cover	540 250	HSW-10-AE-IO	540 266	HSW-12-AE-IO	540 282
with protective cover	540 252	HSW-10-AE-IO-SD	540 268	HSW-12-AE-IO-SD	540 284
with right-angle gear unit					
without protective cover	540 251	HSW-10-AE-IO-GE	540 267	HSW-12-AE-IO-GE	540 283
with protective cover	540 253	HSW-10-AE-IO-SD-GE	540 269	HSW-12-AE-IO-SD-GE	540 285

## Handling modules HSW, without drive

FESTO

Type codes

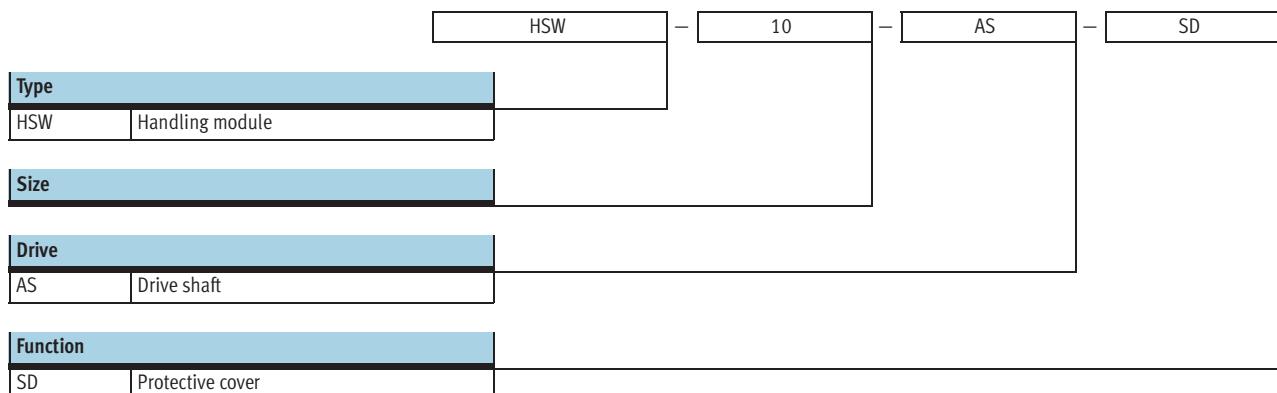

# Handling modules HSW, without drive

Technical data

FESTO

Function



- - [www.festo.com](http://www.festo.com)

- - Size  
10, 12 and 16
- - Swivel angle  
80 ... 100
- - Stroke range  
90 ... 175




## General technical data

Type	HSW-...-AS		
Constructional design	Drive shaft Linear guide plus ball bearing Force-guided motion sequence		
Cushioning	Noise reduction via buffers		
Type of mounting	Via through-holes Via centring sleeves		
Mounting position	Any		

## Weight [g]

Size	10	12	16
HSW-...-AS	1,200	2,800	5,200
HSW-...-AS-SD	1,300	3,000	5,500

## Permissible static/dynamic characteristic load values

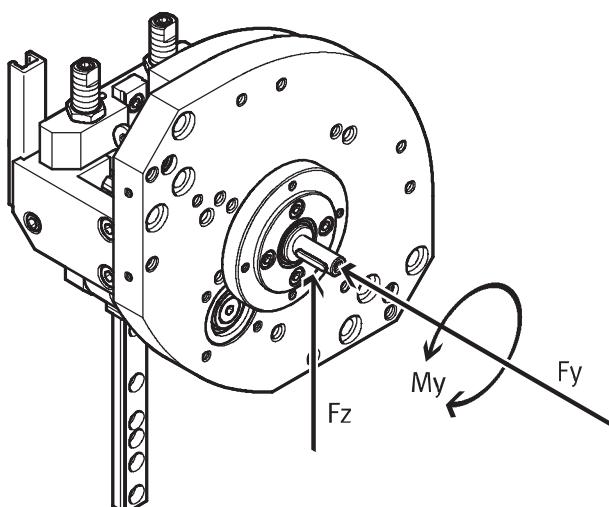

- - Note

Technical data for mechanical components → 11.

## Characteristic load values


Size	10	12	16
Max. axial force $F_{Y\text{perm.}}$ [Nm]	10	18	30
Max. radial force $F_{Z\text{perm.}}$ [Nm]	30	45	75
Max. drive torque $M_{Y\text{perm.}}$ [Nm]	0.85	1.25	2.5

# Handling modules HSW, without drive

FESTO


Technical data

Mass moment of inertia  $J_0$  as a function of effective load m (for sizing drive)

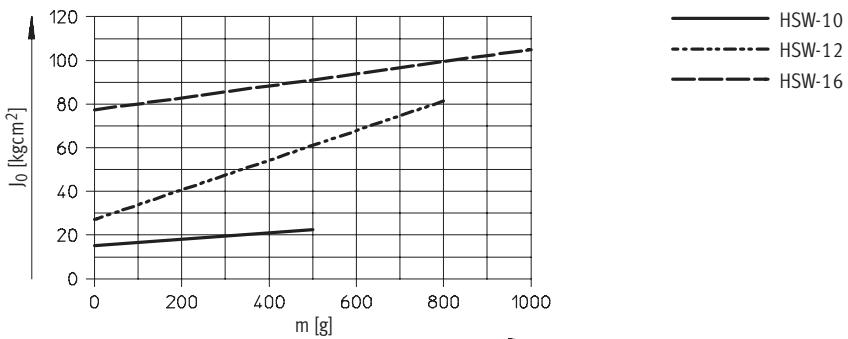

## Dimensions

Download CAD data → [www.festo.com](http://www.festo.com)

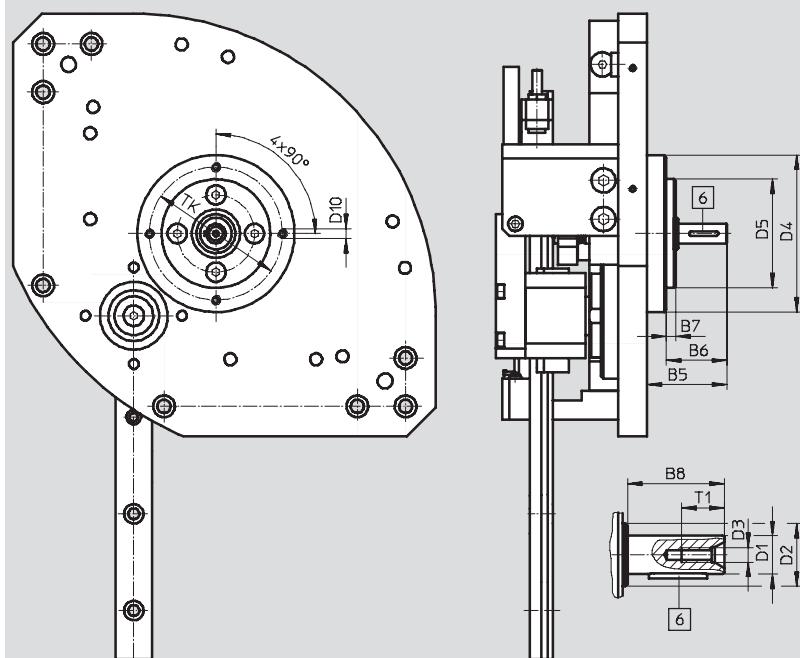

Basic dimensions  
→16  
[6] Woodruff key

Size	B5	B6	B7	B8	D1 ∅ g7	D2 ∅	D3	D4 ∅ f8	D5 ∅ f8	D10	T1	TK
10	25	19	2	16	6	12	M2.5	46	32	M3	6.8	39
12	33	25	4	20	8	13	M3	65	45	M4	8.8	55
16	36.5	28.5	4	23	10	16	M3	70	50	M4	10.6	60

## Ordering data for HSW-...-AS

Size	10 Part No. Type	12 Part No. Type	16 Part No. Type
without protective cover	540 226 HSW-10-AS	540 232 HSW-12-AS	540 238 HSW-16-AS
with protective cover	540 227 HSW-10-AS-SD	540 233 HSW-12-AS-SD	540 239 HSW-16-AS-SD

# Handling modules HSW


Accessories

**FESTO**

## Adapter kit HAPG/HAPG-B

Material:

Wrought aluminium alloy, anodised

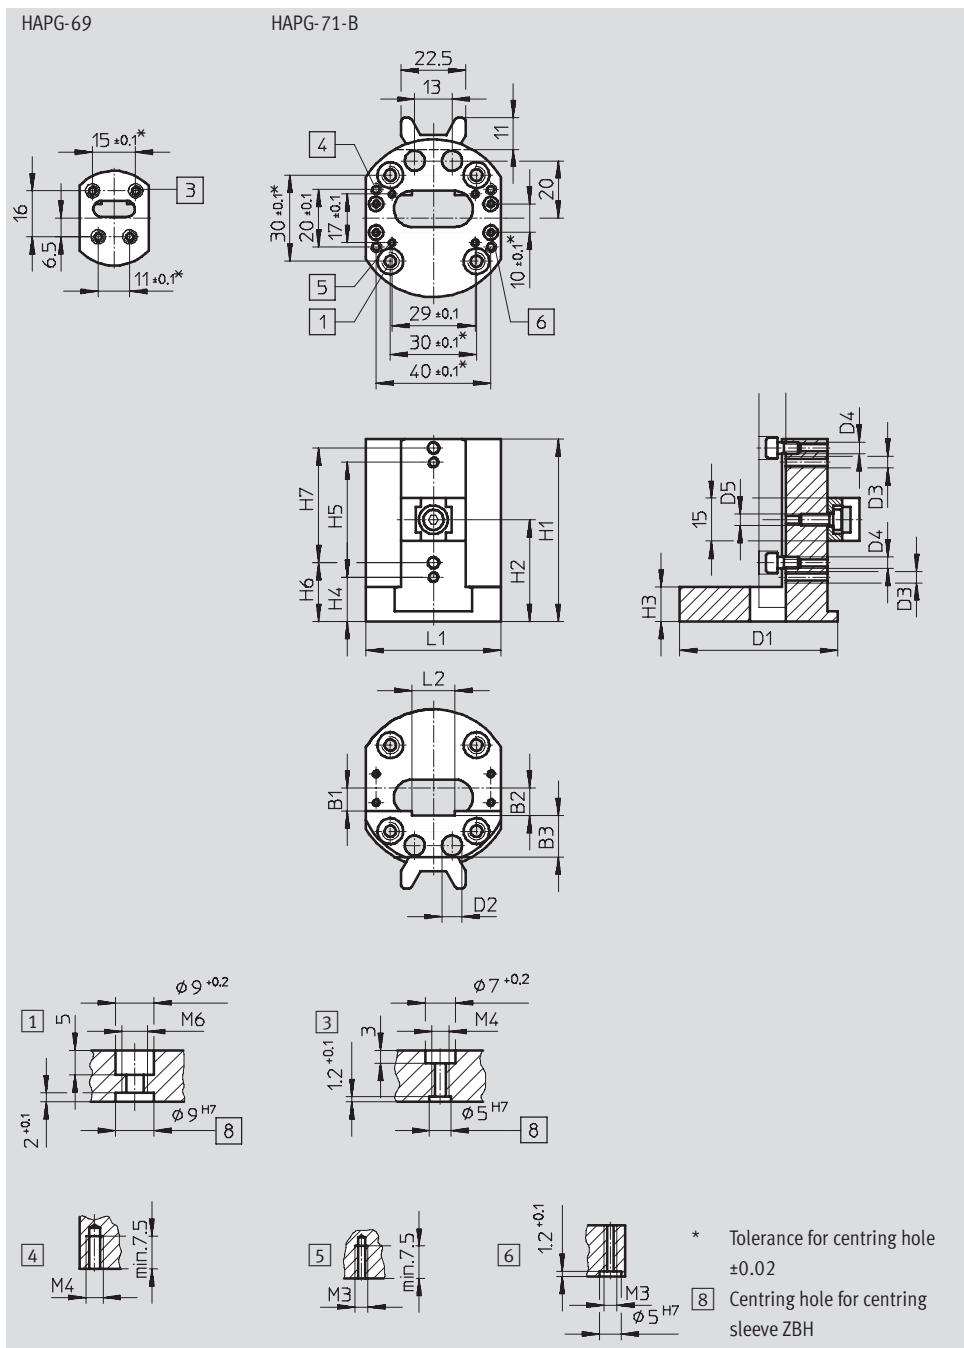

Dimensions and ordering data										
For size	B1	B2	B3	D1 ∅	D2 ∅	D3	D4	D5	H1	H2
10	5	6	8	33	—	M4	M3	—	34	—
12, 16	8	9.5	14.5	56	7	M4	M4	M4	63.5	35.5

For size	H3	H4	H5	H6	H7	L1	L2	Weight [g]	Part No.	Type
10	10	5	20.5	16.5	15	24	9	25	540 249	HAPG-69
12, 16	12	15.5	40	20.5	40	47	15	110	540 882	HAPG-71-B


## Handling modules HSW

**FESTO**

Accessories

### Installation kit MKRP

Material:  
Conduit/fitting: Polyamide  
Reducer/lock nut:  
Nickel-plated brass  
Adapter plate/bracket:  
Powder-coated steel

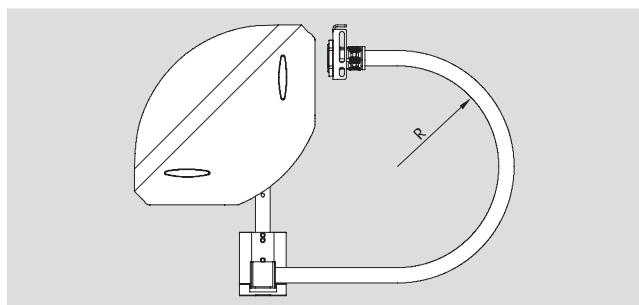

### Ordering data

For size	Max. bending radius for conduit <sup>1)</sup> R [mm]	Tubing I.D. [mm]	Weight [g]	Part No.	Type
10, 12	55	12	140	540 247	MKRP-5
12, 16	75	16.5	150	540 248	MKRP-6

1) The conduit must not be filled beyond 70%

### Cover kit BSD-HSW

Material:  
Wrought aluminium alloy, anodised




Dimensions → 17

### Ordering data

For size	Weight [g]	Part No.	Type
10	100	540 240	BSD-HSW-10
12	200	540 241	BSD-HSW-12
16	300	540 242	BSD-HSW-16

### Wait position module BW-HSW for HSW-...-AP

Material:  
Wrought aluminium alloy, anodised

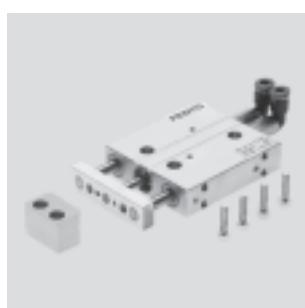

Dimensions → 17

### Ordering data

For size	Weight [g]	Part No.	Type
10	50	540 243	BW-HSW-10
12	140	540 244	BW-HSW-12
16	150	540 245	BW-HSW-16


# Handling modules HSW

Accessories

**FESTO**

## Adapter kits for grippers

For combining HSW with grippers HG-... or semi-rotary drive DRQD

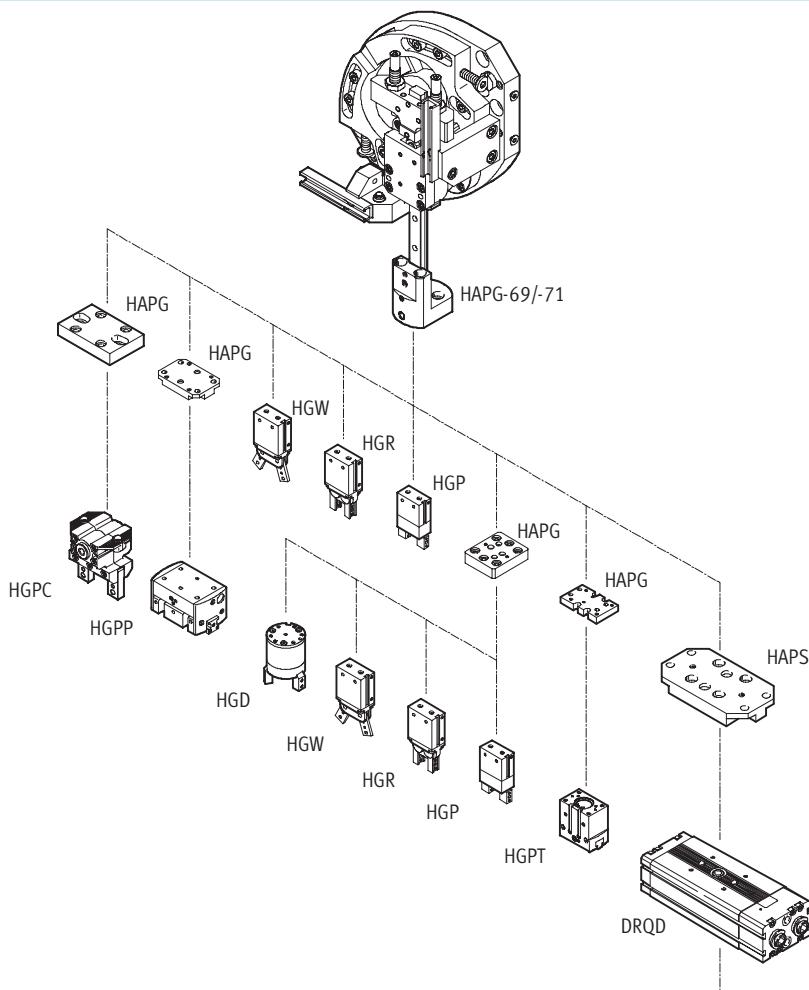

Gripper Part No.	Type	Adapter kit Part No.	Type	Required mounting attachments	B1	D1	D2	H1	L1
HSW-10... with HAPG-69									
174 815	HGP-06-A	-		M3 x 14 (2x)	-				
174 817	HGR-10-A			M3 x 16 (2x)					
174 818	HGW-10-A			M3 x 16 (2x)					
HSW-12... with HAPG-71-B									
174 815	HGP-06-A	192 706	HAPG-37-S1	-	12	M3	M5	42	50
174 817	HGR-10-A	8	M4		M4	28	48		
174 818	HGW-10-A	12	M3		M5	42	50		
1) DRQD-8...	178 448	HAPS-2 <sup>2)</sup>	8		M3	M4	33	49.6	
1) DRQD-12...	10	M3	M5		40	62			
197 542	HGP-10-A-B	529 017	HAPG-57		8	M2.5	M3	27	49.6
161 829	HGR-16-A	191 901	HAPG-55						
161 833	HGW-16-A	537 169	HAPG-75						
525 658	HGPP-10-A								
539 269	HGPC-16-A								
535 858	HGPT-16-A								

1) The semi-rotary drive DRQD is a modular product; for information on configuration and ordering visit [www.festo.com](http://www.festo.com)

2) The centring sleeves for attaching to the adapter kit HAPG-71-B are not required

## Handling modules HSW

**FESTO**


Accessories

Gripper Part No.	Type	Adapter kit Part No.	Type	Required mounting attachments	B1	D1	D2	H1	L1
HSW-16... with HAPG-71-B									
174 815	HGP-06-A	192 706	HAPG-37-S1	-	12	M3	M5	42	50
174 817	HGR-10-A				8	M4	M4	28	48
174 818	HGW-10-A				12	M3	M5	42	50
1) DRQD-8...		178 448	HAPS-2 <sup>2)</sup>		8	M3	M4	33	49.6
1) DRQD-12...					12	M3	M5	44	52
197 542	HGP-10-A-B	192 705	HAPG-36-S1		10	M3	M5	40	62
161 829	HGR-16-A				8	M2.5	M3	27	49.6
161 833	HGW-16-A								
174 819	HGD-16-A								
525 658	HGPP-10-A	529 017	HAPG-57 <sup>2)</sup>						
187 867	HGPP-12-A	191 900	HAPG-54						
187 870	HGPP-16-A	191 901	HAPG-55						
539 269	HGPC-16-A								
535 858	HGPT-16-A	537 169	HAPG-75						
535 861	HGPT-20-A								

1) The semi-rotary drive DRQD is a modular product; for information on configuration and ordering visit [www.festo.com](http://www.festo.com)


2) The centring sleeves for attaching to the adapter kit HAPG-71-B are not required

Adapter kit HAPG-36/-37

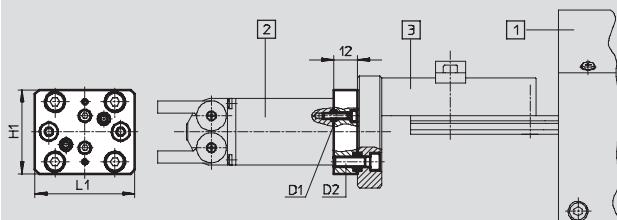


- [1] Handling module HSW
- [2] Gripper HG...
- [3] Adapter kit HAPG

Adapter kit HAPG-54/-55/-57

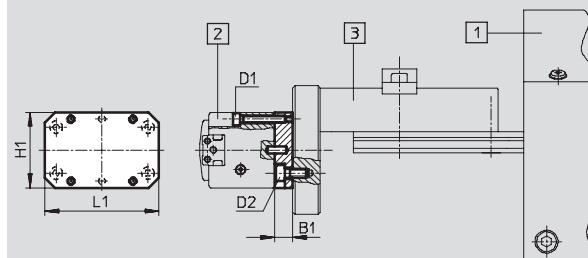


- [1] Handling module HSW
- [2] Parallel gripper HGP...
- [3] Adapter kit HAPG

Adapter kit HAPG-75

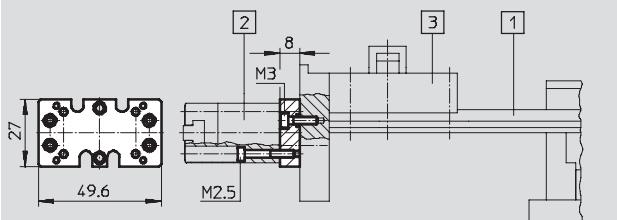

- [1] Handling module HSW
- [2] Parallel gripper HGPT
- [3] Adapter kit HAPG

Adapter kit HAPS-2


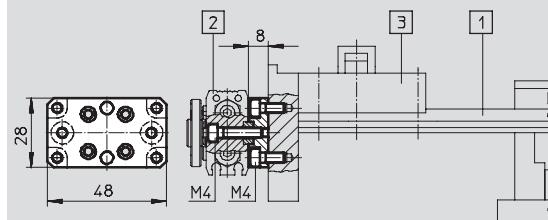


- [1] Handling module HSW
- [2] Semi-rotary drive DRQD
- [3] Adapter kit HAPG

## Handling modules HSW

Accessories

**FESTO**

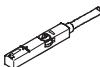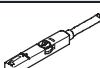Ordering data – Proximity sensors for T-slot, magneto-resistive						Technical data → Internet: smt
	Type of mounting	Switch output	Electrical connection	Cable length [m]	Part No.	Type
<b>N/O contact</b>						
	Insertable in the slot from above, flush with cylinder profile	PNP	Cable, 3-wire	2.5	543 867	SMT-8M-PS-24V-K-2,5-OE
			Plug M8x1, 3-pin	0.3	543 866	SMT-8M-PS-24V-K-0,3-M8D
			Plug M12x1, 3-pin	0.3	543 869	SMT-8M-PS-24V-K-0,3-M12
	Insertable in the slot lengthwise, flush with the cylinder profile	NPN	Cable, 3-wire	2.5	543 870	SMT-8M-NS-24V-K-2,5-OE
			Plug M8x1, 3-pin	0.3	543 871	SMT-8M-NS-24V-K-0,3-M8D
	Insertable in the slot lengthwise, flush with the cylinder profile	PNP	Cable, 3-wire	2.5	175 436	SMT-8-PS-K-LED-24-B
			Plug M8x1, 3-pin	0.3	175 484	SMT-8-PS-S-LED-24-B
<b>N/C contact</b>						
	Insertable in the slot from above, flush with cylinder profile	PNP	Cable, 3-wire	7.5	543 873	SMT-8M-PO-24V-K7,5-OE

Ordering data – Proximity sensors for T-slot, magnetic reed						Technical data → Internet: sme
	Type of mounting	Switch output	Electrical connection	Cable length [m]	Part No.	Type
<b>N/O contact</b>						
	Insertable in the slot from above, flush with cylinder profile	Contacting	Cable, 3-wire	2.5	543 862	SME-8M-DS-24V-K-2,5-OE
				5.0	543 863	SME-8M-DS-24V-K-5,0-OE
			Cable, 3-wire	2.5	543 872	SME-8M-ZS-24V-K-2,5-OE
	Insertable in the slot lengthwise, flush with the cylinder profile	Contacting	Plug M8x1, 3-pin	0.3	543 861	SME-8M-DS-24V-K-0,3-M8D
			Cable, 3-wire	2.5	150 855	SME-8-K-LED-24
	Insertable in the slot lengthwise, flush with the cylinder profile	Contacting	Plug M8x1, 3-pin	0.3	150 857	SME-8-S-LED-24
<b>N/C contact</b>						
	Insertable in the slot lengthwise, flush with the cylinder profile	Contacting	Cable, 3-wire	7.5	160 251	SME-8-O-K-LED-24


Ordering data – Connecting cables						Technical data → Internet: nebu
	Electrical connection, left	Electrical connection, right	Cable length [m]	Part No.	Type	
	Straight socket, M8x1, 3-pin	Cable, open end, 3-wire	2.5	541 333	NEBU-M8G3-K-2.5-LE3	
			5	541 334	NEBU-M8G3-K-5-LE3	
	Straight socket, M12x1, 5-pin	Cable, open end, 3-wire	2.5	541 363	NEBU-M12G5-K-2.5-LE3	
			5	541 364	NEBU-M12G5-K-5-LE3	
	Angled socket, M8x1, 3-pin	Cable, open end, 3-wire	2.5	541 338	NEBU-M8W3-K-2.5-LE3	
			5	541 341	NEBU-M8W3-K-5-LE3	
	Angled socket, M12x1, 5-pin	Cable, open end, 3-wire	2.5	541 367	NEBU-M12W5-K-2.5-LE3	
			5	541 370	NEBU-M12W5-K-5-LE3	

## Handling modules HSW

FESTO

Accessories

Ordering data – Cables for HSW-...-AE

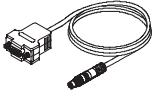	Brief description	Cable length	Part No.	Type
	Supply cable	2.5 m	537 931	KPWR-MC-1-SUB-9HC-2,5
		5 m	537 932	KPWR-MC-1-SUB-9HC-5
		10 m	537 933	KPWR-MC-1-SUB-9HC-10
	Control cable for I/O connection to any PLC controller	2.5 m	537 923	KES-MC-1-SUB-9-2,5
		5 m	537 924	KES-MC-1-SUB-9-5
		10 m	537 925	KES-MC-1-SUB-9-10
	Programming cable	2.5 m	537 926	KDI-MC-M8-SUB-9-2,5