




Valve terminals VTOC

FESTO



Valve terminals VTOC


Overview – Valve terminals

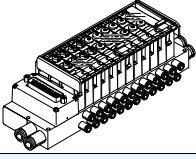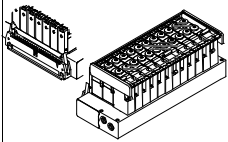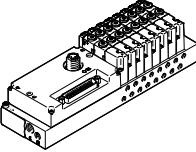Design	Type code	Description	→ Page/ Internet
Valve terminal VTOC with multi-pin plug connection, Sub-D			
	SD	• Sub-D, 25-pin • Sub-D, 44-pin	29
Valve terminal VTOC with multi-pin plug connection, flat cable			
	RC	• Flat cable, 26-pin • Flat cable, 40-pin • Flat cable, 50-pin	29
Valve terminal with I-Port interface, interlock/IO-Link			
	LK/PT	• I-Port interface: plug M12, 5-pin • Sub-D, 44-pin • IO-Link	31

Valve terminals VTOC

Key features

FESTO

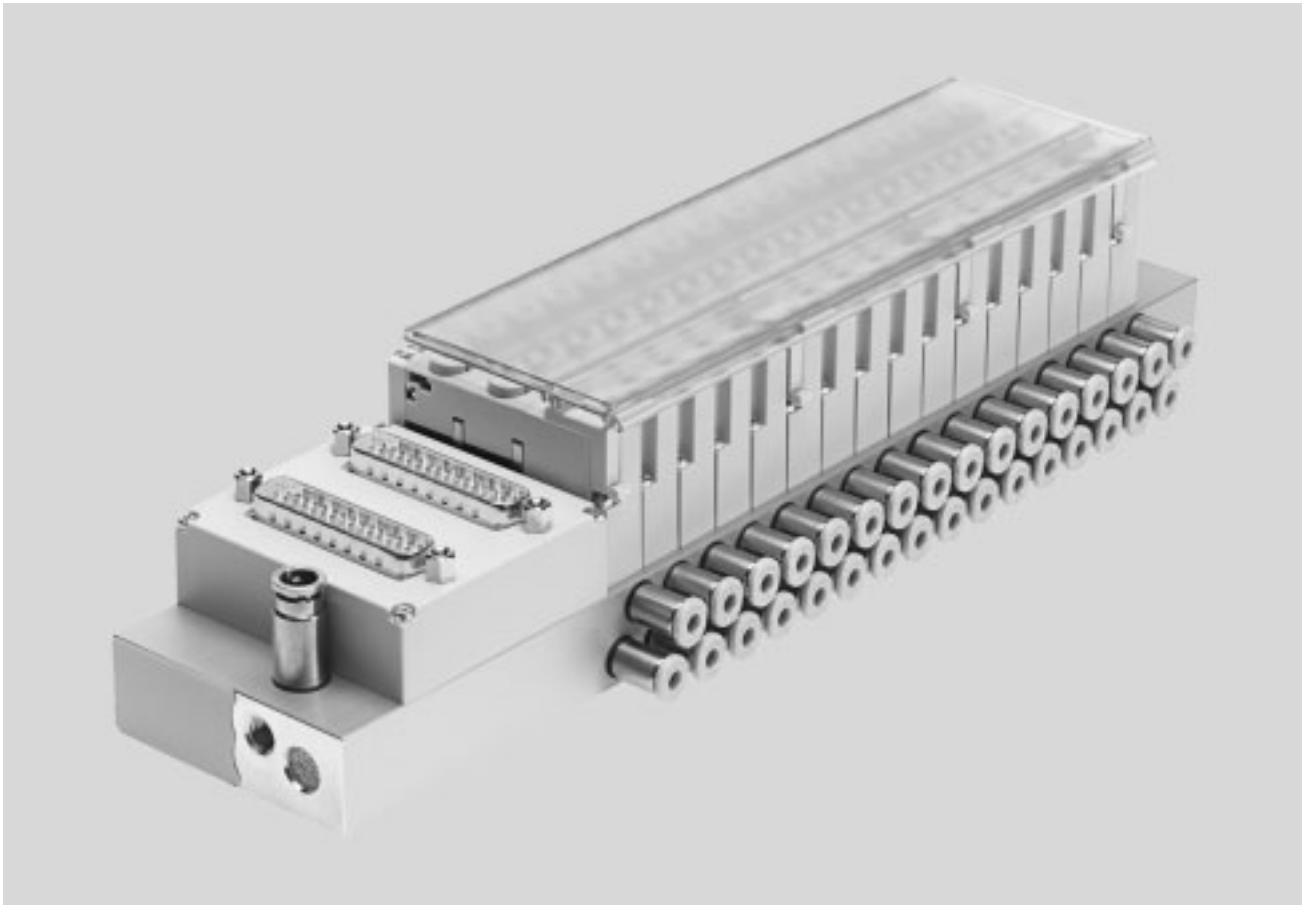

Innovative

- Valve terminal for a wide range of pneumatic applications
- Weight-optimised metal manifold rail
- Space-saving thanks to 2x3/2-way valves at one valve position
- Great flexibility during planning, assembly and operation
- Configurable manifold rails (pneumatic and electric connections)

Versatile

- Provides 2 ... 24 valve positions on one terminal
- Flexibility of the pneumatic working ports provides a practical solution to different requirements
- Wide range of electrical outlet directions
- Multi-pin plug connection with Sub-D plug or flat cable
- I-Port interface with interlock for fieldbus node (CTEU)
- IO-Link mode for direct connection to a higher-level IO-Link master

Reliable

- Manual override
- Durable
- Sturdy thanks to simple structure

Easy to mount

- Ready-to-install and tested unit
- Lower ordering, installation and commissioning costs
- Easy valve assembly



Note

Ordering system for valve terminal VTOC


→ Internet: vtoc

Valve terminals VTOC


Key features – Valve terminals

FESTO

Valve terminal with multi-pin plug connection

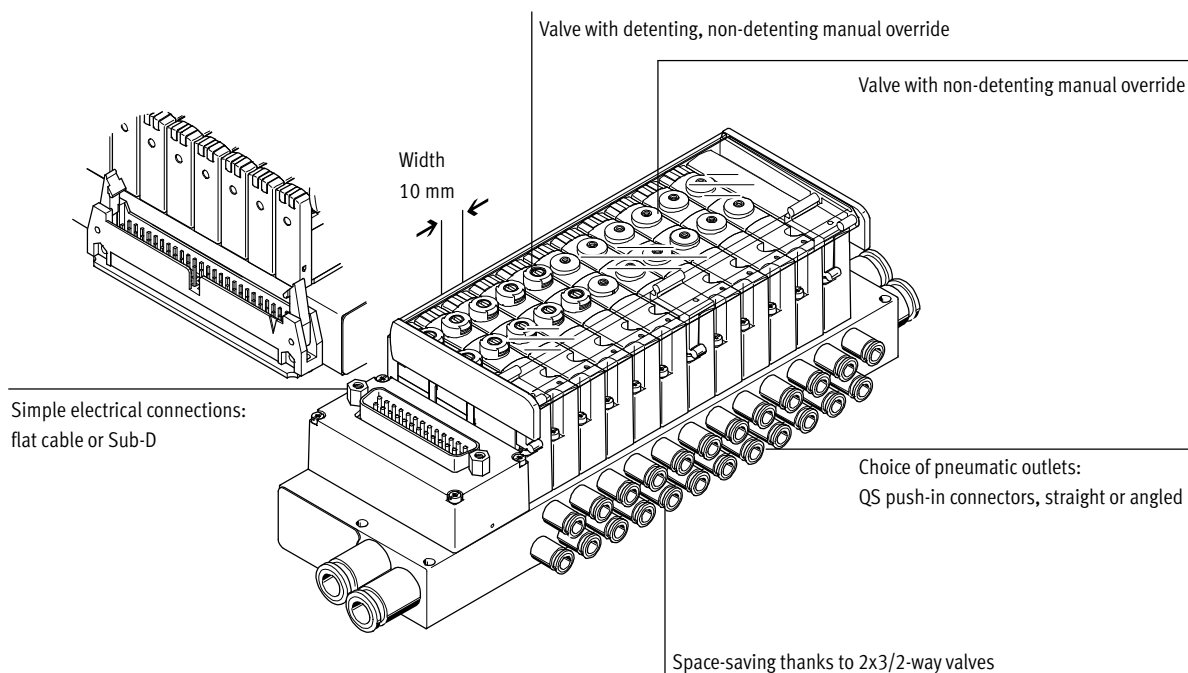

Valve terminal with I-Port interface, interlock/IO-Link

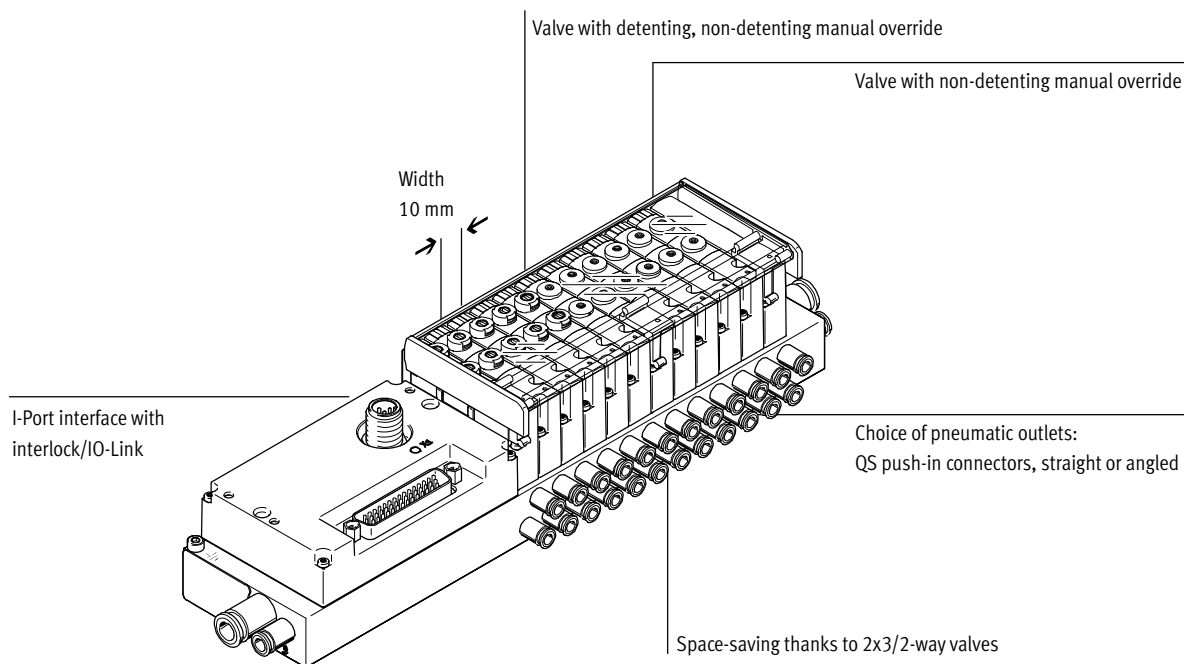

Equipment options

Valve functions

- 2x3/2-way valve, single solenoid, normally closed
- Valve with non-detenting manual override
- Valve with detenting, non-detenting manual override
- 2 ... 24 valve positions/
max. 48 solenoid coils

Electrical connection options

- Variable multi-pin plug connection: Sub-D or flat cable
- I-Port interface with interlock for fieldbus node (CTEU)
- IO-Link mode for direct connection to a higher-level IO-Link master

Valve terminals VTOC

Key features

FESTO

Integration of the I-Port interface/IO-Link

Different fieldbus nodes are used for integration into the control systems of various manufacturers.


The following protocols are supported with the compatible fieldbus node

- CTEU:
- CANopen
 - DeviceNet

- EtherCAT
- CC-Link
- PROFIBUS

Use of the electrical sub-base CAPC permits decentralised installation of fieldbus nodes CTEU on a further valve terminal or input modules with I-Port interfaces
(→ installation system CTEU/CTEL)

System overview, example

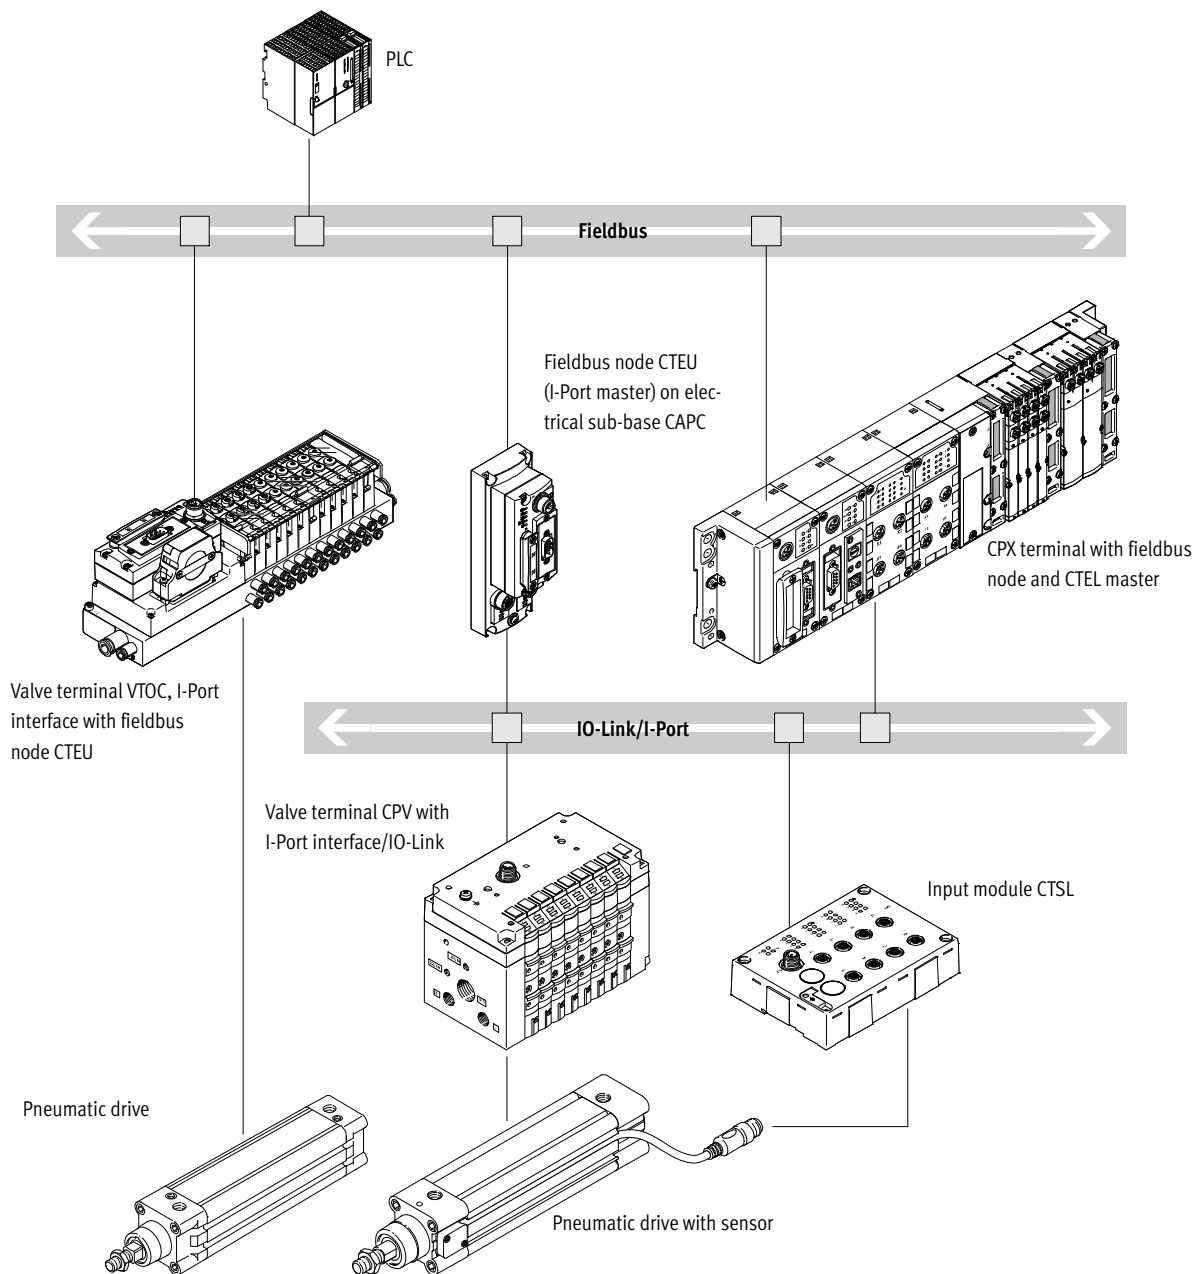

- Communication with the higher-order controller via fieldbus

- Use the fieldbus node CTEU compatible with the fieldbus protocol

- Up to 64 inputs/outputs (solenoid coils), depending on the valve terminal

Valve terminals VTOC

Peripherals overview

FESTO


Overview – Valve terminal VTOC with multi-pin plug connection, Sub-D

- Up to 24 valve positions/
48 solenoid coils
- Flat cable connection type, code: RC
- Sub-D plug connection type,
code: SD

Valve terminals with electrical multi-pin plug connection are available with 2 to max. 24 valve positions. Each valve position can either be equipped with a valve body or a blanking plate.

Only valve bodies containing two 3/2-way single solenoid valves are available.

A maximum of 48 solenoid coils can be actuated via the electrical multi-pin plug connection.

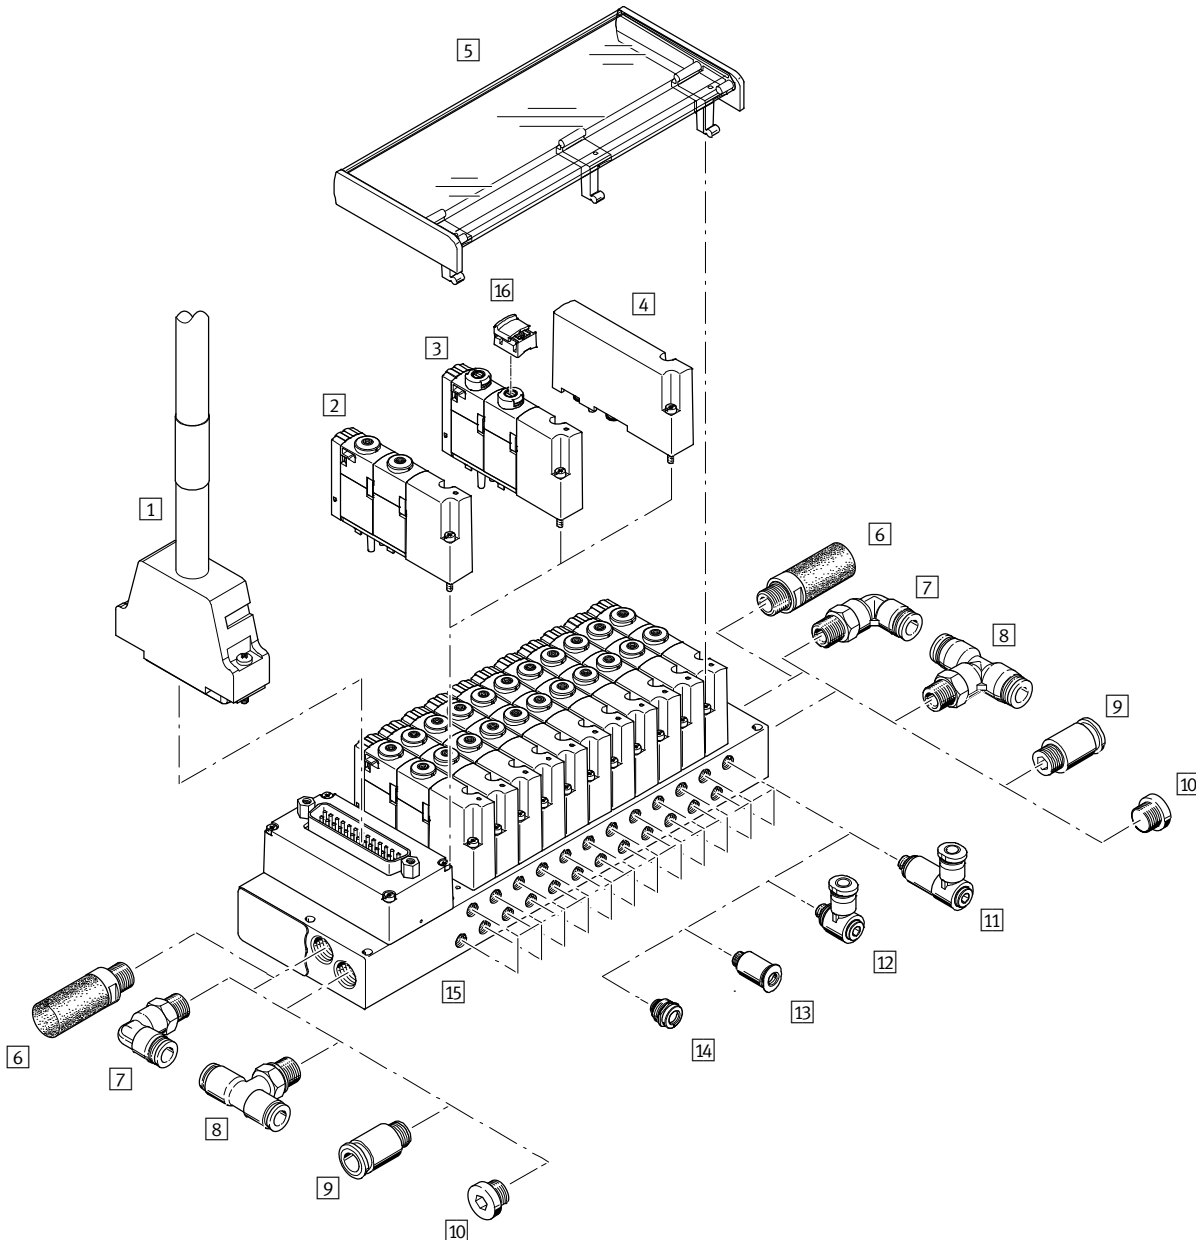

Valve terminals VTOC

Peripherals overview



Accessories				
		Type	Brief description	➔ Page/ Internet
1	Connecting cable	KMP6/ NEBV	For multi-pin plug connection, with Sub-D plug, 25-pin or 44-pin	41
2	Solenoid valve, single solenoid	VOVC	With non-detenting manual override	41
3	Solenoid valve, single solenoid	VOVC	With detenting, non-detenting manual override	41
4	Blanking plate	VABB	For vacant position	41
5	Inscription label holder	ASCF	For labelling the valves/manual override cover	42
6	Silencer	U	For fitting in exhaust ports	42
7	Elbow connector	QSL	For connecting to the air supply or exhaust	42
8	T-fitting	QST	For connecting to the air supply or exhaust	42
9	Straight fitting	OS	For connecting to the air supply or exhaust	42
10	Blanking plug	B	For sealing the air supply or exhaust port	41
11	Push-in L-fitting, long	QSMLLV	Long elbow connector for working ports	42
12	Push-in L-fitting	QSMLV	Elbow connector for working ports	42
13	Push-in fitting	QS	Straight push-in fitting for working ports	42
14	Push-in fitting	QSIMG	Straight countersunk push-in fitting for working ports (compact)	–
15	Manifold rail	VABB	With multi-pin plug connection for max. 24 valve positions	–
16	Cover	VAMC	For manual override, detenting (without accessories)	41

Valve terminals VTOC

Peripherals overview

FESTO

Overview – Valve terminal VTOC with I-Port interface, interlock/IO-Link


- Up to 24 valve positions/
48 solenoid coils
- I-Port interface with interlock
connection type, code: PT
- IO-Link connection type, code: LK

The electrical supply/transmission of
communication data takes place via
an M12 plug.
The valve terminal can be equipped
with 2 ... 24 valves.

Only valve bodies containing two
3/2-way single solenoid valves are
available.

The following protocols are supported
in connection with the associated
CTEU fieldbus node:

- DeviceNet
- CANopen
- PROFIBUS DP
- EtherCat
- CC-Link

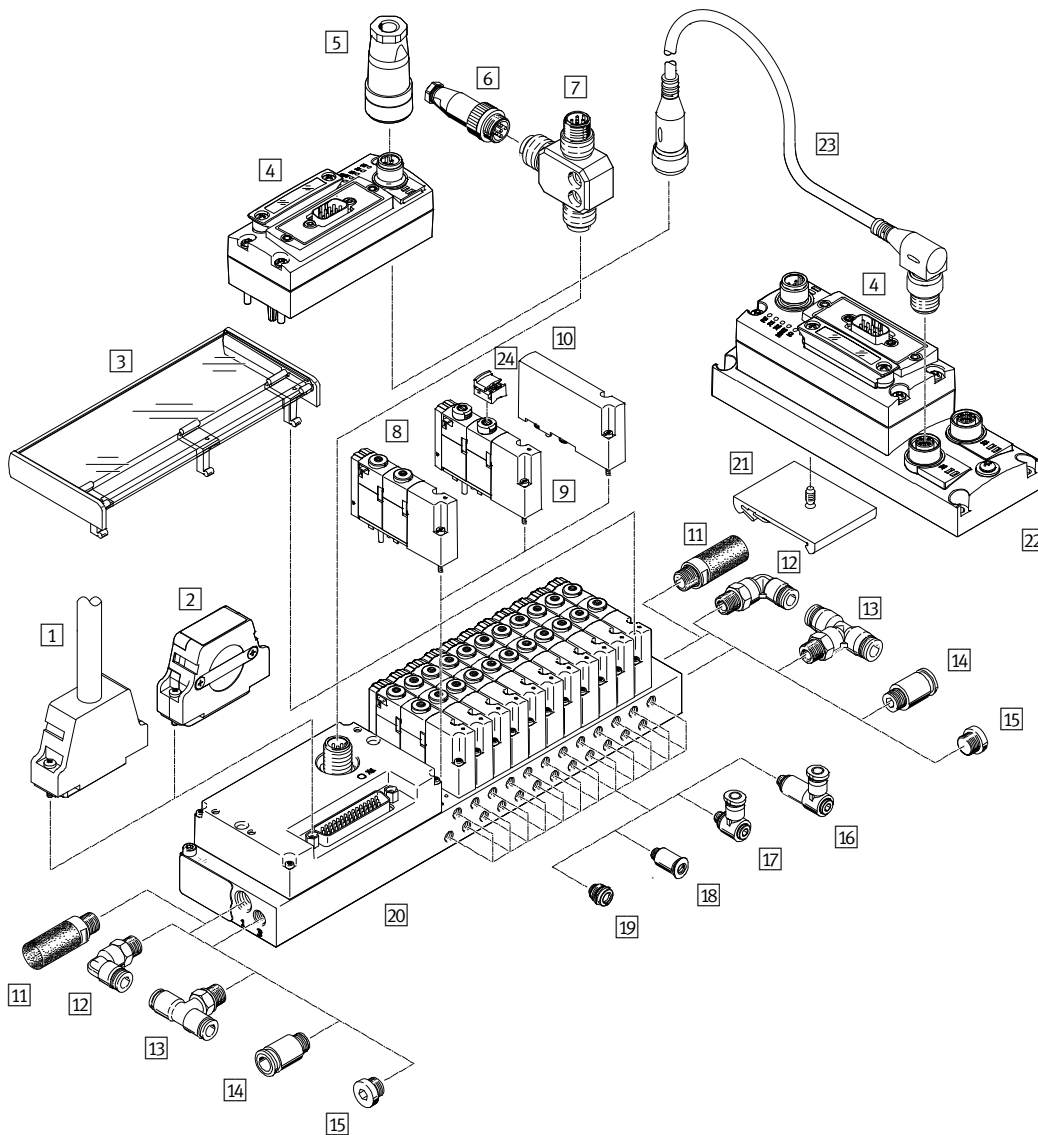

Valve terminals VTOC

Peripherals overview

FESTO

Accessories				
	Type	Brief description	➔ Page/ Internet	
1	Connecting cable	KMP6/ NEBV	For multi-pin plug connection, with Sub-D plug, 44-pin	41
2	Plug socket	NEFF	For bypassing the interlock function	44
3	Inscription label holder	ASCF	For labelling the valves/manual override cover	42
4	Fieldbus	CTEU	Fieldbus node	43
5	Plug socket	FBSD/ NTSD	For fieldbus node CTEU	44
6	Plug	SEA	Straight, for T-adapter FB-TA	44
7	T-adapter	FB-TA	For IO-Link and load supply	44
8	Solenoid valve, single solenoid	VOVC	With non-detenting manual override	41
9	Solenoid valve, single solenoid	VOVC	With detenting, non-detenting manual override	41
10	Blanking plate	VABB	For vacant position	41
11	Silencer	U	For fitting in exhaust ports	42
12	Elbow connector	QSL	For connecting to the air supply or exhaust	42
13	T-fitting	QST	For connecting to the air supply or exhaust	42
14	Straight fitting	OS	For connecting to the air supply or exhaust	42
15	Blanking plug	B	For sealing the air supply or exhaust port	41
16	Push-in L-fitting, long	QSMLLV	Long elbow connector for working ports	42
17	Push-in L-fitting	QSMLV	Elbow connector for working ports	42
18	Push-in fitting	QS	Straight, for working ports	42
19	Push-in fitting	QSIMG	Straight countersunk push-in fitting for working ports (compact)	–
20	Manifold rail	VABB	With I-Port interface/IO-Link, interlock	–
21	H-rail mounting	CAFM	For electrical connecting plate CAPC	42
22	Electrical connecting plate	CAPC	For connecting a second device with I-Port interface	44
23	Connecting cable	NEBU	–	44
24	Cover	VAMC	For manual override, detenting (without accessories)	41

Valve terminals VTOC

Peripherals overview

FESTO

Pin allocation variants											
Flat cable	Number of valve positions	Top left (LT)				Bottom left (LB)		Top right (RT)			
		26 pins 1-way	26 pins 2-way	50 pins 1-way	50 pins 2-way	26 pins 1-way	26 pins 2-way	40 pins 1-way	40 pins 2-way	50 pins 1-way	50 pins 2-way
	4–12	V14	–	–	–	V8	–	–	–	–	–
	8–12	–	–	V11 ¹⁾	–	–	–	–	–	V10 ¹⁾	–
	6–10	–	–	–	–	–	–	V9 ¹⁾²⁾	–	–	–
	13–24	–	V15	–	–	–	V17	–	–	–	–
	16–24	–	–	–	V16 ¹⁾	–	–	–	–	–	–
	16–20	–	–	–	–	–	–	–	V18 ¹⁾²⁾	–	–
	18–24	–	–	–	–	–	–	–	–	–	V19 ¹⁾


1) Individual ground

2) Not bi-directional

Overview of electrical connections

Valve terminal with flat cable connection on top

- Flat cable connection type, code: RC
 - Connection direction:
 - Top left (code LT)
 - Top right (code RT)
- A total of 10 pin allocation variants are available. Detailed pin allocation → p. 21

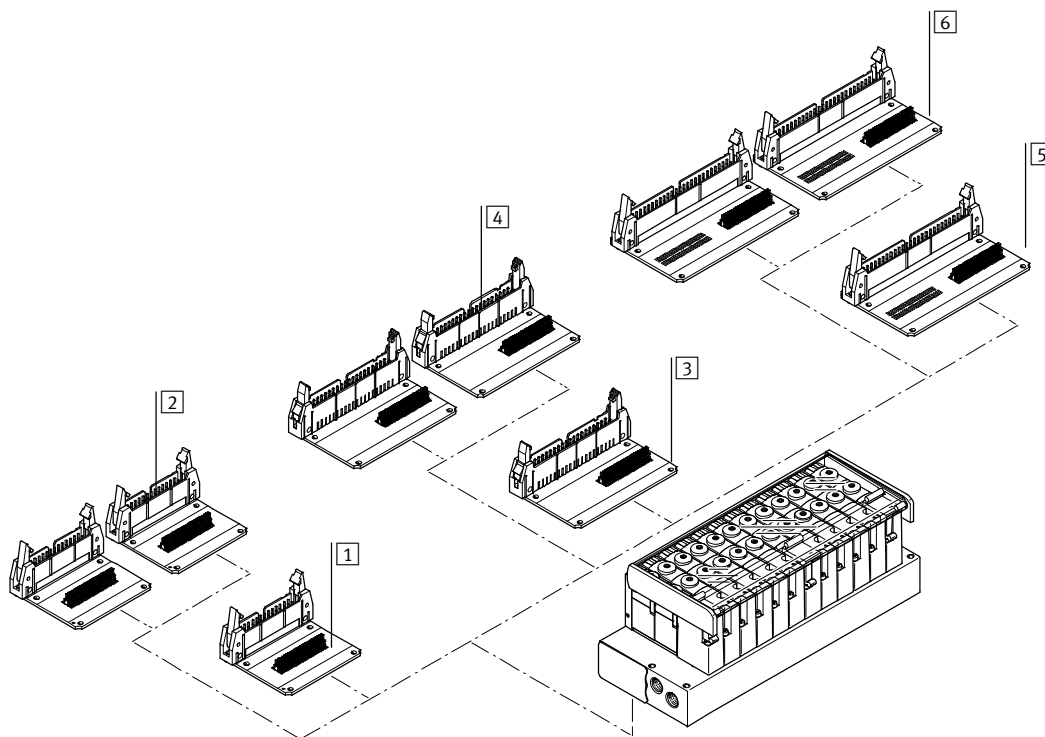

Accessories				
	Code	Brief description	Number of valve positions	Variants
1 Flat cable, 26-pin	LT	1-way, top left	4–12	V14
2 Flat cable, 26-pin		2-way, top left	13–24	V15
3 Flat cable, 40-pin	RT	1-way, top right	6–10	V9
4 Flat cable, 40-pin		2-way, top right	16–20	V18
5 Flat cable, 50-pin	RT	1-way, top right	8–12	V10
6 Flat cable, 50-pin		2-way, top right	18–24	V19
5 Flat cable, 50-pin	LT	1-way, top left	8–12	V11
6 Flat cable, 50-pin		2-way, top left	16–24	V16

Valve terminals VTOC


Peripherals overview



Overview of electrical connections

Valve terminal with flat cable connection underneath

- Flat cable connection type, code: RC
 - Connection direction:
 - Bottom left (code LB)
- A total of 10 pin allocation variants are available. Detailed pin allocation → p. 21

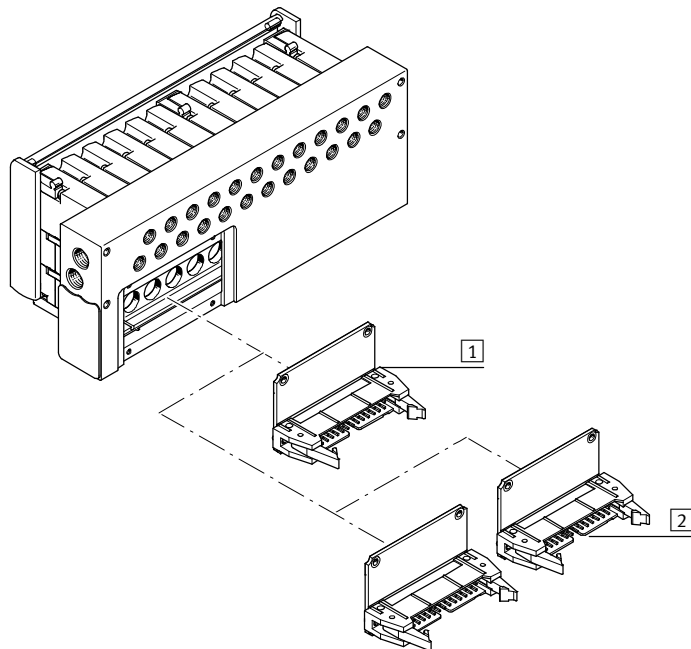

Accessories				
	Code	Brief description	Number of valve positions	Variants
1 Flat cable, 26-pin	LB	1-way, bottom left	4–12	V8
2 Flat cable, 26-pin		2-way, bottom left	13–24	V17

Valve terminals VTOC

Peripherals overview

FESTO

Pin allocation variants										
Sub-D	Number of valve positions	Top left (LT)								Top right (RT)
		25 pins 1-way			25 pins 2-way	25 pins 2-way	44 pins 1-way	44 pins 2-way		44 pins 1-way
	2-12	V2	V3 ²⁾	V1	—	—	—	—	—	—
	4-12	—	—	—	—	V12 ¹⁾	—	—	—	—
	13-21	—	—	—	—	—	V5	—	—	V13
	13-22	—	—	—	—	—	—	V7 ¹⁾	V6 ¹⁾²⁾	—
	13-24	—	—	—	V4	—	—	—	—	—

1) Individual ground

2) Not bi-directional

Overview of electrical connections

Valve terminal with Sub-D connection on top


- Sub-D connection type, code: SD

Connection direction:

- Top left (code LT)
- Top right (code RT)

A total of 9 pin allocation variants are available.

Detailed pin allocation → p. 18

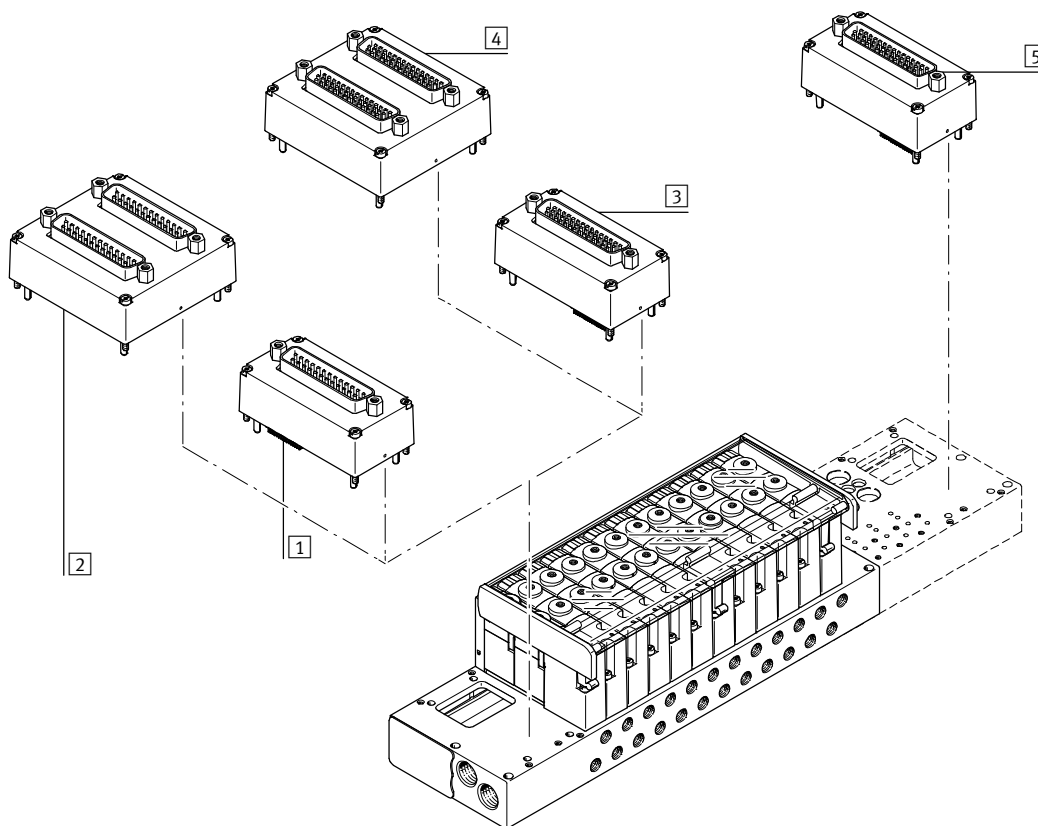

Accessories					
	Code	Brief description	Number of valve positions	Variants	
1	Sub-D, 25-pin	LT	1-way, top left	2...12	V1, V2, V3
2	Sub-D, 25-pin	LT	2-way, top left	13...24	V4
				4...12	V12
3	Sub-D, 44-pin	LT	1-way, top left	13...21	V5
4	Sub-D, 44-pin		2-way, top left	13...22	V6, V7
5	Sub-D, 44-pin	RT	1-way, top right	13...20	V13

Valve terminals VTOC

Key features – Pneumatic components




Design

The valves are mounted on the metal manifold rail using two screws. The use of 2x3/2 directional control valves per valve position guarantees optimum use of space with maximum performance. The valves only differ in

the type of manual override. The assembled and tested units or individual components as modules enable a custom configuration.

Blanking plates can be replaced by valves at a later date. The existing dimensions, mounting points and the

pneumatic and electrical installation do not change.

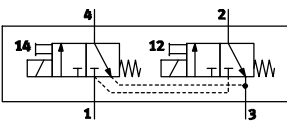Valve function			
Code	Circuit symbol	Width	Description
		10 mm	
K		■	2x3/2-way valve, single solenoid • Mechanical spring return • Non-reversible

Valve terminals VTOC

Key features – Pneumatic components

FESTO

Fittings

Ports 1/3

Wide range of connection sizes:



- Threaded connection M7, G1/8, 1/8 NPT
- Push-in connector QS6, QS8, QS3/8 or QS1/4 (compressed air supply)
- Push-in connector QS6, QS1/4 or silencer (exhaust air)

Choice of connection types for port 1, compressed air supply and port 3, exhaust air:

- Straight
- Elbow connector
- T-fitting

Flexible connection positions for the compressed air supply and exhaust:

- At both ends
- To the left
- To the right

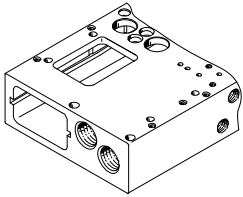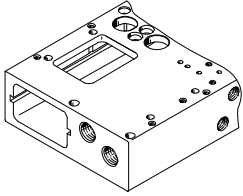Ports 1/3		
Connection direction: front	Code	Description
	-G18	Manifold block G1/8 (diagram shows example of Sub-D electrical connection on left) Basis for design: • Push-in connector QS8 • Push-in connector QS3/8"
	-M7	Manifold block M7 (diagram shows example of Sub-D electrical connection on left) Basis for design: • Push-in connector QS6 • Push-in connector QS1/4" • Exhaust port via push-in fitting or silencer

Valve terminals VTOC

Key features – Pneumatic components

FESTO

Fittings

Ports 2/4

Wide range of connection sizes:


- Threaded connection M5
- 10-32 UNF
- Push-in connector QS3, QS4 or 1/8"

Outlet direction:

- To the front
- Underneath


Connection on the valve (port 2/4)

Outlet direction to the front

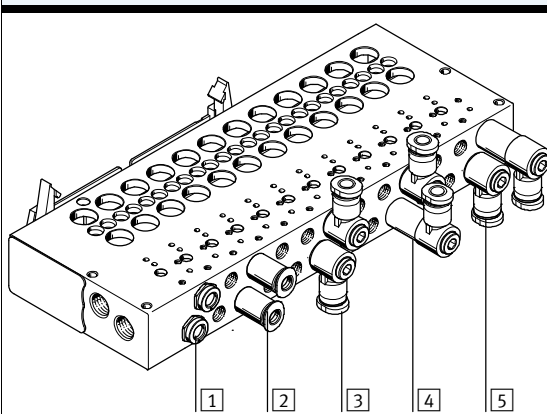

	Code	Description
1	X	Straight countersunk outlet (compact)
2	–	Straight outlet
3	FB	Angled outlet, upwards/downwards
4	FA	Angled outlet, upwards
5	FC	Angled outlet, downwards

Outlet direction underneath

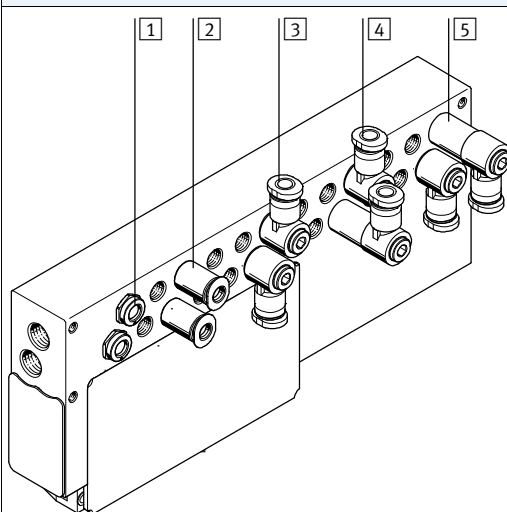

1	X	Straight countersunk outlet (compact)
2	U	Straight outlet
3	UB	Angled outlet, to the front/rear
4	UA	Angled outlet, to the front
5	UC	Angled outlet, to the rear


Valve terminals VTOC

Key features – Display and operation

FESTO

Manual override (MO)


Manual override with automatic return (non-detenting)

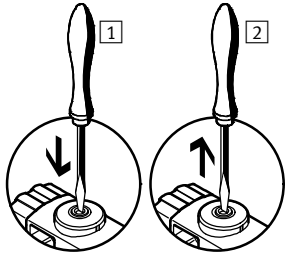

- 1 Press in the stem of the manual override with a pointed object or screwdriver. The valve switches.

- 2 Remove the pointed object or screwdriver. Spring force pushes the manual override back. The valve returns to its normal position.

Manual override with lock (non-detenting/detenting)

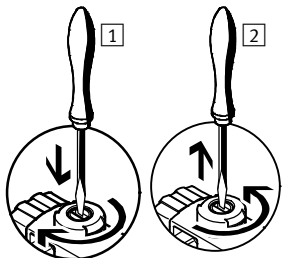

- 1 Press in the stem of the manual override with a screwdriver until the valve switches and then turn the stem clockwise by 90° until the stop is reached. The valve remains switched.


- 2 Turn the stem anti-clockwise by 90° until the stop is reached and then remove the screwdriver. Spring force pushes the manual override back. The valve returns to its normal position.



Note

VTOC provides two valves with the same valve function but different types of manual override. There is no provision for subsequent modification of the type of manual override (e.g. by attaching a cover).


Identification system

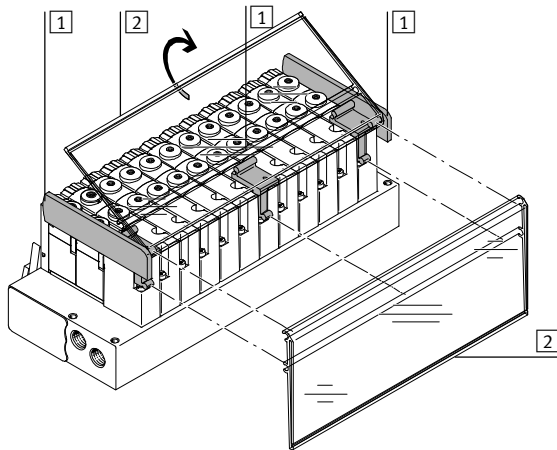

- 1 Retainer for inscription label holder
The retainer for the inscription label holder is fastened to the valves with one screw and enables the inscription label holder to be mounted in two different directions. The retainers at the side are flanged to prevent the inscription label sliding out.

- 2 Inscription label holder
A transparent inscription label holder ASCF-H-L2 (code F/T in the order code) can be mounted for labelling the valves. Inscription labels can be inserted in the holders for labelling purposes. Templates for printing the inscription label are available on request.

Mounting – Valve terminal

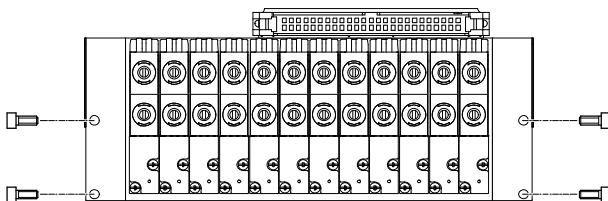

Sturdy terminal assembly thanks to:

- Four through-holes for wall mounting (hole $\varnothing$: 3.3 mm)
- Four holes with thread on the reverse side:
 - Thread M3
 - Thread M4

- Thread 8-32 UNC
- Thread 10-32 UNC-2B

Valve terminals VTOC

Key features – Electrical components

Electrical connection

Multi-pin plug

The following multi-pin plug connections are available for the valve terminal VTOC:

- Sub-D multi-pin plug connection (25-pin, 1-way or 2-way)
- Sub-D multi-pin plug connection (44-pin, 1-way or 2-way)
- Flat cable plug (26-pin, 1-way or 2-way)
- Flat cable plug (40-pin, 1-way or 2-way)
- Flat cable plug (50-pin, 1-way or 2-way)

The multi-pin plug connection is available with 19 different pin allocation variants.

Other variants on request.

Connection directions:


- Sub-D connection (top left/right)
- Flat cable (top/bottom left, top/bottom right)

Control signals from the controller to the valve terminal are transmitted via the multi-core pre-assembled cable, which substantially reduces installation time.

The valves are switched by means of positive or negative logic (positive switching or negative switching). Mixed operation is not permitted.

Each pin on the multi-pin plug can actuate exactly one solenoid coil. If the maximum configurable number of valve positions is 24, this means that 48 valves can be addressed.

Explanation of pin allocation (V12)

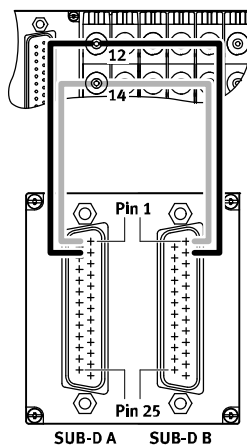

The example shows the pin allocation code V12. The solenoid coils are wired in ascending order of the valves so that solenoid coil 14 occupies the low-value pin and solenoid coil 12 the next pin of both Sub-D connections:

- Pin 1 of Sub-D A and Sub-D B at valve position 1, coil 14.
- Pin 2 of Sub-D A and Sub-D B at valve position 1, coil 12.


The following tables show the different pin allocation variants.

The circuitry may differ from the example depending on the multi-pin plug connection chosen.

Valve terminals VTOC

Key features – Electrical components

FESTO


Pin allocation – Sub-D plug, 25-pin															
	Pin	-V1		-V2		-V3		-V4				-V12			
		Sub-D A ¹⁾		Sub-D B ²⁾		Sub-D A ¹⁾		Sub-D B ²⁾		Sub-D A ¹⁾		Sub-D B ²⁾			
	1	VP1	12	VP1	14	VP1	14-	VP1	14	VP13	14	VP1	14	VP1	14
	2	VP1	14	VP2	14	VP2	14-	VP1	12	VP13	12	VP1	12	VP1	12
	3	VP2	12	VP3	14	VP3	14-	VP2	14	VP14	14	VP2	14	VP2	14
	4	VP2	14	VP4	14	VP4	14-	VP2	12	VP14	12	VP2	12	VP2	12
	5	VP3	12	VP5	14	VP5	14-	VP3	14	VP15	14	VP3	14	VP3	14
	6	VP3	14	VP6	14	VP6	14-	VP3	12	VP15	12	VP3	12	VP3	12
	7	VP4	12	VP7	14	VP7	14-	VP4	14	VP16	14	VP4	14	VP4	14
	8	VP4	14	VP8	14	VP8	14-	VP4	12	VP16	12	VP4	12	VP4	12
	9	VP5	12	VP9	14	VP9	14-	VP5	14	VP17	14	VP5	14	VP5	14
	10	VP5	14	VP10	14	VP10	14-	VP5	12	VP17	12	VP5	12	VP5	12
	11	VP6	12	VP11	14	VP11	14-	VP6	14	VP18	14	VP6	14	VP6	14
	12	VP6	14	VP12	14	VP12	14-	VP6	12	VP18	12	VP6	12	VP6	12
	13	VP7	12	Com		Com+		VP7	14	VP19	14	VP7	14	VP7	14
	14	VP7	14	VP1	12	VP1	12-	VP7	12	VP19	12	VP7	12	VP7	12
	15	VP8	12	VP2	12	VP2	12-	VP8	14	VP20	14	VP8	14	VP8	14
	16	VP8	14	VP3	12	VP3	12-	VP8	12	VP20	12	VP8	12	VP8	12
	17	VP9	12	VP4	12	VP4	12-	VP9	14	VP21	14	VP9	14	VP9	14
	18	VP9	14	VP5	12	VP5	12-	VP9	12	VP21	12	VP9	12	VP9	12
	19	VP10	12	VP6	12	VP6	12-	VP10	14	VP22	14	VP10	14	VP10	14
	20	VP10	14	VP7	12	VP7	12-	VP10	12	VP22	12	VP10	12	VP10	12
 Note The drawing shows the view onto the Sub-D plug on the valve terminal.	21	VP11	12	VP8	12	VP8	12-	VP11	14	VP23	14	VP11	14	VP11	14
	22	VP11	14	VP9	12	VP9	12-	VP11	12	VP23	12	VP11	12	VP11	12
	23	VP12	12	VP10	12	VP10	12-	VP12	14	VP24	14	VP12	14	VP12	14
	24	VP12	14	VP11	12	VP11	12-	VP12	12	VP24	12	VP12	12	VP12	12
	25	Com		VP12	12	VP12	12-	Com 1-12		Com 13-24		–	–	–	–

VP Valve position

1) Sub-D A, first Sub-D plug

2) Sub-D B, second Sub-D plug

Example of pin allocation V12




Valve terminals VTOC

Key features – Electrical components

FESTO

Pin allocation – Sub-D plug, 44-pin

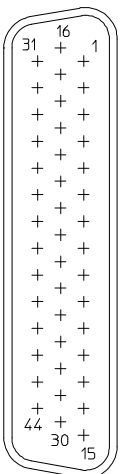	Pin	-V5		-V6				-V7				-V13	
				Sub-D A ¹⁾		Sub-D B ²⁾		Sub-D A ¹⁾		Sub-D B ²⁾			
	1	VP1	14	VP1	14+	VP1	14-	VP1	14	VP1	14	VP1	12
	2	VP1	12	VP1	12+	VP1	12-	VP1	12	VP1	12	VP1	14
	3	VP2	14	VP2	14+	VP2	14-	VP2	14	VP2	14	VP2	12
	4	VP2	12	VP2	12+	VP2	12-	VP2	12	VP2	12	VP2	14
	5	VP3	14	VP3	14+	VP3	14-	VP3	14	VP3	14	VP3	12
	6	VP3	12	VP3	12+	VP3	12-	VP3	12	VP3	12	VP3	14
	7	VP4	14	VP4	14+	VP4	14-	VP4	14	VP4	14	VP4	12
	8	VP4	12	VP4	12+	VP4	12-	VP4	12	VP4	12	VP4	14
	9	VP5	14	VP5	14+	VP5	14-	VP5	14	VP5	14	VP5	12
	10	VP5	12	VP5	12+	VP5	12-	VP5	12	VP5	12	VP5	14
	11	VP6	14	VP6	14+	VP6	14-	VP6	14	VP6	14	VP6	12
	12	VP6	12	VP6	12+	VP6	12-	VP6	12	VP6	12	VP6	14
	13	VP7	14	VP7	14+	VP7	14-	VP7	14	VP7	14	VP7	12
	14	VP7	12	VP7	12+	VP7	12-	VP7	12	VP7	12	VP7	14
	15	VP8	14	VP8	14+	VP8	14-	VP8	14	VP8	14	VP8	12
	16	VP8	12	VP8	12+	VP8	12-	VP8	12	VP8	12	VP8	14
	17	VP9	14	VP9	14+	VP9	14-	VP9	14	VP9	14	VP9	12
	18	VP9	12	VP9	12+	VP9	12-	VP9	12	VP9	12	VP9	14
	19	VP10	14	VP10	14+	VP10	14-	VP10	14	VP10	14	VP10	12
	20	VP10	12	VP10	12+	VP10	12-	VP10	12	VP10	12	VP10	14
	21	VP11	14	VP11	14+	VP11	14-	VP11	14	VP11	14	VP11	12
	22	VP11	12	VP11	12+	VP11	12-	VP11	12	VP11	12	VP11	14
	23	VP12	14	VP12	14+	VP12	14-	VP12	14	VP12	14	VP12	12
	24	VP12	12	VP12	12+	VP12	12-	VP12	12	VP12	12	VP12	14
	25	VP13	14	VP13	14+	VP13	14-	VP13	14	VP13	14	VP13	12
	26	VP13	12	VP13	12+	VP13	12-	VP13	12	VP13	12	VP13	14
	27	VP14	14	VP14	14+	VP14	14-	VP14	14	VP14	14	VP14	12
	28	VP14	12	VP14	12+	VP14	12-	VP14	12	VP14	12	VP14	14
	29	VP15	14	VP15	14+	VP15	14-	VP15	14	VP15	14	VP15	12
	30	VP15	12	VP15	12+	VP15	12-	VP15	12	VP15	12	VP15	14
	31	VP16	14	VP16	14+	VP16	14-	VP16	14	VP16	14	VP16	12
	32	VP16	12	VP16	12+	VP16	12-	VP16	12	VP16	12	VP16	14
	33	VP17	14	VP17	14+	VP17	14-	VP17	14	VP17	14	VP17	12
	34	VP17	12	VP17	12+	VP17	12-	VP17	12	VP17	12	VP17	14
	35	VP18	14	VP18	14+	VP18	14-	VP18	14	VP18	14	VP18	12
	36	VP18	12	VP18	12+	VP18	12-	VP18	12	VP18	12	VP18	14
	37	VP19	14	VP19	14+	VP19	14-	VP19	14	VP19	14	VP19	12
	38	VP19	12	VP19	12+	VP19	12-	VP19	12	VP19	12	VP19	14
	39	VP20	14	VP20	14+	VP20	14-	VP20	14	VP20	14	VP20	12
 Note The drawing shows the view onto the Sub-D plug on the valve terminal.	40	VP20	12	VP20	12+	VP20	12-	VP20	12	VP20	12	VP20	14
	41	VP21	14	VP21	14+	VP21	14-	VP21	14	VP21	14	Com	
	42	VP21	12	VP21	12+	VP21	12-	VP21	12	VP21	12	Com	
	43	Com		VP22	14+	VP22	14-	VP22	14	VP22	14	Com	
	44	Com		VP22	12+	VP22	12-	VP22	12	VP22	12	Com	

VP Valve position

1) Sub-D A, first Sub-D plug

2) Sub-D B, second Sub-D plug

Valve terminals VTOC

Key features – Electrical components

FESTO




Electrical connection

The solenoid coils are wired in ascending order of the valves so that solenoid coil 14 occupies the low-value pin and solenoid coil 12 the next pin:

- Pin 1 of flat cable 1 valve position 1, coil 14.
- Pin 2 of flat cable 1 valve position 1, coil 12.

The valve positions are evenly divided between the two flat cable connectors. If there is an odd number of valve positions, plug connector 2 controls one more valve position than plug connector 1.

The following table shows the pin allocation variants.

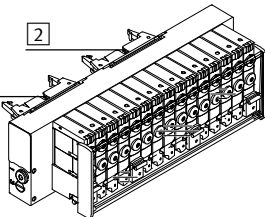Pin allocation – Flat cable, 26-pin							
	Valve positions		-V15		-V17		
	Total	No.	Pin		Pin		
			1 Plug connector 1	2 Plug connector 2	1 Plug connector 1	2 Plug connector 2	
1 2  26 25  26 25 	13	1 ... 6	1 ... 12	–	12 ... 1	–	
		7 ... 13	–	1 ... 14	–	14 ... 1	–
		Com	25 ... 26	25 ... 26	25 ... 26	25 ... 26	
	14	1 ... 7	1 ... 14	–	14 ... 1	–	–
		8 ... 14	–	1 ... 14	–	14 ... 1	–
		Com	25 ... 26	25 ... 26	25 ... 26	25 ... 26	
	15	1 ... 8	1 ... 14	–	14 ... 1	–	–
		8 ... 15	–	1 ... 16	–	16 ... 1	–
		Com	25 ... 26	25 ... 26	25 ... 26	25 ... 26	
	16	1 ... 8	1 ... 16	–	16 ... 1	–	–
		9 ... 16	–	1 ... 16	–	16 ... 1	–
		Com	25 ... 26	25 ... 26	25 ... 26	25 ... 26	
	17	1 ... 8	1 ... 16	–	16 ... 1	–	–
		9 ... 17	–	1 ... 18	–	18 ... 1	–
		Com	25 ... 26	25 ... 26	25 ... 26	25 ... 26	
	18	1 ... 9	1 ... 18	–	18 ... 1	–	–
		10 ... 18	–	1 ... 18	–	18 ... 1	–
		Com	25 ... 26	25 ... 26	25 ... 26	25 ... 26	
	19	1 ... 9	1 ... 18	–	18 ... 1	–	–
		10 ... 19	–	1 ... 20	–	20 ... 1	–
		Com	25 ... 26	25 ... 26	25 ... 26	25 ... 26	
	20	1 ... 10	1 ... 20	–	20 ... 1	–	–
		11 ... 20	–	1 ... 20	–	20 ... 1	–
		Com	25 ... 26	25 ... 26	25 ... 26	25 ... 26	
	21	1 ... 10	1 ... 20	–	20 ... 1	–	–
		11 ... 21	–	1 ... 22	–	22 ... 1	–
		Com	25 ... 26	25 ... 26	25 ... 26	25 ... 26	
	22	1 ... 11	1 ... 22	–	22 ... 1	–	–
		12 ... 22	–	1 ... 22	–	22 ... 1	–
		Com	25 ... 26	25 ... 26	25 ... 26	25 ... 26	
	23	1 ... 11	1 ... 22	–	22 ... 1	–	–
		12 ... 23	–	1 ... 24	–	24 ... 1	–
		Com	25 ... 26	25 ... 26	25 ... 26	25 ... 26	
	24	1 ... 12	1 ... 24	–	24 ... 1	–	–
		13 ... 24	–	1 ... 24	–	24 ... 1	–
		Com	25 ... 26	25 ... 26	25 ... 26	25 ... 26	

 Note

The drawing shows a plan view of the flat cable connector on the valve terminal.


-  - Note

The drawing shows a plan view of the flat cable connector on the valve terminal.

Valve terminals VTOC

Key features – Electrical components

FESTO

Pin allocation – Flat cable, 26-pin													
	Pin	-V8		-V14		-V15				-V17			
						Plug 1		Plug 2		Plug 1		Plug 2	
	1	VP12	14	VP1	14	VP1	14	VP13	14	VP12	14	VP24	14
	2	VP12	12	VP1	12	VP1	12	VP13	12	VP12	12	VP24	12
	3	VP11	14	VP2	14	VP2	14	VP14	14	VP11	14	VP23	14
	4	VP11	12	VP2	12	VP2	12	VP14	12	VP11	12	VP23	12
	5	VP10	14	VP3	14	VP3	14	VP15	14	VP10	14	VP22	14
	6	VP10	12	VP3	12	VP3	12	VP15	12	VP10	12	VP22	12
	7	VP9	14	VP4	14	VP4	14	VP16	14	VP9	14	VP21	14
	8	VP9	12	VP4	12	VP4	12	VP16	12	VP9	12	VP21	12
	9	VP8	14	VP5	14	VP5	14	VP17	14	VP8	14	VP20	14
	10	VP8	12	VP5	12	VP5	12	VP17	12	VP8	12	VP20	12
	11	VP7	14	VP6	14	VP6	14	VP18	14	VP7	14	VP19	14
	12	VP7	12	VP6	12	VP6	12	VP18	12	VP7	12	VP19	12
	13	VP6	14	VP7	14	VP7	14	VP19	14	VP6	14	VP18	14
	14	VP6	12	VP7	12	VP7	12	VP19	12	VP6	12	VP18	12
	15	VP5	14	VP8	14	VP8	14	VP20	14	VP5	14	VP17	14
	16	VP5	12	VP8	12	VP8	12	VP20	12	VP5	12	VP17	12
	17	VP4	14	VP9	14	VP9	14	VP21	14	VP4	14	VP16	14
	18	VP4	12	VP9	12	VP9	12	VP21	12	VP4	12	VP16	12
	19	VP3	14	VP10	14	VP10	14	VP22	14	VP3	14	VP15	14
	20	VP3	14	VP10	14	VP10	14	VP22	12	VP3	12	VP15	12
	21	VP2	14	VP11	14	VP11	14	VP23	14	VP2	14	VP14	14
 Note The drawing shows the view onto the flat cable plug on the valve terminal.	22	VP2	12	VP11	12	VP21	12	VP23	12	VP2	12	VP14	12
	23	VP1	14	VP12	14	VP12	14	VP24	14	VP1	14	VP13	14
	24	VP1	12	VP12	12	VP12	12	VP24	12	VP1	12	VP13	12
	25	Com		Com		Com		Com		Com		Com	
	26	Com		Com		Com		Com		Com		Com	

VP Valve position

Valve terminals VTOC

Key features – Electrical components

FESTO




Electrical connection

The solenoid coils are wired in ascending order of the valves so that solenoid coil 14 occupies the two higher-value pins and solenoid coil 12 the next two pins:

- Pin 40 and 39 of flat cable 1 valve position 1, coil 14.
- Pin 38 and 37 of flat cable 1 valve position 1, coil 12.

The valve positions are evenly divided between the two flat cable connectors. If there is an odd number of valve positions, plug connector 2 controls one more valve position than plug connector 1.

The following table shows the pin allocation variants.

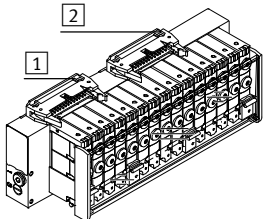Pin allocation – Flat cable, 40-pin										
Number of valve positions	Pin	-V18								
		1 Plug 1					2 Plug 2			
		16	17	18	19	20	16	17	18	19
  	1	VP8	VP8	VP9	VP9	VP10	VP16	VP17	VP18	VP19
	2	VP8	VP8	VP9	VP9	VP10	VP16	VP17	VP18	VP19
	3	VP8	VP8	VP9	VP9	VP10	VP16	VP17	VP18	VP19
	4	VP8	VP8	VP9	VP9	VP10	VP16	VP17	VP18	VP19
	5	VP7	VP7	VP8	VP8	VP9	VP15	VP16	VP17	VP18
	6	VP7	VP7	VP8	VP8	VP9	VP15	VP16	VP17	VP18
	7	VP7	VP7	VP8	VP8	VP9	VP15	VP16	VP17	VP18
	8	VP7	VP7	VP8	VP8	VP9	VP15	VP16	VP17	VP18
	9	VP6	VP6	VP7	VP7	VP8	VP14	VP15	VP16	VP17
	10	VP6	VP6	VP7	VP7	VP8	VP14	VP15	VP16	VP17
	11	VP6	VP6	VP7	VP7	VP8	VP14	VP15	VP16	VP17
	12	VP6	VP6	VP7	VP7	VP8	VP14	VP15	VP16	VP17
	13	VP5	VP5	VP6	VP6	VP7	VP13	VP14	VP15	VP16
	14	VP5	VP5	VP6	VP6	VP7	VP13	VP14	VP15	VP16
	15	VP5	VP5	VP6	VP6	VP7	VP13	VP14	VP15	VP16
	16	VP5	VP5	VP6	VP6	VP7	VP13	VP14	VP15	VP16
	17	VP4	VP4	VP5	VP5	VP6	VP12	VP13	VP14	VP15
	18	VP4	VP4	VP5	VP5	VP6	VP12	VP13	VP14	VP15
	19	VP4	VP4	VP5	VP5	VP6	VP12	VP13	VP14	VP15
	20	VP4	VP4	VP5	VP5	VP6	VP12	VP13	VP14	VP15
	21	VP3	VP3	VP4	VP4	VP5	VP11	VP12	VP13	VP14
	22	VP3	VP3	VP4	VP4	VP5	VP11	VP12	VP13	VP14
	23	VP3	VP3	VP4	VP4	VP5	VP11	VP12	VP13	VP14
	24	VP3	VP3	VP4	VP4	VP5	VP11	VP12	VP13	VP14
	25	VP2	VP2	VP3	VP3	VP4	VP10	VP11	VP12	VP13
	26	VP2	VP2	VP3	VP3	VP4	VP10	VP11	VP12	VP13
	27	VP2	VP2	VP3	VP3	VP4	VP10	VP11	VP12	VP13
	28	VP2	VP2	VP3	VP3	VP4	VP10	VP11	VP12	VP13
	29	VP1	VP1	VP2	VP2	VP3	VP9	VP10	VP11	VP12
	30	VP1	VP1	VP2	VP2	VP3	VP9	VP10	VP11	VP12
	31	VP1	VP1	VP2	VP2	VP3	VP9	VP10	VP11	VP12
	32	VP1	VP1	VP2	VP2	VP3	VP9	VP10	VP11	VP12
	33	–	–	VP1	VP1	VP2	–	VP9	VP10	VP11
	34	–	–	VP1	VP1	VP2	–	VP9	VP10	VP11
	35	–	–	VP1	VP1	VP2	–	VP9	VP10	VP11
	36	–	–	VP1	VP1	VP2	–	VP9	VP10	VP11
	37	–	–	–	–	VP1	–	–	–	VP10
	38	–	–	–	–	VP1	–	–	–	VP10
	39	–	–	–	–	VP1	–	–	–	VP10
	40	–	–	–	–	VP1	–	–	–	VP10


- Note
The drawing shows the view onto the flat cable plug on the valve terminal.

VP Valve position

Valve terminals VTOC


Key features – Electrical components

FESTO

Pin allocation – Flat cable, 40-pin							
	Pin	-V9		-V18			
				Plug 1		Plug 2	
	1	VP10	12+	VP10	12+	VP11	14+
	2	VP10	12-	VP10	12-	VP11	14-
	3	VP10	14+	VP10	14+	VP11	12+
	4	VP10	14-	VP10	14-	VP11	12-
	5	VP9	12+	VP9	12+	VP12	14+
	6	VP9	12-	VP9	12-	VP12	14-
	7	VP9	14+	VP9	14+	VP12	12+
	8	VP9	14-	VP9	14-	VP12	12-
	9	VP8	12+	VP8	12+	VP13	14+
	10	VP8	12-	VP8	12-	VP13	14-
	11	VP8	14+	VP8	14+	VP13	12+
	12	VP8	14-	VP8	14-	VP13	12-
	13	VP7	12+	VP7	12+	VP14	14+
	14	VP7	12-	VP7	12-	VP14	14-
	15	VP7	14+	VP7	14+	VP14	12+
	16	VP7	14-	VP7	14-	VP14	12-
	17	VP6	12+	VP6	12+	VP15	14+
	18	VP6	12-	VP6	12-	VP15	14-
	19	VP6	14+	VP6	14+	VP15	12+
	20	VP6	14-	VP6	14-	VP15	12-
	21	VP5	12+	VP5	12+	VP16	14+
	22	VP5	12-	VP5	12-	VP16	14-
	23	VP5	14+	VP5	14+	VP16	12+
	24	VP5	14-	VP5	14-	VP16	12-
	25	VP4	12+	VP4	12+	VP17	14+
	26	VP4	12-	VP4	12-	VP17	14-
	27	VP4	14+	VP4	14+	VP17	12+
	28	VP4	14-	VP4	14-	VP17	12-
	29	VP3	12+	VP3	12+	VP18	14+
	30	VP3	12-	VP3	12-	VP18	14-
	31	VP3	14+	VP3	14+	VP18	12+
	32	VP3	14-	VP3	14-	VP18	12-
	33	VP2	12+	VP2	12+	VP19	14+
	34	VP2	12-	VP2	12-	VP19	14-
	35	VP2	14+	VP2	14+	VP19	12+
	36	VP2	14-	VP2	14-	VP19	12-
 Note The drawing shows the view onto the flat cable plug on the valve terminal.	37	VP1	12+	VP1	12+	VP20	14+
	38	VP1	12-	VP1	12-	VP20	14-
	39	VP1	14+	VP1	14+	VP20	12+
	40	VP1	14-	VP1	14-	VP20	12-

VP Valve position

Example of pin allocation V18

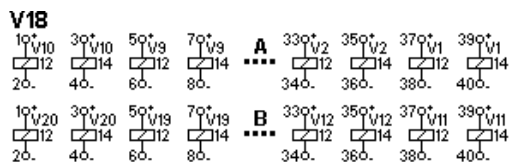

Valve terminals VTOC

Key features – Electrical components

FESTO

Electrical connection

The solenoid coils are wired in ascending order of the valves so that solenoid coil 14 occupies the two higher-value pins and solenoid coil 12 the two low-value pins:

Variant -V16:

- Pin 1 and 2 of flat cable 1 valve position 1, coil 12.
- Pin 3 and 4 of flat cable 1 valve position 1, coil 14.




Variant -V19:

- Pin 48 and 47 of flat cable 1 valve position 1, coil 14.
- Pin 46 and 45 of flat cable 1 valve position 1, coil 12.

The valve positions are evenly divided between the two flat cable connectors. If there is an odd number of valve positions, plug connector 2 controls one more valve position than plug connector 1.

The following table shows the pin allocation variants.


Pin allocation – Flat cable, 50-pin

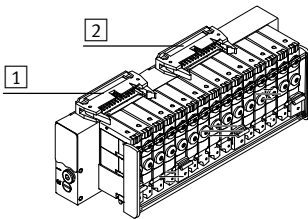Pin allocation – Flat cable, 50-pin		Valve positions		-V16		-V19	
		Total	No.	Pin		Pin	
				1 Plug connector 1	2 Plug connector 2	1 Plug connector 1	2 Plug connector 2
2  50 49  50 49 	18	1 ... 9	1 ... 36	–	48 ... 13	–	
		10 ... 18	–	1 ... 36	–	48 ... 13	
	19	1 ... 9	1 ... 36	–	48 ... 13	–	
		10 ... 19	–	1 ... 40	–	48 ... 9	
	20	1 ... 10	1 ... 40	–	48 ... 9	–	
		11 ... 20	–	1 ... 40	–	48 ... 9	
	21	1 ... 10	1 ... 40	–	48 ... 9	–	
		11 ... 21	–	1 ... 44	–	48 ... 5	
	22	1 ... 11	1 ... 44	–	48 ... 5	–	
		12 ... 22	–	1 ... 44	–	48 ... 5	
	23	1 ... 11	1 ... 44	–	48 ... 5	–	
		12 ... 23	–	1 ... 48	–	48 ... 1	
- Note The drawing shows a plan view of the flat cable connector on the valve terminal.	24	1 ... 12	1 ... 48	–	48 ... 1	–	
		13 ... 24	–	1 ... 48	–	48 ... 1	

Valve terminals VTOC

Key features – Electrical components

FESTO

Pin allocation – Flat cable, 50-pin					
	Pin	-V11		-V10	
	1	VP1	12	VP12	12
	2	VP1	12	VP12	12
	3	VP1	14	VP12	14
	4	VP1	14	VP12	14
	5	VP2	12	VP11	12
	6	VP2	12	VP11	12
	7	VP2	14	VP11	14
	8	VP2	14	VP11	14
	9	VP3	12	VP10	12
	10	VP3	12	VP10	12
	11	VP3	14	VP10	14
	12	VP3	14	VP10	14
	13	VP4	12	VP9	12
	14	VP4	12	VP9	12
	15	VP4	14	VP9	14
	16	VP4	14	VP9	14
	17	VP5	12	VP8	12
	18	VP5	12	VP8	12
	19	VP5	14	VP8	14
	20	VP5	14	VP8	14
	21	VP6	12	VP7	12
	22	VP6	12	VP7	12
	23	VP6	14	VP7	14
	24	VP6	14	VP7	14
	25	VP7	12	VP6	12
	26	VP7	12	VP6	12
	27	VP7	14	VP6	14
	28	VP7	14	VP6	14
	29	VP8	12	VP5	12
	30	VP8	12	VP5	12
	31	VP8	14	VP5	14
	32	VP8	14	VP5	14
	33	VP9	12	VP4	12
	34	VP9	12	VP4	12
	35	VP9	14	VP4	14
	36	VP9	14	VP4	14
	37	VP10	12	VP3	12
	38	VP10	12	VP3	12
	39	VP10	14	VP3	14
	40	VP10	14	VP3	14
	41	VP11	12	VP2	12
	42	VP11	12	VP2	12
	43	VP11	14	VP2	14
	44	VP11	14	VP2	14
	45	VP12	12	VP1	12
	46	VP12	12	VP1	12
	47	VP12	14	VP1	14
	48	VP12	14	VP1	14
	49				
	50				

 Note
 The drawing shows the view onto the flat cable plug on the valve terminal.

VP Valve position

Valve terminals VTOC

Key features – Electrical components

FESTO

I-Port interface with interlock/IO-Link

IO-Link

IO-Link is an interface that supplies data for communication in addition to the power supply.

An IO-Link system consists of an IO-Link master and IO-Link devices. The IO-Link master offers the interface to the higher-order controller (PLC) and controls communication with the connected IO-Link devices. One device with IO-Link (e.g. an IO-Link valve terminal from Festo) can be connected to each port on an IO-Link master.

I-Port

The Festo-specific I-Port interface based on IO-Link offers the following connection options:

- Directly at the fieldbus, by mounting a fieldbus node CTEU
- Connection to a higher-order I-Port master from Festo

Interlock


The interlock function enables the first 16 solenoid coils to be individually supplied externally. This guarantees safety-related release of these valves.

The interlock interface is established via external contacts for a single-pin connection or via safety output terminals for a double-pin connection.

For applications that do not require actuation of the solenoid coils via interlock, the Sub-D connection can be bypassed using a special Sub-D socket (NEFF...).

The solenoid coils are then supplied with load voltage via the I-Port interface.

Overview

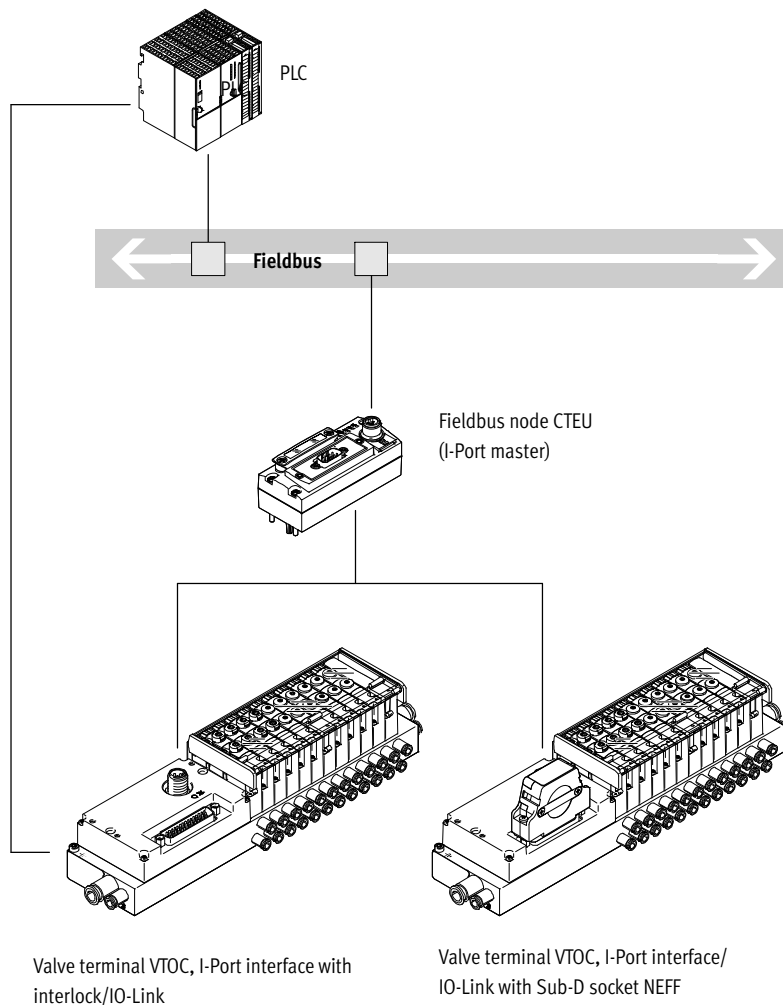

FESTO

Key features – Electrical components

Interlock interface


Single-pin interlock interface

- The interlock interface is established via external positive switching contacts or single-pin switching safety terminals
- 16 solenoid coils can be actuated via the interlock (Vn+)
- Solenoid coils that do not require interlock actuation can be supplied directly with 24 V from pins 1 ... 3
- Application of the respective input voltage is reported via the fieldbus as an image table


Double-pin interlock interface

- The interlock interface is established via external positive-negative switching safety terminals
- The solenoid coils of the interlock valves are actuated via the corresponding pins in the sub-D plug (pins 7 ... 38)
- Solenoid coils that do not require interlock actuation can be supplied directly with 24 V (e.g. from pins 1 ... 3)
- Any difference in potential between Vn- and 0 WAL/OUT must be below 5 V

Sample circuit diagram for a single-pin interlock interface

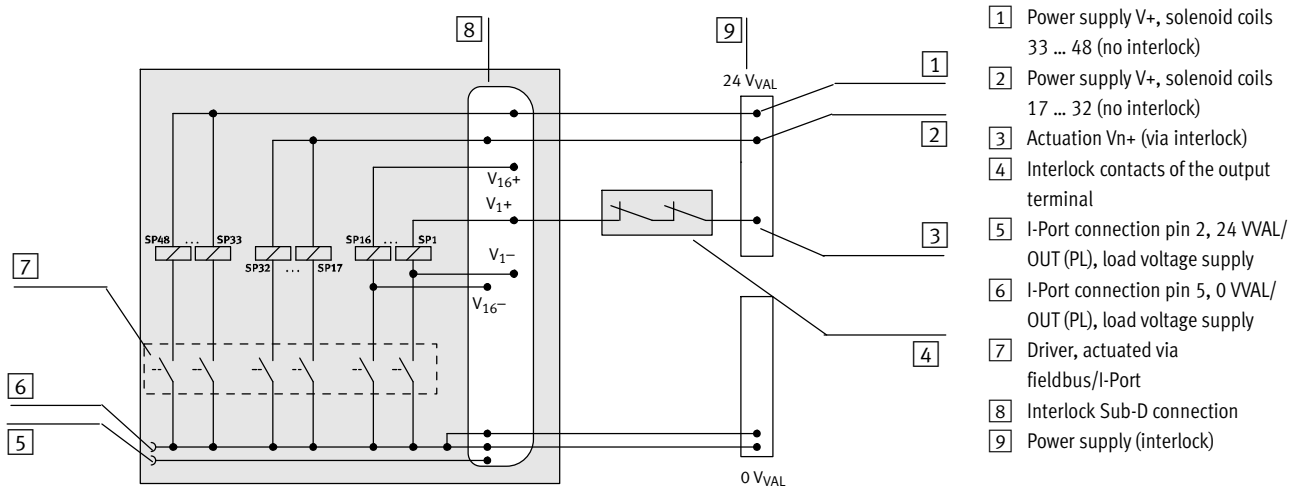


Sample circuit diagram for a double-pin interlock interface

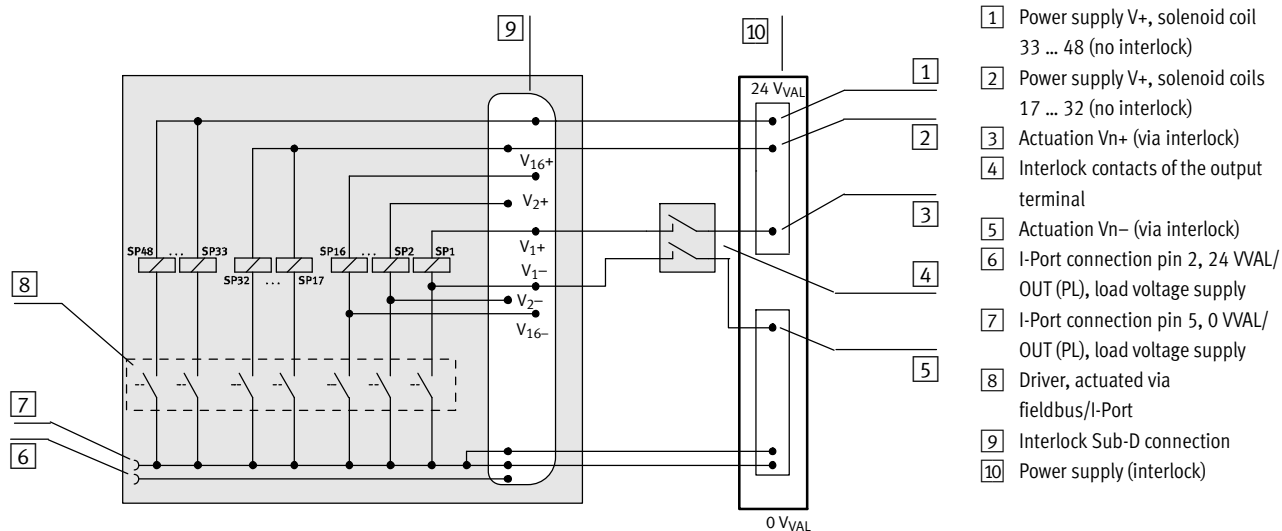


Valve terminals VTOC

Key features – Electrical components

FESTO

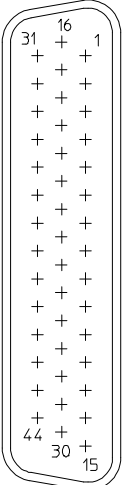Pin allocation – Interlock									
	Pin	Coil	Signal	Pin	Coil	Signal	Pin	Coil	Signal
	1	–	24 V _{VAL/OUT}	16	5	V5-	31	13	V13+
	2	–	24 V _{VAL/OUT}	17	6	V6+	32	13	V13-
	3	–	24 V _{VAL/OUT}	18	6	V6-	33	14	V14+
	4	1 ... 48	0 V _{VAL/OUT}	19	7	V7+	34	14	V14-
	5	1 ... 48	0 V _{VAL/OUT}	20	7	V7-	35	15	V15+
	6	1 ... 48	0 V _{VAL/OUT}	21	8	V8+	36	15	V15-
	7	1	V1+	22	8	V8-	37	16	V16+
	8	1	V1-	23	9	V9+	38	16	V16-
	9	2	V2+	24	9	V9-	39	17 ... 32	V17...32+
	10	2	V2-	25	10	V10+	40	33 ... 48	V33...48+
	11	3	V3+	26	10	V10-	41	1 ... 48	0 V _{VAL/OUT}
	12	3	V3-	27	11	V11+	42	1 ... 48	0 V _{VAL/OUT}
	13	4	V4+	28	11	V11-	43	1 ... 48	0 V _{VAL/OUT}
	14	4	V4-	29	12	V12+	44	–	n.c.
	15	5	V5+	30	12	V12-	Housing		FE

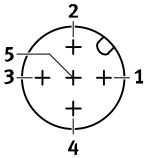
Pin allocation – I-Port interface/IO-Link			
	Pin	Allocation	Function
	1	24V _{EL/SEN} (PS)	Operating voltage supply (electronics, sensors/inputs)
	2	24V _{VAL/OUT} (PL)	Load voltage supply (valves/outputs)
	3	0V _{EL/SEN} (PS)	Operating voltage supply (electronics, sensors/inputs)
	4	C/Q	Data communication
	5	0V _{VAL/OUT} (PL)	Load voltage supply (valves/outputs)
	Housing, FE		Functional earth

Valve terminals VTOC

Technical data – Valve terminal VTOC with multi-pin plug connection

FESTO

-  Voltage
24 V DC
-  Pressure
0 ... +8 bar
-  Temperature range
-5 ... +50 °C

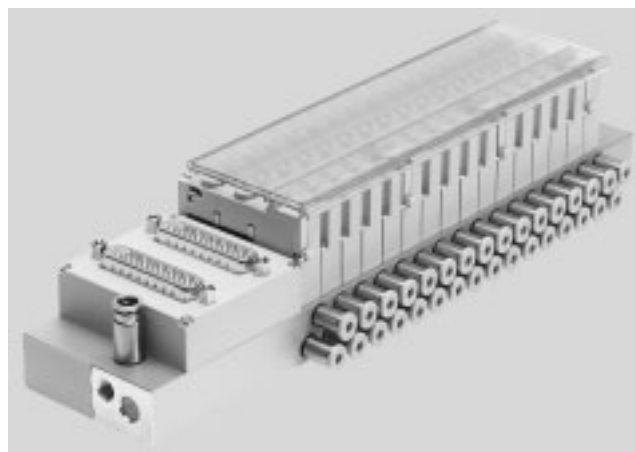

General technical data			
Valve function			2x3/2-way valve, closed, single solenoid
Design			Poppet valve with spring return
Sealing principle			Soft
Actuation type			Electric
Reset method			Mechanical spring
Type of control			Direct
Direction of flow			Non-reversible
Exhaust function			No flow control
Manual override			Non-detenting, detenting and non-detenting, detenting (without accessories)
Type of mounting			Via through-hole or thread
Width	[mm]		10
Nominal size	[mm]		0.65
Max. number of valve positions			24
Standard nominal flow rate	q _{nN}	[l/min]	10

Operating and environmental conditions			
Operating medium			Compressed air according to ISO 8573-1:2010 [7:4:4]
Note on operating/pilot medium			Lubricated operation possible (in which case lubricated operation will always be required)
Operating pressure	[bar]		0 ... +8
Ambient temperature	[°C]		-5 ... +50
Temperature of medium	[°C]		-5 ... +50
Note on materials			RoHS-compliant
CE marking (see declaration of conformity)			To EU EMC Directive
Certification			cULus recognized (OL)

Valve terminals VTOC



Technical data – Valve terminal VTOC with multi-pin plug connection

Product weight	
Approx. weight	[g]
Valve	30
Blanking plate for vacant position	20

Electrical data	
Electrical actuation	Multi-pin plug (Sub-D/flat cable)
Nominal operating voltage [V DC]	24
Permissible voltage fluctuations [%]	±10
Protection class to EN 60529	IP40
Duty cycle [%]	100
Signal status display	LED

Valve switching times	
	[ms]
On	4.7
Off	5.2


Safety characteristics	
Proven component	Yes
Max. positive test pulse with 0 signal [µs]	600
Max. negative test pulse with 1 signal [µs]	800
Resistance to shocks	Shock test at severity level 2, to FN 942017-5 and EN 60068-2-27
Vibration resistance	Transport application test at severity level 2, to FN942017-4 and EN 60068-2-6

Valve terminals VTOC

Technical data – Valve terminal VTOC with I-Port interface, interlock/IO-Link

FESTO

-  - Voltage
24 V DC
-  - Pressure
0 ... +8 bar
-  - Temperature range
-5 ... +50 °C

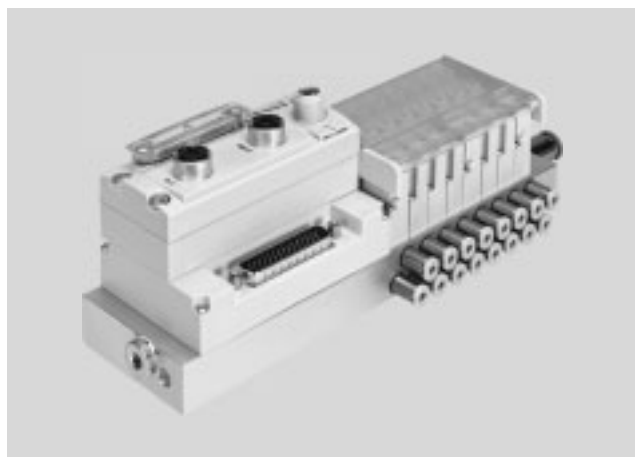

General technical data			
Valve		2x3/2 normally closed, reset via mechanical spring	
Design		Poppet valve with spring return	
Reset method		Mechanical spring	
Type of control		Direct	
Direction of flow		Non-reversible	
Exhaust function		No flow control	
Manual override		Non-detenting, detenting and non-detenting, detenting (without accessories)	
Communication types		I-Port/IO-Link	
Number of valve positions		2 ... 24	
Max. number of solenoid coils		48	
Number of interlock solenoid coils		16	
Number of inputs for reading back voltage		18 (16x interlock + 2 group supply)	
Mounting position		Any	
Nominal flow rate		[l/min]	10
Residual ripple		[V _{SS}]	4
Baud rate	COM3	[kbps]	230.4
	COM2	[kbps]	38.4
IO-Link	Protocol	V1.0	
	Connection technology	M12, A-coded	
	Port type	Type B	
	Number of ports	1	
	Process data width OUT	6 bytes	
	Process data IN	4 bytes	
	Minimum cycle time	11.5 ms (2.3 ms per frame = 2 bytes of user data)	
Product weight	Valve	[g]	30
	Blanking plate for vacant position	[g]	20

Operating and environmental conditions			
Operating medium		Compressed air according to ISO 8573-1:2010 [7:4:4]	
Note on operating/pilot medium		Lubricated operation possible (in which case lubricated operation will always be required)	
Operating pressure		[bar]	0 ... +8
Ambient temperature		[°C]	-5 ... +50
Note on materials		RoHS-compliant	
CE marking (see declaration of conformity)		To EU EMC Directive	
Certification		cULus recognized (OL)	

Valve switching times			
On		[ms]	4.7
Off		[ms]	5.2

Valve terminals VTOC



Technical data – Valve terminal VTOC with I-Port interface, interlock/IO-Link

Electrical data			
Power supply	Interlock load voltage (valves)	[V DC]	24 (±10%)
	Load voltage (valves)	[V DC]	24 (±10%)
	Operating voltage (electronics)	[V DC]	24 (±25%)
Power consumption (load) per solenoid coil at nominal operating voltage		[W]	1/0.4 (after 30 ms)
Intrinsic current consumption via I-Port (valves/electronics)		[mA]	40/30
Protection class to EN 60529			IP40

Safety characteristics		
Proven component		Yes
Max. positive test pulse with 0 signal		[µs] 600
Max. negative test pulse with 1 signal		[µs] 800
Resistance to shocks		Shock test at severity level 2, to FN 942017-5 and EN 60068-2-27
Vibration resistance		Transport application test at severity level 2, to FN942017-4 and EN 60068-2-6


Valve terminals VTOC

Technical data – Valve terminal VTOC

FESTO

Dimensions – Sub-D, single or double

Download CAD data → www.festo.com

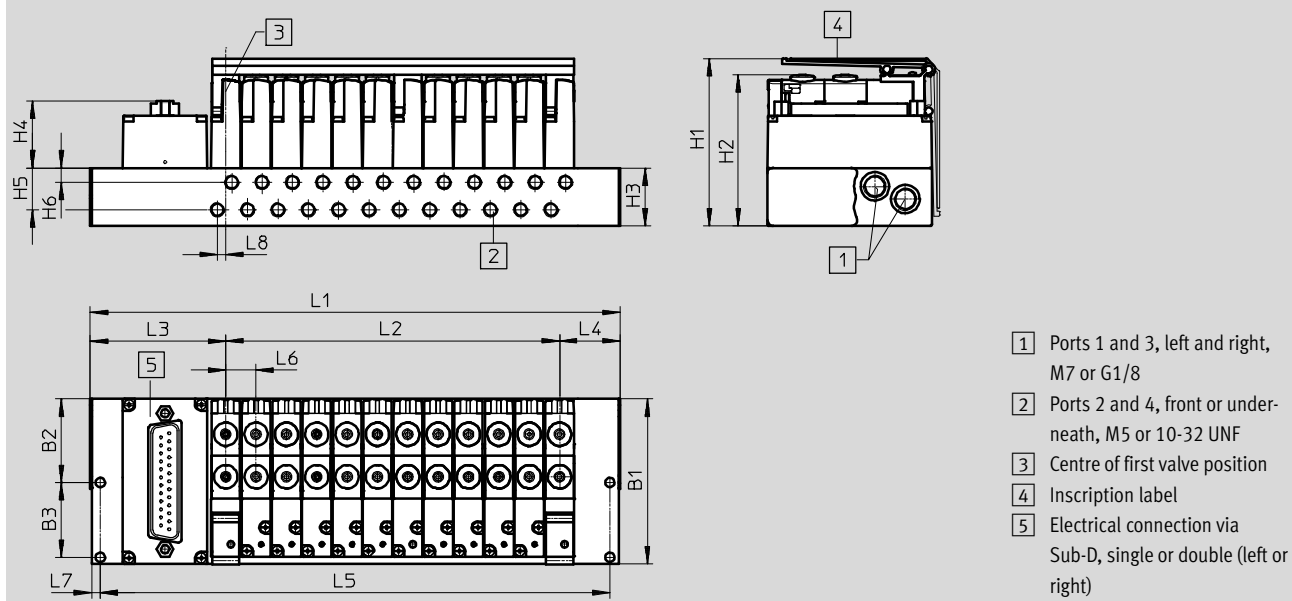

	Comment	Electrical connection on top, single			Electrical connection on top, double		
Pneumatic connection	–	M7	G1/8	G1/8	M7	G1/8	G1/8
Through-hole	–	Ø 3.3	Ø 3.3	M4	Ø 3.3	Ø 3.3	M4
L1	–	L2+L3+L4	L2+L3+L4	L2+L3+L4	L2+L3+L4	L2+L3+L4	L2+L3+L4
L2	–	(n-1)x10.5	(n-1)x10.5	(n-1)x10.5	(n-1)x10.5	(n-1)x10.5	(n-1)x10.5
L3	Distance from centre of first valve position to outer edge on left-hand side	41.4	46.4	36.9	66.4	71.4	66.4
	Sub-D connection, 44-pin, top right, 1-way: Distance from centre of first valve position to outer edge on left-hand side	14.4	20.4	20.4	–	–	–
L4	Distance from centre of last valve position to outer edge on right-hand side	14.4	20.4	20.4	–	–	–
	Sub-D connection, 44-pin, top right, 1-way: Distance from centre of last valve position to outer edge on right-hand side	41.4	46.4	36.9	–	–	–
L5	–	(L1-6)	(L1-6)	(L1-6)	(L1-6)	(L1-6)	(L1-6)

B1	B2 ±0.1	B3 ±0.1	H1	H2	H3	H4	H5	H6	L6	L7 ±0.1	L8
57	28.9	25.9	57.9	52.3	20	23.1	14.5	5	10.5	3	2.9


Valve terminals VTOC

Technical data – Valve terminal VTOC

FESTO

Dimensions – Flat cable on top

Download CAD data → www.festo.com

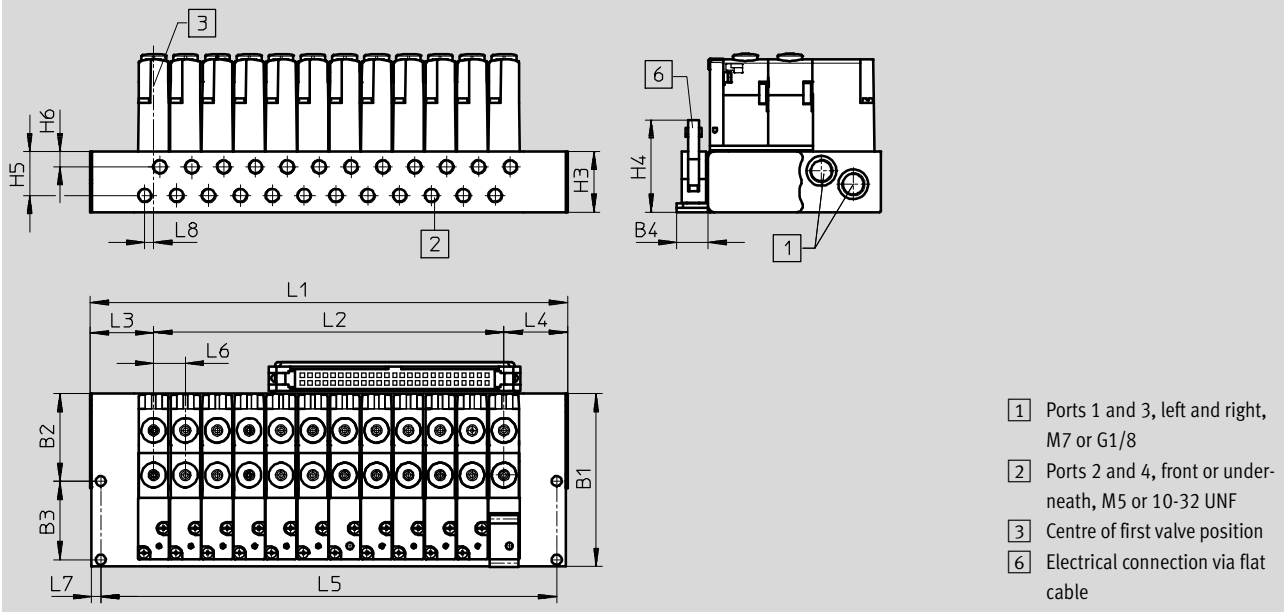

	Comment	Electrical connection via flat cable on top		
Pneumatic connection	–	M7	G1/8	G1/8
Through-hole	–	Ø 3.3	Ø 3.3	M4
L1	–	L2+L3+L4	L2+L3+L4	L2+L3+L4
L2	–	(n-1)x10.5	(n-1)x10.5	(n-1)x10.5
L3	Distance from centre of first valve position to outer edge on left-hand side	14.4	46.4	36.9
L4	Distance from centre of last valve position to outer edge on right-hand side	14.4	20.4	20.4
L5	–	(L1-6)	(L1-6)	(L1-6)

B1	B2 ±0.1	B3 ±0.1	B4	H3	H4	H5	H6	L6	L7 ±0.1	L8
57	28.9	25.9	10.4	20	30.5	14.5	5	10.5	3	2.9


Valve terminals VTOC

Technical data – Valve terminal VTOC

FESTO

Dimensions – Flat cable underneath

Download CAD data → www.festo.com

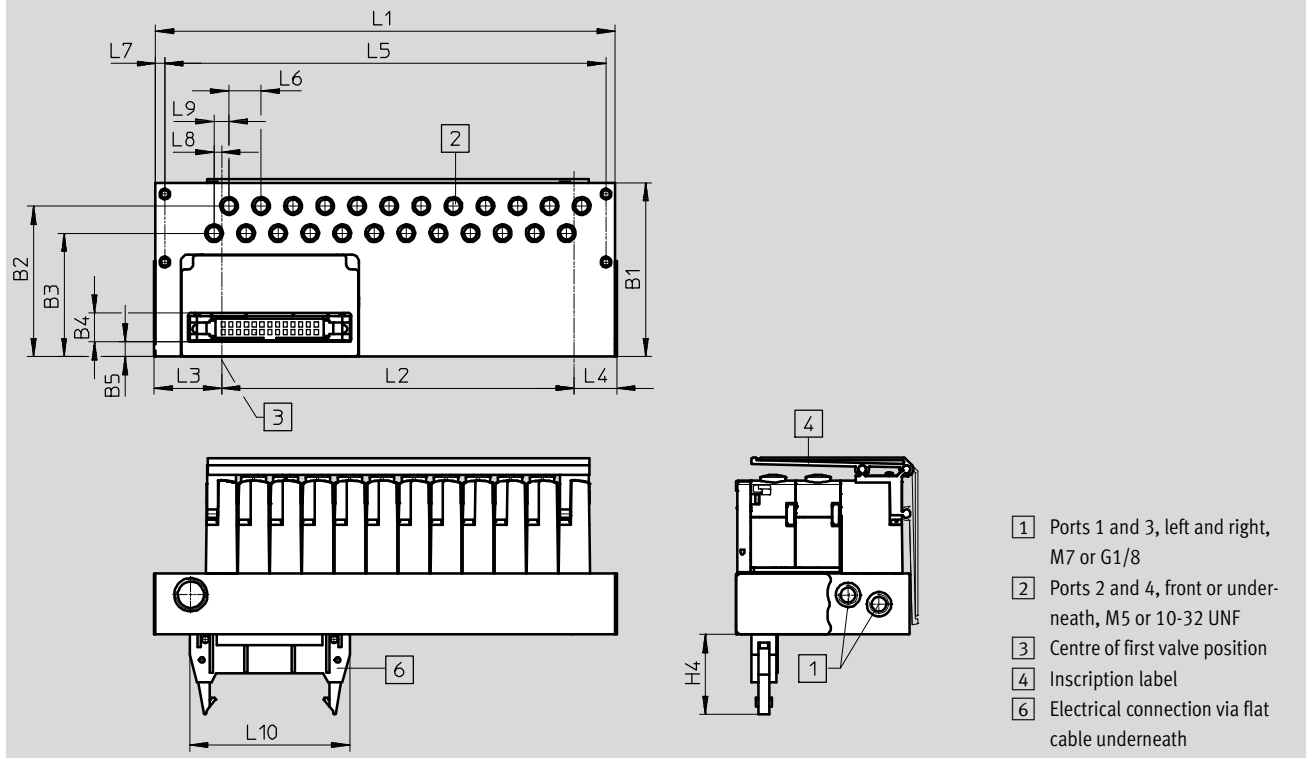

	Comment	Electrical connection via flat cable underneath				
Pneumatic connection	–	M7 left	M7 front	G1/8 front	G1/8 left	G1/8 left
Through-hole	–	Ø 3.3	Ø 3.3	Ø 3.3	Ø 3.3	M4
L1	–	L2+L3+L4	L2+L3+L4	L2+L3+L4		
L2	–	(n-1)x10.5	(n-1)x10.5	(n-1)x10.5		
L3	Distance from centre of first valve position to outer edge on left-hand side	14.4	25.55	21.6	20.4	20.4
L4	Distance from centre of last valve position to outer edge on right-hand side	14.4	28.55	20.4	20.4	20.4
L5	–	(L1-6)	(L1-6)	(L1-6)	(L1-6)	(L1-6)

B1	B2	B3	B4	H3	H4	H5	H6	L6	L7	L8	L9	L10
	±0.1	±0.1							±0.1			
57	28.9	25.9	10.4	20	30.5	14.5	5	10.5	3	2.5	4.9	52.5


Valve terminals VTOC

Technical data – Valve terminal VTOC

FESTO

Dimensions – I-Port interface with interlock

Download CAD data → www.festo.com

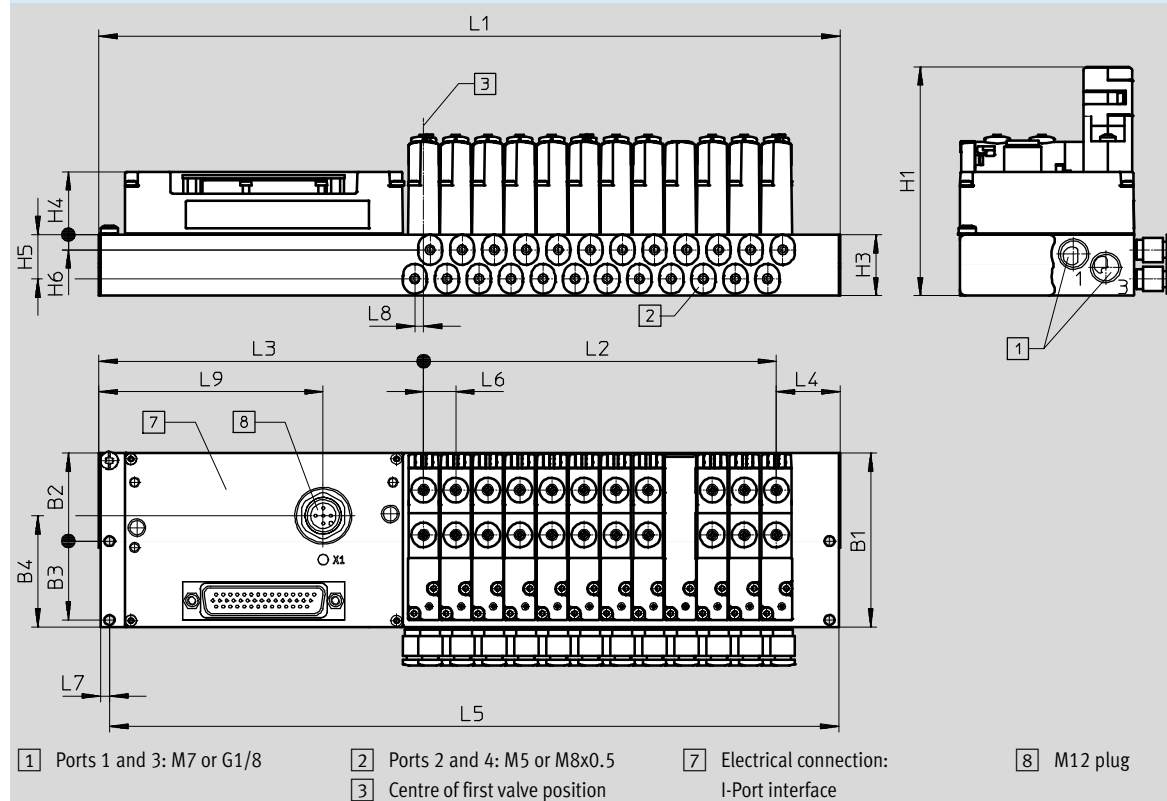

	Comment	Electrical connection via flat cable underneath		
Pneumatic connection	–	M7	G1/8	G1/8
Through-hole	–	Ø 3.3	Ø 3.3	M4
L1	–	L2+L3+L4	L2+L3+L4	L2+L3+L4
L2	–	(n-1)x10.5	(n-1)x10.5	(n-1)x10.5
L3	Distance from centre of first valve position to outer edge on left-hand side	105.9	105.9	105.9
L4	Distance from centre of last valve position to outer edge on right-hand side	14.4	20.4	20.4
L5	–	(L1-2)xL7	(L1-2)xL7	(L1-2)xL7

B1	B2	B3	B4	H1	H3	H4	H5	H6	L6	L7	L8	L9
	±0.1	±0.1					±0.1	±0.1	±0.05	±0.1		
57	28.9	25.9	36.4	74.7	20	20.6	14.5	5	10.5	3	2.9	73




Note

Deviating dimensions following assembly of the fieldbus node CTEU. Specified dimensions for the fieldbus node CTEU → installation system CTEU/CTEL

Valve terminals VTOC

Technical data – Valve terminal VTOC

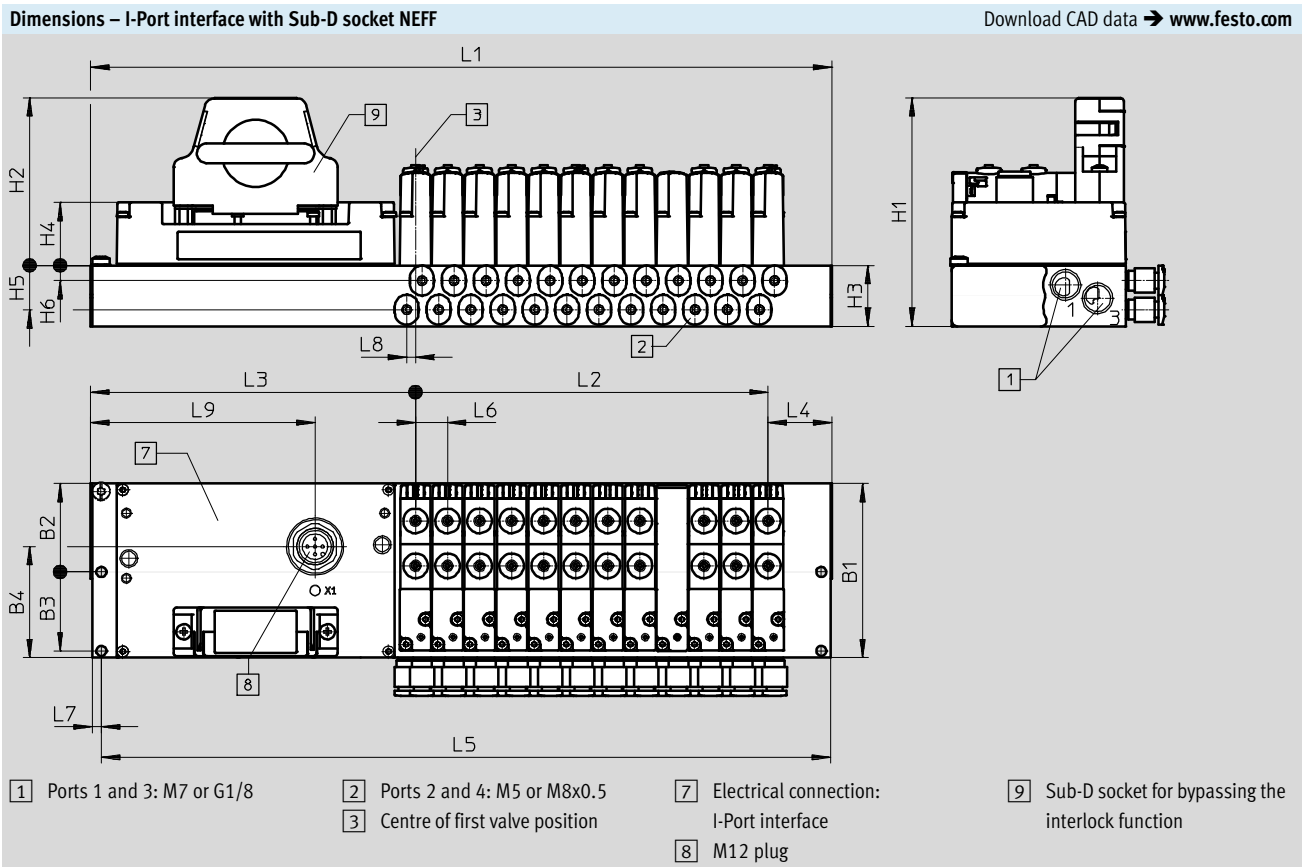

B1	B2 ±0.1	B3 ±0.1	B4	H1	H2	H3	H4	H5 ±0.1	H6 ±0.1	L1	L2	L3	L4	L5 ±0.2	L6 ±0.5	L7 ±0.1	L8	L9
57	28.9	25.9	36.4	74.7	54.7	20	20.6	14.5	5	L2+L3+L4	(n-1)x10.5	105.9	14.4	(L1-6)	10.5	3	2.9	73

 Note

Deviating dimensions following assembly of the fieldbus node CTEU. Specified dimensions for the fieldbus node CTEU → installation system CTEU/CTEL

Valve terminals VTOC


Technical data – Valve terminal VTOC

FESTO

Dimensions – Pneumatic connections


Download CAD data → www.festo.com

Ports 2 and 4 underneath, M5 (10-32 UNF)

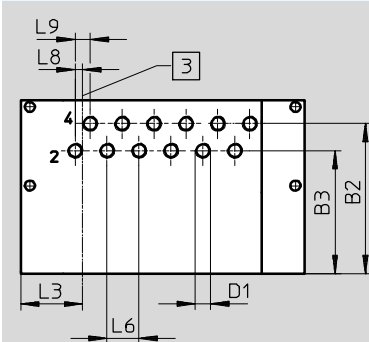


3 Centre of first valve position

Ports 2 and 4 underneath, compact

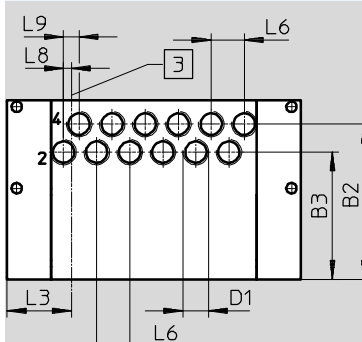


3 Centre of first valve position

Ports 2 and 4 at front, M5 (10-32 UNF)

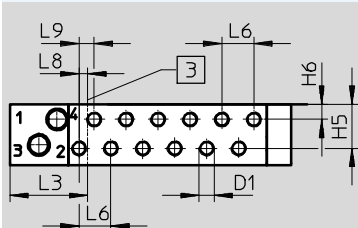

3 Centre of first valve position


Ports 2 and 4 at front, compact

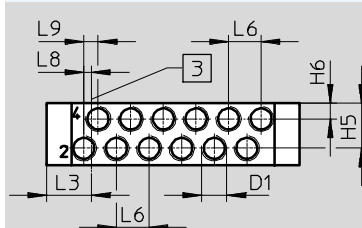


3 Centre of first valve position

Port	B2	B3 ±0.1	D1	H5	H6	L6	L8	L9
Underneath, M5 (10-32 UNF)	49.3	40.4	M5	–	–	10.5	2.5	4.9
Underneath, compact	49.3	40.4	M8x0.5	–	–	10.5	2.5	4.9
Front, M5 (10-32 UNF)	–	–	M5	14.5	5	10.5	2.9	5
Front, compact	–	–	M8x0.5	14.5	5	10.5	2.5	4.6


Ports 1 and 3, M7 left

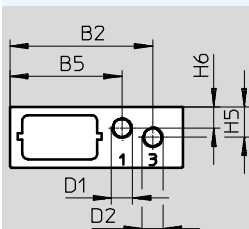

Ports 1 and 3, G1/8 left

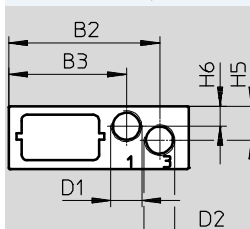

Ports 1 and 3, G1/8 left with mounting hole M4

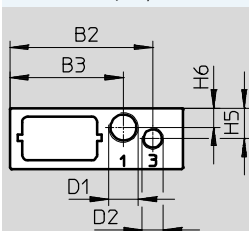

Ports 1 and 3	B2	B3	D1	D2	H5	H6
M7 left	47	36.8	M7	M7	10	7
G1/8 left, with mounting hole M4	47	37.3	G1/8	M7	10	6.4

Valve terminals VTOC


Technical data – Valve terminal VTOC

FESTO


Dimensions – Mounting hole

Download CAD data → www.festo.com


Ø 3.3 underneath, ports 1 and 3, M7

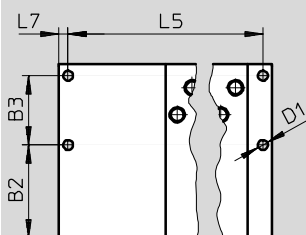


Ø 3.3 underneath, ports 1 and 3, G1/8

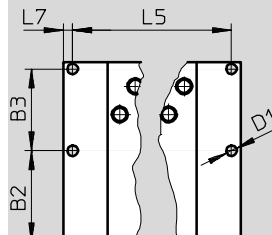


M3 underneath, ports 1 and 3, M7

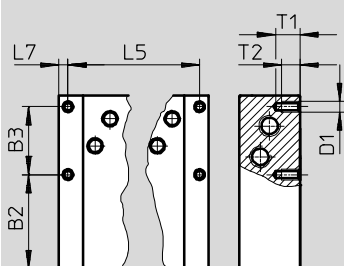


M3 underneath, ports 1 and 3, G1/8

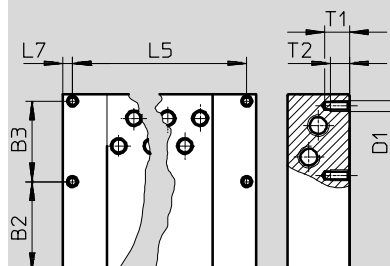


M4 underneath, ports 1 and 3, M7

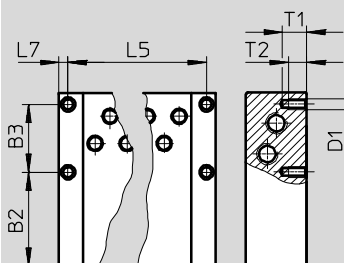


M4 or 8-32UNC underneath, ports 1 and 3, G1/8

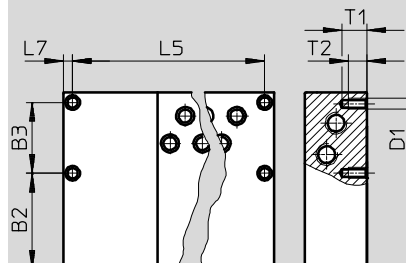


8-32UNC underneath, ports 1 and 3, M7

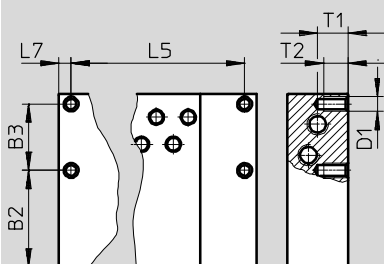

8-32UNC underneath, ports 1 and 3, G1/8

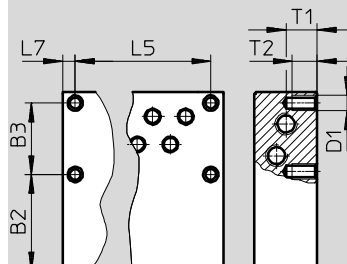

10-32UNF-2B underneath, ports 1 and 3, M7 or G1/8

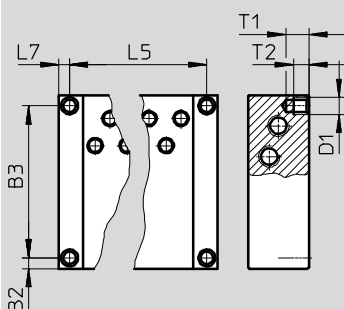

Valve terminals VTOC

Technical data – Valve terminal VTOC








	B2	B3	D1	L5	L7	T1	T2
3.3 underneath, ports 1 and 3 M7	30.5	22.8	3.3	L1-2xL7	3	–	–
3.3 underneath, ports 1 and 3 G1/8	28.9	25.9	3.3		3	–	–
M3 underneath, ports 1 and 3 M7	31	22.3	M3		3	8	6
M3 underneath, ports 1 and 3 G1/8	28.9	25.9	M3		3	8	6
M4 underneath, ports 1 and 3 M7	31	22.3	M4		3	7.5	6
M4 or 8-32UNC underneath, ports 1 and 3 G1/8	30.8	22.8	M4/8-32UNC		3	7.5	6
8-32UNC underneath, ports 1 and 3 M7	31.8	21.8	8-32UNC		4	10	8
8-32UNC underneath, ports 1 and 3 G1/8	30.8	22.8	8-32UNC		4	10	8
10-32UNF-28 underneath, ports 1 and 3, M7 or G1/8	3.5	50	10-32UNF-28		3.5	7.5	5

Valve terminals VTOC

Accessories


FESTO


Ordering data					
	Code	Valve function	Part No.	Type	
Solenoid valves					
	K	2x3/2-way valve, single solenoid, normally closed, detenting, non-detenting/detenting manual override	565450	VOVC-BT-T32C-MT-F-1T1	
	K	2x3/2-way valve, single solenoid, normally closed, non-detenting manual override	565449	VOVC-BT-T32C-MH-F-1T1	
Blanking plate					
	L	Blanking plate for vacant position	565451	VABB-L2-P3	
Cover for manual override					
	–	Detenting, without accessories	8002234	VAMC-L1-CD	
Blanking plug					
	–	For sealing the air supply or exhaust port	3568	B-1/8	
	–		174309	B-M7	
Connecting cable for multi-pin plug					
	–	• Socket Sub-D, 25-pin, IP40 • Open cable end, 15-wire	2.5	530049	KMP6-25P-12-2,5
			5	530050	KMP6-25P-12-5
			10	530051	KMP6-25P-12-10
	–	• Socket, Sub-D 25-pin, IP40 • Open cable end 25-wire	2.5	530046	KMP6-25P-20-2,5
			5	530047	KMP6-25P-20-5
			10	530048	KMP6-25P-20-10
	–	• Socket Sub-D, straight, 44-pin, up to 35 coils, IP40 • Open cable end, 44-wire	2.5	575113	NEBV-S1G44-K-2.5-N-LE44-S6
			5	575114	NEBV-S1G44-K-5-N-LE44-S6
			10	575115	NEBV-S1G44-K-10-N-LE44-S6

Valve terminals VTOC

Accessories

FESTO









Ordering data					
	Code	Valve function		Part No.	Type
Inscription label holder					
	-	Inscription label holder for identifying the valves	3 valve positions	565571	ASCF-H-L2-3V
			4 valve positions	565572	ASCF-H-L2-4V
			5 valve positions	565573	ASCF-H-L2-5V
			6 valve positions	565574	ASCF-H-L2-6V
			7 valve positions	565575	ASCF-H-L2-7V
			8 valve positions	565576	ASCF-H-L2-8V
			9 valve positions	565577	ASCF-H-L2-9V
			10 valve positions	565578	ASCF-H-L2-10V
			11 valve positions	565579	ASCF-H-L2-11V
			12 valve positions	565580	ASCF-H-L2-12V
			13 valve positions	565581	ASCF-H-L2-13V
			14 valve positions	565582	ASCF-H-L2-14V
			15 valve positions	565583	ASCF-H-L2-15V
			16 valve positions	565584	ASCF-H-L2-16V
			17 valve positions	565585	ASCF-H-L2-17V
			18 valve positions	565586	ASCF-H-L2-18V
			19 valve positions	565587	ASCF-H-L2-19V
			20 valve positions	565588	ASCF-H-L2-20V
			21 valve positions	565589	ASCF-H-L2-21V
			22 valve positions	565590	ASCF-H-L2-22V
			23 valve positions	565591	ASCF-H-L2-23V
			24 valve positions	565592	ASCF-H-L2-24V

Ordering data					
	Code	Description	Tubing O.D.	Packaging unit quantity	Part No. Type
Push-in fittings			Technical data ➔ Internet: quick star		
	–	QS push-in fitting	1/4"	1	183741 QS-1/8-1/4-I-U-M
			3/8"	10	567773 QB-1/8-3/8-U
			8 mm	10	153015 QS-1/8-8-I
			6 mm	10	153321 QSM-M7-6-I
			1/4"	1	183740 QSM-M7-1/4-I-U-M
			1/8"	10	183749 QSM-M5-1/8-I-U-M
			5/32"	1	130593 QSM-M5-5/32-I-U-M
			3 mm	10	153313 QSM-M5-3-I
			4 mm	10	153315 QSM-M5-4-I
	–	Push-in L-fitting	8 mm	20	130928 QSL-B-1/8-8-20
			3/16"	1	533234 QBL-1/8-3/16-U-M
			1/4"	1	533235 QBL-1/8-1/4-U-M
			3/8"	1	562578 QBL-1/8-3/8-U-M
			3 mm	10	130830 QSMLV-M5-3-I
			4 mm	10	130831 QSMLV-M5-4-I
	–	Push-in L-fitting, long	3 mm	10	130834 QSMLV-M5-3-I
			4 mm	10	130835 QSMLV-M5-4-I
	–	T-fitting	1/4"	1	533254 QBT-1/8-1/4-U-M
			3/8"	1	562579 QBT-1/8-3/8-U-M
			8 mm	1	153109 QST-1/8-8
Silencer					
	U	Silencer	–	1	161418 UC-M7
				50	534218 UC-M7-50

Valve terminals VTOC

Accessories





FESTO

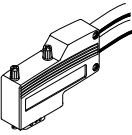Ordering data – CTEU			Part No.	Type
Bus node				
	–	CANopen fieldbus node	570038	CTEU-CO
	–	DeviceNet fieldbus node	570039	CTEU-DN
	–	CC-Link fieldbus node	1544198	CTEU-CC
	–	PROFIBUS fieldbus node	570040	CTEU-PB
	–	EtherCAT fieldbus node	572556	CTEU-EC
Bus connection				
	–	Sub-D plug, straight, for DeviceNet/CANopen	532219	FBS-SUB-9-BU-2x5POL-B
	–	Sub-D plug, straight, for CC-Link	532220	FBS-SUB-9-GS-2x4POL-B
	–	Sub-D plug, straight, for PROFIBUS	532216	FFBS-SUB-9-GS-DP-B
	–	Sub-D plug, angled, for CANopen, 9-pin	533783	FBS-SUB-9-WS-CO-K
	–	Sub-D plug, angled, for PROFIBUS, 9-pin	533780	FBS-SUB-9-WS-PB-K
	–	M12x1, 5-pin, A-coded, for DeviceNet/CANopen	525632	FBA-2-M12-5POL
	–	M12x1, 5-pin, B-coded, for PROFIBUS	533118	FBA-2-M12-5POL-RK
	–	For 5-pin terminal strip for DeviceNet/CANopen	525634	FBA-1-SL-5POL
	–	Terminal strip, 5-pin, for DeviceNet/CANopen	525635	FBSD-KL-2x5POL
	–	Screw terminal for CC-Link	197962	FBA-1-KL-5POL
	–	Fieldbus socket, M12x1, 5-pin, for DeviceNet/CANopen	18324	FBSD-GD-9-5POL
	–	Plug, M12x1, 5-pin, for DeviceNet/CANopen		FBS-M12-5GS-PG9
	–	Straight socket, M12x1, 5-pin, for assembling a connecting cable compatible with FBA-2-M12-5POL-RK for PROFIBUS	1067905	NECU-M-B12G5-C2-PB
	–	Straight plug, M12x1, 5-pin, for assembling a connecting cable compatible with FBA-2-M12-5POL-RK for PROFIBUS	1066354	NECU-M-S-B12G5-C2-PB
	–	Terminating resistor, M12, B-coded for PROFIBUS	1072128	CACR-S-B12G5-220-PB
	–	Plug M12x1, 4-pin, D-coded for EtherCAT	543109	NECU-M-S-D12G4-C2-ET

Valve terminals VTOC

Accessories

FESTO

Ordering data – CTEU				Part No.	Type
Electrical connecting plate					
	–	For connecting a second device with I-Port interface		570042	CAPC-F1-E-M12
H-rail mounting					
	–	For electrical connecting plate CAPC		570043	CAFM-F1-H
Connecting cable					
			Technical data → Internet: nebu		
	–	- Straight socket, M12x1, 5-pin - Straight plug, M12x1, 5-pin - Nominal conductor cross section 1 mm²	5 m	574321	NEBU-M12G5-E-5-Q8N-M12G5
			7.5 m	574322	NEBU-M12G5-E-7.5-Q8N-M12G5
			10 m	574323	NEBU-M12G5-E-10-Q8N-M12G5
	–	- Angled socket, M12x1, 5-pin - Angled plug, M12x1, 5-pin	0.5 m	570733	NEBU-M12W5-K-0.5-M12W5
			2 m	570734	NEBU-M12W5-K-2-M12W5
	–	- Straight socket, M12x1, 5-pin - Angled plug, M12x1, 5-pin	0.5 m	8003617	NEBU-M12G5-K-0.5-M12W5
			2 m	8003618	NEBU-M12G5-K-2-M12W5
Plug socket					
	–	For power supply, M12x1, 5-pin, B-coded for CANopen/DeviceNet		538999	NTSD-GD-9-M12-5POL-RK
	–	For power supply, M12x1, 5-pin for CC-Link, PROFIBUS, EtherCAT		18324	FBSD-GD-9-5POL
Connection technology for IO-Link					
	XM	T-adapter M12, 5-pin for IO-Link and load supply		171175	FB-TA-M12-5POL
Straight plug, for I-Port interface/IO-Link					
	XN	M12, 5-pin, in combination with T-adapter for separate load voltage		175487	SEA-M12-5GS-PG7
Plug socket					
	–	For bypassing the interlock function		1589339	NEFF-S1G44LB
Inscription label					
	–	For bus node		565306	ASLR-C-E4