

Proportional-pressure regulators VEAB

FESTO



Characteristics



Innovative

- Silent operation
- Very low power consumption
- High precision
- Short switching times
- Piezo technology

Versatile

- In-line valves
- Sub-base valves
- Simple electrical interfaces and pneumatic port patterns
- Choice of different setpoint specifications
 - Current input
 - Voltage input

Reliable

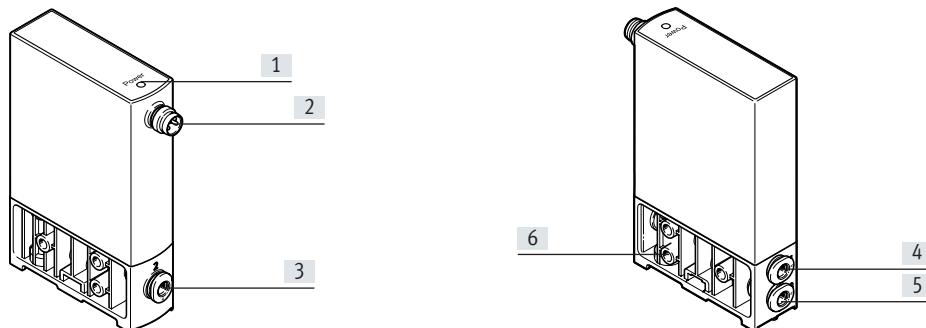
- Integrated pressure sensor with separate output
- Diagnostics
 - Operating voltage: over- and undervoltage
 - Setpoint value: falling below and exceeding
- Consistent pressure regulation performance with long-term stability
- Durable

Easy to install

- Mounting the in-line valve via three lateral through-holes
- Secure mounting on wall or H-rail

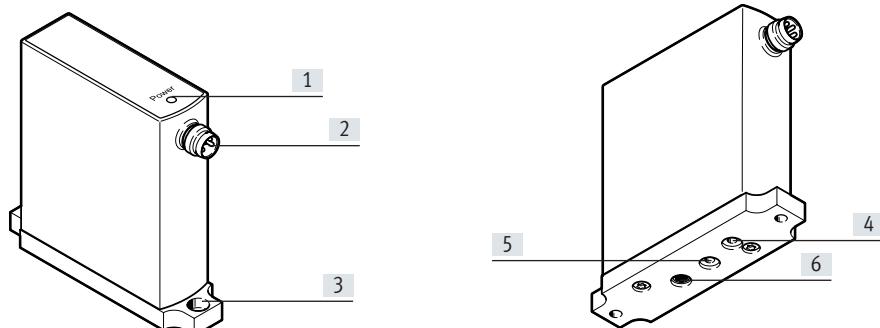
Characteristics – Display and operation

In-line valve



- [1] Power LED (green), fault LED (red)
- [2] Electrical connection, M8 plug
- [3] Port 2, working air
- [4] Port 1, compressed air
- [5] Port 3, exhaust air
- [6] Through-holes for mounting the valve

Sub-base valve

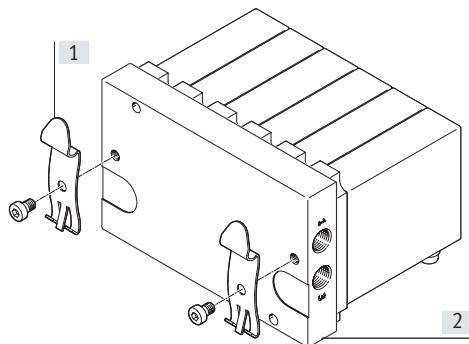


- [1] Power LED (green), fault LED (red)
- [2] Electrical connection, M8 plug
- [3] Through-holes for mounting the valve on the sub-base
- [4] Port 2, working air
- [5] Port 3, exhaust air
- [6] Port 1, compressed air

Characteristics – Mounting

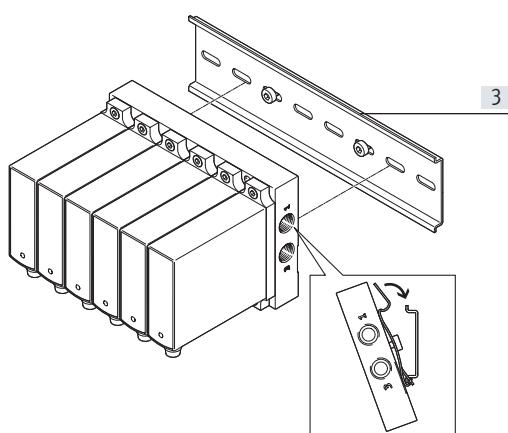
Mounting the valve manifold assembly

H-rail mounting



[1] H-rail mounting
[2] Manifold rail

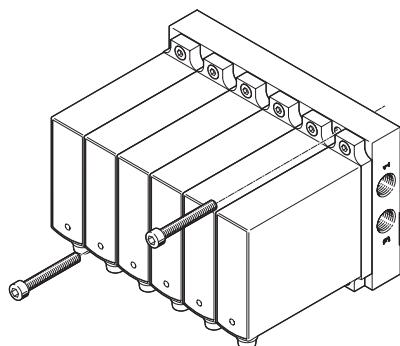
The H-rail mounting can be used to attach the manifold rail to H-rails in accordance with EN 60715.



[3] H-rail

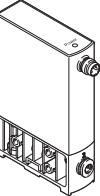
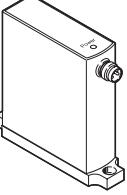
To do this, the manifold rail with the H-rail mounting is attached to the H-rail and latched in place.

Wall mounting



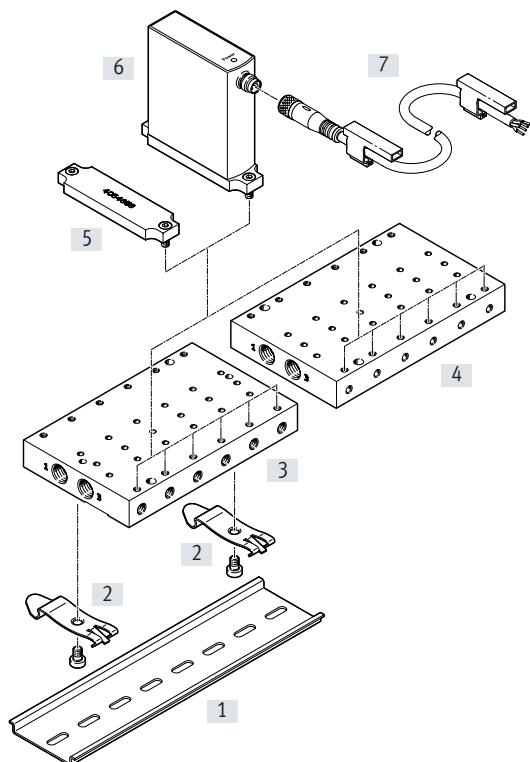
The manifold rail also has through-holes for wall mounting.

Product range overview

Design	Valve function	Pneumatic connection 1, 2, 3	Pressure regulation range [bar]	Setpoint value input		→ Page/ Internet	
				Voltage type	Current type		
Pressure regulator	In-line valve		3-way proportional-pressure regulator	Push-in connector	-1 ... -0.005 -1 ... 1 -1 ... 5 -0.5 ... 0.5 0.001 ... 0.2 0.005 ... 1 0.01 ... 2 0.03 ... 6	■ ■	8
	Sub-base valve		3-way proportional-pressure regulator	Via manifold rail	-1 ... -0.005 -1 ... 1 -1 ... 5 -0.5 ... 0.5 0.001 ... 0.2 0.005 ... 1 0.01 ... 2 0.03 ... 6	■ ■	8

Peripherals overview

Valve manifold assembly VEAB



Type	Description	→ Page/Internet
[1]	H-rail NRH352000	For control cabinet installation
[2]	H-rail mounting VAME	For mounting the H-rail
[3]	Manifold rail VABM-P7-G18M	Connection direction at the side, for control cabinet installation
[4]	Manifold rail VABM-P7-G18MB	Connection direction underneath, for wall mounting and control cabinet installation
[5]	Cover plate VABB	–
[6]	Proportional-pressure regulator VEAB	–
[7]	Connecting cable NEBU	–

Type codes

001	Series	005	Pneumatic connection
VEAB	Proportional pressure regulator	F	Flange/sub-base
002	Valve function	Q4	Push-in connector 4 mm
26	2x2/2-way valve, normally closed	006	Setpoint input for individual valves
003	Directional control valve type	A4	4 ... 20 mA
L	In-line valve	V1	0 ... 10 V
B	Sub-base valve	007	Electrical connection
004	Pressure range [bar]	R1	Individual connector M8, 4-pin
D12	0 ... 0.2	008	Nominal operating voltage
D7	0 ... 1	1	24 V DC
D13	-1 ... 1		
D14	-1 ... 0		
D9	0 ... 6		
D15	-0.5 ... 0.5		
D2	0 ... 2		
D18	-1 ... 5		

Data sheet

-  -	Flow rate 4.5 ... 20 l/min	-  -	Pressure regulation range -1 ... -0.005 bar 0.001 ... 0.2 bar 0.005 ... 1 bar 0.01 ... 2 bar 0.03 ... 6 bar -1 ... 1 bar -1 ... 5 bar -0.5 ... 0.5 bar
-  -	Voltage 24 V DC		



General technical data

Type	VEAB-L	VEAB-B
Valve type	In-line valve	Sub-base valve
Valve function	3-way proportional-pressure regulator	
Dimensions W x L x H [mm]	18 x 60.5 x 85	18 x 67 x 66
Standard nominal flow rate	→ Page 11	
Pneumatic connection 1, 2, 3	Push-in connector 4 mm	Flange/via sub-base
Sealing principle	Soft	
Actuation type	Electrical	
Display type	LED	
Type of control	Direct	
Reset method	Mechanical spring	
Type of mounting	Optionally with through-hole, with accessories	
Mounting position	Any	
Product weight [g]	70	

Electrical data

Electrical connection	Plug, M8x1, 4-pin, to EN 60947-5-2	
Nominal operating voltage	[V DC] 24	
Operating voltage range	[V DC] 19 ... 29	
Residual ripple	[%] 10	
Max. electrical power consumption	[W] 1	
Setpoint input signal	Voltage	[V DC] 0 ... 10
	Current	[mA] 4 ... 20
Short circuit current rating	For all electrical connections	
Reverse polarity protection	For all electrical connections	
Degree of protection	IP65	

 - Note

Safety position, VEAB:

If the electrical power supply fails, the output pressure will be unregulated and may rise or fall – valve blocked.

Data sheet

Operating and environmental conditions							
Pressure regulation range	[bar]	-1 ... -0.005	-1 ... 1	-1 ... 5	-0.5 ... 0.5	0.001 ... 0.2	
Operating medium	Compressed air to ISO 8573-1:2010 [7:4:4]						
Note on operating/pilot medium	Inert gases						
Input pressure at port 1 ¹⁾	[bar]	-1	0 ... 2	0 ... 5.5	0 ... 2	0 ... 1	
Input pressure at port 3	[bar]	-1	-1	-1	-1	-	
Hysteresis FS (full scale)	[%]	0.25	0.25	0.25	0.25	0.5	
Linearity error FS (full scale)	[%]	± 0.5	0.5	0.5	0.5	± 0.8	
Repetition accuracy FS (full scale)	[%]	± 0.4					
Absolute accuracy at room temperature FS (full scale)	[%]	0.75	0.75	0.75	0.75	0.8	
Accuracy of analogue output FS (full scale)	[%]	2					
Temperature coefficient	[%/K]	0.05					
Ambient temperature	[°C]	0 ... 50					
Temperature of medium	[°C]	5 ... 50					
Storage temperature	[°C]	-20 ... 70					
Corrosion resistance class CRC ²⁾		2					
CE marking (see declaration of conformity)		To EU EMC Directive ³⁾					
Certification		RCM compliance mark					

1) Input pressure 1 should always be 1 bar greater than the maximum regulated output pressure.

2) Corrosion resistance class CRC 2 to Festo standard FN 940070

Moderate corrosion stress. Indoor applications in which condensation can occur. External visible parts with primarily decorative surface requirements which are in direct contact with a normal industrial environment.

3) For information about the area of use, see the EC declaration of conformity at: www.festo.com/sp → Certificates.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

Operating and environmental conditions							
Pressure regulation range	[bar]	0.005 ... 1	0.01 ... 2	0.03 ... 6			
Operating medium	Compressed air to ISO 8573-1:2010 [7:4:4]						
Note on operating/pilot medium	Inert gases						
Input pressure at port 1	[bar]	0 ... 3	0 ... 4	0 ... 6.5			
Input pressure at port 3	[bar]	-	-	-			
Hysteresis FS (full scale)	[%]	0.25					
Linearity error FS (full scale)	[%]	± 0.5					
Repetition accuracy FS (full scale)	[%]	± 0.4					
Absolute accuracy at room temperature FS (full scale)	[%]	0.75					
Accuracy of analogue output FS (full scale)	[%]	2					
Temperature coefficient	[%/K]	0.05					
Ambient temperature	[°C]	0 ... 50					
Temperature of medium	[°C]	5 ... 50					
Storage temperature	[°C]	-20 ... 70					
Corrosion resistance class CRC ¹⁾		2					
CE marking (see declaration of conformity)		To EU EMC Directive ²⁾					
Certification		RCM compliance mark					

1) Corrosion resistance class CRC 2 to Festo standard FN 940070

Moderate corrosion stress. Indoor applications in which condensation can occur. External visible parts with primarily decorative surface requirements which are in direct contact with a normal industrial environment.

2) For information about the area of use, see the EC declaration of conformity: www.festo.com/sp → Certificates.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

Data sheet

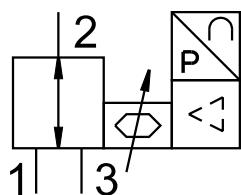
Materials

Seals	NBR
Housing	Reinforced PA
Note on materials	RoHS-compliant Contains paint-wetting impairment substances

Pin allocation

Pin allocation	Pin	Function
	1	+24 V DC supply voltage
	2	+ Setpoint value
	3	GND
	4	+ Actual value

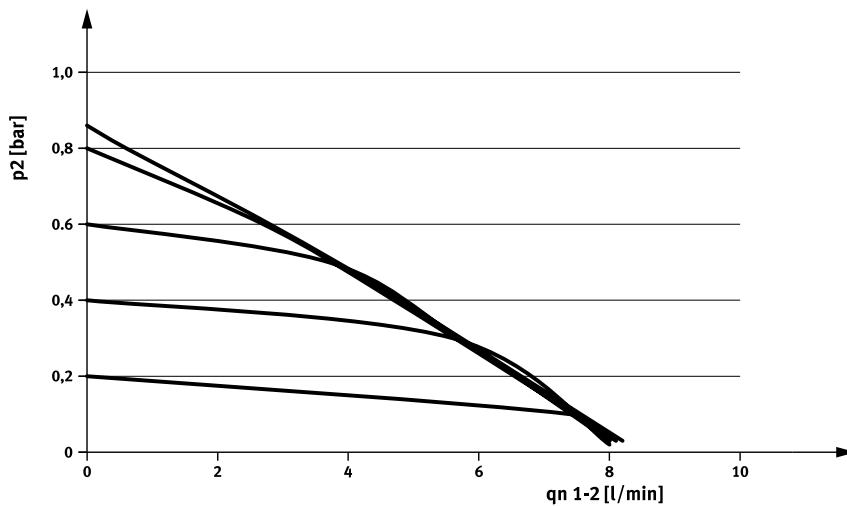
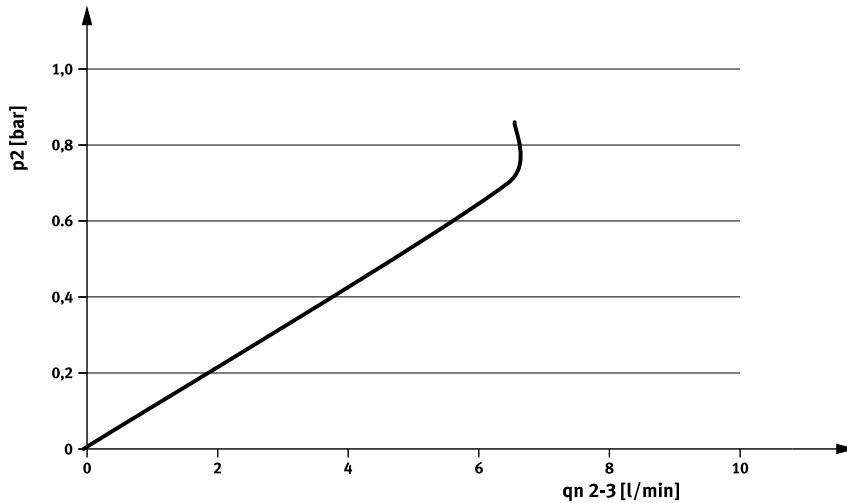
Function



An integrated pressure sensor records the pressure at the working port and compares this value with the setpoint value.

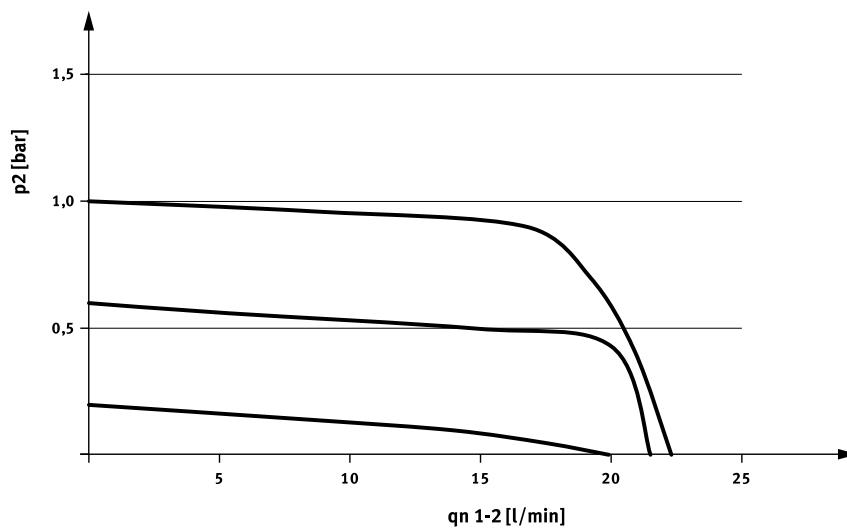
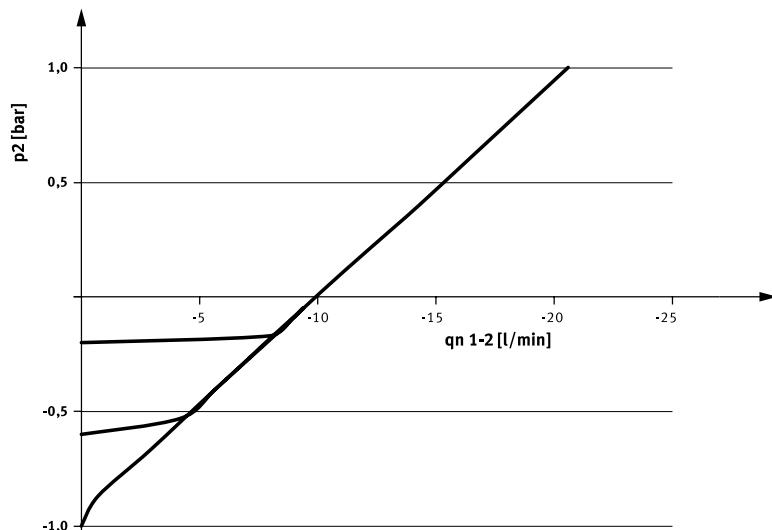
The pressure is automatically readjusted in the event of deviations.

Data sheet

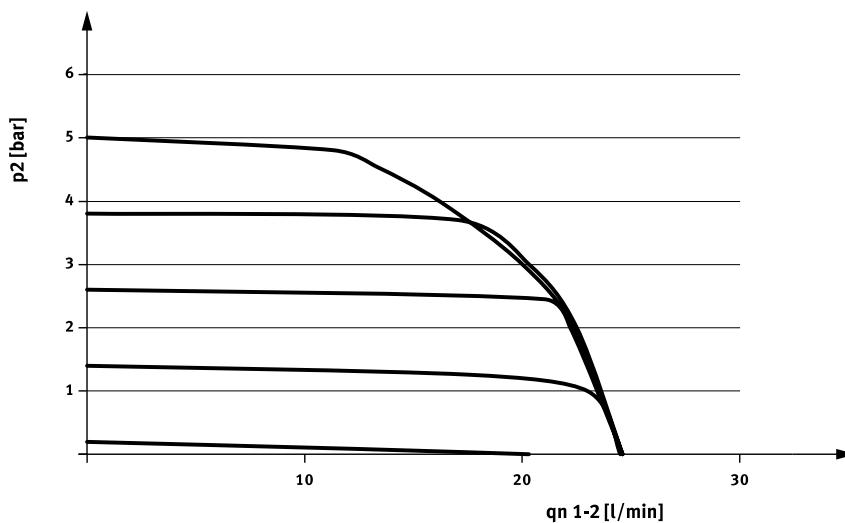
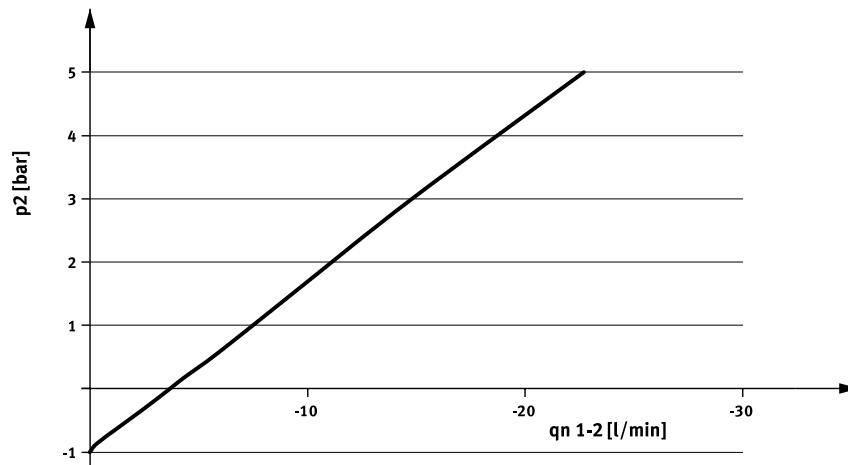
VEAB-...-D14-..., pressure regulation range -1 ... -0.005Flow rate q_n from 1 → 2 as a function of output pressure p_2 Flow rate q_n from 2 → 3 as a function of output pressure p_2 

Data sheet

VEAB....D13..., pressure regulation range -1 ... 1

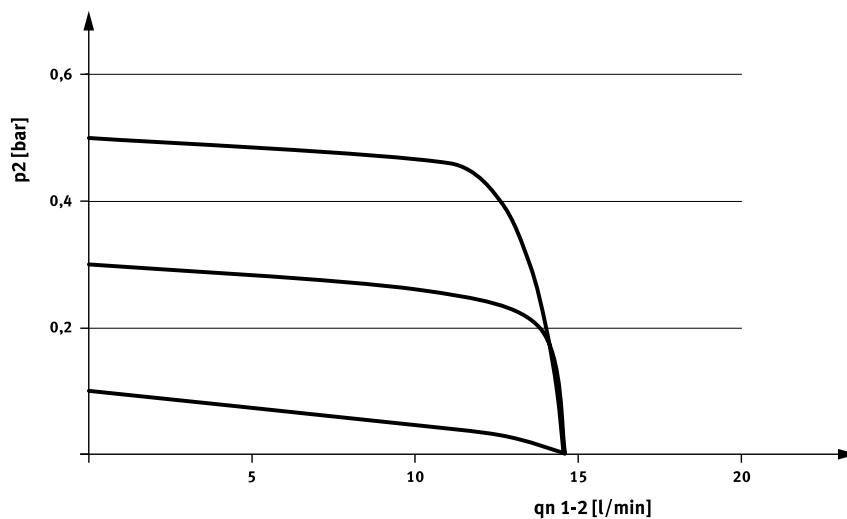
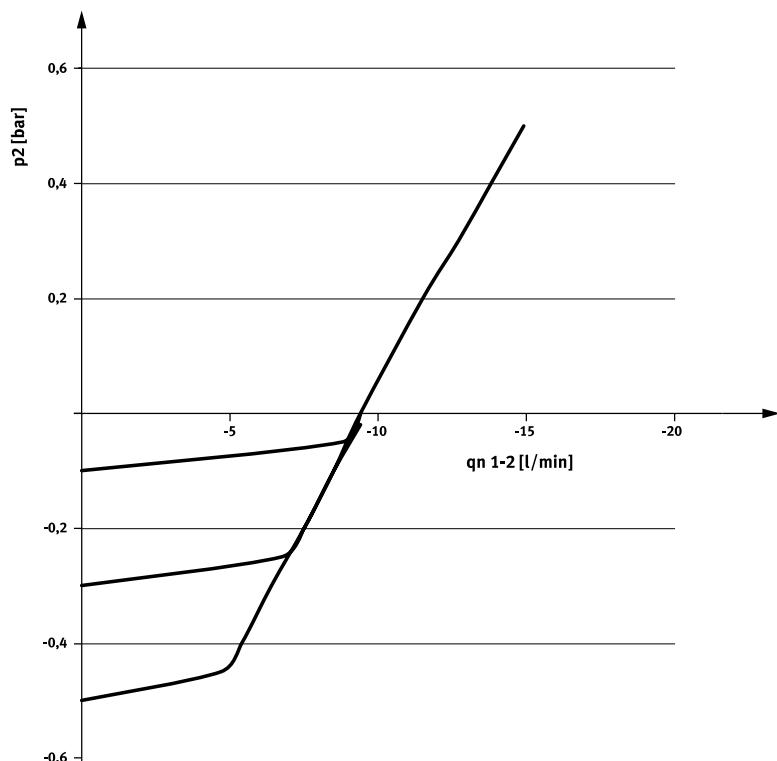
Flow rate q_n from 1 → 2 as a function of output pressure p_2 Flow rate q_n from 2 → 3 as a function of output pressure p_2 

Data sheet

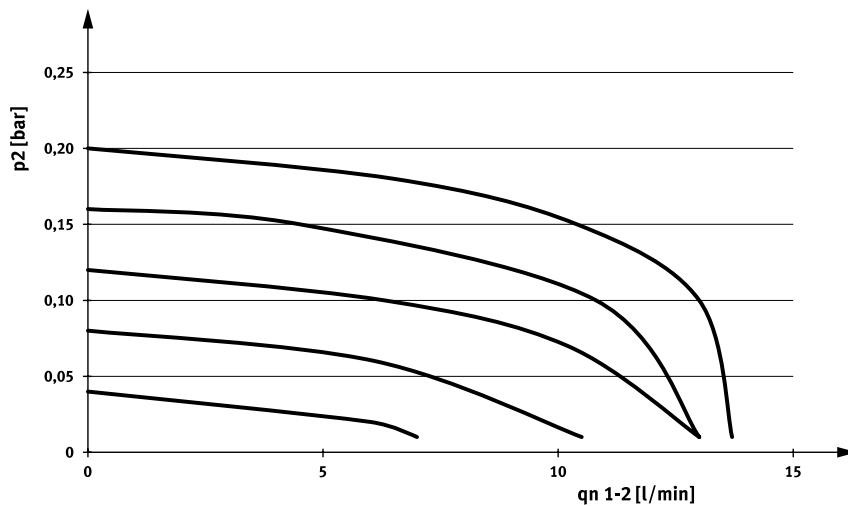
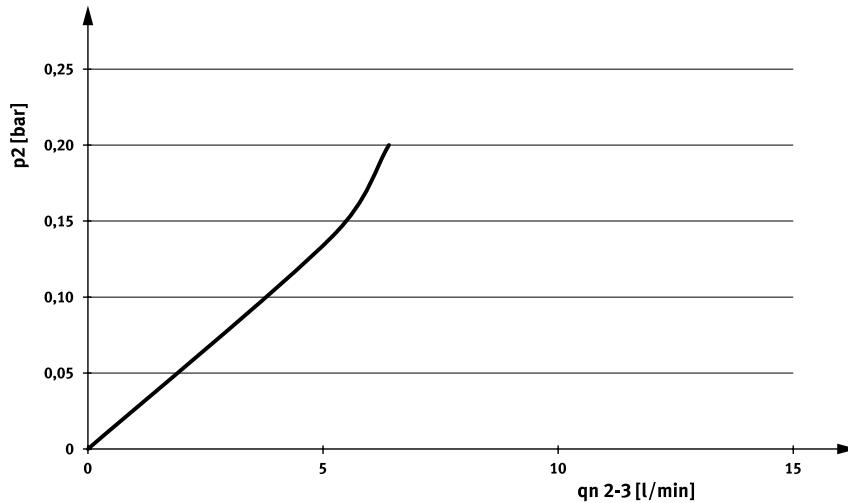
VEAB-...-D18-..., pressure regulation range -1 ... 5Flow rate q_n from 1 → 2 as a function of output pressure p_2 Flow rate q_n from 2 → 3 as a function of output pressure p_2 

Data sheet

VEAB-...-D15-..., pressure regulation range -0,5 ... 0,5

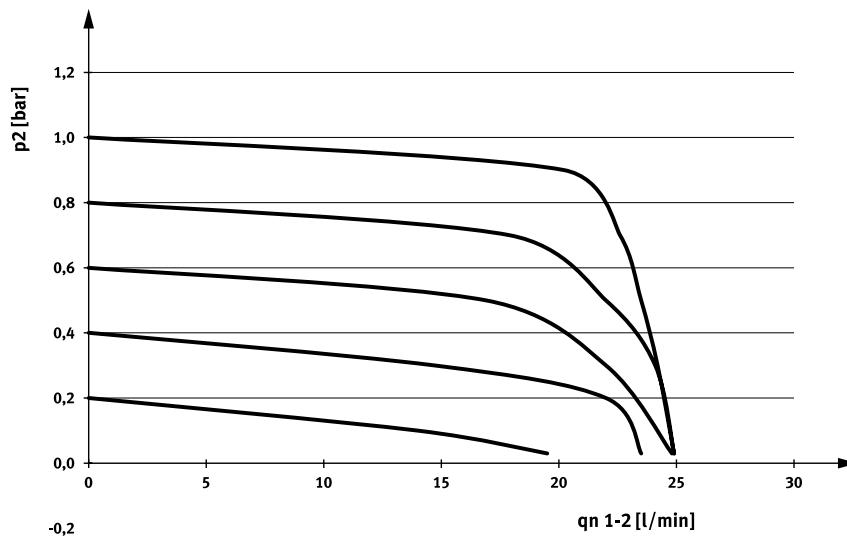
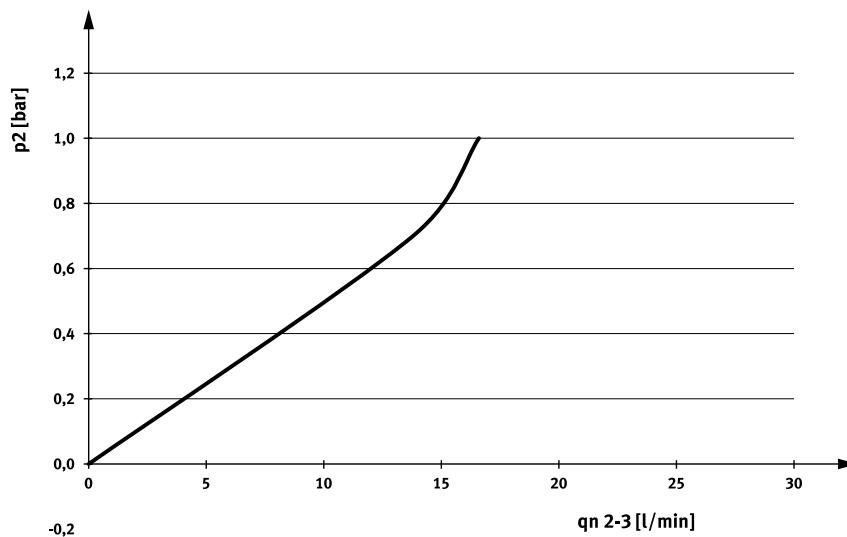
Flow rate q_n from 1 → 2 as a function of output pressure p_2 Flow rate q_n from 2 → 3 as a function of output pressure p_2 

Data sheet

VEAB-...-D12-..., pressure regulation range 0.001 ... 0.2Flow rate q_n from 1 → 2 as a function of output pressure p_2 Flow rate q_n from 2 → 3 as a function of output pressure p_2 

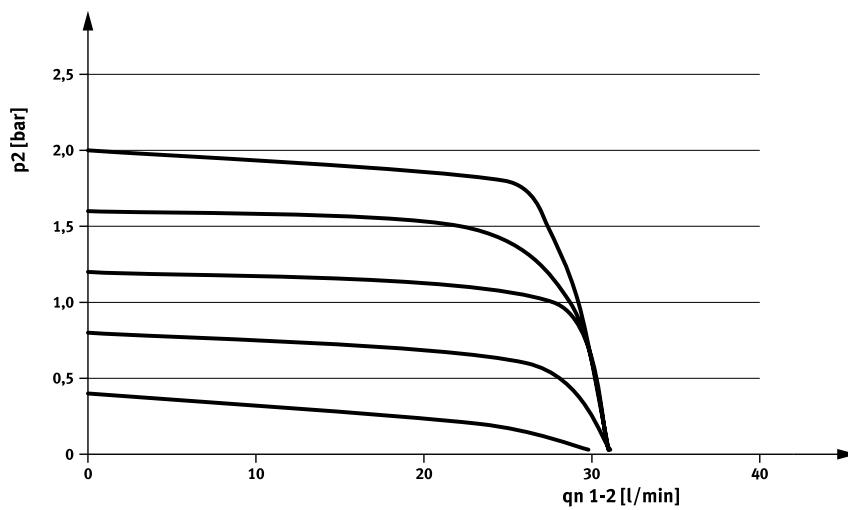
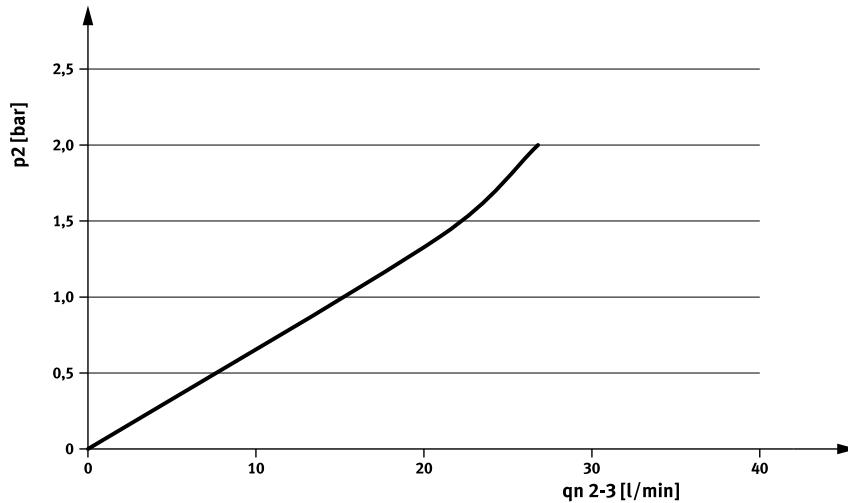
Data sheet

VEAB-...-D7-..., pressure regulation range 0.005 ... 1

Flow rate q_n from 1 → 2 as a function of output pressure p_2 Flow rate q_n from 2 → 3 as a function of output pressure p_2 

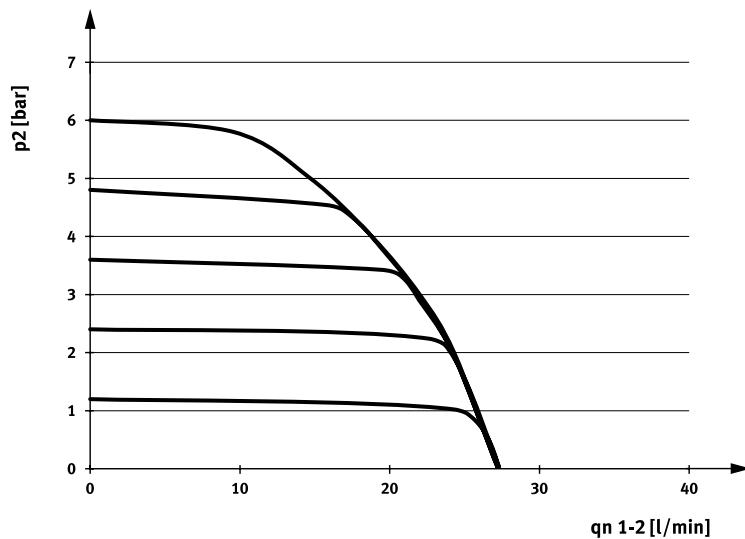
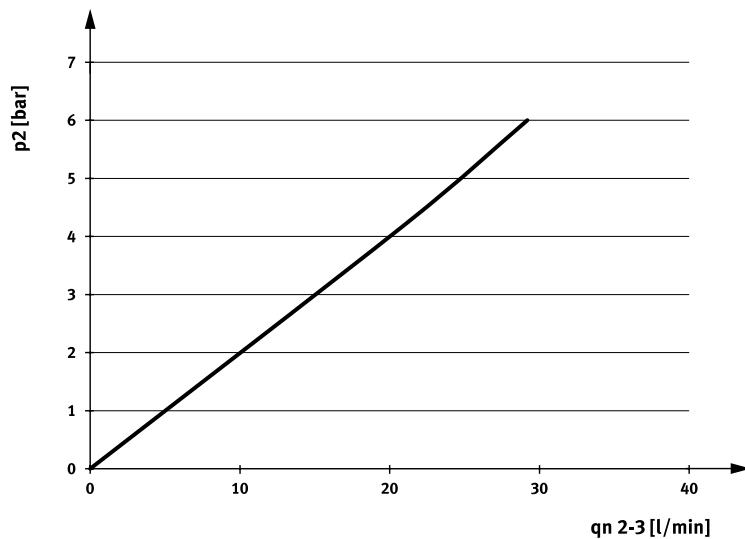
Data sheet

VEAB-...-D2-..., pressure regulation range 0.01 ... 2

Flow rate q_n from 1 → 2 as a function of output pressure p_2 Flow rate q_n from 2 → 3 as a function of output pressure p_2 

Data sheet

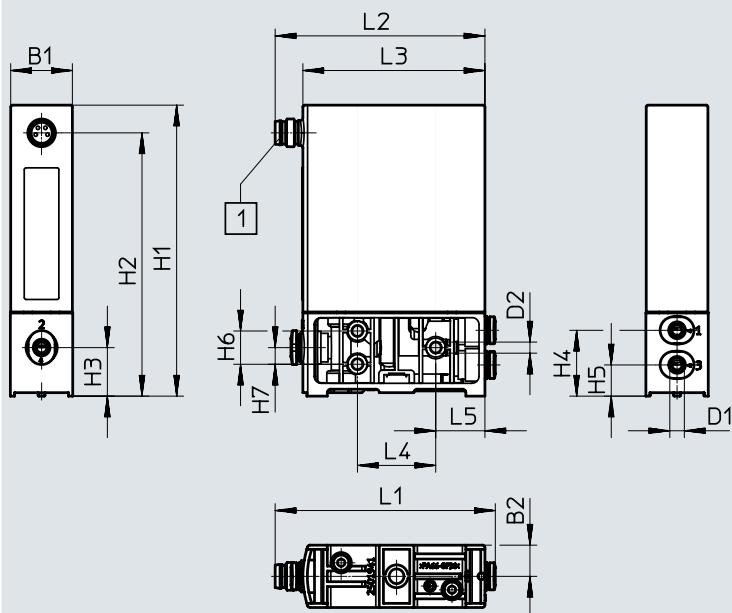
VEAB-...-D9-..., pressure regulation range 0.03 ... 6

Flow rate q_n from 1 → 2 as a function of output pressure p_2 Flow rate q_n from 2 → 3 as a function of output pressure p_2 

Data sheet

Dimensions

In-line valve

Download CAD data → www.festo.com

[1] Plug M8x1, 4-pin

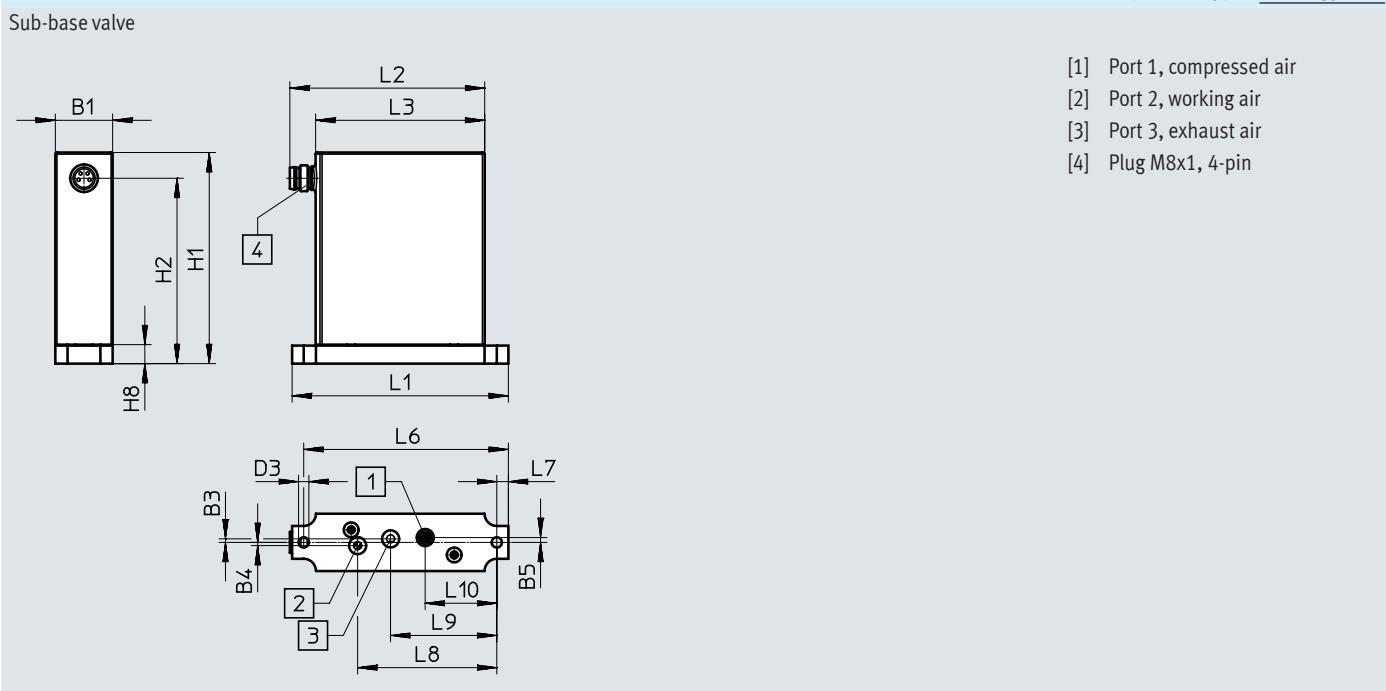
Type	B1	B2	D1 Ø	D2 Ø	H1	H2	H3	H4	H5	H6	H7
VEAB-L	18	9	4	3.2	85	76	14	19	9.5	9.6	4.8

Type	L1	L2	L3	L4	L5
VEAB-L	64	60.5	52.5	22.6	14.2

Data sheet

Dimensions

Sub-base valve

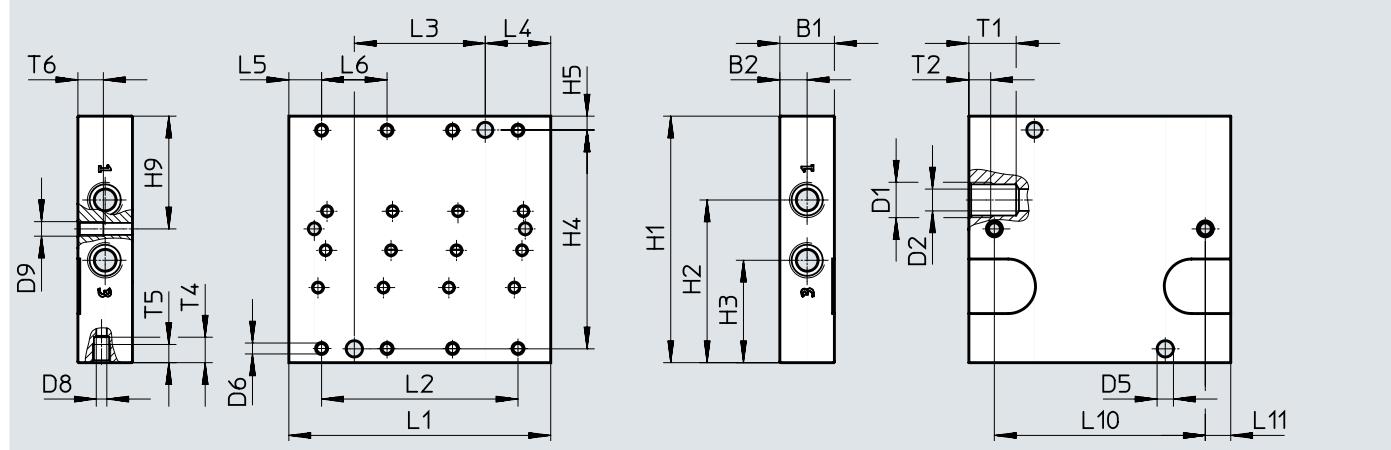
Download CAD data → www.festo.com

Type	B1	B3	B4	B5	D3 Ø	H1	H2	H8
VEAB-B	18	1.1	1	1.5	3.2	66	58	6
Type	L1	L2	L3	L6	L7	L8	L9	L10
VEAB-B	67.2	60.5	52.5	63.6	3.6	43.3	33	22.3

Data sheet

Dimensions – Manifold rail

Connection direction at the side

Download CAD data → www.festo.com

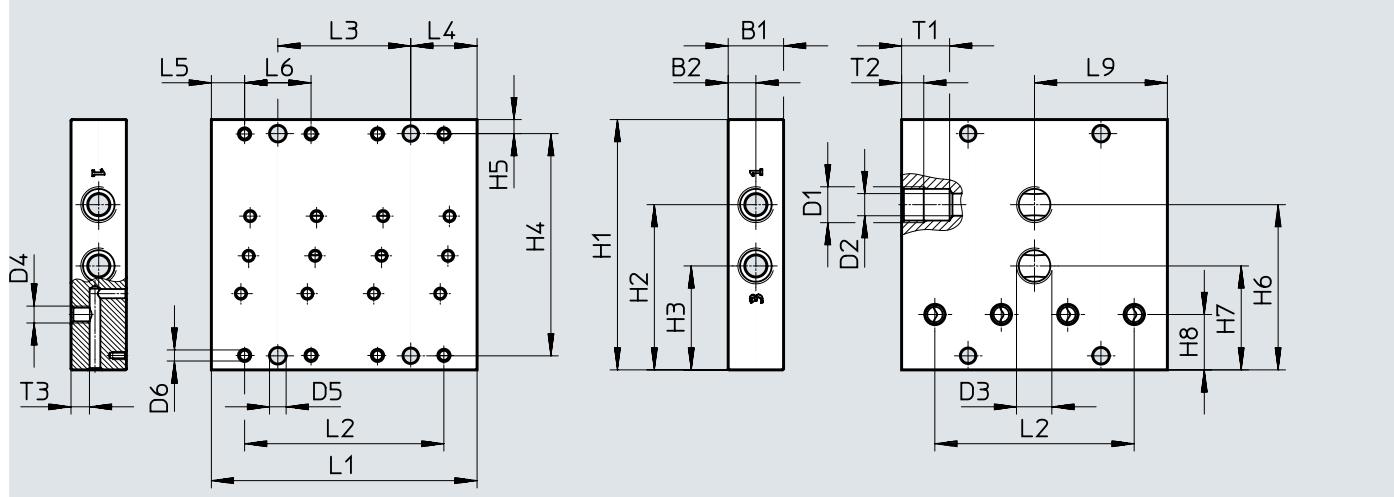
Type	B1	B2	B3	D1	D2 Ø	D5 Ø	D6	D7	D8 Ø	D9	H1	H2	H3	H4	H5	H9
VABM-P7-18M-G18-M5-4	15	7.5	8.5	G1/8	6	4.5	M3	M5	2.9	M4	67.8	44.8	28.2	60.2	3.8	31
VABM-P7-18M-G18-M5-6																
VABM-P7-18M-G18-M5-8																

Type	L1	L2	L3	L4	L5	L6	L10	L11	T1	T2	T4	T5	T6
VABM-P7-18M-G18-M5-4	72	54	36	18	9	18	58	7	13	6	7	5	7
VABM-P7-18M-G18-M5-6	108	90	72				94						
VABM-P7-18M-G18-M5-8	144	126	108				130						

Data sheet

Dimensions – Manifold rail

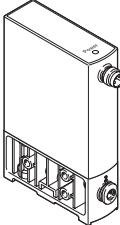
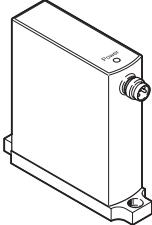
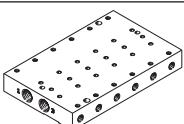
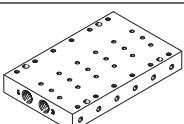
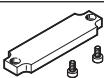
Connection direction underneath

Download CAD data → www.festo.com

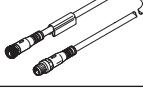
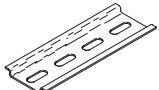
Type	B1	B2	B3	D1	D2	D3	D4	D5	D6	D7	H1	H2	H3	H4	H5	H6
VABM-P7-18MB-G18-M5-4	15	7.5	8.5	G1/8	6	G1/8	M5	4.5	M3	2.9	67.8	44.8	28.2	60.2	3.8	44.8
VABM-P7-18MB-G18-M5-6																
VABM-P7-18MB-G18-M5-8																

Type	H7	H8	L1	L2	L3	L4	L5	L6	L9	T1	T2	T3
VABM-P7-18MB-G18-M5-4	28.2	15	72	54	36	18	9	18	36	13	6	5
VABM-P7-18MB-G18-M5-6			108	90	72							
VABM-P7-18MB-G18-M5-8			144	126	108							

Accessories

Ordering data		Pressure regulation range [bar]	Part no.	Type
In-line valve				
	Voltage type, 0 ... 10 V	-1 ... -0.005 -1 ... 1 -1 ... 5 -0.5 ... 0.5 0.001 ... 0.2 0.005 ... 1 0.01 ... 2 0.03 ... 6	8046307 8067677 8067679 8067675 8046301 8046303 8046305 8046299	VEAB-L-26-D14-Q4-V1-1R1 VEAB-L-26-D13-Q4-V1-1R1 VEAB-L-26-D18-Q4-V1-1R1 VEAB-L-26-D15-Q4-V1-1R1 VEAB-L-26-D12-Q4-V1-1R1 VEAB-L-26-D7-Q4-V1-1R1 VEAB-L-26-D2-Q4-V1-1R1 VEAB-L-26-D9-Q4-V1-1R1
	Current type, 4 ... 20 mA	-1 ... -0.005 -1 ... 1 -1 ... 5 -0.5 ... 0.5 0.001 ... 0.2 0.005 ... 1 0.01 ... 2 0.03 ... 6	8046308 8067678 8067680 8067676 8046302 8046304 8046306 8046300	VEAB-L-26-D14-Q4-A4-1R1 VEAB-L-26-D13-Q4-A4-1R1 VEAB-L-26-D18-Q4-A4-1R1 VEAB-L-26-D15-Q4-A4-1R1 VEAB-L-26-D12-Q4-A4-1R1 VEAB-L-26-D7-Q4-A4-1R1 VEAB-L-26-D2-Q4-A4-1R1 VEAB-L-26-D9-Q4-A4-1R1
Sub-base valve				
	Voltage type, 0 ... 10 V	-1 ... -0.005 -1 ... 1 -1 ... 5 -0.5 ... 0.5 0.001 ... 0.2 0.005 ... 1 0.01 ... 2 0.03 ... 6	8046271 8067669 8067671 8067667 8046265 8046267 8046269 8046263	VEAB-B-26-D14-F-V1-1R1 VEAB-B-26-D13-F-V1-1R1 VEAB-B-26-D18-F-V1-1R1 VEAB-B-26-D15-F-V1-1R1 VEAB-B-26-D12-F-V1-1R1 VEAB-B-26-D7-F-V1-1R1 VEAB-B-26-D2-F-V1-1R1 VEAB-B-26-D9-F-V1-1R1
	Current type, 4 ... 20 mA	-1 ... -0.005 -1 ... 1 -1 ... 5 -0.5 ... 0.5 0.001 ... 0.2 0.005 ... 1 0.01 ... 2 0.03 ... 6	8046272 8067670 8067672 8067668 8046266 8046268 8046270 8046264	VEAB-B-26-D14-F-A4-1R1 VEAB-B-26-D13-F-A4-1R1 VEAB-B-26-D18-F-A4-1R1 VEAB-B-26-D15-F-A4-1R1 VEAB-B-26-D12-F-A4-1R1 VEAB-B-26-D7-F-A4-1R1 VEAB-B-26-D2-F-A4-1R1 VEAB-B-26-D9-F-A4-1R1
Manifold rail				
	Connection direction at the side	4 valve positions 6 valve positions 8 valve positions	8076386 8076388 8076390	VABM-P7-18M-G18-M5-4 VABM-P7-18M-G18-M5-6 VABM-P7-18M-G18-M5-8
	Connection direction underneath	4 valve positions 6 valve positions 8 valve positions	8076387 8076389 8076391	VABM-P7-18MB-G18-M5-4 VABM-P7-18MB-G18-M5-6 VABM-P7-18MB-G18-M5-8
Cover plate				
	Including screws (2) and O-rings (3, preassembled)		4054658	VABB-P7-M

Accessories

Ordering data		Description	Part no.	Type
Connecting cable				Data sheets → Internet: nebu
	Straight socket, M8x1, 4-pin Open end, 4-wire	2.5 m	541342	NEBU-M8G4-K-2.5-LE4
		5 m	541343	NEBU-M8G4-K-5-LE4
	Angled socket, M8x1, 4-pin Open end, 4-wire	2.5 m	541344	NEBU-M8W4-K-2.5-LE4
		5 m	541345	NEBU-M8W4-K-5-LE4
	Straight socket, M8x1, 4-pin Straight plug M8x1, 4-pin	2.5 m	554035	NEBU-M8G4-K-2.5-M8G4
H-rail				
	To EN 60715, 35 x 7.5 (WxH), for control cabinet installation	35430	NRH-35-2000	
H-rail mounting				
	For H-rail NRH-35-2000	4054652	VAME-P7-T	
Mounting plate				
	For in-line valve	4054656	VAME-P7-Y	

Festo - Your Partner in Automation



1 Festo Inc.

5300 Explorer Drive
Mississauga, ON L4W 5G4
Canada

Festo Customer Interaction Center

Tel: 1 877 463 3786
Fax: 1 877 393 3786
Email: customer.service.ca@festo.com

2 Festo Pneumatic

Av. Ceylán 3,
Col. Tequesquínáhuac
54020 Tlalnepantla,
Estado de México

Multinational Contact Center

01 800 337 8669
ventas.mexico@festo.com

3 Festo Corporation

1377 Motor Parkway
Suite 310
Islandia, NY 11749

Festo Customer Interaction Center

1 800 993 3786
1 800 963 3786
customer.service.us@festo.com

4 Regional Service Center

7777 Columbia Road
Mason, OH 45040

Connect with us



www.festo.com/socialmedia



www.festo.com