


Solenoid valves VUVG-EX/valve terminals VTUG-EX

FESTO

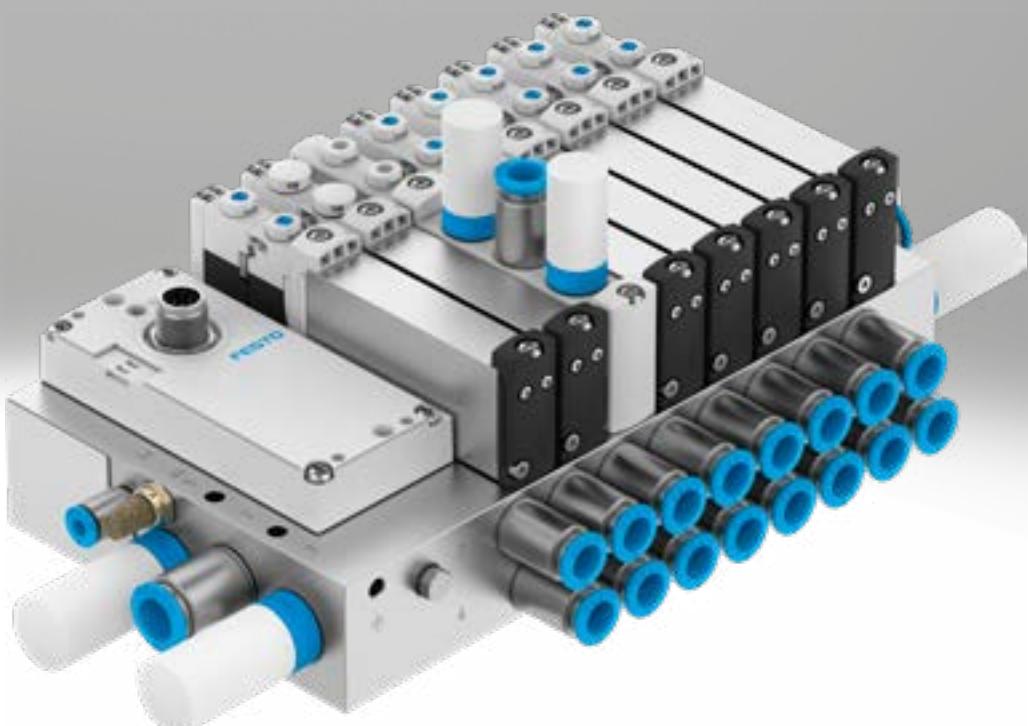

Festo Core Range

Solves the majority of your automation tasks

Worldwide:
Simply good:
Fast:


Quickest delivery – wherever, whenever
Expected high Festo quality
Easy and fast to select

With the Festo Core Range, we have selected the most important products and functions from our broad product catalogue, and added the quickest delivery.

The Core Range offers you the best value for your automation tasks.

Just look
for the
star!

Key features

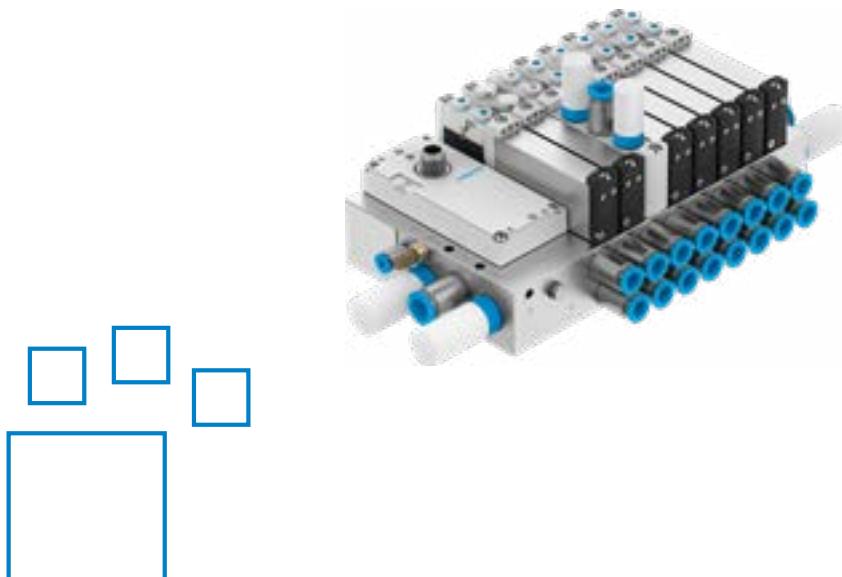

Innovative

- Festo-specific I-Port interface for bus nodes (CTEU)
- IO-Link® mode for direct connection to a higher-level IO-Link master
- Flexible multi-pin plug connection using Sub-D or ribbon cable
- Reversible piston spool valves, up to 24 valve positions
- Reduced power consumption
- Excellent price/performance ratio

Versatile

- Choice of quick push-in connectors
- Multiple pressure zones possible
- Sub-D variant and fieldbus interface with protection to IP67
- Internal or external pilot air with the same manifold rail possible by using blanking plugs
- Sub-base valves with working ports underneath for installation in control cabinets


Reliable

- Sturdy and durable metal components
 - Valves
 - Manifold rails
- Fast troubleshooting thanks to LED indicator
- Manual override:
choose from non-detenting, detenting or covered

Easy to install

- Easy mounting thanks to captive screws and seal
- Easy-to-change connection technology
- Inscription label holder for labelling

Ordering data – Product options

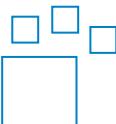

Configurable product

This product and all its product options can be ordered using the configurator.

The configurator can be found at

→ [www.festo.com/catalogue/...](http://www.festo.com/catalogue/)

Enter the part number or the type.

Part no.


8060699

Type

VTUG-EX

Key features – Pneumatic components

Overview – Valve terminal with multi-pin plug connection and fieldbus interface

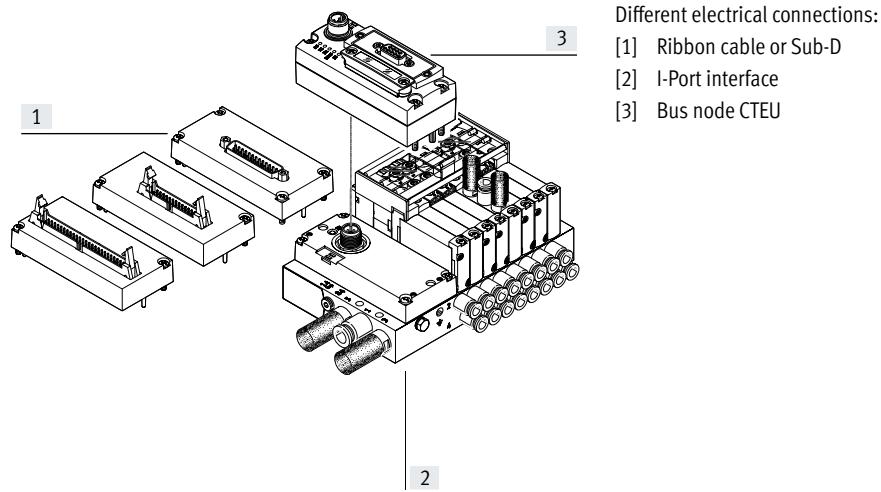

Key features – Pneumatic components

Equipment options

Valve functions

- 2x 3/2-way, 3/2-way, 5/2-way, 5/3-way valves
- Reversible piston spool valves, up to 24 valve positions

Electrical connection options

- IO-Link® mode for direct connection to a higher-level IO-Link master
- Festo-specific I-Port interface for bus nodes (CTEU)
- Flexible multi-pin plug connection using Sub-D or ribbon cable

Basic valves VUVG-EX

Size

- 10
- 14
- Sub-base valve

Design

Valve functions

3/2-way valve

- Single solenoid
- Normally open
- Normally closed

2x 3/2-way valve

- Single solenoid
- Normally open
- Normally closed
- 1x normally closed, 1x normally open
- Mechanical spring
- Pneumatic spring


5/2-way valve

- Single solenoid
- Pneumatic/mechanical spring
- Mechanical spring
- Pneumatic spring
- Double solenoid valve

5/3-way valve


- Mid-position pressurised
- Mid-position exhausted
- Mid-position closed

Cover caps for manual override

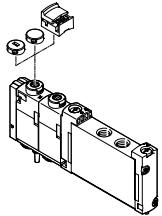


- Closed cover cap, concealed manual override
- Slotted cover cap, non-detenting manual override
- Cover cap for detenting actuation without tools

Inscription label holders

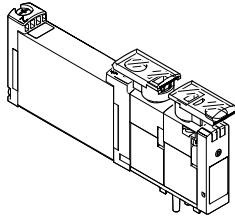

Inscription label holders ASLR-D-L1 for identifying the valves and as a covering for the manual override.

Inscription label holder

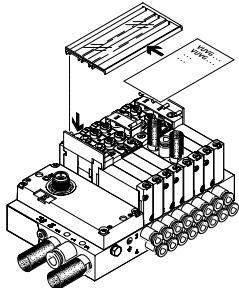


Inscription label holders ASCF-H-L1... for identifying the valves on the valve terminal VTUG

Key features – Pneumatic components

Manifold rail


For sub-base valves

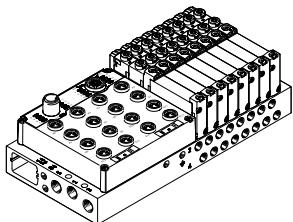

The sub-base valves are supplied with external pilot air. The pilot air is set via the manifold rail. The scope of delivery of the manifold rail includes a short and a long blanking plug for setting the pilot air.


- For sub-base valves M5/M7 (size 10), G1/8 (size 14)
- For 2x 3/2-way, 3/2-way, 5/2-way and 5/3-way valves
- 4 to 24 valve positions with electrical links

For control cabinet installation, outlet direction underneath (U)

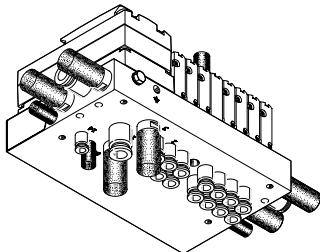


For sub-base valves M7 (size 10), G1/8 (size 14)

For control cabinet installation, outlet direction to the front (FD)

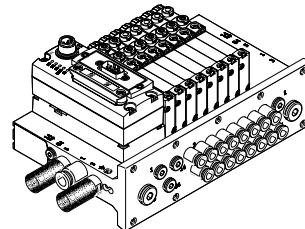


For sub-base valves M7 (size 10) and G1/8 (size 14).

For control cabinet installation, with shut-off function (hot swap)

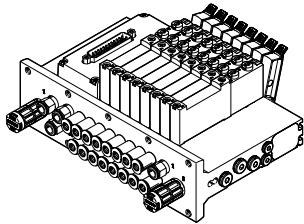

Shut-off function for duct 1, for sub-base valves M7 (size 10) and G1/8 (size 14):

- Internal pilot air supply only
- Vacuum operation not possible

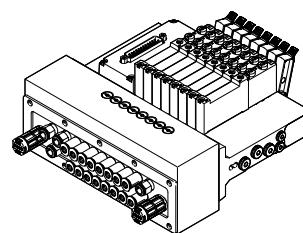

Shut-off function for ducts 1, 2 and 4, for sub-base valves M7 (size 10) and G1/8 (size 14):

- Internal/external pilot air supply
- Vacuum operation not possible




Note

Pressurisation and exhaust at both ends is recommended for an optimised flow rate in cases where multiple valves switch simultaneously.

Key features

Electrical connection

Multi-pin plug connection

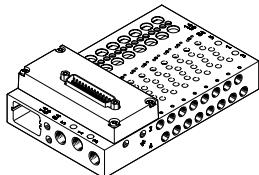


The signals are transmitted from the controller to the valve terminal via a pre-assembled or self-assembled multi-wire cable to the multi-pin plug connection.

This substantially reduces installation time compared to individually connected valves. The valve terminal can be equipped with max. 48 solenoid coils.

Versions:

- Sub-D connection
- Ribbon cable

I-Port interface

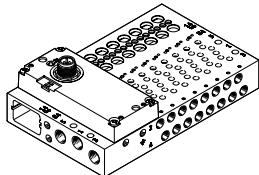


Festo-specific interface as a basis for bus nodes (CTEU) or in IO-Link® mode for direct connection to a higher-order IO-Link master.

Communication and power supply take place via a common M12 interface.

Connection options:

- As I-Port interface for bus nodes (CTEU)
- In IO-Link® mode for direct connection to an IO-Link master

Supply plate

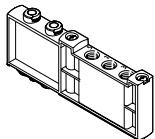


For additional air supply and exhaust via a valve position (ports for duct 1, 3 and 5).

Note

The supply plate VABF-L1-14-P3A4-G18-T1 can only be used with G fittings. R fittings are not permissible.

Cover plate for vacant position

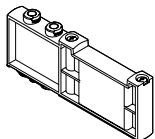

Vacant position cover

Separator for pressure zones



For creating multiple pressure zones in a valve terminal

Key features – Pneumatic components

Creating pressure zones and separating exhaust air

Compressed air is supplied and exhausted via the manifold rail and via supply plates.

The position of the supply plates and duct separations can be freely selected with the VTUG.

A pressure zone is created by separating the internal supply ducts using a separator.


Pressure zone separation can be used for the following ducts:

- Duct 1
- Duct 3
- Duct 5

 - Note


- Use a separating element for high exhaust air pressures
- Use at least one supply plate/air supply for each pressure zone
- Pressure zone separation is not possible in duct 12/14 (pilot air supply)

Duct separation

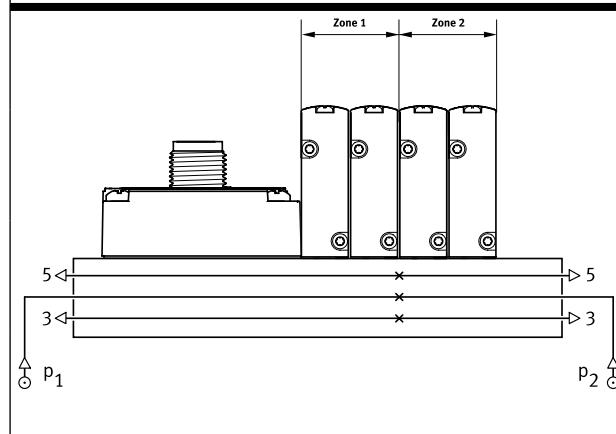


Description


The pressure zones can be freely configured with the VTUG. The following duct separations are possible:

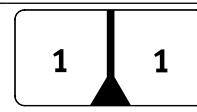


Duct 1 closed

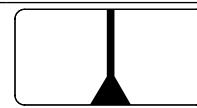

Duct 1, 3, 5 closed

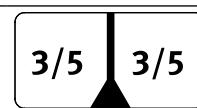


Duct 3, 5 closed

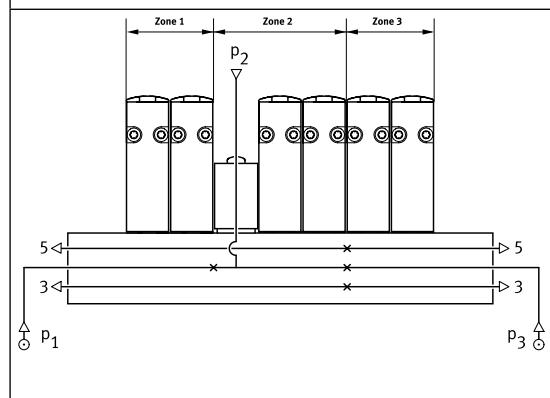

The number of pressure zones with the VTUG is limited by the number of valve positions on the manifold rail. Note that each supply plate occupies one valve position.

Separator VABD

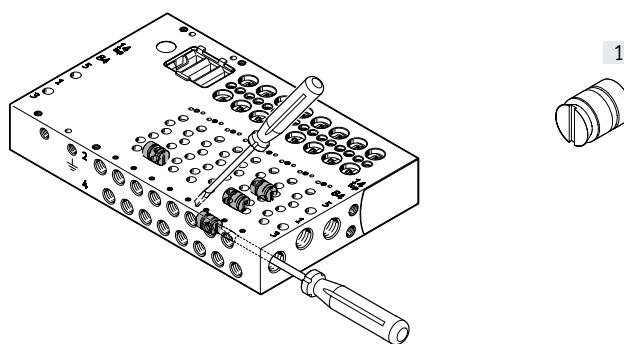

[1] Separator VABD


 - Note

Several pressure zones can be created on the VTUG by inserting separators (VABD). The separators are inserted in the manifold rail using a slotted screwdriver.

Key features – Pneumatic components

Shut-off function (hot swap)

For duct 1

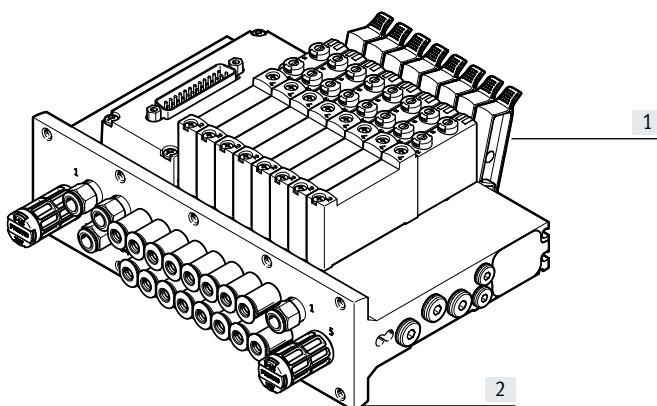


- [1] Actuating lever
- [2] Manifold rail with shut-off plate

The shut-off plate is located below the manifold block. Actuating the lever:

- Disconnects the valve position from the compressed air supply (duct 1)
- Exhausts the pilot air supply on the valve side (duct 12 and 14)
- Note the user instructions for use in combination with a supply plate

The actuating levers can be individually locked in place, securing them against unwanted actuation.

For duct 1, 2 and 4

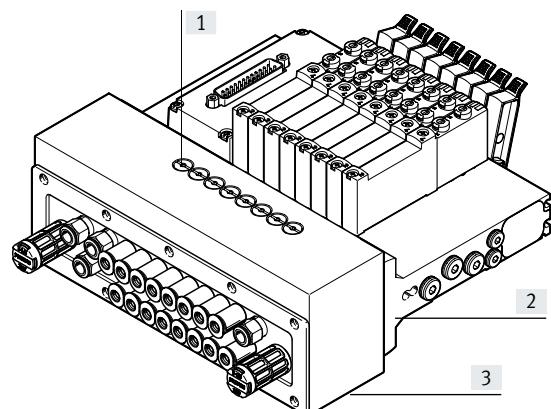

- [1] Plunger
- [2] Manifold rail
- [3] Manifold block

To actuate, press in the plunger with a pointed object or screwdriver and then turn clockwise by 90° until the stop is reached:

- Connection from the valve position to ports 2 and 4 is blocked
- The components connected to ports 2 and 4 are not exhausted

Pilot air supply

Internal pilot air supply

Internal pilot air supply can be selected with an operating pressure between 1.5 ... 8 bar, 2.5 ... 8 bar, or 3 ... 8 bar (depending on the valve used).

The pilot air supply is branched from duct 1 (compressed air supply) using an internal connection.


External pilot air supply

External pilot air supply is required for vacuum operation or operating pressures above 8 bar. The port for external pilot air supply (port 12/14) is located on the manifold rail.

Pilot exhaust air

The pilot air is exhausted via duct 82/84 of the manifold rail.

Pilot air supply

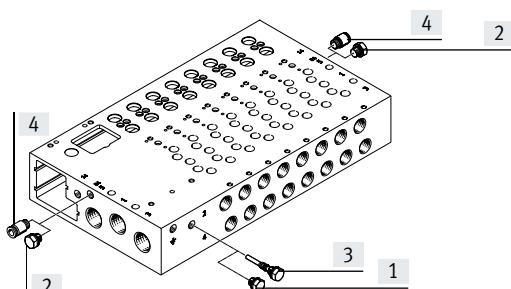


- [1] Blanking plug, short, for internal pilot air
- [2] Blanking plug for duct 12/14 with internal pilot air
- [3] Blanking plug, long, for external pilot air
- [4] Push-in fitting for duct 12/14 with external pilot air

The manifold rails have an internal connection between duct 12/14 and duct 1.

By inserting a blanking plug into this connection, it is possible to switch between internal and external pilot air.

Key features – Pneumatic components

Exhaust functions

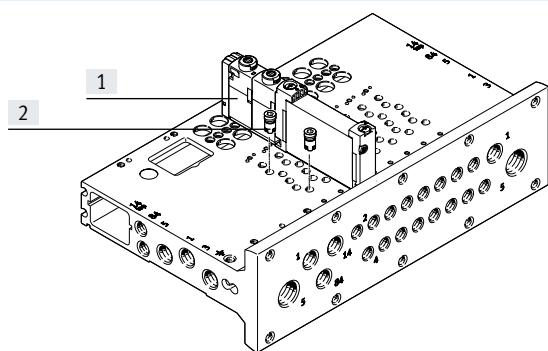

Fixed flow restrictor, self-tapping

The fixed flow restrictor can be used to permanently set the exhaust flow rate in ducts 3 and 5.

The fixed flow restrictors are screwed into ducts 3 and 5 in the manifold rail.

Please see the relevant assembly instructions:
[www.festo.com/catalogue/...](http://www.festo.com/catalogue/)
 → Support/Downloads

Check valve

Check valves block the flow towards the valves if back pressure develops in ducts 3 and 5 in the case of a high exhaust capacity, thereby preventing actuators from switching unexpectedly. The check valves are screwed into ducts 3 and 5 in the manifold rail.

Note

- It is not possible to use a check valve and a fixed flow restrictor at the same time (in the same duct).
- When screwing in again, use the threads already present.

Please see the relevant assembly instructions:
[www.festo.com/catalogue/...](http://www.festo.com/catalogue/)
 → Support/Downloads

[1] Valves VUVG

[2] Fixed flow restrictor, self-tapping/check valve

Key features – Pneumatic components

Operation with different pressures

Vacuum operation

Points to note with 3/2-way valves with pneumatic spring return:

The 3/2-way valves are available in a design with two valves in one valve body and with pneumatic spring return. With these valves, the force for the return movement is obtained from port 1.

Vacuum operation is only possible at port 3 and 5, not at port 1. With external pilot air supply, vacuum can be connected at port 1, 3, 5 of the 5/2-way and 5/3-way valves.

Vacuum operation is not possible when using the shut-off function (hot swap).


Reverse operation

The 3/2-way valves with pneumatic spring are not suitable for reverse operation, since at least the minimum pilot pressure must be present in duct 1.

Note

Pressure must be present at port 1.

Pressure divider (internal pilot air)

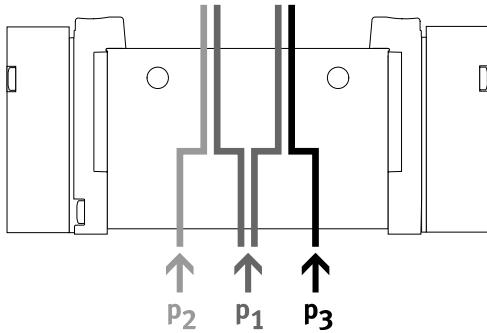


- Two different pressures are required
- Different pressures can be connected at duct 1, 3 and 5

Benefits

Any pressure or vacuum can be connected at duct 3 and 5 both with external and internal pilot air

Vacuum, ejector pulse and normal position

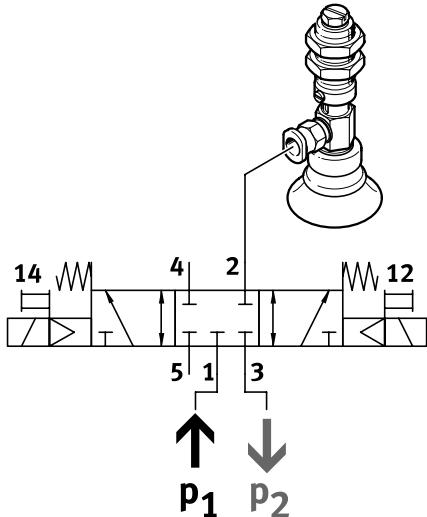


Vacuum, ejector pulse and normal position with internal pilot air can be achieved by connecting vacuum at duct 3 and pressure for the ejector pulse at duct 1.


Key features – Pneumatic components

Standard nominal flow rate q_{nN} as a function of the number of switched valves n

Size 10 mm, 5/2-way valves

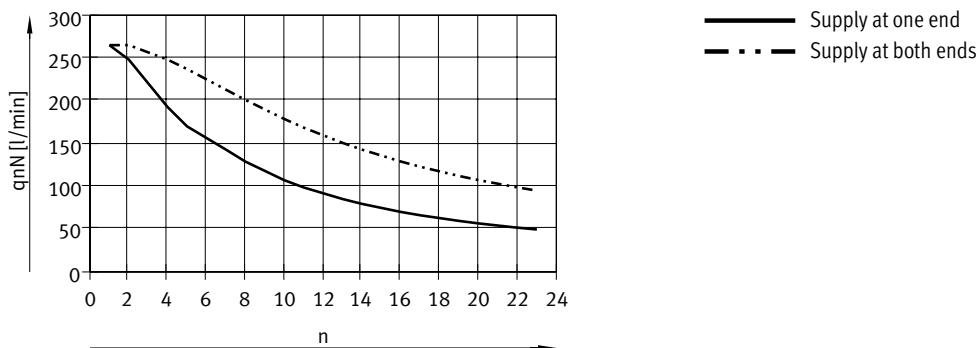



Size 14 mm

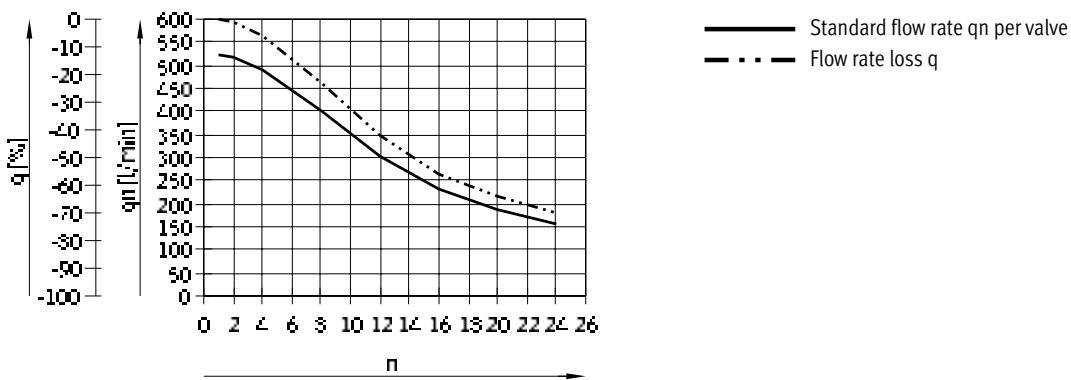


Pilot pressure p_2 as a function of operating pressure p_1

2x 3/2-way valve, mechanical spring return

2x 3/2-way valve, pneumatic spring return

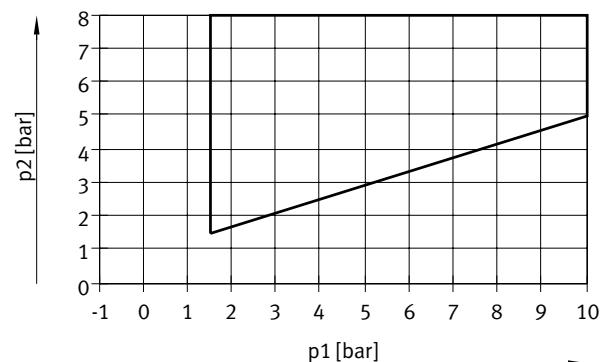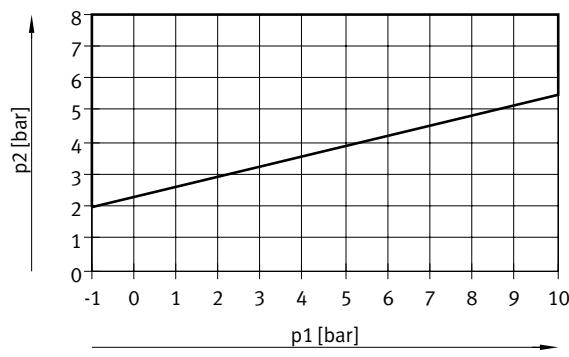

3/2-way single solenoid valve and 5/2-way single solenoid valve

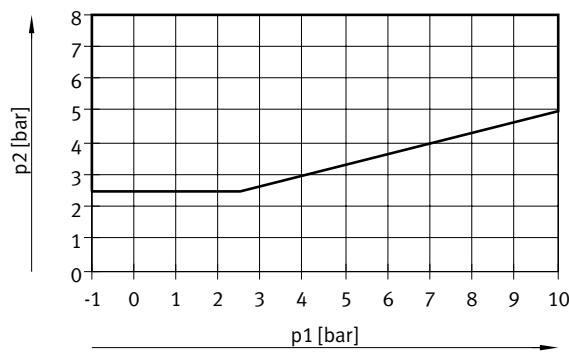

Key features – Mounting

Valve terminal mounting


Sturdy terminal mounting via:

- Four through-holes for wall mounting
- H-rail mounting
- Mounting bracket



Note
Use the M5 thread provided on the manifold block for earthing the valve terminal.


Wall mounting

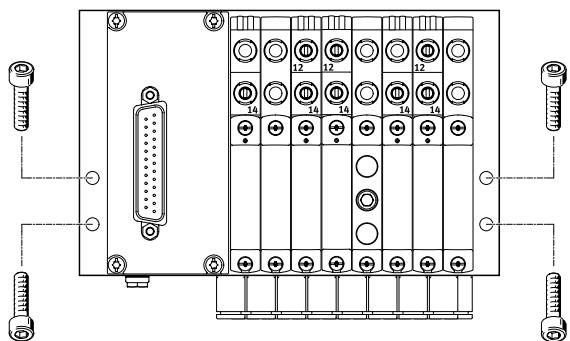

Screw the valve terminal VTUG onto the mounting surface using four M4 screws.

The mounting holes are on the left and right side of the manifold rail.

H-rail mounting

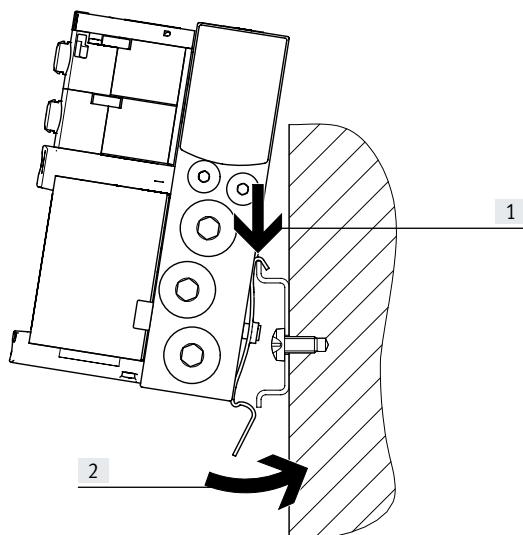

Clip the valve terminal VTUG onto the H-rail (see arrow [1]).

Swivel the valve terminal onto the H-rail and secure in place with the clamping element (see arrow [2]).

Attach the manifold rails to an H-rail to EN 60715-TH35 using the mounting VAME-T-M4.

Use the following screws for mounting (to DIN 912):

- Size 10: M4x30
- Size 14: M4x40



Note
Permissible use of the H-rail:

- Manifold rail with outlet on the side or on top.
- H-rail exclusively for horizontal mounting.
- Vibration/shock loads are not permissible for this type of mounting.

Size 14:


- Use H-rail type TH35-7.5 for valve terminals with a maximum of 8 valve positions.
- Use H-rail type TH35-15 for mounting in accordance with the standard and for more than 8 valve positions.

Key features – Mounting

Hood for VTUG-VI-EX2

Description

→ page 28

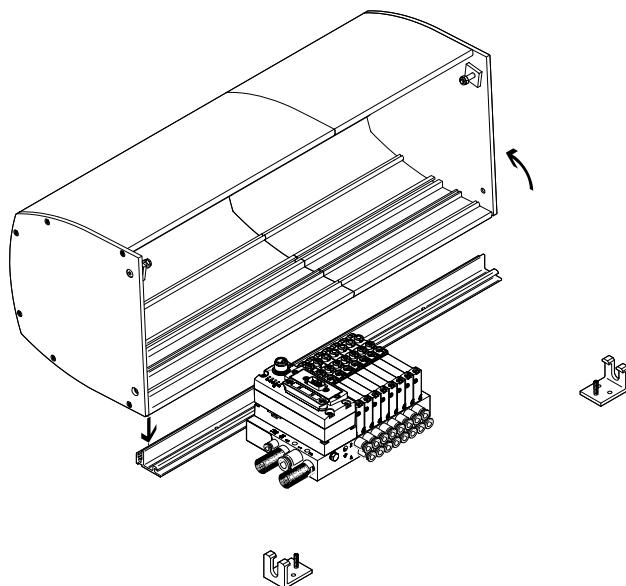

The VTUG-VI-EX2 hood CAFC is a space- and cost-saving alternative to a control cabinet.

It is designed as an extruded aluminum profile and is installed on a mounting plate.

The valve terminal has a well-protected design and is quick to install without the need for complex cabinet through-feed for connecting cables and tubing.

The rail and the two mounting brackets are mounted on a base plate. The hood is attached to the retaining rail and secured with two screws. There is also a stand-by position (detent of the hood in the open position).

The hood is locked using two side screws (which meet the requirements for a special fastener in compliance with ATEX).

The VTUG-VI-EX2 hood can be ordered online using the valve terminal configurator.

Advantages of the VTUG-VI-EX2 hood

- Impact protection (min. 7 J) for the modules underneath in combination with a suitable mounting plate provided by the user
- Protection against electrostatic discharge by using electrically conductive materials and the option of connecting an earth wire
- Protection against disconnection of live plug connectors (by securing the hood with at least one special fastener to EN 60079-0, 9.2 and 20)
- UV protection for the VTUG modules underneath

Points to note when using the VTUG-VI-EX2 hood

- VTUG-VI-EX2 power supply via angled plugs, no T plugs, no push-pull
- Electrical supply plate/additional supply only possible with angled plug
- Use of larger fittings (for tubing O.D. 12 mm and larger) only possible with the angled design
- Ducted exhaust air only with elbow connector
- The permissible ambient temperature range of the valve terminal is reduced by 5°C.

Note

The VTUG-VI-EX2 hood has no influence on the ATEX classification of the valve terminal or of the VTUG-VI-EX2 terminal.


The VTUG-VI-EX2 hood has no influence on the IP degree of protection of the valve terminal or of the VTUG-VI-EX2 terminal.

The VTUG-VI-EX2 hood does not protect against the effects of the weather in installations that are not in enclosed spaces.

Key features – Mounting

Hood for VTUG-VI-EX2

Assembly

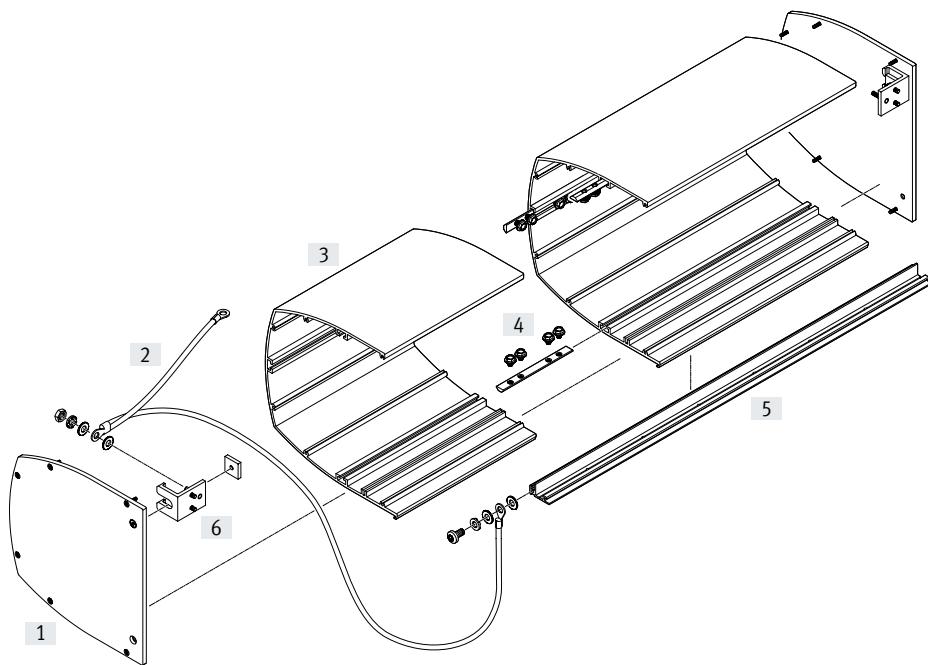

Procedure:

- Assemble the rail and mounting bracket included in the mounting kit
 - Attach the earthing cable
 - Assemble the hood (if applicable, screw together several hood sections and attach the side covers)
 - Attach and secure the hood
- [1] Side cover
[2] Earthing cable
[3] Hood section
[4] Slot nut with screws, for joining the hood sections
[5] Rail
[6] Mounting bracket

Technical data

Weight:


- Hood: approx. 500 g per 100 mm of length
- Mounting rail: approx. 550 g per 1000 mm of length
- Side pieces: approx. 500 g per side

- Ambient temperature $-5 \dots +50^\circ\text{C}$
- RoHS-compliant

Key features – Mounting


Manual override (MO)

MO with automatic return (non-detenting),

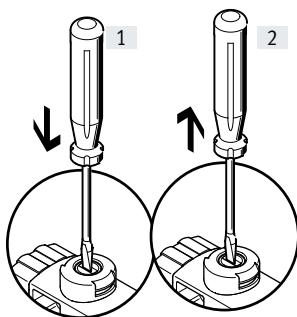


- [1] Press in the plunger of the MO with a pointed object or screwdriver.
The pilot valve switches and actuates the main valve.
- [2] Remove the pointed object or screwdriver.
The spring force pushes the plunger of the manual override back.
The pilot valve returns to its normal position as does the main single solenoid valve (not the case with double solenoid valve code J).

MO with locking (detenting)

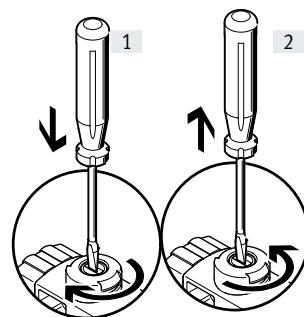


- [1] Press in the plunger of the MO with a pointed object or screwdriver until the valve switches and then turn the plunger clockwise by 90° until the stop is reached.
The valve remains actuated
- [2] Turn the plunger 90° anti-clockwise until the stop is reached and then remove the pointed object or screwdriver. The spring force pushes the plunger of the manual override back.
The valve returns to its normal position (not with double solenoid valve code J).

MO non-detenting – with coded cover cap

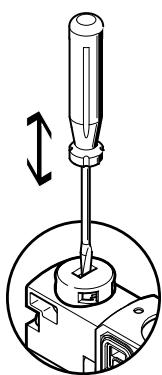


MO is actuated by pushing it with a pointed object or screwdriver and reset by spring force (detenting position prevented by coded cover cap).

MO detenting without tools – mounting

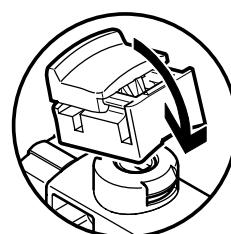


Turn MO to clip it onto the pilot valve.
The MO cap can then be operated (detenting) without tools.

MO detenting without tools – actuation

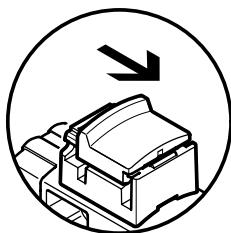

- Sliding the cap for the MO with latch in the direction of the arrow results in:
- Cap locks into the end position
 - The pilot valve switches and actuates the main valve.

MO detenting without tools – actuation

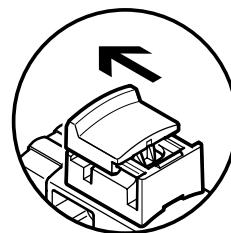


- Sliding the cap for the MO with latch in the direction of the arrow results in:
- Cap locks into the end position
 - The spring force pushes the plunger of the manual override back.
 - The pilot valve returns to its normal position as does the main single solenoid valve (not the case with double solenoid valve code J).

Key features – Mounting

Inscription system

Inscription label holder

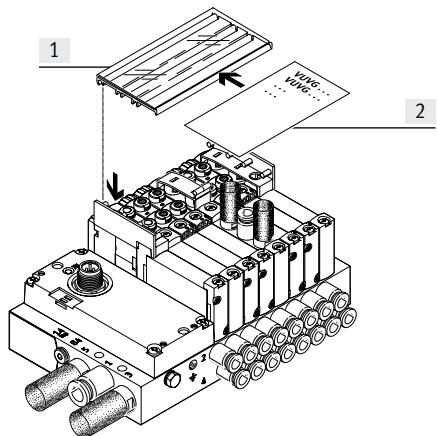

- [1] Inscription label holders AS-CF-H-L1 (code TT)

- [2] Inscription field

Mount inscription label holders to label the valves. Open the inscription label holder to insert the inscription label and actuate the manual override. The inscription label holders are available in different sizes depending on the number of valve positions.


 **Note**

Do not engage the manual override before mounting the inscription label holder.

When mounted, the retainer for the inscription label holder covers the manual override of the valves beneath it.

The manual override for the two valves under the retainers of the inscription label holder can then only be operated as non-detenting.

Inscription label holders

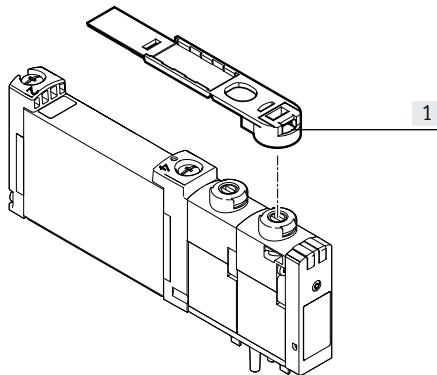

- [1] Inscription label holders ASLR-D-L1 (code TV)

Use inscription label holders ASLR-D-L1 (code TV) to label individual valves.

The inscription label holder is placed directly on the manual override.

 **Note**

Do not engage the manual override before mounting the inscription label holder.

After the retaining brackets are fitted, the manual override can only be operated as non-detenting.

Overview of valve functions

Valve	Valve code	Description	Size	
			M5/M7	G1/8
3/2-way valve, pneumatic/mechanical spring				
	M32C-R	Normally closed	■	-
	M32U-R	Normally open	■	-
3/2-way valve, pneumatic spring				
	M32C-A	Normally closed	-	■
	M32U-A	Normally open	-	■
2x 3/2-way valve, pneumatic spring				
	T32C-A	Normally closed	■	■
	T32U-A	Normally open	■	■
	T32H-A	1x normally open, 1x normally closed	■	■
2x 3/2-way valve, mechanical spring				
	T32C-M	Normally closed	■	■
	T32U-M	Normally open	■	■
	T32H-M	1x normally open, 1x normally closed	■	■

Valve terminal VTUG-EX with multi-pin plug connection and fieldbus interface

Overview of valve functions

Valve	Valve code	Description	Size
			M5/M7 G1/8
5/2-way valve, double solenoid			
	B52	External pilot air supply	■ ■
5/2-way valve, single solenoid			
	M52-A	Pneumatic spring	- ■
	M52-M	Mechanical spring	■ ■
	M52-R	Pneumatic/mechanical spring	■ -
5/3-way valve			
	P53C	Mid-position closed	■ ■
	P53U	Mid-position pressurised	■ ■
	P53E	Mid-position exhausted	■ ■

Type codes -EX

001	Series		013	Pin allocation	
VTUG	Valve terminal			Standard	
002	Size		V20	For 12 double solenoid/bistable or 24 single solenoid/monostable valves	
10	Size 10		V21	For 18 double solenoid/bistable and 6 single solenoid/monostable valves	
14	Size 14		V22	For 10 double solenoid/bistable valves	
003	Valve control		V23	For 8 double solenoid/bistable and 4 single solenoid/monostable valves	
M	Multi-pin		V24	For 4 double solenoid/bistable and 12 single solenoid/monostable valves	
V	Interface for fieldbus module		V25	For 20 single solenoid/monostable valves	
004	Multi-pin plug connection type		V26	For 24 double solenoid/bistable valves	
	None				
SD	Sub-D plug		014	Material of fittings	
005	Circuitry			Standard	
	None		B2	Brass, nickel-plated	
R	Holding current reduction with integrated protective circuit		V1	Stainless steel	
006	Bus protocol/activation		015	Compressed air supply connection	
	None		Q6	Push-in connector 6 mm	
LK	IO-Link®		Q8	Push-in connector 8 mm	
PT	I-Port interface		Q10	Push-in connector 10 mm	
007	Degree of protection, electrical system		G18	G1/8	
	Standard		G14	G1/4	
S8	IP67		016	Compressed air supply connection position	
008	Valve type			Both sides	
B	Sub-base valve		B	Underneath	
009	Nominal operating voltage		L	Left	
1	24 V DC		R	Right	
010	Manual override		FD	Front, both sides, for control cabinet	
H	Non-detenting		FDL	Front, left, for control cabinet	
S	Covered		FDR	Front, right, for control cabinet	
Y	Detenting				
T	Non-detenting, detenting with accessories				
011	Pilot air		017	Compressed air supply connection type	
	Internal			Straight	
Z	External		A	Elbow fitting	
012	Number of pins		018	Exhaust connection	
	None		DQ	Push-in fitting	
25	25-pin		DT	Thread	
26	26-pin		U	Silencer	
44	44-pin				
50	50-pin				
			019	Exhaust connection position	
				Both sides	
			B	Underneath	
			L	Left	
			R	Right	
			FD	Front, both sides, for control cabinet	
			FDL	Front, left, for control cabinet	
			FDR	Front, right, for control cabinet	

Type codes -EX

020	Valve connection
G18	G1/8
G14	G1/4
M5	M5
M7	M7
Q3	Push-in connector 3 mm
Q4	Push-in connector 4 mm
QH4	Push-in connector 4 mm, with connecting thread M7
Q6	Push-in connector 6 mm
QH6	Push-in connector 6 mm, with connecting thread M7
Q8	Push-in connector 8 mm
TH14	Push-in connector 1/4", M7
TH316	Push-in connector 3/16", M7

021	Push-in connection type
S	Screwed

022	Valve connection position
	Front, straight outlet
FD	Front, straight outlet, for control cabinet
U	Underneath, straight outlet

023	Flow control function, connections 3 and 5
	None
FE	Fixed flow restrictor nominal size 0.5 mm
FF	Fixed flow restrictor nominal size 0.6 mm
FG	Fixed flow restrictor nominal size 0.7 mm
FH	Fixed flow restrictor nominal size 0.85 mm
FJ	Fixed flow restrictor nominal size 1 mm
FK	Fixed flow restrictor nominal size 1.05 mm
FL	Fixed flow restrictor, nominal size 1.15 mm
FM	Fixed flow restrictor nominal size 1.2 mm
FN	Fixed flow restrictor nominal size 1.4 mm
FP	Fixed flow restrictor nominal size 1.55 mm
FQ	Fixed flow restrictor, nominal size 1.6 mm
FR	Fixed flow restrictor nominal size 1.8 mm
ZS	Exhaust air

024	Shut-off function
	None
SH	With hot swap for supply air ports
WH	With hot swap for supply air ports and working ports

025	Position function
P	5/2-way valve, single solenoid/monostable, pneumatic/mechanical spring
M	4/2 or 5/2-way valve, single solenoid/monostable, pneumatic spring
A	5/2 or 4/2-way valve, single solenoid/monostable, mechanical spring
J	4/2 or 5/2-way double pilot valve
N	1x3/2 or 2x3/2-way valve, normally open, pneumatic spring
VN	2x3/2-way valve, normally open, mechanical spring
K	1x3/2 or 2x3/2-way valve, normally closed, pneumatic spring
VK	2x3/2-way valve, normally closed, mechanical spring
H	2x3/2-way valve, 1x normally closed, 1x normally open, pneumatic spring
VH	2x3/2-way valve, 1x normally closed, 1x normally open, mechanical spring
B	5/3- or 4/3-way valve, mid-position pressurised
G	5/3 or 4/3-way valve, mid-position closed
E	5/3 or 4/3-way valve, mid-position exhausted
L	Vacant position
S	Additional power supply
SD	Additional supply, exhaust, blanking plug
SW	Additional supply, exhaust, push-in fitting
VW	1x3/2-way valve, normally open, external compressed air supply
VX	1x3/2-way valve, normally closed, external compressed air supply
VZ	Without valve


026	Working port, duct 2
	As selected
CC	Blanking plug
QG18	G1/8
QM5	M5
QM7	M7
Q4	Push-in connector, 4 mm
QH4	Push-in connector 4 mm, with connecting thread M7
Q6	Push-in connector 6 mm
QH6	Push-in connector 6 mm, with connecting thread M7
Q8	Push-in connector 8 mm
Q3	Push-in connector, 3 mm
TH14	Push-in connector 1/4", M7
TH316	Push-in connector 3/16", M7

027	Working port, duct 4
	As selected
XCC	Blanking plug
XQG18	G1/8
XQM5	M5
XQM7	M7
XQ3	Push-in connector 3 mm
XQ4	Push-in connector 4 mm
XQH4	Push-in connector 4 mm, with connecting thread M7
XQ6	Push-in connector 6 mm
XQH6	Push-in connector 6 mm, with connecting thread M7
XQ8	Push-in connector 8 mm
XTH14	Push-in connector 1/4", M7
XTH316	Push-in connector 3/16", M7

Datasheet Valve terminal VTUG-...-EX2, VTUG...-EX2E

Variants
VTUG-...-EX2
VTUG-...-EX2E (for installation in
the housing)

Modular system
part no. 8060699

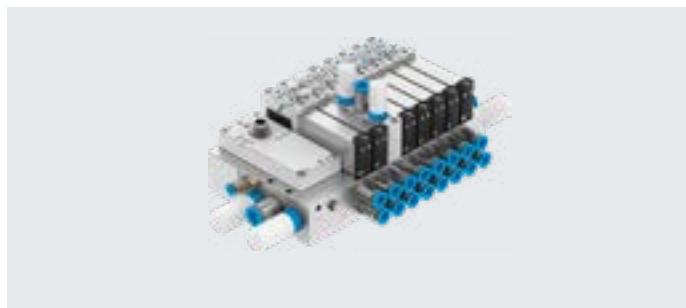

General technical data

Design	Piston spool
Valve terminal design	Fixed grid
Maximum number of valve positions	24
Maximum number of pressure zones	13
Valve functions	2x3/2-way, single solenoid, open 2x3/2-way, single solenoid, open/closed 3/2-way, closed, single solenoid, closed 5/2-way, double solenoid 5/2-way, single solenoid 5/3-way, pressurised 5/3-way, exhausted 5/3-way, closed
Pilot air port 12/14	G1/8
Signal status indication	LED
Sealing principle	Soft
Type of control	Piloted
Valve size	[mm]
	10
	14
Actuation type	Electrical
Pilot air supply	External Internal
Suitable for vacuum	Yes
Exhaust air function	Can be throttled
Maximum standard nominal flow rate	[l/min]
	330 at 10 mm
	630 at 14 mm
Standard nominal flow rate	[l/min]
	130 ... 1150
Certification	c UL us - Recognized (OL) RCM

Operating and environmental conditions

Operating medium	Compressed air to ISO 8573-1:2010 [7:4:4]	
Pilot medium	Compressed air to ISO 8573-1:2010 [7:4:4]	
Note on the operating/pilot medium	Lubricated operation possible (in which case lubricated operation will always be required)	
Operating pressure	[MPa]	-0.09 ... +1
	[bar]	-0.9 ... +10
Pilot pressure	[MPa]	0.15 ... +0.8
	[bar]	1.5 ... 8
Ambient temperature	[°C]	-5 ... +60
Temperature of medium	[°C]	-5 ... +60
Storage temperature	[°C]	-10 ... +60
Corrosion resistance class CRC ¹⁾		2

1) More information: www.festo.com/x/topic/crc

Valve terminal VTUG-EX with multi-pin plug connection and fieldbus interface

Datasheet VTUG-...-EX2, VTUG...-EX2E

Electrical data		
Electrical actuation	Fieldbus	
	I-Port	
	IO-Link®	
	Multi-pin plug	
Operating voltage	[V DC]	24
Permissible voltage fluctuations	[%]	± 10
		± 25
Nominal pick-up current per solenoid coil	[mA]	47 up to 20 ms
Nominal current with current reduction	[mA]	15.5 after 20 ms
Degree of protection to EN 60529 ¹⁾	IP20	
	IP65	

Safety characteristics





Shock resistance	Shock test with severity level 2 to FN 942017-5 and EN 60068-2-27
Vibration resistant	Transport application test with severity level 2 to FN 942017-4 and EN 60068-2-6

1) More information: www.festo.com/catalogue/... → Support/Downloads.

Information on materials

Seals	HNBR NBR
Note on materials	RoHS-compliant
LABS (PWIS) conformity	VDMA24364-B2-L



EX2 accessories – Valve terminal

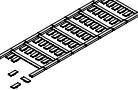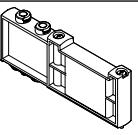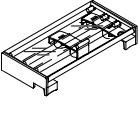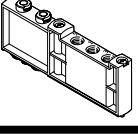Ordering data		Description	Part no.	Type	PU ¹⁾
Cover cap					
	–		540897	VMPA-HBT-B	1
			540898	VMPA-HBV-B	1
			8002234	VAMC-L-1CD	1
Inscription label					
	–		565306	ASLR-C-E4	40
Separator					
	–		569994	VABD-6-B	1
			569996	VABD-10-B	1
Inscription label holders					
	–		570818	ASLR-D-L1	1
Cover plate					
	–		573422	VABB-L1-10-T	1
			573488	VABB-L1-14-T	1
Inscription label holder					
	–		573453	ASCF-H-L1-10-4V	1
			573457	ASCF-H-L1-10-8V	1
			573460	ASCF-H-L1-10-12V	1
			573461	ASCF-H-L1-10-16V	1
			573463	ASCF-H-L1-10-24V	1
			573511	ASCF-H-L1-14-4V	1
			573515	ASCF-H-L1-14-8V	1
			573519	ASCF-H-L1-14-12V	1
			573520	ASCF-H-L1-14-16V	1
			573522	ASCF-H-L1-14-24V	1
Supply plate					
	–		573924	VABF-L1-10-P3A4-M7-T1	1
			573925	VABF-L1-14-P3A4-G18-T1	1

1) Packaging unit.




Valve terminal VTUG-EX with multi-pin plug connection and fieldbus interface

EX2 accessories – Valve terminal

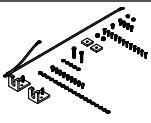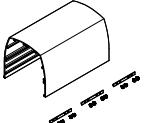Ordering data		Description	Part no.	Type	PU ¹⁾
Fixed flow restrictor					
	-		8047346	VFFG-T-F4-5	1
			8047347	VFFG-T-F4-6	1
			8047348	VFFG-T-F4-7	1
			8047349	VFFG-T-F4-8	1
			8047350	VFFG-T-F4-10	1
			8047351	VFFG-T-F4-12	1
			8047352	VFFG-T-F4-15	1
			8047353	VFFG-T-F6-7	1
			8047354	VFFG-T-F6-11	1
			8047355	VFFG-T-F6-18	1
			8047356	VFFG-T-F6-16	1
			8047357	VFFG-T-F6-10	1
			8047358	VFFG-T-F6-8	1
			8047359	VFFG-T-F6-14	1
Check valve					
	-		8047364	VABF-L1-10H-H2	1
			8047365	VABF-L1-14-H2	1
Hood Datasheets → Internet: cafm/cafc					
	Mounting rail for attaching the hood		196 mm	3307385	CAFM-X1-R-200
			296 mm	3307386	CAFM-X1-R-300
			396 mm	3307387	CAFM-X1-R-400
			496 mm	3307388	CAFM-X1-R-500
			596 mm	3307389	CAFM-X1-R-600
	Mounting kit for VTUG hood		572257	CAFC-X1-BE	1
	Hood section for VTUG terminal including mounting attachments for connecting several hood sections in series	VTUG-10-4 VTUG-10-8/12-14-4 VTUG-10-16/24-14-8/12 VTUG-14-16 VTUG-14-24	200 mm 300 mm 400 mm 600 mm	8127858 8127859 8127860 8127861 8127862	CAFC-X1-GAL-200-Z CAFC-X1-GAL-300-Z CAFC-X1-GAL-400-Z CAFC-X1-GAL-600-Z CAFC-X1-GAL-600-Z
	Kit for any hood section for terminal VTUG	-		CAFC-... → Internet: cafc	1







1) Packaging unit.

EX2E accessories – Valve terminal

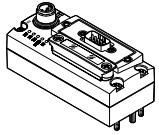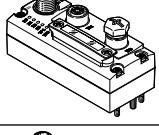
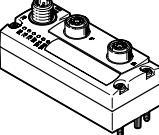
Ordering data – Bus node CTEU		Part no.	Type
	Description		
Bus node			
	Profibus DP bus node	Exclusively for use with VTUG-EX2E (in the Ex control cabinet)	8107588 CTEU-PB-EX1C
	EtherNet/IP bus node		8107591 CTEU-EP-EX1C
	PROFINET RT bus node		8107589 CTEU-PN-EX1C

Valve terminal VTUG-EX with multi-pin plug connection and fieldbus interface

EX2E accessories – Valve terminal

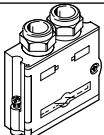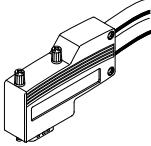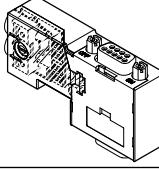
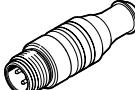
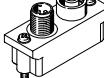
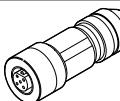
Ordering data – Accessories for CTEU-PB-EX1C		Part no.	Type
	Description		
Plug socket			
	Socket for micro style connection, A-coded	18324	FBSD-GD-9-5POL
Plug			
	Sub-D plug, straight	532216	FBS-SUB-9-GS-DP-B
	Sub-D plug, angled	533780	FBS-SUB-9-WS-PB-K
	Straight plug, M12x1, 5-pin, for assembling a connecting cable compatible with FBA-2-M12-5POL-RK	1066354	NECU-M-S-B12G5-C2-PB
	Sub-D plug, straight, with terminating resistor and programming interface	574589	NECU-S1W9-C2-APB
Terminating resistor			
	Terminating resistor, M12, B-coded for PROFIBUS	1072128	CACR-S-B12G5-220-PB
Bus connection			
	Bus connection M12 adapter, B-coded	533118	FBA-2-M12-5POL-RK
Fitting			
	Straight socket, M12x1, 5-pin, for assembling a connecting cable compatible with FBA-2-M12-5POL-RK	1067905	NECU-M-B12G5-C2-PB
	Threaded sleeve for Sub-D	533000	UNC4-40/M3X8

EX2E accessories – Valve terminal

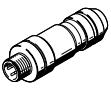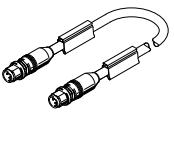Ordering data – Accessories for CTEU-PN-EX1C and CTEU-EP-EX1C		Part no.	Type		
	Description				
Plug socket					
	Socket for micro style connection, A-coded	18324	FBSD-GD-9-5POL		
Plug					
	Plug M12x1, 4-pin, D-coded	543109	NECU-M-S-D12G4-C2-ET		
Connecting cable					
	Straight plug, M12x1, 4-pin, D-coded	Straight plug, M12x1, 4-pin, D-coded	0.5 m 1 m 3 m 5 m 10 m	8040446 8040447 8040448 8040449 8040450	NEBC-D12G4-ES-0.5-S-D12G4-ET NEBC-D12G4-ES-1-S-D12G4-ET NEBC-D12G4-ES-3-S-D12G4-ET NEBC-D12G4-ES-5-S-D12G4-ET NEBC-D12G4-ES-10-S-D12G4-ET
		Straight plug, RJ45, 8-pin	1 m 3 m 5 m 10 m	8040451 8040452 8040453 8040454	NEBC-D12G4-ES-1-S-R3G4-ET NEBC-D12G4-ES-3-S-R3G4-ET NEBC-D12G4-ES-5-S-R3G4-ET NEBC-D12G4-ES-10-S-R3G4-ET
		Open end, 4-core	5 m	8040456	NEBC-LE4-ES-5-D12G4-ET
		Suitable for energy chains	5 m 7.5 m 10 m	574321 574322 574323	NEBU-M12G5-E-5-Q8N-M12G5 NEBU-M12G5-E-7.5-Q8N-M12G5 NEBU-M12G5-E-10-Q8N-M12G5
		Standard	0.5 m	570733 8003617	NEBU-M12W5-K-0.5-M12W5 NEBU-M12G5-K-0.5-M12W5
	Angled – angled	Standard	2 m	570734	NEBU-M12W5-K-2-M12W5
	Straight – angled			8003618	NEBU-M12G5-K-2-M12W5
	Angled – angled				
	Straight – angled				

Valve terminal VTUG-EX with multi-pin plug connection and fieldbus interface

EX2E accessories – Valve terminal

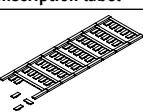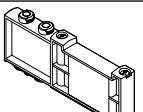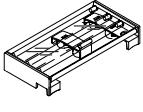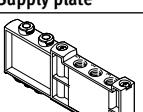Ordering data		Description	Part no.	Type	PU ¹⁾
Cover cap					
	–		540897	VMPA-HBT-B	1
			540898	VMPA-HBV-B	1
			8002234	VAMC-L-1CD	1
Inscription label					
	–		565306	ASLR-C-E4	40
Separator					
	–		569994	VABD-6-B	1
			569996	VABD-10-B	1
Inscription label holders					
	–		570818	ASLR-D-L1	1
Cover plate					
	–		573422	VABB-L1-10-T	1
			573488	VABB-L1-14-T	1
Inscription label holder					
	–		573453	ASCF-H-L1-10-4V	1
			573457	ASCF-H-L1-10-8V	1
			573460	ASCF-H-L1-10-12V	1
			573461	ASCF-H-L1-10-16V	1
			573463	ASCF-H-L1-10-24V	1
			573511	ASCF-H-L1-14-4V	1
			573515	ASCF-H-L1-14-8V	1
			573519	ASCF-H-L1-14-12V	1
			573520	ASCF-H-L1-14-16V	1
			573522	ASCF-H-L1-14-24V	1
Supply plate					
	–		573924	VABF-L1-10-P3A4-M7-T1	1
			573925	VABF-L1-14-P3A4-G18-T1	1

1) Packaging unit.

EX2E accessories – Valve terminal

Ordering data		Part no.	Type	PU ¹⁾
Description				
Fixed flow restrictor				
	–	8047346	VFFG-T-F4-5	1
		8047347	VFFG-T-F4-6	1
		8047348	VFFG-T-F4-7	1
		8047349	VFFG-T-F4-8	1
		8047350	VFFG-T-F4-10	1
		8047351	VFFG-T-F4-12	1
		8047352	VFFG-T-F4-15	1
		8047353	VFFG-T-F6-7	1
		8047354	VFFG-T-F6-11	1
		8047355	VFFG-T-F6-18	1
		8047356	VFFG-T-F6-16	1
		8047357	VFFG-T-F6-10	1
		8047358	VFFG-T-F6-8	1
		8047359	VFFG-T-F6-14	1
Check valve				
	–	8047364	VABF-L1-10H-H2	1
		8047365	VABF-L1-14-H2	1
Screw set				
	–	8092501	VAME-S-M5-16-R1-P10	1

1) Packaging unit.

Datasheets → Internet: vamer

Datasheet – Sub-base valve M5/M7

Function
 3/2C, 3/2U
 2x 3/2C, 2x 3/2U, 2x 3/2H
 5/2-way, single solenoid
 5/2-way, double solenoid
 5/3C, 5/3U, 5/3E

- - Size 10 mm

- - Flow rate
 130 ... 300 l/min

- - Voltage
 24 V DC

Circuit diagrams → page 17



General technical data		T32-A	T32-M			M32-R	M52-R	B52	M52-M	P53											
Valve function		C ¹⁾	U ²⁾	H ⁴⁾	C ¹⁾	U ²⁾	H ⁴⁾	C ¹⁾	U ²⁾	E ³⁾											
Normal position																					
Stable position		Single solenoid					Double solenoid	Single solenoid													
Pneumatic spring return	Yes	No		No	Yes ⁵⁾		–	No	–												
Mechanical spring return	No	Yes		Yes	Yes ⁵⁾		–	Yes	Yes												
Vacuum operation at port 1	No	With external pilot air																			
Design	Piston spool																				
Sealing principle	Soft																				
Actuation type	Electrical																				
Type of control	Piloted																				
Pilot air supply	External																				
Exhaust air function	Can be throttled																				
Manual override	Choice of non-detenting, covered, non-detenting/detenting or detenting																				
Type of mounting	On manifold rail																				
Mounting position	Any																				
Overlap	Positive overlap							Indeterminate overlap													
Signal status indication	LED																				
Standard nominal flow rate M5/M7	[l/min]	160	140	140	300	260	260														
Flow rate on manifold rail M5, front	[l/min]	150	130	130	220	220	200														
Flow rate on manifold rail M7, front	[l/min]	160	140	140	270	240	250														
Flow rate on manifold rail M7, underneath	[l/min]	160	140	140	300	260	260														
Size	[mm]	10																			
Port	1, 3, 5, 12/14, 82/84	On manifold rail																			
	2, 4	On manifold rail																			
Product weight	[g]	59		53	60	53	58														
Certification		c UL us - Recognized (OL) RCM																			
CE marking (see declaration of conformity) ⁶⁾		To EU EMC Directive																			
Corrosion resistance class CRC ⁷⁾		2																			

1) C=Normally closed/mid-position closed

2) U=Normally open/mid-position pressurised

3) E=Mid-position exhausted

4) H=2x 3/2-way valve in one housing with 1x normally closed and 1x normally open

5) Combined reset method

6) For information about the area of use, see the EC declaration of conformity at: [www.festo.com/catalogue/...](http://www.festo.com/catalogue/) → Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

7) More information: www.festo.com/x/topic/crc

Datasheet – Sub-base valve M5/M7

Operating and environmental conditions							
Valve function	T32-A ¹⁾	T32-M ²⁾	M32-R ³⁾	M52-R ³⁾	B52	M52-M ²⁾	P53
Operating medium	Compressed air to ISO 8573-1:2010 [7:4:4]						
Operating pressure	Internal pilot air supply [MPa]	0.15 ... 0.8	0.2 ... 0.8	0.15 ... 0.8		0.3 ... 0.8	
	[bar]	1.5 ... 8	2 ... 8	1.5 ... 8		3 ... 8	
External pilot air supply	[MPa]	0.15 ... 1	-0.09 ... 1			-0.09 ... 0.8	-0.09 ... 1
	[bar]	1.5 ... 10	-0.9 ... 10			-0.9 ... 8	-0.9 ... 10
Pilot pressure ⁴⁾	[MPa]	0.15 ... 0.8	0.2 ... 0.8	0.15 ... 0.8		0.3 ... 0.8	
	[bar]	1.5 ... 8	2 ... 8	1.5 ... 8		3 ... 8	
Ambient temperature	[°C]	-5 ... +60					
Temperature of medium	[°C]	-5 ... +60					
LABS (PWIS) conformity	Valve terminals VTUG-...	VDMA24364-B1/B2-L					

1) Pneumatic spring

2) Mechanical spring

3) Mixed, pneumatic/mechanical spring

4) See graphs on page 11

Electrical data

Electrical connection	Via E-box
Operating voltage	[V DC] 24 ±10%
Power consumption per valve solenoid	[W] 1/0.4 (after 25 ms)
Duty cycle	[%) 100
Max. switching frequency	[Hz] 3
Degree of protection to EN 60529 ¹⁾	Valve terminal VTUG (for control cabinet installation) IP69K
	Valve terminal VTUG-VI-EX2 IP20, IP65

1) Depending on the configuration selected

Safety characteristics

Max. positive test pulse with logic 0	[μs] 1600
Max. negative test pulse with logic 1	[μs] 3000
Shock resistance	Shock test with severity level 2 to FN 942017-5 and EN 60068-2-27
Vibration resistant	Transport application test with severity level 2 to FN 942017-4 and EN 60068-2-6

Information on materials

Housing	Wrought aluminium alloy
Seals	HNBR, NBR
Note on materials	RoHS-compliant

Valve switching times

Valve function	T32-A ¹⁾	T32-M ²⁾	M32-R ³⁾	M52-R ³⁾	B52	M52-M ²⁾	P53
Switching time on	[ms] 8	10	9	9	-	12	12
Switching time off	[ms] 20	20	17	21	-	30	38
Switching time changeover	[ms] -	-	-	-	9	-	16

1) Pneumatic spring

2) Mechanical spring


3) Mixed, pneumatic/mechanical spring

Datasheet – Sub-base valve M5/M7

Dimensions


Download CAD data → www.festo.com

Sub-base valve M5/M7

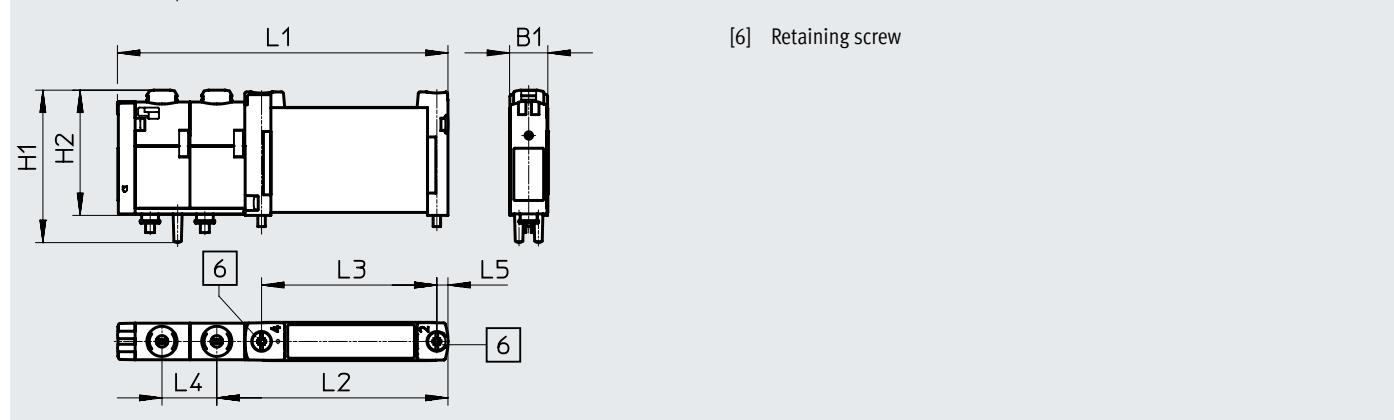

Type	B1	H1	H2	L1	L2	L3	L4	L5
VUVG-B10-...-F-1T1L-EX2C	10.3	40.7	33	88.6	62	47	14.7	3

Ordering data

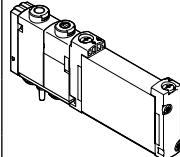Description	Part no.	Type
Sub-base valve M5/M7		
	3/2-way valve	
External pilot air supply	Normally closed, pneumatic/mechanical spring return	8041900 VUVG-B10Z-M32C-RZT-F-1T1L-EX2C
	Normally open, pneumatic/mechanical spring return	8041901 VUVG-B10Z-M32U-RZT-F-1T1L-EX2C
2x 3/2-way valve		
External pilot air supply	Normally closed, pneumatic spring return	8041895 VUVG-B10-T32C-AZT-F-1T1L-EX2C
	Normally open, pneumatic spring return	8041896 VUVG-B10-T32U-AZT-F-1T1L-EX2C
	1x normally open, 1x normally closed, pneumatic spring return	8041897 VUVG-B10-T32H-AZT-F-1T1L-EX2C
	Normally closed, mechanical spring return	8041891 VUVG-B10-T32C-MZT-F-1T1L-EX2C
	Normally open, mechanical spring return	8041898 VUVG-B10-T32U-MZT-F-1T1L-EX2C
	1x normally open, 1x normally closed, mechanical spring return	8041899 VUVG-B10-T32H-MZT-F-1T1L-EX2C
5/2-way valve, single solenoid		
External pilot air supply	Mechanical spring return	8041892 VUVG-B10-M52-MZT-F-1T1L-EX2C
	Pneumatic/mechanical spring return	8041889 VUVG-B10-M52-RZT-F-1T1L-EX2C
5/2-way valve, double solenoid		
External pilot air supply		8041888 VUVG-B10-B52-ZT-F-1T1L-EX2C
5/3-way valve		
External pilot air supply	Mid-position closed, mechanical spring return	8041890 VUVG-B10-P53C-ZT-F-1T1L-EX2C
	Mid-position pressurised, mechanical spring return	8041893 VUVG-B10-P53U-ZT-F-1T1L-EX2C
	Mid-position exhausted, mechanical spring return	8041894 VUVG-B10-P53E-ZT-F-1T1L-EX2C

Datasheet – Sub-base valve G1/8

Function

3/2C, 3/2U

2x 3/2C, 2x 3/2U, 2x 3/2H

5/2-way, single solenoid

5/2-way, double solenoid

5/3C, 5/3U, 5/3E

-  - Size 14 mm-  - Flow rate
350 ... 560 l/min-  - Voltage
24 V DC

Circuit diagrams → page 17



General technical data

Valve function	T32-A	T32-M		M32-A		M52-A	B52	M52-M	P53										
Normal position	C ¹⁾	U ²⁾	H ⁴⁾	C ¹⁾	U ²⁾	H ⁴⁾	C ¹⁾	U ²⁾	—										
Stable position	Single solenoid						Double solenoid	Single solenoid											
Pneumatic spring return	Yes	No		Yes	Yes		—	No	—										
Mechanical spring return	No	Yes		No	No		—	Yes	Yes										
Vacuum operation at port 1	No	With external pilot air																	
Design	Piston spool																		
Sealing principle	Soft																		
Actuation type	Electrical																		
Type of control	Piloted																		
Pilot air supply	External																		
Exhaust air function	Can be throttled																		
Manual override	Choice of non-detenting, covered, non-detenting/detenting or detenting																		
Type of mounting	On manifold rail																		
Overlap	Positive overlap																		
Mounting position	Any																		
Signal status indication	LED																		
Standard nominal flow rate G1/8 [l/min]	530	470		350	550	560	550	510											
Flow rate on manifold rail G1/8, front [l/min]	490	440		320	500	510	500	470											
Flow rate on manifold rail G1/8, underneath [l/min]	530	470		350	550	560	550	510											
Size [mm]	14																		
Port	1, 3, 5, 12/14, 82/84	On manifold rail																	
	2, 4	On manifold rail																	
Product weight [g]	102	100		91	98	89	95												
Certification	c UL us - Recognized (OL) RCM																		
CE marking (see declaration of conformity) ⁵⁾	To EU EMC Directive																		
Corrosion resistance class CRC ⁶⁾	2																		

1) C=Normally closed/mid-position closed

2) U=Normally open/mid-position pressurised

3) E=Mid-position exhausted

4) H=2x 3/2-way valve in one housing with 1x normally closed and 1x normally open

5) For information about the area of use, see the EC declaration of conformity at: [www.festo.com/catalogue/...](http://www.festo.com/catalogue/) → Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

6) More information: www.festo.com/x/topic/crc

Datasheet – Sub-base valve G1/8

Operating and environmental conditions								
Valve function		T32-A ¹⁾	T32-M ²⁾	M32-A ¹⁾	M52-A ¹⁾	B52	M52-M ²⁾	P53
Operating medium		Compressed air to ISO 8573-1:2010 [7:4:4]						
Operating pressure	Internal pilot air supply	[MPa]	0.15 ... 0.8	0.2 ... 0.8	0.15 ... 0.8	0.3 ... 0.8		
		[bar]	1.5 ... 8	2 ... 8	1.5 ... 8	3 ... 8		
Pilot pressure ³⁾	External pilot air supply	[MPa]	0.15 ... 1	-0.09 ... 1	-0.09 ... 0.8			-0.09 ... 1
		[bar]	1.5 ... 10	-0.9 ... 10	-0.9 ... 8			-0.9 ... 10
Ambient temperature	[°C]	0.15 ... 0.8	0.2 ... 0.8	0.15 ... 0.8	0.3 ... 0.8			
		[bar]	1.5 ... 8	2 ... 8	1.5 ... 8	3 ... 8		
Temperature of medium	[°C]	-5 ... +60						
LABS (PWIS) conformity	Valve terminals VTUG-...	VDMA24364-B1/B2-L						

1) Pneumatic spring

2) Mechanical spring

3) See graphs on page 11

Electrical data

Electrical connection	Via E-box
Operating voltage	[V DC] 24 ±10%
Power	[W] 1/0.4 (after 25 ms)
Duty cycle	[%] 100
Max. switching frequency	[Hz] 3
Degree of protection to EN 60529 ¹⁾	Valve terminal VTUG (for control cabi- net installation) IP69K
	Valve terminal VTUG-VI-EX2 IP20, IP65

1) Depending on the configuration selected

Safety characteristics

Max. positive test pulse with logic 0	[μs] 1600
Max. negative test pulse with logic 1	[μs] 3000
Shock resistance	Shock test with severity level 2 to FN 942017-5 and EN 60068-2-27
Vibration resistant	Transport application test with severity level 2 to FN 942017-4 and EN 60068-2-6

Information on materials

Housing	Wrought aluminium alloy
Seals	HNBR, NBR
Note on materials	RoHS-compliant

Valve switching times

Valve function	T32-A ¹⁾	T32-M ²⁾	M32-A ¹⁾	M52-A ¹⁾	B52	M52-M ²⁾	P53
Switching time on	[ms] 10	13	13	13	-	10	15
Switching time off	[ms] 29	21	20	26	-	38	42
Switching time changeover	[ms] -	-	-	-	9	-	25

1) Pneumatic spring


2) Mechanical spring

Datasheet – Sub-base valve G1/8

Dimensions


Download CAD data → www.festo.com

Sub-base valve G1/8

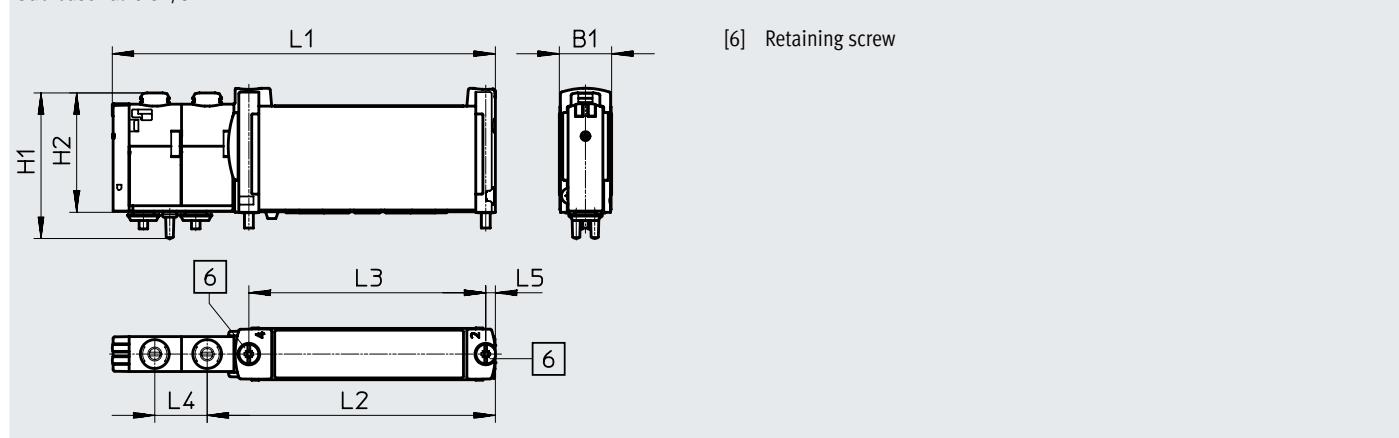

Type	B1	H1	H2	L1	L2	L3	L4	L5
VUVG-B14-...-F-1T1L-EX2C	14.7	40.9	33.5	107.6	81	66.5	15.1	2.8

Ordering data

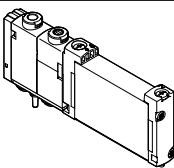Description		Part no.	Type
Sub-base valve G1/8			
	3/2-way valve		
External pilot air supply	Normally closed, pneumatic spring return	8041970	VUVG-B14Z-M32C-AZT-F-1T1L-EX2C
	Normally open, pneumatic spring return	8041971	VUVG-B14Z-M32U-AZT-F-1T1L-EX2C
2x 3/2-way valve			
External pilot air supply	Normally closed, pneumatic spring return	8041958	VUVG-B14-T32C-AZT-F-1T1L-EX2C
	Normally open, pneumatic spring return	8041959	VUVG-B14-T32U-AZT-F-1T1L-EX2C
	1x normally open, 1x normally closed, pneumatic spring return	8041960	VUVG-B14-T32H-AZT-F-1T1L-EX2C
	Normally closed, mechanical spring return	8041961	VUVG-B14-T32C-MZT-F-1T1L-EX2C
	Normally open, mechanical spring return	8041962	VUVG-B14-T32U-MZT-F-1T1L-EX2C
	1x normally open, 1x normally closed, mechanical spring return	8041963	VUVG-B14-T32H-MZT-F-1T1L-EX2C
5/2-way valve, single solenoid			
External pilot air supply	Pneumatic spring return	8041964	VUVG-B14-M52-AZT-F-1T1L-EX2C
	Mechanical spring return	8041965	VUVG-B14-M52-MZT-F-1T1L-EX2C
5/2-way valve, double solenoid			
External pilot air supply		8041966	VUVG-B14-B52-ZT-F-1T1L-EX2C
5/3-way valve			
External pilot air supply	Mid-position closed, mechanical spring return	8041967	VUVG-B14-P53C-ZT-F-1T1L-EX2C
	Mid-position pressurised, mechanical spring return	8041969	VUVG-B14-P53U-ZT-F-1T1L-EX2C
	Mid-position exhausted, mechanical spring return	8041968	VUVG-B14-P53E-ZT-F-1T1L-EX2C

Datasheet – Manifold rail VABM

General technical data			
Manifold rail		Size 10	Size 14
Short type code	VABM		
Grid dimension	[mm]	10.5	16
Mounting position		Any	
Connection type		Semi in-line/sub-base	
Max. no. of valve positions		24	
Port	12/14	M5	M5
	82/84	M5	M5
	2, 4	M5 (VABM-L1-10W-...-GR)	G1/8
		M7 (VABM-L1-10HW-...-GR)	
	1, 3, 5	G1/8	–
Storage temperature	[°C]	–20 ... 60	
Certification		c UL us - Recognized (OL)	
CE marking (see declaration of conformity) ¹⁾		To EU EMC Directive	
Corrosion resistance class CRC ²⁾		2	
LABS (PWIS) conformity		VDMA24364-B1/B2-L	

1) For information about the area of use, see the EC declaration of conformity at: [www.festo.com/catalogue/...](http://www.festo.com/catalogue/) → Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

2) More information: www.festo.com/x/topic/crc

Weight [g]											
Valve positions	4	5	6	7	8	9	10	12	16	20	24
VABM-L1-10G-G18...	329	363	397	431	465	499	533	601	737	873	1009
VABM-L1-10HW-G18...	388	426	464	502	540	578	616	692	844	996	1148


Materials	
Manifold rail	Wrought aluminium alloy
Note on materials	RoHS-compliant

Datasheet – Manifold rail VABM

Dimensions – Example of valve terminal with I-Port interface

Download CAD data → www.festo.com

Outlet direction of electrical components on top

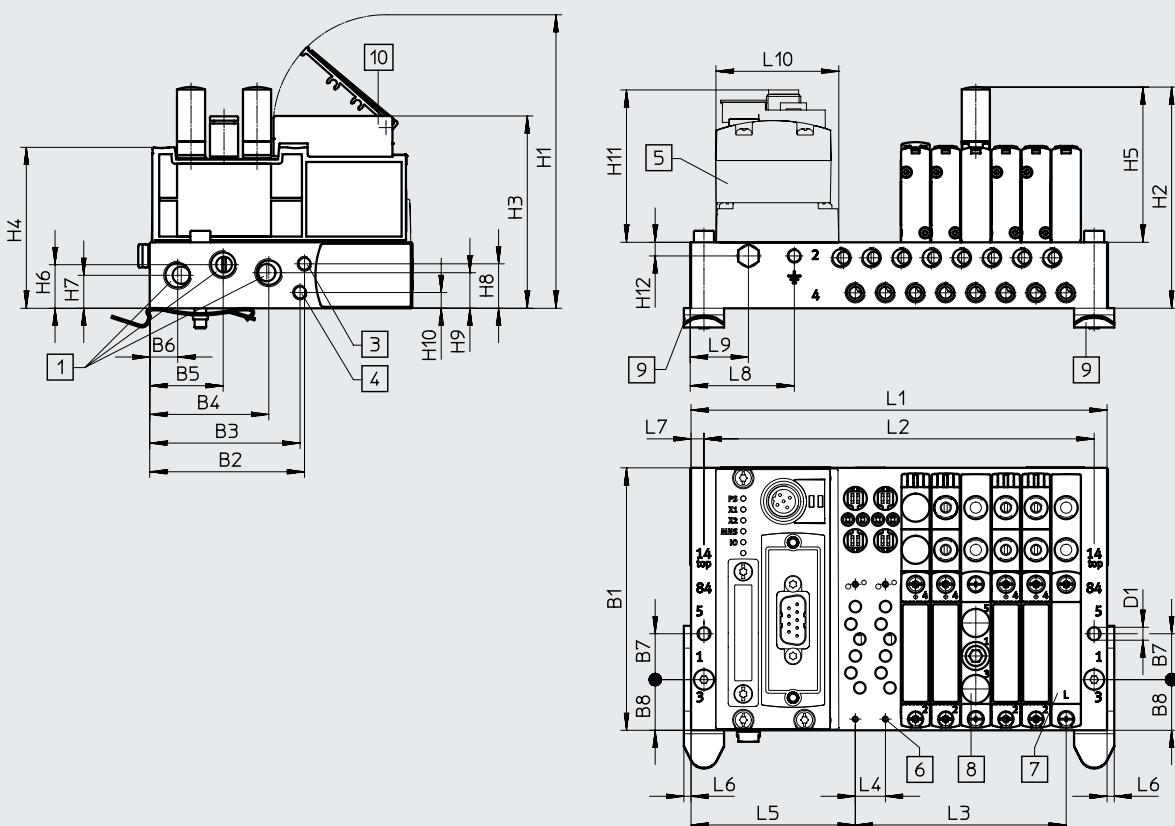

[1] Port 1, 3 and 5: size 10: G1/8
(at both ends)

[3] Port 12/14:
size 10 and 14: M5 (at both ends)

[4] Port 82/84:
size 10 and 14: M5 (at both ends)

[5] CTEU-CANopen

[6] Valves/cover plates/supply plates – mounting on manifold block: size 10: M2, size 14: M5

[7] Cover plate

[8] Supply plate, port 1, 3 and 5:
size 10: M7, size 14: G1/8

[9] H-rail mounting

[10] Inscription label holder

Type	Number of valve positions	Size 10																
		B1	B2	B3	B4	B5	B6	B7	B8	D1 Ø	H1	H2	H3	H4	H5	H6	H7	H8
VABM	4-24	91.5	54	52.4	41.5	25.6	9.8	16	17.7	4.5	102.3	77.1	67	56.1	54.1	15.2	11.5	15.5

Type	Number of valve positions	Size 10										
		H9	H10	H11	H12	L4	L5	L6	L7	L8	L9	L10
VABM	4-24	12.4	5.5	54.8	4.8	10.5	57.3	2.5	4.5	36	20	42.5

Type	Number of valve positions	Size 14																
		B1	B2	B3	B4	B5	B6	B7	B8	D1 Ø	H1	H2	H3	H4	H5	H6	H7	H8
VABM	4-24	110	70	59.3	56.5	36.5	16	20	26.5	4.5	113.1	95.1	77.7	68.6	61.3	18.7	15.7	28.7

Datasheet – Manifold rail VABM


Type	Number of valve positions	Size 14										
		H9	H10	H11	H12	L4	L5	L6	L7	L8	L9	L10
VABM	4-24	13.2	23.7	54.8	5.1	16	60.6	2	5	10	25.5	42.5
Type	Number of valve positions	Size 10			Size 14							
		L1	L2	L3	L1	L2	L3	L4	L5	L6	L7	L8
VABM	4	103	94	31.5	128	118	48					
	5	113.5	104.5	42	144	134	64					
	6	124	115	52.5	160	150	80					
	7	134.5	125.5	63	176	166	96					
	8	145	136	73.5	192	182	112					
	9	155.5	146.5	84	208	198	128					
	10	166	157	94.5	224	214	144					
	12	187	178	115.5	256	246	176					
	16	229	220	157.5	320	310	240					
	20	271	262	199.5	384	374	304					
	24	313	304	241.5	448	438	368					

Datasheet – Manifold rail VABM

Dimensions – Example of valve terminal with I-Port interface

Download CAD data → www.festo.com

Outlet direction of electrical components to the left

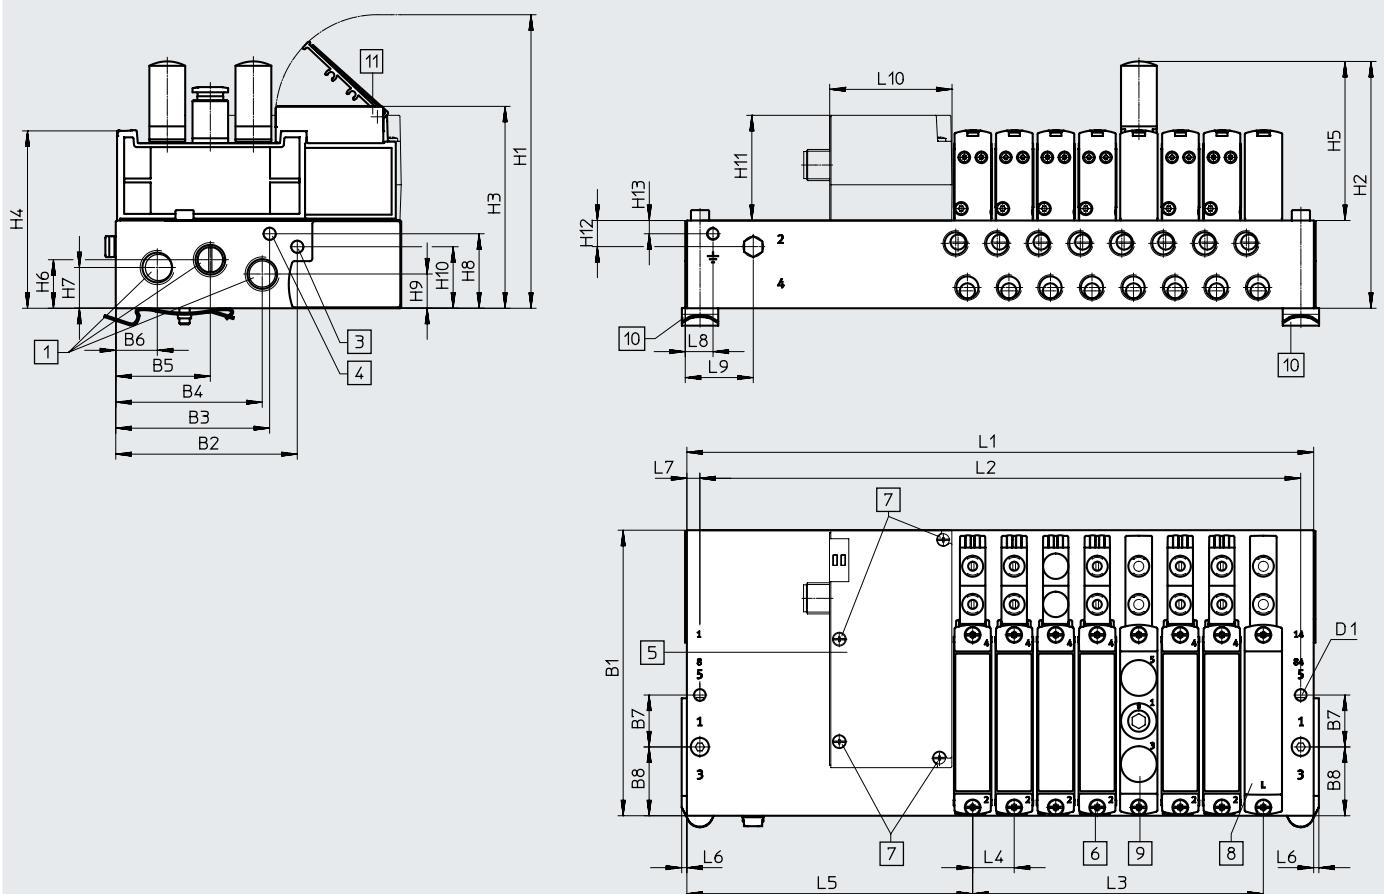

- [1] Port 1, 3 and 5: size 10: G1/8
(at both ends)
- [4] Port 82/84: size 10 and 14: M5
(at both ends)
- [3] Port 12/14: size 10 and 14: M5
(at both ends)
- [5] Electrical connection
I-Port interface/IO-Link®
- [6] Valves/cover plates/supply
plates – mounting on manifold
block: size 10: M2, size 14:
M2.5
- [7] Electrical interface
- [8] Cover plate
- [9] Supply plate, port 1, 3 and 5:
size 10: M7, size 14: G1/8
- [10] H-rail mounting
- [11] Inscription label holder

Type	Number of valve positions	Size 10																
		B1	B2	B3	B4	B5	B6	B7	B8	D1Ø	H1	H2	H3	H4	H5	H6	H7	H8
VABM	4-24	91.5	54	52.4	41.5	25.6	9.8	16	17.7	4.5	102.3	77.1	67	56.1	54.1	15.2	11.5	15.5

Type	Number of valve positions	Size 10											
		H9	H10	H11	H12	H13	L4	L5	L6	L7	L8	L9	L10
VABM	4-24	12.4	5.5	40.8	10.1	5.1	10.5	106.8	2.5	4.5	36	75	47.1

Type	Number of valve positions	Size 14																
		B1	B2	B3	B4	B5	B6	B7	B8	D1Ø	H1	H2	H3	H4	H5	H6	H7	H8
VABM	4-24	110	70	59.3	56.5	36.5	16	20	26.5	4.5	113.1	95.1	77.7	68.6	61.3	18.7	15.7	28.7

Type	Number of valve positions	Size 14											
		H9	H10	H11	H12	H13	L4	L5	L6	L7	L8	L9	L10
VABM	4-24	13.2	23.7	40.8	10.1	5.1	16	110.1	2	5	10	75	47.1

Datasheet – Manifold rail VABM


Type	Number of valve positions	Size 10			Size 14		
		L1	L2	L3	L1	L2	L3
VABM	4	152.5	143.5	31.5	177.5	167.5	48
	5	163	154	42	193.5	183.5	64
	6	173.5	164.5	52.5	209.5	199.5	80
	7	184	175	63	225.5	215.5	96
	8	194.5	185.5	73.5	241.5	231.5	112
	9	205	196	84	257.5	247.5	128
	10	215.5	206.5	94.5	273.5	263.5	144
	12	236.5	227.5	115.5	305.5	295.5	176
	16	278.5	269.5	157.5	369.5	359.5	240
	20	321	311.5	199.5	433.5	423.5	304
	24	362.5	353.5	241.5	497.5	487.5	368

Datasheet – Manifold rail VABM

Dimensions – Example of control cabinet installation for valve terminal

Download CAD data → www.festo.com

Outlet direction of electrical components on top

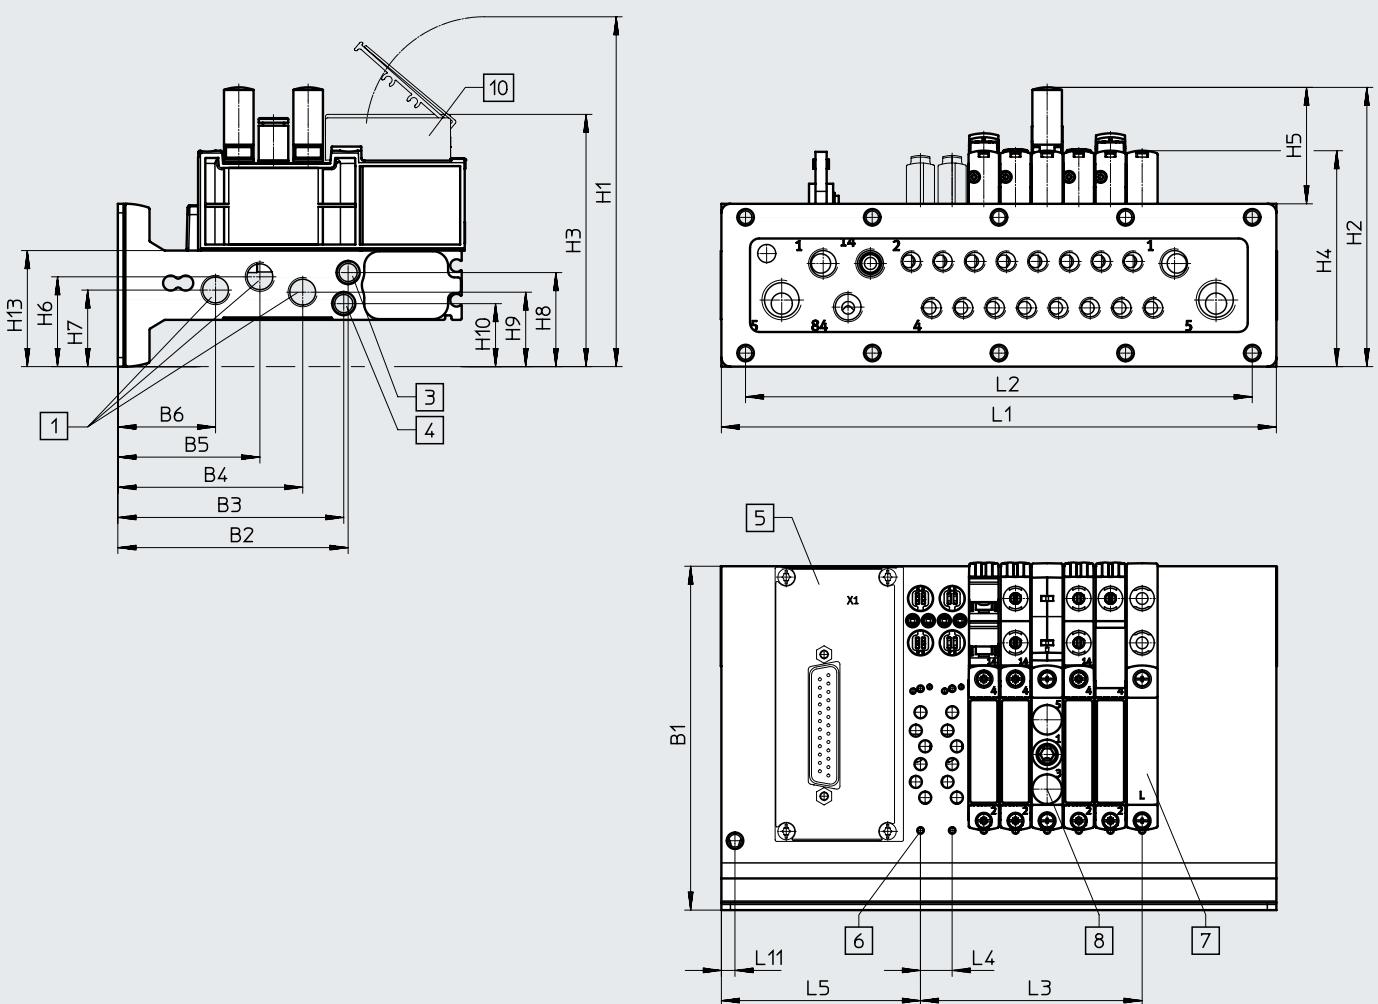

[1] Port 1, 3 and 5: size 10: G1/8

[3] Port 12/14: size 10: M5 (at both ends), size 14: M7 (at both ends)

[4] Port 82/84: size 10: M5 (at both ends), size 14: M7 (at both ends)

[5] Electrical connection

[6] Valves/cover plates/supply plates – mounting on manifold block: M2

[7] Cover plate

[8] Supply plate, port 1, 3 and 5: M7

[10] Inscription label holder

Type	Number of valve positions	Size 10									
		B1	B2	B3	B4	B5	B6	H1	H2	H3	H4
VABM	4-24	114	76.4	74.9	61.3	47.1	32.4	116	92.6	84	71.6

Type	Number of valve positions	Size 10									
		H5	H6	H7	H8	H9	H10	H13	L4	L5	L11
VABM	4-24	38.6	29.8	25.4	31.2	24.7	20.9	38.5	10.5	66	4.5

Type	Number of valve positions	Size 14									
		B1	B2	B3	B4	B5	B6	H1	H2	H3	H4
VABM	4-24	132	93	80.8	76.5	55.5	36.1	111.3	101.7	77.6	85.1

Type	Number of valve positions	Size 14									
		H5	H6	H7	H8	H9	H10	H13	L4	L5	L11
VABM	4-24	34.9	35.2	30.3	39.3	30.3	45	50.3	16	72.6	4.5

Datasheet – Manifold rail VABM


Number of valve positions	L1	L2	L3
VABM-L1-10HWS1-G18-4-GR	116.2	84	31.5
VABM-L1-10HWS1-G18-8-GR	158.2	126	73.5
VABM-L1-10HWS2-G18-8-GR	184	168	73.5
VABM-L1-10HWS2-G18-12-GR	226	210	115.5
VABM-L1-10HWS2-G18-16-GR	268	252	157.5
VABM-L1-10HWS2-G18-24-GR	352	336	241.5
VABM-L1-10HWS2-H-G18-8-GR	184	168	73.5
VABM-L1-10HWS2-H-G18-12-GR	226	210	115.5
VABM-L1-10HWS2-H-G18-16-GR	268	252	157.5
VABM-L1-10HWS2-H-G18-24-GR	352	336	241.5
VABM-L1-14HWS1-G14-4-GR	135	64	48
VABM-L1-14HWS1-G14-8-GR	199	128	112
VABM-L1-14HWS2-G14-8-GR	234	192	112
VABM-L1-14HWS2-G14-12-GR	298	256	176
VABM-L1-14HWS2-G14-16-GR	362	320	240
VABM-L1-14HWS2-G14-24-GR	490	448	368
VABM-L1-14HWS2-H-G14-8-GR	234	192	112
VABM-L1-14HWS2-H-G14-12-GR	298	256	176
VABM-L1-14HWS2-H-G14-16-GR	362	320	240
VABM-L1-14HWS2-H-G14-24-GR	490	448	368

Datasheet – Manifold rail VABM

Dimensions – Example of control cabinet installation for valve terminal

Download CAD data → www.festo.com

Outlet direction of electrical components on top, with shut-off function (hot swap)

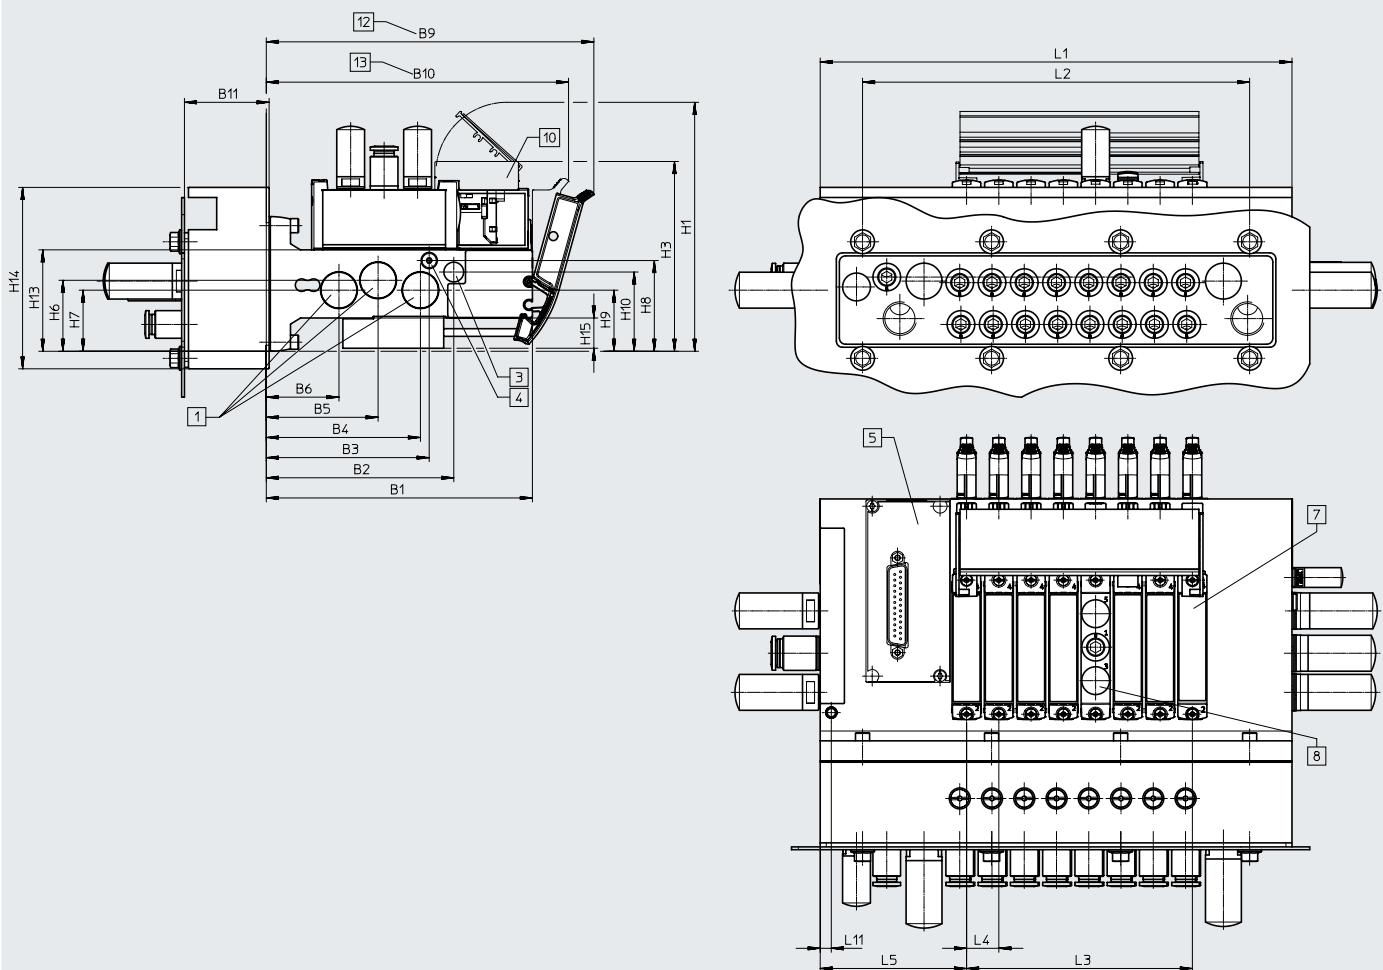

[1] Port 1, 3 and 5: size 10: G1/8

[3] Port 12/14: size 10: M5 (at both ends), size 14: M7 (at both ends)

[4] Port 82/84: size 10: M5 (at both ends), size 14: M7 (at both ends)

[5] Electrical connection

[7] Cover plate

[8] Supply plate, port 1, 3 and 5: M7

[10] Inscription label holder

[12] VTUG 10: with seal and stain-

less steel plate

VTUG 14: with seal and stain-
less steel plate, hot swap 1 and
2/4[13] With seal and stainless steel
plate

Type	Number of valve positions	Size 10										
		B1	B2	B3	B4	B5	B6	B9	B10	B11	H1	H3
VABM	4-24	114	76.4	74.9	61.3	47.1	32.4	142	132	-	114	82

Type	Number of valve positions	Size 10										
		H6	H7	H8	H9	H10	H13	H14	H15	L4	L5	L11
VABM	4-24	29.8	25.4	20.9	24.7	31.2	38.5	-	15	10.5	66	5.5

Type	Number of valve positions	Size 14										
		B1	B2	B3	B4	B5	B6	B9	B10	B11	H1	H3
VABM	4-24	132	93	80.8	76.5	55.5	36.1	163	150.4	42	123.5	93.9

Type	Number of valve positions	Size 14										
		H6	H7	H8	H9	H10	H13	H14	H15	L4	L5	L11
VABM	4-24	35.2	30.3	45	30.3	39.3	50.3	90	15	16	72.6	5.5



Datasheet – Manifold rail VABM

Number of valve positions	L1	L2	L3
VABM-L1-10HWS1-G18-4-GR	116.2	84	31.5
VABM-L1-10HWS1-G18-8-GR	158.2	126	73.5
VABM-L1-10HWS2-G18-8-GR	184	168	73.5
VABM-L1-10HWS2-G18-12-GR	226	210	115.5
VABM-L1-10HWS2-G18-16-GR	268	252	157.5
VABM-L1-10HWS2-G18-24-GR	352	336	241.5
VABM-L1-10HWS2-H-G18-8-GR	184	168	73.5
VABM-L1-10HWS2-H-G18-12-GR	226	210	115.5
VABM-L1-10HWS2-H-G18-16-GR	268	252	157.5
VABM-L1-10HWS2-H-G18-24-GR	352	336	241.5
VABM-L1-14HWS1-G14-4-GR	135	64	48
VABM-L1-14HWS1-G14-8-GR	199	128	112
VABM-L1-14HWS2-G14-8-GR	234	192	112
VABM-L1-14HWS2-G14-12-GR	298	256	176
VABM-L1-14HWS2-G14-16-GR	362	320	240
VABM-L1-14HWS2-G14-24-GR	490	448	368
VABM-L1-14HWS2-H-G14-8-GR	234	192	112
VABM-L1-14HWS2-H-G14-12-GR	298	256	176
VABM-L1-14HWS2-H-G14-16-GR	362	320	240
VABM-L1-14HWS2-H-G14-24-GR	490	448	368

Datasheet – Manifold rail VABM


Dimensions – Manifold rail outlet direction to the front

Size 10, I-Port interface on top

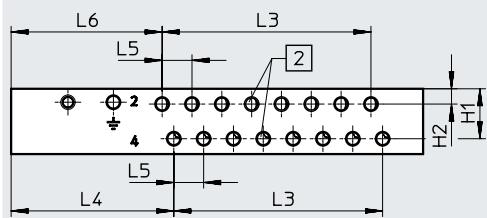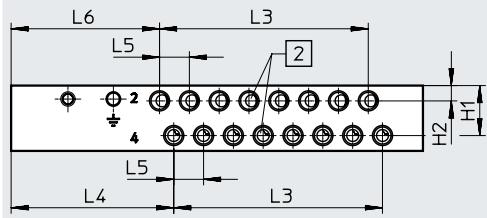

[2] Port 2 and 4



Sizes 10, 14, I-Port interface on the side

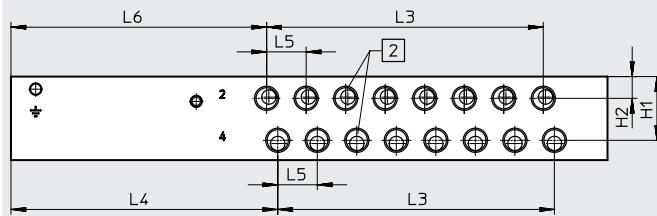

[2] Port 2 and 4

Download CAD data → www.festo.com

Size 14, I-Port interface on top

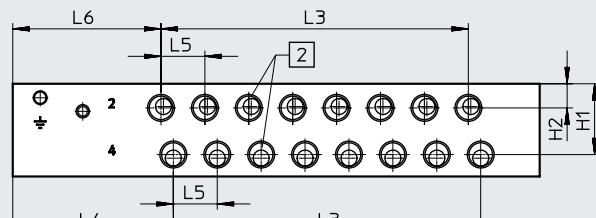

[2] Port 2 and 4

Size	Port 2 and 4	Manifold rail with I-Port interface on top				
		H1	H2	L4	L5	L6
10	M7 thread	17.6	5.4	57.3	10.5	52.3
	M5 thread					53.2
14	Thread G1/8	25.8	8.8	58.5	16	54

Size	Port 2 and 4	Manifold rail with I-Port interface on the side				
		H1	H2	L4	L5	L6
10	M7 thread	17.6	5.4	106.8	10.5	101.8
	M5 thread					102.7
14	Thread G1/8	25.8	8.8	108	16	103.5

Datasheet – Manifold rail VABM


Type	Number of valve positions	Size 10	Size 14
		L3	L3
VABM	4	31.5	48
	5	42	64
	6	52.5	80
	7	63	96
	8	73.5	112
	9	84	128
	10	94.5	144
	12	115.5	176
	16	157.5	240
	20	199.5	304
	24	241.5	368

Datasheet – Manifold rail VABM

Dimensions – Manifold rail outlet direction underneath

Download CAD data → www.festo.com

Control cabinet installation

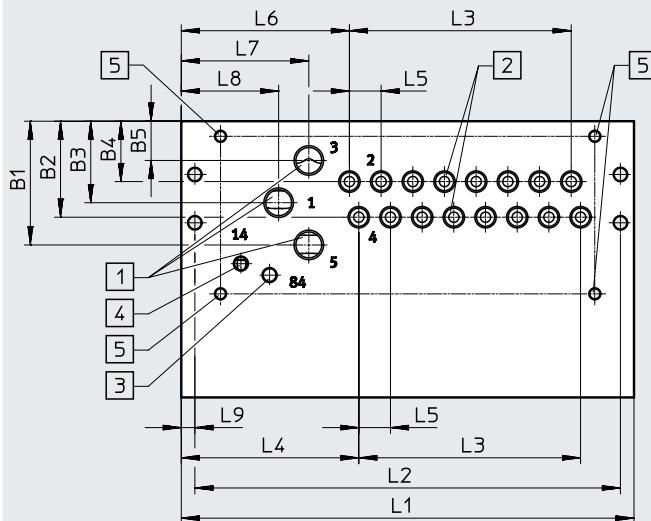**Note**

Dimensions of the manifold rail I-Port interface on the side for control cabinet installation
→ page 48

- | | | | |
|---|------------------------------------|------------------------------------|---|
| [1] Port 1, 3 and 5: size 10: G1/8 | [3] Port 82/84: size 10 and 14: M5 | [4] Port 12/14: size 10 and 14: M5 | [5] Mounting holes, outlet direction underneath: M4x8 |
| [2] Ports 2 and 4: size 10: M5/M7,
size 14: G1/8 | | | |

Type	Manifold rail with I-Port interface on top, size 10										
	B1	B2	B3	B4	B5	L4	L5	L6	L7	L8	L9
VABM	41	31.8	27	20	13	58.8	10.5	55.7	42.3	32.3	4.5

Type	Manifold rail with I-Port interface on top, size 14										
	B1	B2	B3	B4	B5	L4	L5	L6	L7	L8	L9
VABM	53.5	45.1	35.2	27.8	17	58.5	16	58.5	43	33	5

Type	Number of valve positions	Size 10			Size 14		
		L1 +5	L2 +5	L3	L1	L2	L3
VABM	4	103	94	31.5	128	118	48
	5	113.5	104.5	42	144	134	64
	6	124	115	52.5	160	150	80
	7	134.5	125.5	63	176	166	96
	8	145	136	73.5	192	182	112
	9	155.5	146.5	84	208	198	128
	10	166	157	94.5	224	214	144
	12	187	178	115.5	256	246	176
	16	229	220	157.5	320	310	240
	20	271	262	199.5	384	374	304
	24	313	304	241.5	448	438	368

Datasheet – Manifold rail VABM

Type	Manifold rail with I-Port interface, size 10										
	B1	B2	B3	B4	B5	L4	L5	L6	L7	L8	L9
VABM	41	31.8	27	20	13	108.3	10.5	105.2	91.8	81.8	4.5

Type	Manifold rail with I-Port interface, size 14										
	B1	B2	B3	B4	B5	L4	L5	L6	L7	L8	L9
VABM	53.5	45.1	35.2	27.8	17	108	16	108	92.5	82.5	5


Type	Number of valve positions	Manifold rail with I-Port interface Size 10			Manifold rail with I-Port interface Size 14		
		L1 +5	L2 +5	L3	L1	L2	L3
VABM	4	152.5	143.5	31.5	177.5	167.5	48
	5	163	154	42	193.5	183.5	64
	6	173.5	164.5	52.5	209.5	199.5	80
	7	184	175	63	225.5	215.5	96
	8	194.5	185.5	73.5	241.5	231.5	112
	9	205	196	84	257.5	247.5	128
	10	215.5	206.5	94.5	273.5	263.5	144
	12	236.5	227.5	115.5	305.5	295.5	176
	16	278.5	269.5	157.5	369.5	359.5	240
	20	320.5	311.5	199.5	433.5	423.5	304
	24	362.5	353.5	241.5	497.5	487.5	368

Datasheet – Manifold rail VABM

Dimensions – Manifold rail outlet direction to the front

Download CAD data → www.festo.com

Control cabinet installation/control cabinet installation with shut-off function (hot swap)

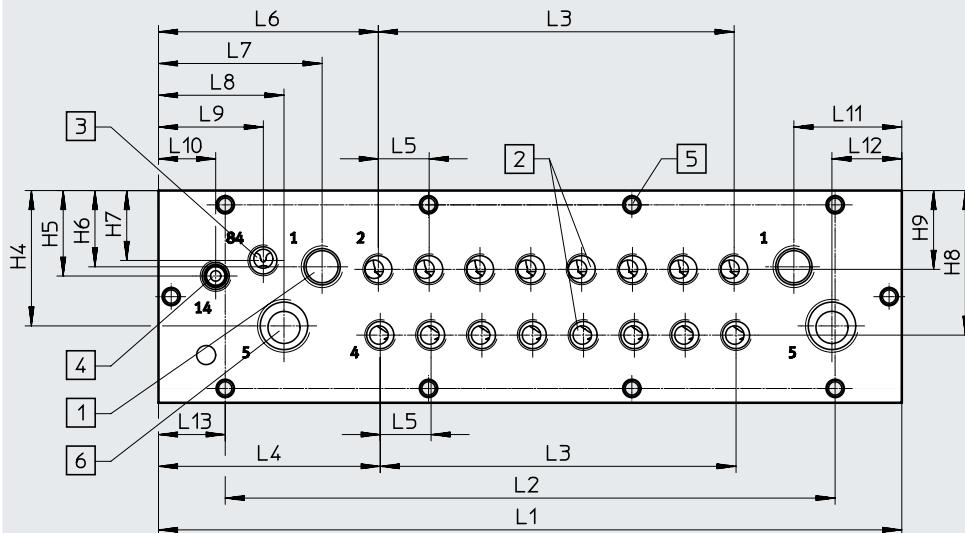

[1] Port 1, 3 and 5: size 10: G1/8

[2] Port 2 and 4: size 10: M5/M7,
size 14: G1/8

[3] Port 82/84:

sizes 10 and 14: G1/8
[4] Port 12/14:
sizes 10 and 14: G1/8[5] Mounting holes, outlet direction
underneath: M5

[6] Port 3/5

Type	Size 10															
	B1	B2	B3	B4	B5	B6	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13
VABM-L1-10HWS1	111.5	73.9	72.4	58.8	44.6	29.9	69.8	10.5	63	33.8	20	42	49.4	33.8	20	16.1
VABM-L1-10HWS2																8

Type	Size 10								
	H1	H2	H3	H4	H5	H6	H7	H8	H9
VABM-L1-10HWS1	54	15.5	23	31.9	19.8	19.8	34.3	34.5	19.1
VABM-L1-10HWS2									

Type	Size 14															
	B1	B2	B3	B4	B5	B6	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13
VABM-L1-14HWS1	130	91	78.8	74.5	53.5	34.1	69.8	16	96.2	51.5	39.5	33	18	34	22	35.5
VABM-L1-14HWS2																21

Type	Size 14								
	H1	H2	H3	H4	H5	H6	H7	H8	H9
VABM-L1-14HWS1	66.8	16.5	33.8	42.6	26.9	24	22	45.5	24.8
VABM-L1-14HWS2									

Datasheet – Manifold rail VABM


Number of valve positions	L1	L2	L3	L13
VABM-L1-10HWS1-G18-4-GR	116.2	84	31.5	16.1
VABM-L1-10HWS1-G18-8-GR	158.2	126	73.5	16.1
VABM-L1-10HWS2-G18-8-GR	184	168	73.5	8
VABM-L1-10HWS2-G18-12-GR	226	210	115.5	8
VABM-L1-10HWS2-G18-16-GR	268	252	157.5	8
VABM-L1-10HWS2-G18-24-GR	352	336	241.5	8
VABM-L1-10HWS2-H-G18-8-GR	184	168	73.5	8
VABM-L1-10HWS2-H-G18-8-GR	226	210	115.5	8
VABM-L1-10HWS2-H-G18-8-GR	268	252	157.5	8
VABM-L1-10HWS2-H-G18-8-GR	352	336	241.5	8
VABM-L1-14HWS1-G14-4-GR	135	64	48	35.5
VABM-L1-14HWS1-G14-8-GR	199	128	112	35.5
VABM-L1-14HWS2-G14-8-GR	234	192	112	21
VABM-L1-14HWS2-G14-12-GR	298	256	176	21
VABM-L1-14HWS2-G14-16-GR	362	320	240	21
VABM-L1-14HWS2-G14-24-GR	490	448	368	21
VABM-L1-14HWS2-H-G14-8-GR	234	192	112	21
VABM-L1-14HWS2-H-G14-12-GR	298	256	176	21
VABM-L1-14HWS2-H-G14-16-GR	362	320	240	21
VABM-L1-14HWS2-H-G14-24-GR	490	448	368	21

Datasheet – Manifold rail VABM

Dimensions – Manifold rail outlet direction to the front

Download CAD data → www.festo.com

Control cabinet installation/control cabinet installation with shut-off function (hot swap)

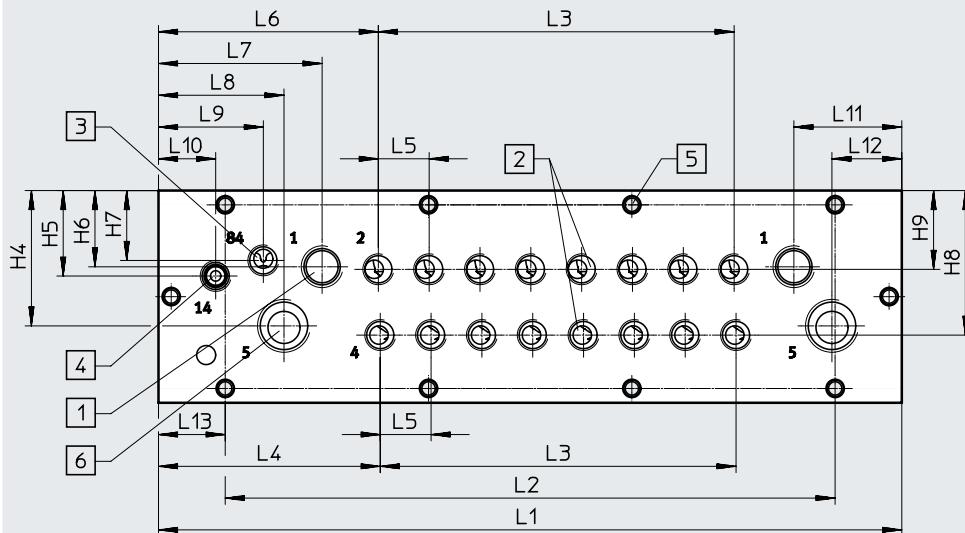

[1] Port 1, 3 and 5: size 10: G1/8

[2] Port 2 and 4: size 10: M5/M7,
size 14: G1/8

[3] Port 82/84:

sizes 10 and 14: G1/8
[4] Port 12/14:
sizes 10 and 14: G1/8[5] Mounting holes, outlet direction
underneath: M5

[6] Port 3/5

Type	Size 10															
	B1	B2	B3	B4	B5	B6	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13
VABM-L1-10HWS1	111.5	73.9	72.4	58.8	44.6	29.9	69.8	10.5	63	33.8	20	42	49.4	33.8	20	16.1
VABM-L1-10HWS2																8

Type	Size 10									
	H1	H2	H3	H4	H5	H6	H7	H8	H9	
VABM-L1-10HWS1	54	15.5	23	31.9	19.8	19.8	34.3	34.5	19.1	
VABM-L1-10HWS2										

Type	Size 14															
	B1	B2	B3	B4	B5	B6	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13
VABM-L1-14HWS1	130	91	78.8	74.5	53.5	34.1	69.8	16	96.2	51.5	39.5	33	18	34	22	35.5
VABM-L1-14HWS2																21


Type	Size 14									
	H1	H2	H3	H4	H5	H6	H7	H8	H9	
VABM-L1-14HWS1	66.8	16.5	33.8	42.6	26.9	24	22	45.5	24.8	
VABM-L1-14HWS2										

Datasheet – Manifold rail VABM

Dimensions – Manifold rail outlet direction to the front

Download CAD data → www.festo.com

Control cabinet installation/control cabinet installation with shut-off function (hot swap)

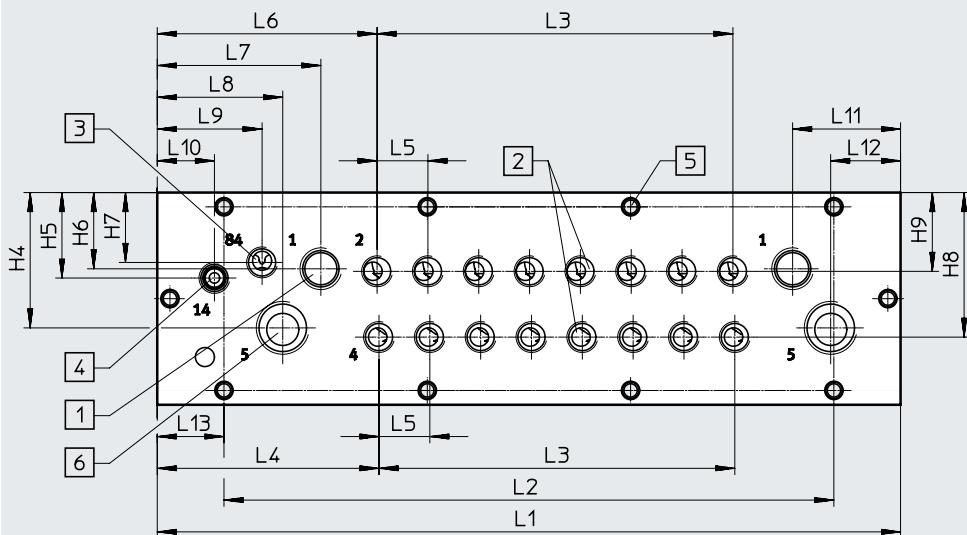

[1] Port 1, 3 and 5: size 10: G1/8

[3] Port 82/84:

[5] Mounting holes, outlet direction

[2] Port 2 and 4: size 10: M5/M7,
size 14: G1/8

sizes 10 and 14: G1/8
[4] Port 12/14:
sizes 10 and 14: G1/8

underneath: M5

[6] Port 3/5

Type	Size 10															
	B1	B2	B3	B4	B5	B6	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13
VABM-L1-10HWS1	111.5	73.9	72.4	58.8	44.6	29.9	69.8	10.5	63	33.8	20	42	49.4	33.8	20	16.1
VABM-L1-10HWS2																8

Type	Size 10								
	H1	H2	H3	H4	H5	H6	H7	H8	H9
VABM-L1-10HWS1	54	15.5	23	31.9	19.8	19.8	34.3	34.5	19.1
VABM-L1-10HWS2									

Type	Size 14															
	B1	B2	B3	B4	B5	B6	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13
VABM-L1-14HWS1	130	91	78.8	74.5	53.5	34.1	69.8	16	96.2	51.5	39.5	33	18	34	22	35.5
VABM-L1-14HWS2																21

Type	Size 14								
	H1	H2	H3	H4	H5	H6	H7	H8	H9
VABM-L1-14HWS1	66.8	16.5	33.8	42.6	26.9	24	22	45.5	24.8
VABM-L1-14HWS2									


Datasheet – Manifold rail VABM

Number of valve positions	L1	L2	L3	L13
VABM-L1-10HWS1-G18-4-GR	116.2	84	31.5	16.1
VABM-L1-10HWS1-G18-8-GR	158.2	126	73.5	16.1
VABM-L1-10HWS2-G18-8-GR	184	168	73.5	8
VABM-L1-10HWS2-G18-12-GR	226	210	115.5	8
VABM-L1-10HWS2-G18-16-GR	268	252	157.5	8
VABM-L1-10HWS2-G18-24-GR	352	336	241.5	8
VABM-L1-10HWS2-H-G18-8-GR	184	168	73.5	8
VABM-L1-10HWS2-H-G18-8-GR	226	210	115.5	8
VABM-L1-10HWS2-H-G18-8-GR	268	252	157.5	8
VABM-L1-10HWS2-H-G18-8-GR	352	336	241.5	8
VABM-L1-14HWS1-G14-4-GR	135	64	48	35.5
VABM-L1-14HWS1-G14-8-GR	199	128	112	35.5
VABM-L1-14HWS2-G14-8-GR	234	192	112	21
VABM-L1-14HWS2-G14-12-GR	298	256	176	21
VABM-L1-14HWS2-G14-16-GR	362	320	240	21
VABM-L1-14HWS2-G14-24-GR	490	448	368	21
VABM-L1-14HWS2-H-G14-8-GR	234	192	112	21
VABM-L1-14HWS2-H-G14-12-GR	298	256	176	21
VABM-L1-14HWS2-H-G14-16-GR	362	320	240	21
VABM-L1-14HWS2-H-G14-24-GR	490	448	368	21


Datasheet – Manifold rail VABM

Dimensions – Recess for control cabinet installation, outlet direction underneath, size 10

Up to 8 valves

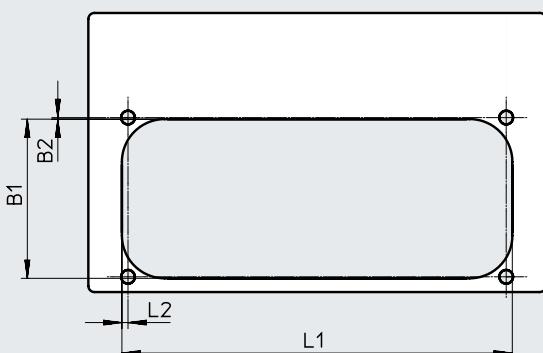

9 or more valves

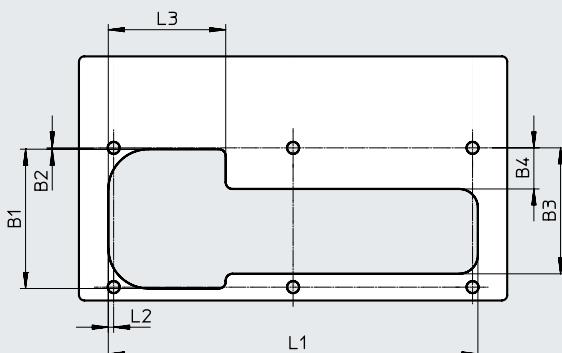


Type	B1	B2	L1	L2
VABM-L1-10...G18-4	52.7	0.5	86	2
VABM-L1-10...G18-5			96.5	
VABM-L1-10...G18-6			107	
VABM-L1-10...G18-7			117.5	
VABM-L1-10...G18-8			128	


Type	B1	B2	B3	B4	L1	L2	L3
VABM-L1-10...G18-9	52.7	0.5	47.2	15.4	138.5	2	44
VABM-L1-10...G18-10					149		
VABM-L1-10...G18-12					170		
VABM-L1-10...G18-16					212		
VABM-L1-10...G18-20					254		
VABM-L1-10...G18-24					296		

Dimensions – Recess for control cabinet installation, outlet direction underneath, size 14

Up to 7 valves

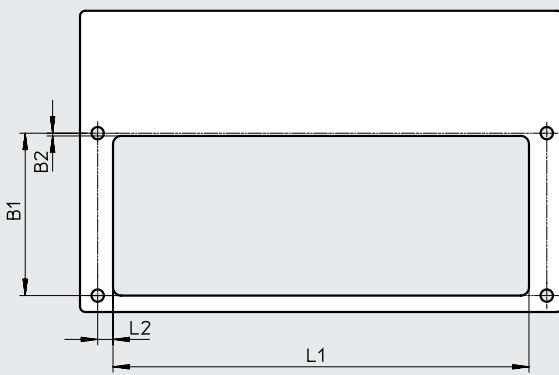

8 or more valves

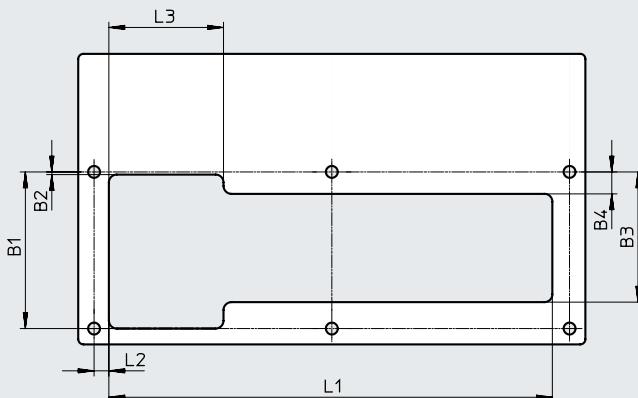


Type	B1	B2	L1	L2
VABM-L1-14...G14-4	59.3	1	103.9	5.6
VABM-L1-14...G14-5			119.9	
VABM-L1-14...G14-6			135.9	
VABM-L1-14...G14-7			151.9	

Type	B1	B2	B3	B4	L1	L2	L3
VABM-L1-14...G14-8	59.3	1	49.3	8.3	167.9	5.6	43.4
VABM-L1-14...G14-9					183.9		
VABM-L1-14...G14-10					199.9		
VABM-L1-14...G14-12					231.9		
VABM-L1-14...G14-16					295.9		
VABM-L1-14...G14-20					359.9		
VABM-L1-14...G14-24					423.9		

Datasheet – Manifold rail VABM


Dimensions – Recess for control cabinet installation, outlet direction to the front, size 10

Single supply, up to 8 valves

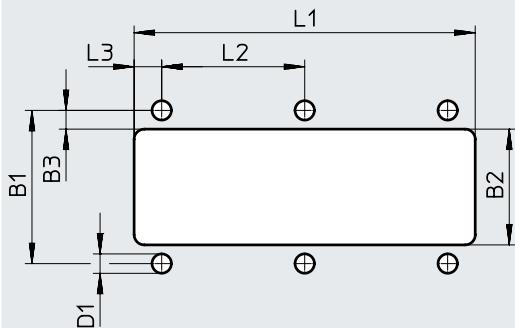

Type	B1	B2	B3	D1	L1	L2	L3
VABM-L1-10HWS1-G18-4-GR	45	34	5.5	5.7	100.2	42	8.1
VABM-L1-10HWS1-G18-8-GR					143.2		


Double supply, 8 or more valves

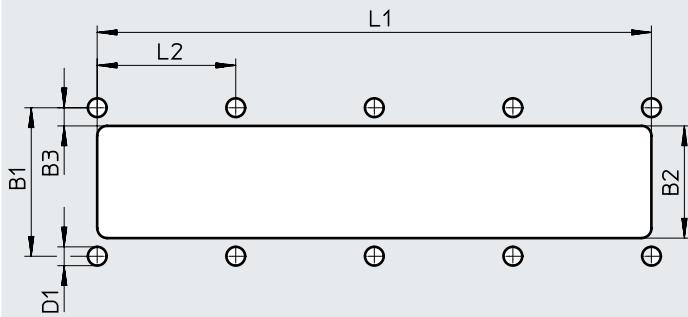

Type	B1	B2	B3	D1	L1	L2
VABM-L1-10HWS2...G18-8-GR	45	34	5.5	5.7	168	42
VABM-L1-10HWS2...G18-12-GR					210	
VABM-L1-10HWS2...G18-16-GR					252	
VABM-L1-10HWS2...G18-24-GR					336	

Dimensions – Recess for control cabinet installation, outlet direction to the front, size 14

Single supply, up to 8 valves

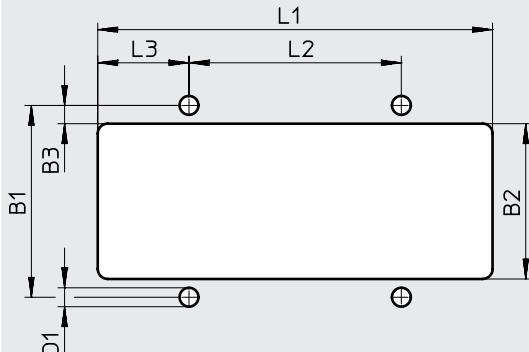


Type	B1	B2	B3	D1	L1	L2	L3
VABM-L1-14HWS1-G14-4-GR	57.8	46.8	5.5	5.7	119	64	27.5
VABM-L1-14HWS1-G14-8-GR					183		

Datasheet – Manifold rail VABM

Dimensions – Recess for control cabinet installation, outlet direction to the front, size 14

Double supply, 8 or more valves

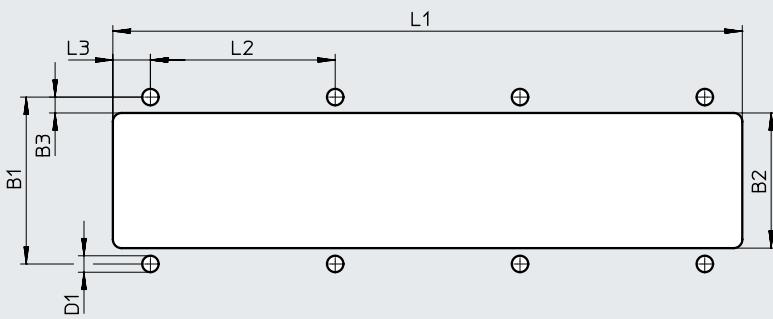


Type	B1	B2	B3	D1	L1	L2	L3
VABM-L1-14HWS2-G14...-8-GR	57.8	46.8	5.5	5.7	218	64	13
VABM-L1-14HWS2-G14...-12-GR					282		
VABM-L1-14HWS2-G14...-16-GR					346		
VABM-L1-14HWS2-G14...-24-GR					474		

Dimensions – Mounting holes for control cabinet installation, size 10

Download CAD data → www.festo.com

Outlet direction underneath

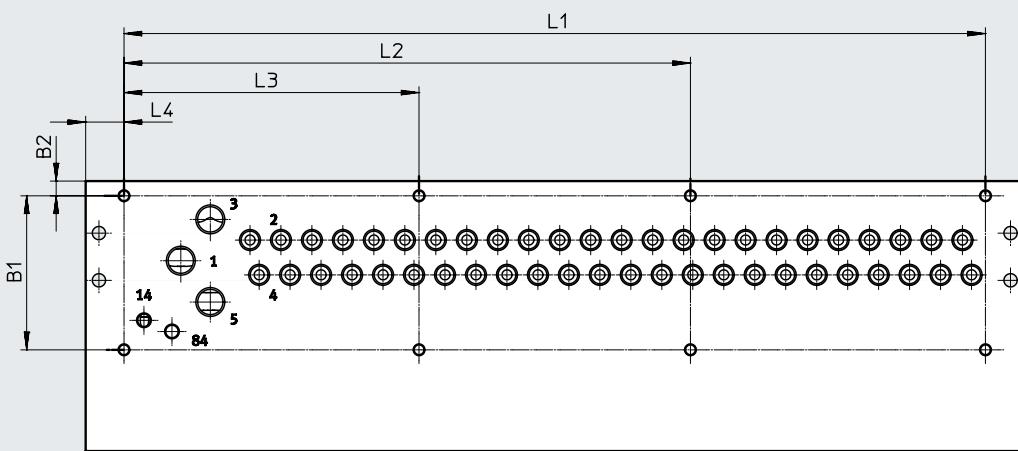


Type	Up to 8 valves	Outlet direction of electrical components on top						I-Port interface on the side
		B1	B2	L1	L2	L3	L4	
VABM-L1-10...-G18-4	Up to 8 valves	52.2	5	82	–	–	13	62.5
VABM-L1-10...-G18-5				92.5	–	–		
VABM-L1-10...-G18-6				103	–	–		
VABM-L1-10...-G18-7				113.5	–	–		
VABM-L1-10...-G18-8				124	–	–		
VABM-L1-10...-G18-9	Up to 20 valves	52.2	5	134.5	–	67.25	13	62.5
VABM-L1-10...-G18-10				145	–	72.5		
VABM-L1-10...-G18-12				166	–	83		
VABM-L1-10...-G18-16				208	–	104		
VABM-L1-10...-G18-20				250	–	125		
VABM-L1-10...-G18-24	24 valves	52.2	5	292	192	100	13	62.5

Datasheet – Manifold rail VABM

Dimensions – Mounting holes for control cabinet installation, size 10

Download CAD data → www.festo.com

Outlet direction to the front

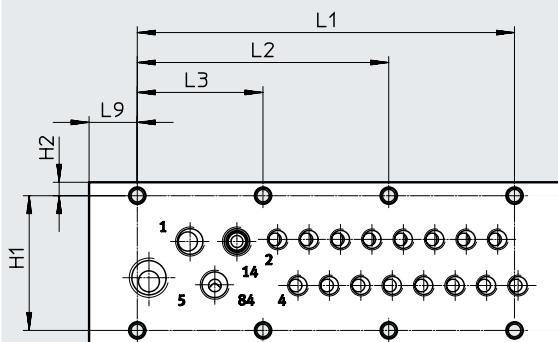


Type	H1	H2	L1	L2	L3	L9
VABM-L1-10HWS1-G18-4-GR	45	4.5	84	–	42	16.1
VABM-L1-10HWS1-G18-8-GR	45	4.5	126	84	42	16.1

Type	No. of valve positions	No. of mounting holes
VABM-L1-10HWS1-G18-4-GR	4	3
VABM-L1-10HWS1-G18-8-GR	8	4

Dimensions – Mounting holes for control cabinet installation, size 10

Download CAD data → www.festo.com

Outlet direction to the front

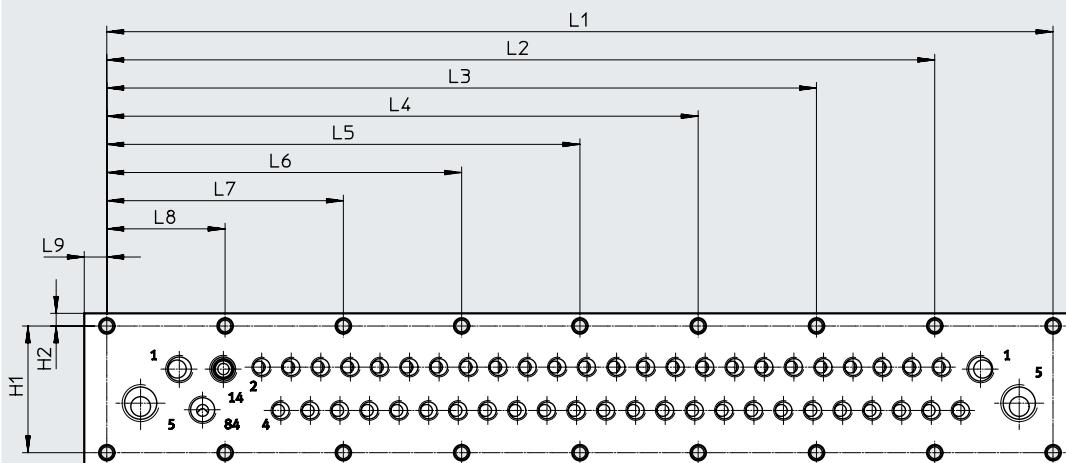

Type	H1	H2	L1	L2	L3	L4	L5	L6	L7	L8	L9
VABM-L1-10HWS2-...-8-GR	45	4.5	168	–	–	–	–	126	84	42	8
VABM-L1-10HWS2-...-12-GR	45	4.5	210	–	–	–	168	126	84	42	8
VABM-L1-10HWS2-...-16-GR	45	4.5	252	–	–	210	168	126	84	42	8
VABM-L1-10HWS2-...-24-GR	45	4.5	336	294	252	210	168	126	84	42	8


Type	No. of valve positions	No. of mounting holes
VABM-L1-10HWS2-...-8-GR	8	5
VABM-L1-10HWS2-...-12-GR	12	6
VABM-L1-10HWS2-...-16-GR	16	7
VABM-L1-10HWS2-...-24-GR	24	9

Datasheet – Manifold rail VABM

Dimensions – Mounting holes for control cabinet installation, size 14

Download CAD data → www.festo.com

Outlet direction underneath

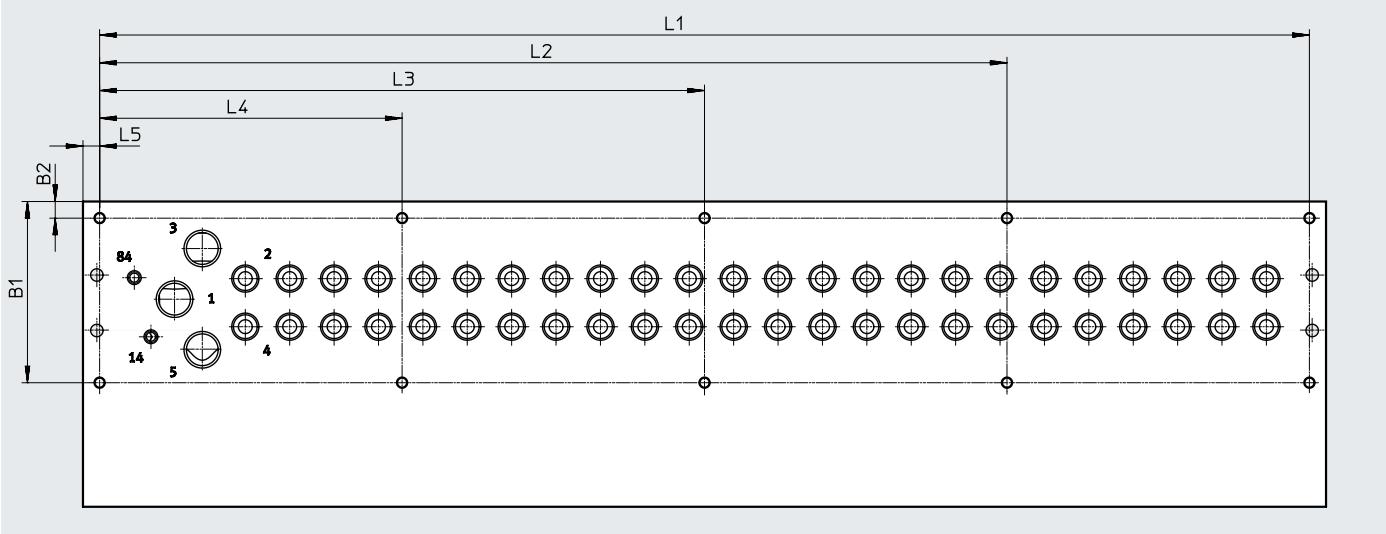


Type		Outlet direction of electrical components on top							I-Port interface on the side
		B1	B2	L1	L2	L3	L4	L5	
VABM-L1-14...-G14-4	Up to 8 valves	59.3	6	116	–	–	–	6	55.5
VABM-L1-14...-G14-5				132	–	–	–		
VABM-L1-14...-G14-6				148	–	–	–		
VABM-L1-14...-G14-7				164	–	–	–		
VABM-L1-14...-G14-8	8 to 10 valves	59.3	6	180	–	–	90	6	55.5
VABM-L1-14...-G14-9				196	–	–	98		
VABM-L1-14...-G14-10				212	–	–	106		
VABM-L1-14...-G14-12	12 valves and 16 valves	59.3	6	244	–	162	82	6	55.5
VABM-L1-14...-G14-16				308	–	204	104		
VABM-L1-14...-G14-20	20 valves and 24 valves	59.3	6	372	279	186	93	6	55.5
VABM-L1-14...-G14-24				436	327	218	109		

Datasheet – Manifold rail VABM

Dimensions – Mounting holes for control cabinet installation, size 14

Download CAD data → www.festo.com

Outlet direction to the front

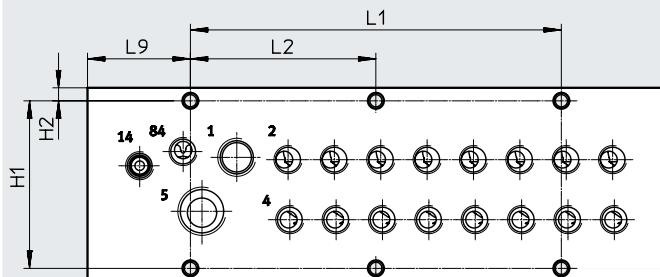


Type	H1	H2	L1	L2	L9
VABM-L1-14HWS1-G14-4-GR	57.8	4.5	64	–	35.5
VABM-L1-14HWS1-G14-8-GR	57.8	4.5	128	64	35.5

Type	No. of valve positions	No. of mounting holes
VABM-L1-14HWS1-G14-4-GR	4	2
VABM-L1-14HWS1-G14-8-GR	8	3

Dimensions – Mounting holes for control cabinet installation, size 14

Download CAD data → www.festo.com

Outlet direction to the front

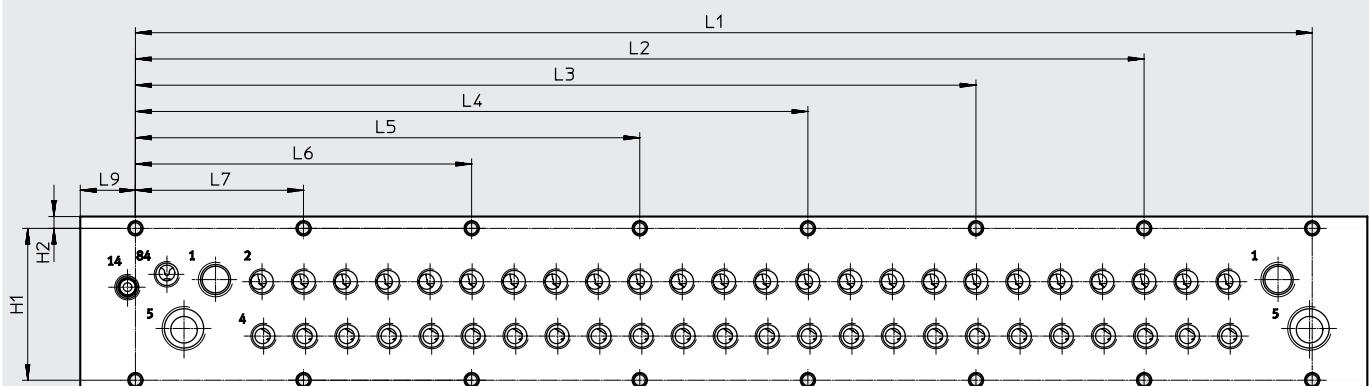

Type	H1	H2	L1	L2	L3	L4	L5	L6	L7	L9
VABM-L1-14HWS2-...-8-GR	57.8	4.5	192	–	–	–	–	128	64	21
VABM-L1-14HWS2-...-12-GR	57.8	4.5	256	–	–	–	192	128	64	21
VABM-L1-14HWS2-...-16-GR	57.8	4.5	320	–	–	256	192	128	64	21
VABM-L1-14HWS2-...-24-GR	57.8	4.5	448	384	320	256	192	128	64	21

Type	No. of valve positions	No. of mounting holes
VABM-L1-14HWS2-...-8-GR	8	4
VABM-L1-14HWS2-...-12-GR	12	5
VABM-L1-14HWS2-...-16-GR	16	6
VABM-L1-14HWS2-...-24-GR	24	8

Ordering data

Ordering data		Description	Part no.	Type
Manifold rail for sub-base valve				
		Size 10 mm		
	Ports 2, 4 at the front	4 valve positions	573434	VABM-L1-10HW-G18-4-GR
		5 valve positions	573435	VABM-L1-10HW-G18-5-GR
		6 valve positions	573436	VABM-L1-10HW-G18-6-GR
		7 valve positions	573437	VABM-L1-10HW-G18-7-GR
		8 valve positions	573438	VABM-L1-10HW-G18-8-GR
		9 valve positions	573439	VABM-L1-10HW-G18-9-GR
		10 valve positions	573440	VABM-L1-10HW-G18-10-GR
		12 valve positions	573441	VABM-L1-10HW-G18-12-GR
		16 valve positions	573442	VABM-L1-10HW-G18-16-GR
		20 valve positions	573443	VABM-L1-10HW-G18-20-GR
		24 valve positions	573444	VABM-L1-10HW-G18-24-GR
		8 double solenoid + 8 single solenoid valves	573930	VABM-L1-10HW-G18-16-M-GR
		4 double solenoid + 16 single solenoid valves	573931	VABM-L1-10HW-G18-20-M-GR
		24 single solenoid valves	573932	VABM-L1-10HW-G18-24-M-GR
		Size 14 mm		
	Ports 2, 4 at the front	4 valve positions	573500	VABM-L1-14W-G14-4-GR
		5 valve positions	573501	VABM-L1-14W-G14-5-GR
		6 valve positions	573502	VABM-L1-14W-G14-6-GR
		7 valve positions	573503	VABM-L1-14W-G14-7-GR
		8 valve positions	573504	VABM-L1-14W-G14-8-GR
		9 valve positions	573505	VABM-L1-14W-G14-9-GR
		10 valve positions	573506	VABM-L1-14W-G14-10-GR
		12 valve positions	573507	VABM-L1-14W-G14-12-GR
		16 valve positions	573508	VABM-L1-14W-G14-16-GR
		20 valve positions	573509	VABM-L1-14W-G14-20-GR
		24 valve positions	573510	VABM-L1-14W-G14-24-GR
		8 double solenoid + 8 single solenoid valves	573936	VABM-L1-14W-G14-16-M-GR
		4 double solenoid + 16 single solenoid valves	573937	VABM-L1-14W-G14-20-M-GR
		24 single solenoid valves	573938	VABM-L1-14W-G14-24-M-GR

Ordering data		Description	Part no.	Type
Manifold rail for sub-base valve, for control cabinet installation, outlet direction to the front				
		Size 10 mm		
	Ports 2, 4 at the front, single supply	4 valve positions	8058335	VABM-L1-10HWS1-G18-4-GR
		8 valve positions	8058336	VABM-L1-10HWS1-G18-8-GR
	Ports 2, 4 at the front, double supply	8 valve positions	8058338	VABM-L1-10HWS2-G18-8-GR
		12 valve positions	8058339	VABM-L1-10HWS2-G18-12-GR
		16 valve positions	8058340	VABM-L1-10HWS2-G18-16-GR
		24 valve positions	8058341	VABM-L1-10HWS2-G18-24-GR
		Size 14 mm		
	Ports 2, 4 at the front, single supply	4 valve positions	8058342	VABM-L1-14HWS1-G14-4-GR
		8 valve positions	8058343	VABM-L1-14HWS1-G14-8-GR
	Ports 2, 4 at the front, double supply	8 valve positions	8058344	VABM-L1-14HWS2-G14-8-GR
		12 valve positions	8058345	VABM-L1-14HWS2-G14-12-GR
		16 valve positions	8058346	VABM-L1-14HWS2-G14-16-GR
		24 valve positions	8058347	VABM-L1-14HWS2-G14-24-GR

Datasheet – Multi-pin plug connection

The following multi-pin plug connections are available for the valve terminal VTUG:

- Sub-D (25-pin)
- Sub-D (44-pin)
- Ribbon cable (26-pin)
- Ribbon cable (50-pin)



Electrical multi-pin

Each pin on the multi-pin plug can actuate exactly one solenoid coil.

If the maximum configurable number of valve positions is 24, this means that 48 valve functions can be addressed.

The valves can be switched using positive or negative logic (positive switching or negative switching).

Mixed operation is generally not possible; however, an exception is made for the V22 ... V25 variants with 25-pin Sub-D. With these variants, a specific range of valve positions (e.g. Com 16...19) is supplied with common voltage.

This allows these ranges to be switched with positive or negative logic and valve groups to be switched off independently of the other ranges. Mixed operation within a range is not permitted.

Note

A double solenoid valve occupies one valve position and two pins on the multi-pin plug. This means that the number of double solenoid valves per manifold rail is limited.

General technical data						
Type	VAEM-L1-S-M1-25	VAEM-L1-S-M1-44	VAEM-L1-S-M3-26	VAEM-L1-S-M3-50		
Number of pins	25-pin	44-pin	26-pin	50-pin		
Electrical connection	Sub-D plug		Ribbon cable plug			
Max. no. of valve positions	24		24			
Degree of protection to EN 60529	IP67		IP40			
Material	PA		PA			
Note on materials	RoHS-compliant		RoHS-compliant			
Certification	c UL us - Recognized (OL)					
CE marking (see declaration of conformity) ¹⁾	To EU EMC Directive					
Corrosion resistance class CRC ²⁾	2					
LABS (PWIS) conformity	VDMA24364-B1/B2-L					
Weight	[g]	53	45	48		

1) For information about the area of use, see the EC declaration of conformity at: [www.festo.com/catalogue/...](http://www.festo.com/catalogue/) → Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

2) More information: www.festo.com/x/topic/crc

Datasheet – Multi-pin plug connection

Pin allocation – Sub-D plug, 25-pin	Pin	Wire colour ¹⁾	M1-25 (V20)						M1-25V1 (V22)	
			12x double solenoid		8x double solenoid 8x single solenoid		4x double solenoid 16x single solenoid			
1 + 25	1	WH	VPO	14	VPO	14	VPO	14	VPO	14
	2	BN	VPO	12	VPO	12	VPO	12	VP23	14
	3	GN	VP1	14	VP1	14	VP1	14	VP1	14
	4	YE	VP1	12	VP1	12	VP1	12	VP22	14
	5	GY	VP2	14	VP2	14	VP2	14	VP2	14
	6	PK	VP2	12	VP2	12	VP2	12	VP21	14
	7	BU	VP3	14	VP3	14	VP3	14	VP3	14
	8	RD	VP3	12	VP3	12	VP3	12	VP20	14
	9	BK	VP4	14	VP4	14	VP4	14	VP4	14
	10	VT	VP4	12	VP4	12	VP19	14	VP19	14
	11	GY PK	VP5	14	VP5	14	VP5	14	VP5	14
	12	RD BU	VP5	12	VP5	12	VP18	14	VP18	14
	13	GN WH	VP6	14	VP6	14	VP6	14	VP6	14
	14	BN GN	VP6	12	VP6	12	VP17	14	VP17	14
	15	YE WH	VP7	14	VP7	14	VP7	14	VP7	14
	16	BN YE	VP7	12	VP7	12	VP16	14	VP16	14
	17	GY WH	VP8	14	VP8	14	VP8	14	VP8	14
	18	BN GY	VP8	12	VP15	14	VP15	14	VP8	12
	19	WH PK	VP9	14	VP9	14	VP9	14	VP9	14
	20	BN PK	VP9	12	VP14	14	VP14	14	VP9	12
	21	BU WH	VP10	14	VP10	14	VP10	14	VP10	14
	22	BN BU	VP10	12	VP13	14	VP13	14	VP13	14
	23	RD WH	VP11	14	VP11	14	VP11	14	VP11	14
	24	BN RD	VP11	12	VP12	14	VP12	14	VP12	14
	25	BK WH	Com		Com		Com	Com	Com	Com 0...3

1) According to IEC 60757

VP Valve position



A grey field means that a double solenoid valve can be used. Only single solenoid valves can be used for fields with a white background.

Datasheet – Multi-pin plug connection

Pin allocation – Sub-D plug, 25-pin		Pin allocation – Sub-D plug, 44-pin									
	Pin	Wire colour ¹⁾	M1-25V2 (V23)	M1-25V3 (V24)	M1-25V4 (V25)		Pin	Wire colour ¹⁾	M1-44 (V21)		
1	WH	VP0	14	VP0	14	VP0	14	1	WH	VP0	14
2	BN	VP0	12	VP0	12	VP1	14	2	BN	VP0	12
3	GN	VP1	14	VP1	14	VP2	14	3	GN	VP1	14
4	YE	VP1	12	VP1	12	VP3	14	4	YE	VP1	12
5	GY	VP2	14	VP2	14	VP4	14	5	GY	VP2	14
6	PK	VP2	12	VP2	12	VP5	14	6	PK	VP2	12
7	BU	VP3	14	VP3	14	VP6	14	7	BU	VP3	14
8	RD	VP3	12	VP3	12	VP7	14	8	RD	VP3	12
9	BK	VP4	14	VP4	14	VP8	14	9	BK	VP4	14
10	VT	VP4	12	VP5	14	VP9	14	10	VT	VP4	12
11	GY PK	VP5	14	VP6	14	VP10	14	11	GY PK	VP5	14
12	RD BU	VP5	12	VP7	14	VP11	14	12	RD BU	VP5	12
13	GN WH	VP6	14	VP8	14	VP12	14	13	GN WH	VP6	14
14	BN GN	VP6	12	VP9	14	VP13	14	14	BN GN	VP6	12
15	YE WH	VP7	14	VP10	14	VP14	14	15	YE WH	VP7	14
16	BN YE	VP7	12	VP11	14	VP15	14	16	BN YE	VP7	12
17	GY WH	VP8	14	VP12	14	VP16	14	17	GY WH	VP8	14
18	BN GY	VP9	14	VP13	14	VP17	14	18	BN GY	VP8	12
19	WH PK	VP10	14	VP14	14	VP18	14	19	WH PK	VP9	14
20	BN PK	VP11	14	VP15	14	VP19	14	20	BN PK	VP9	12
21	BU WH	Com 16...19		Com 16...19		Com 16...19		21	BU WH	VP10	14
22	BN BU	Com 12...15		Com 12...15		Com 12...15		22	BN BU	VP10	12
23	RD WH	Com 8...11		Com 8...11		Com 8...11		23	RD WH	VP11	14
24	BN RD	Com 4...7		Com 4...7		Com 4...7		24	BN RD	VP11	12
25	BK WH	Com 0...3		Com 0...3		Com 0...3		25	BK WH	VP12	14
-							26	BK BN	VP12	12	
-							27	GN GY	VP13	14	
-							28	YE GY	VP13	12	
-							29	GN PK	VP14	14	
-							30	YE PK	VP14	12	
-							31	GN BU	VP15	14	
-							32	YE BU	VP15	12	
-							33	RD GN	VP16	14	
-							34	RD YE	VP16	12	
-							35	BK GN	VP17	14	
-							36	BK YE	VP17	12	
-							37	BU GY	VP18	14	
-							38	BU PK	VP19	14	
-							39	RD GY	VP20	14	
-							40	RD PK	VP21	14	
-							41	BK GY	VP22	14	
-							42	BK PK	VP23	14	
-							43	BK BU	com		
-							44	BK RD			

1) According to IEC 60757

VP Valve position



A grey field means that a double solenoid valve can be used. Only single solenoid valves can be used for fields with a white background.


Datasheet – Multi-pin plug connection

VP Valve position

Datasheet – Multi-pin plug connection

Dimensions

Multi-pin plug connection, Sub-D

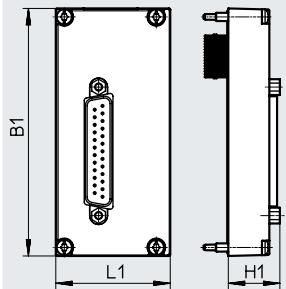
Download CAD data → www.festo.com
Note

Dimensions of the manifold rail with electrical connection
(→ page 63)

Type	B1	L1	H1
VAEM-L1-S-M1...	90.5	41.9	18.9

Dimensions





Multi-pin plug connection, ribbon cable

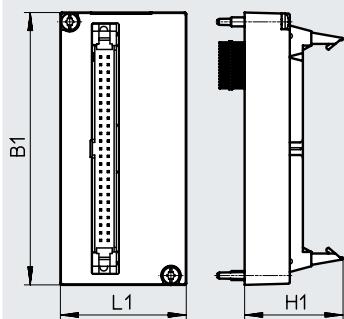Download CAD data → www.festo.com
Note

Dimensions of the manifold rail with electrical connection
(→ page 63)

Type	B1	L1	H1
VAEM-L1-S-M3...	90.5	41.9	32.7

Accessories – Multi-pin plug connection

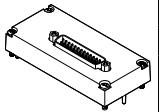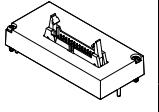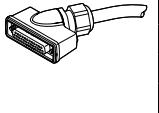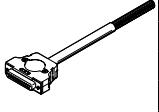Ordering data		Description	Part no.	Type	
Electrical interface, Sub-D					
	25-pin	For variant M1-25 (V20)	573445	VAEM-L1-S-M1-25	
		For variant M1-25V1 (V22)	573447	VAEM-L1-S-M1-25V1	
		For variant M1-25V2 (V23)	573448	VAEM-L1-S-M1-25V2	
		For variant M1-25V3 (V24)	573449	VAEM-L1-S-M1-25V3	
		For variant M1-25V4 (V25)	573450	VAEM-L1-S-M1-25V4	
	44-pin	For variant M1-44 (V21)	573446	VAEM-L1-S-M1-44	
Electrical interface, ribbon cable plug					
	26-pin	For variant M3-26 (V20)	573452	VAEM-L1-S-M3-26	
	50-pin	For variant M3-50 (V26)	573451	VAEM-L1-S-M3-50	
Connecting cable for multi-pin, for the EX2 variant					
	Sub-D socket, angled	<ul style="list-style-type: none"> • 25-pin, up to 24 coils, IP65 • Open cable end, 25-core 	2.5 m	575423	NEBV-S1WA25-K-2.5-N-LE25-S9
			5 m	575424	NEBV-S1WA25-K-5-N-LE25-S9
			10 m	575425	NEBV-S1WA25-K-10-N-LE25-S9
			2.5 m	575420	NEBV-S1WA44-K-2.5-N-LE44-S9
	Sub-D socket, angled	<ul style="list-style-type: none"> • 44-pin, up to 42 coils, IP65 • Open cable end, 44-core 	5 m	575421	NEBV-S1WA44-K-5-N-LE44-S9
			10 m	575422	NEBV-S1WA44-K-10-N-LE44-S9
Connecting cable for multipole, for the EX2E variant					
	Sub-D socket, straight	<ul style="list-style-type: none"> • 25-pin, up to 24 coils, IP40 • Open cable end, 25-core 	2.5 m	575417	NEBV-S1G25-K-2.5-N-LE25-S6
			5 m	575418	NEBV-S1G25-K-5-N-LE25-S6
			10 m	575419	NEBV-S1G25-K-10-N-LE25-S6
			2.5 m	575113	NEBV-S1G44-K-2.5-N-LE44-S6
	Sub-D socket, angled	<ul style="list-style-type: none"> • 44-pin, up to 42 coils, IP40 • Open cable end, 44-core 	5 m	575114	NEBV-S1G44-K-5-N-LE44-S6
			10 m	575115	NEBV-S1G44-K-10-N-LE44-S6
			2.5 m	575423	NEBV-S1WA25-K-2.5-N-LE25-S9
			5 m	575424	NEBV-S1WA25-K-5-N-LE25-S9
			10 m	575425	NEBV-S1WA25-K-10-N-LE25-S9
			2.5 m	575420	NEBV-S1WA44-K-2.5-N-LE44-S9
			5 m	575421	NEBV-S1WA44-K-5-N-LE44-S9
			10 m	575422	NEBV-S1WA44-K-10-N-LE44-S9

Datasheet – I-Port interface/IO-Link®

Festo-specific, standardised interface for direct connection to the fieldbus by mounting the bus node CTEU or via an IO-Link® master via a cable (in IO-Link® mode).



Approved protocols for the I-Port interface/IO-Link®

Versions:

- I-Port interface for bus nodes (CTEU)
- IO-Link® mode for direct connection to a higher-level IO-Link master

The following protocols are supported in connection with the associated CTEU bus node:

- CTEU-EP-EX1C (only with EX2E)
- CTEU-PB-EX1C (only with EX2E)
- CTEU-PN-EX1C (only with EX2E)

The electrical supply/transmission of communication takes place via an M12 plug.

The valve terminal can be equipped with 4 ... 24 (double solenoid) valves.

General technical data

Types of communication		IO-Link®	
Electrical connection		<ul style="list-style-type: none"> • M12 plug, 5-pin • A-coded • Metal thread for shielding 	
Baud rates	COM3	[kbps]	230.4
	COM2	[kbps]	38.4
Intrinsic current consumption, logic supply PS		[mA]	30
Intrinsic current consumption, valve supply PL		[mA]	30
Max. number of solenoid coils	VAEM-L1-S-8-PT		16
	VAEM-L1-S-16-PT		32
	VAEM-L1-S-24-PT		48
Max. no. of valve positions	VAEM-L1-S-8-PT		8
	VAEM-L1-S-16-PT		16
	VAEM-L1-S-24-PT		24
Ambient temperature		[°C]	-5 ... +50
Product weight	Outlet on top	[g]	49
	Outlet on the side	[g]	100
Degree of protection to EN 60529		IP67	
Certification		c UL us - Recognized (OL)	
CE marking (see declaration of conformity) ¹⁾		To EU EMC Directive	
Corrosion resistance class CRC ²⁾		2	
LABS (PWIS) conformity		VDMA24364-B1/B2-L	


1) For information about the area of use, see the EC declaration of conformity at: [www.festo.com/catalogue/...](http://www.festo.com/catalogue/) → Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.


2) More information: www.festo.com/x/topic/crc

Datasheet – I-Port interface/IO-Link®

Status LED X1		Meaning (up to Rev. 07)	Meaning (from Rev. 08)
Illuminated green		Normal operating status	Data communication faulty
Flashes green		Data communication faulty	Normal operating status
Flashes alternately between red/green		24 V load voltage supply faulty	-
Flashes red		Device error	
Illuminated red		24 V load voltage supply and data communication faulty	24 V load voltage supply faulty. Data communication may be faulty
Off		No 24 V operating voltage supply or undervoltage	

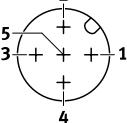Pin allocation – I-Port interface/IO-Link®			
	Pin	Allocation	Description
	1	24V _{EL/SEN}	Operating voltage supply (electronics, sensors/inputs)
	2	24V _{VAL/OUT}	Load voltage supply (valves/outputs)
	3	0V _{EL/SEN}	Operating voltage supply (electronics, sensors/inputs)
	4	C/Q	Data communication
	5	0V _{VAL/OUT}	Load voltage supply (valves/outputs)

System overview – IO-Link®

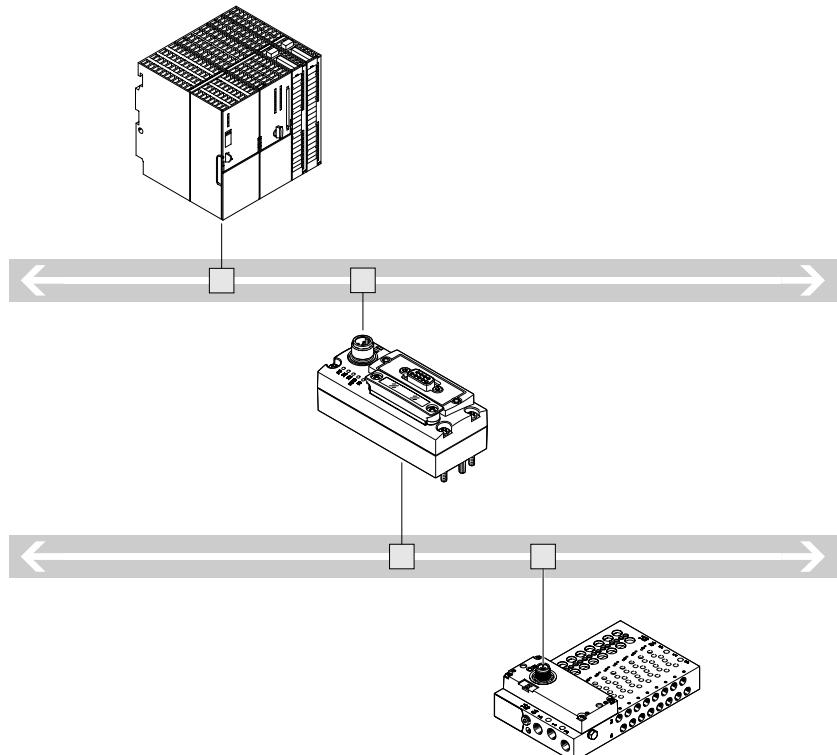


- Communication with the higher-order controller via fieldbus
- Use a bus node CTEU compatible with the fieldbus protocol
- Up to 64 inputs/outputs (solenoid coils), depending on the valve terminal
- No preprocessing

Datasheet – I-Port interface/IO-Link®


Dimensions

I-Port interface, outlet on top

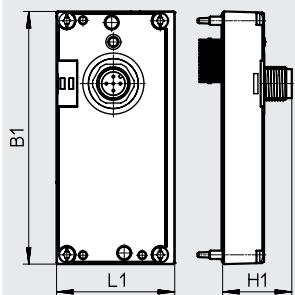Download CAD data → www.festo.com
Note

Dimensions of the manifold rail with electrical connection → page 67


I-Port interface, outlet on side

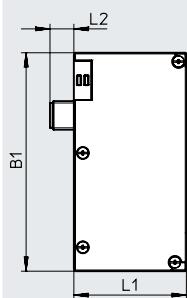
Note

Dimensions of the manifold rail with electrical connection → page 67

Type	Outlet on top			Outlet on the side		
	B1	L1	H1	B1	L1	L2
VAEM-L1-S...	91	42.5	25	91.5	47.1	10

Datasheet – I-Port interface/IO-Link®

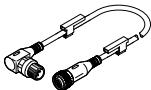Ordering data		Part no.	Type
Description			
Electrical interface for I-Port interface/IO-Link®, outlet on top			
	Actuation of up to 8 double solenoid valve positions	573384	VAEM-L1-S-8-PT
	Actuation of up to 16 double solenoid valve positions	573939	VAEM-L1-S-16-PT
	Actuation of up to 24 double solenoid valve positions	573940	VAEM-L1-S-24-PT
Connection technology for IO-Link®			
	T-adapter M12, 5-pin for IO-Link® and load supply	171175	FB-TA-M12-5POL
	Straight plug, M12, 5-pin, for T adapter FB-TA	175487	SEA-M12-5GS-PG7
	Y-distributor with cable on controller side, M12x1 A-coded, for IO-Link®	8091516	NEDU-L1R2-M12G5-M12LE-1R
	M12x1 A-coded, for IO-Link®, straight cable outlet	8000208	NEBU-M12G5-K-0.5-M12G4
	M12x1 A-coded, for IO-Link®, straight cable outlet	574321	NEBU-M12G5-E-5-Q8N-M12G5
	M12x1 A-coded, for IO-Link®, straight cable outlet	574322	NEBU-M12G5-E-7.5-Q8N-M12G5
	M12x1 A-coded, for IO-Link®, straight cable outlet	8003617	NEBU-M12G5-K-0.5-M12W5
	M12x1 A-coded, for IO-Link®, straight cable outlet	8003618	NEBU-M12G5-K-2-M12W5
	M12x1 A-coded, for IO-Link®, angled cable outlet	570733	NEBU-M12W5-K-0.5-M12W5
	M12x1 A-coded, for IO-Link®, angled cable outlet	570734	NEBU-M12W5-K-2-M12W5
Inscription label for I-Port interface/IO-Link®			
	40 pieces in frame	565306	ASLR-C-E4