

Filters MS-LF/LFM/LFX, MS series


FESTO



Filters MS-LF/LFM/LFX, MS series

FESTO

Product range overview – MS series service units

Type	Size	Pneumatic connection in housing	Connecting plate	Pressure regulation range [bar]						Grade of filtration [µm]				
				0.05	0.05	0.1	0.3	0.1	0.5					
				... 0.7	... 2.5	... 4	... 7	... 12	... 16	0.01	1	5	40	
Code			AG...	D2	D4	D5	D6	D7	D8	A	B	C	E	
Service units														
MSB-FRC		4	G1/8, G1/4	G1/8, G1/4, G3/8	–	–	–	■	■	–	–	–	■	■
		6	G1/4, G3/8, G1/2	G1/4, G3/8, G1/2, G3/4	–	–	–	■	■	–	–	–	■	■
		9	–											
		12	–											
Service unit combinations (further variants can be ordered using the configurator → Internet: msb4, msb6 or msb9)														
MSB		4	G1/4	G1/8, G1/4, G3/8	–	–	–	■	■	–	–	–	■	■
		6	G1/2	G1/4, G3/8, G1/2, G3/4	–	–	–	■	■	–	–	–	■	■
		9	–											
		12	–											
Individual devices														
Filter regulators MS-LFR		4	G1/8, G1/4	G1/8, G1/4, G3/8	–	–	■	■	■	–	–	–	■	■
		6	G1/4, G3/8, G1/2	G1/4, G3/8, G1/2, G3/4	–	–	■	■	■	■	–	–	■	■
		9	G3/4, G1	G1/2, G3/4, G1, G1 1/4, G1 1/2	–	–	■	■	–	–	–	–	■	■
		12	–	G1, G1 1/4, G1 1/2, G2	–	–	–	■	■	■	–	–	■	■
Filters MS-LF		4	G1/8, G1/4	G1/8, G1/4, G3/8	–	–	–	–	–	–	–	–	■	■
		6	G1/4, G3/8, G1/2	G1/4, G3/8, G1/2, G3/4	–	–	–	–	–	–	–	–	■	■
		9	G3/4, G1	G1/2, G3/4, G1, G1 1/4, G1 1/2	–	–	–	–	–	–	–	–	■	■
		12	–	G1, G1 1/4, G1 1/2, G2	–	–	–	–	–	–	–	–	■	■
Fine and micro filters MS-LFM		4	G1/8, G1/4	G1/8, G1/4, G3/8	–	–	–	–	–	–	■	■	–	–
		6	G1/4, G3/8, G1/2	G1/4, G3/8, G1/2, G3/4	–	–	–	–	–	–	■	■	–	–
		9	G3/4, G1	G1/2, G3/4, G1, G1 1/4, G1 1/2	–	–	–	–	–	–	■	■	–	–
		12	–	G1, G1 1/4, G1 1/2, G2	–	–	–	–	–	–	■	■	–	–
Activated carbon filters MS-LFX		4	G1/8, G1/4	G1/8, G1/4, G3/8	–	–	–	–	–	–	–	–	–	–
		6	G1/4, G3/8, G1/2	G1/4, G3/8, G1/2, G3/4	–	–	–	–	–	–	–	–	–	–
		9	G3/4, G1	G1/2, G3/4, G1, G1 1/4, G1 1/2	–	–	–	–	–	–	–	–	–	–
		12	–	G1, G1 1/4, G1 1/2, G2	–	–	–	–	–	–	–	–	–	–
Water separators MS-LWS		4	–											
		6	G1/4, G3/8, G1/2	G1/4, G3/8, G1/2, G3/4	–	–	–	–	–	–	–	–	–	–
		9	–											
		12	–											

Filters MS-LF/LFM/LFX, MS series

Product range overview – MS series service units

Type	Size	Bowl guard		Condensate drains				Pressure indicator					Security		Options		→ Page/ Internet
		Plastic bowl with plastic bowl guard	Metal bowl	Manual rotary	Semi-automatic	Fully automatic	External, fully automatic, electrical	Cover plate (without pressure gauge)	Integrated MS pressure gauge	Adapter plate for EN pressure gauge G1/8	Adapter plate for EN pressure gauge G1/4	Pressure sensor	Rotary knob with detent, lockable via accessories	Rotary knob with integrated lock	Silencer	Flow direction from right to left	
Code		R	U	M	H	V	E...	VS	AG	A8	A4	AD...	AS	E11	S	Z	
Service units																	
MSB-FRC	4	■	–	■	–	■	–	–	■	–	–	–	■	–	–	■	msb4
	6	■	■	■	–	■	–	–	■	–	–	–	■	–	–	■	msb6
	9	–	–	–	–	–	–	–	–	–	–	–	–	–	–	–	–
	12	–	–	–	–	–	–	–	–	–	–	–	–	–	–	–	–
Service unit combinations																	
MSB	4	■	■	■	–	■	–	–	■	–	–	–	■	–	–	■	msb4
	6	■	■	■	–	■	–	–	■	–	–	–	■	–	–	■	msb6
	9	–	–	–	–	–	–	–	–	–	–	–	–	–	–	–	–
	12	–	–	–	–	–	–	–	–	–	–	–	–	–	–	–	–
Individual devices																	
Filter regulators MS-LFR	4	■	■	■	■	■	–	■	■	■	■	■	■	■	–	■	ms4-lfr
	6	■	■	■	■	■	■	■	■	–	■	■	■	■	–	■	ms6-lfr
	9	–	■	■	■	■	■	■	■	–	■	■	■	■	–	■	ms9-lfr
	12	–	■	■	–	■	■	■	■	–	■	–	■	■	–	■	ms12-lfr
Filters MS-LF	4	■	■	■	■	■	–	–	–	–	–	–	–	–	–	■	8, 10
	6	■	■	■	■	■	■	–	–	–	–	–	–	–	–	■	8, 10
	9	–	■	■	■	■	■	–	–	–	–	–	–	–	–	■	36
	12	–	■	■	–	■	■	–	–	–	–	–	–	–	–	■	63
Fine and micro filters MS-LFM	4	■	■	■	■	■	–	–	–	–	–	–	–	–	–	■	8, 18
	6	■	■	■	■	■	■	–	–	–	–	–	–	–	–	■	8, 18
	9	–	■	■	–	■	■	–	–	–	–	–	–	–	–	■	44
	12	–	■	■	–	■	■	–	–	–	–	–	–	–	–	■	70
Activated carbon filters MS-LFX	4	■	■	–	–	–	–	–	–	–	–	–	–	–	–	■	8, 30
	6	■	■	–	–	–	–	–	–	–	–	–	–	–	–	■	8, 30
	9	–	■	–	–	–	–	–	–	–	–	–	–	–	–	■	56
	12	–	■	–	–	–	–	–	–	–	–	–	–	–	–	■	79
Water separators MS-LWS	4	–	–	–	–	–	–	–	–	–	–	–	–	–	–	–	–
	6	–	■	–	–	■	■	–	–	–	–	–	–	–	–	■	ms6-lws
	9	–	–	–	–	–	–	–	–	–	–	–	–	–	–	–	–
	12	–	–	–	–	–	–	–	–	–	–	–	–	–	–	–	–

Filters MS-LF/LFM/LFX, MS series

Product range overview – MS series service units

FESTO

Type	Size	Pneumatic connection in housing	Connecting plate	Pressure regulation range [bar]						Supply voltage				
				0.05 ... 0.7	0.05 ... 2.5	0.1 ... 4	0.3 ... 7	0.1 ... 12	0.5 ... 16	24 V DC, connection pattern to EN 175301	24 V DC, connection pattern M12 to DESINA	110 V AC, connection pattern to EN 175301	230 V AC, connection pattern to EN 175301	
Code			AG...	D2	D4	D5	D6	D7	D8	V24	V24P	V110	V230	
Individual devices														
Pressure regulators MS-LR		4	G1/8, G1/4	G1/8, G1/4, G3/8	–	–	■	■	■	–	–	–	–	–
		6	G1/4, G3/8, G1/2	G1/4, G3/8, G1/2, G3/4	–	–	■	■	■	–	–	–	–	–
		9	G3/4, G1	G1/2, G3/4, G1, G1 1/4, G1 1/2	–	–	■	■	–	–	–	–	–	–
		12	–	G1, G1 1/4, G1 1/2, G2	–	–	–	■	■	–	–	–	–	–
Pressure regulators MS-LRB		4	G1/4	G1/8, G1/4, G3/8	–	–	■	■	■	–	–	–	–	–
		6	G1/2	G1/4, G3/8, G1/2, G3/4	–	–	■	■	■	–	–	–	–	–
		9	–	–	–	–	–	–	–	–	–	–	–	–
		12	–	–	–	–	–	–	–	–	–	–	–	–
Precision pressure regulators MS-LRP		4	–	–	–	–	–	–	–	–	–	–	–	–
		6	G1/4, G3/8, G1/2	G1/4, G3/8, G1/2, G3/4	■	■	■	–	■	–	–	–	–	–
		9	–	–	–	–	–	–	–	–	–	–	–	–
		12	–	–	–	–	–	–	–	–	–	–	–	–
Precision pressure regulators MS-LRPB		4	–	–	–	–	–	–	–	–	–	–	–	–
		6	G1/2	G1/4, G3/8, G1/2, G3/4	■	■	■	–	■	–	–	–	–	–
		9	–	–	–	–	–	–	–	–	–	–	–	–
		12	–	–	–	–	–	–	–	–	–	–	–	–
Electrical pressure regulators MS-LRE		4	–	–	–	–	–	–	–	–	–	–	–	–
		6	G1/4, G3/8, G1/2	G1/4, G3/8, G1/2, G3/4	–	–	■	■	■	–	–	–	–	–
		9	–	–	–	–	–	–	–	–	–	–	–	–
		12	–	–	–	–	–	–	–	–	–	–	–	–
Lubricators MS-LOE		4	G1/8, G1/4	G1/8, G1/4, G3/8	–	–	–	–	–	–	–	–	–	–
		6	G1/4, G3/8, G1/2	G1/4, G3/8, G1/2, G3/4	–	–	–	–	–	–	–	–	–	–
		9	–	–	–	–	–	–	–	–	–	–	–	–
		12	–	G1, G1 1/4, G1 1/2, G2	–	–	–	–	–	–	–	–	–	–
Electrical on-off valves MS-EM(1)		4	G1/8, G1/4	G1/8, G1/4, G3/8	–	–	–	–	–	–	–	–	–	–
		6	G1/4, G3/8, G1/2	G1/4, G3/8, G1/2, G3/4	–	–	–	–	–	–	–	–	–	–
		9	G3/4, G1	G1/2, G3/4, G1, G1 1/4, G1 1/2	–	–	–	–	–	–	–	–	–	–
		12	–	G1, G1 1/4, G1 1/2, G2	–	–	–	–	–	–	–	–	–	–
Electrical on-off valves MS-EE		4	G1/8, G1/4	G1/8, G1/4, G3/8	–	–	–	–	–	■	–	■	■	■
		6	G1/4, G3/8, G1/2	G1/4, G3/8, G1/2, G3/4	–	–	–	–	–	■	–	■	■	■
		9	G3/4, G1	G1/2, G3/4, G1, G1 1/4, G1 1/2	–	–	–	–	–	■	■	■	■	■
		12	–	G1, G1 1/4, G1 1/2, G2	–	–	–	–	–	■	■	■	■	■
Electrical soft-start valves MS-DL		4	G1/8, G1/4	G1/8, G1/4, G3/8	–	–	–	–	–	–	–	–	–	–
		6	G1/4, G3/8, G1/2	G1/4, G3/8, G1/2, G3/4	–	–	–	–	–	–	–	–	–	–
		9	–	–	–	–	–	–	–	–	–	–	–	–
		12	–	G1, G1 1/4, G1 1/2, G2	–	–	–	–	–	–	–	–	–	–
Electrical soft-start valves MS-DE		4	G1/8, G1/4	G1/8, G1/4, G3/8	–	–	–	–	–	■	–	■	■	■
		6	G1/4, G3/8, G1/2	G1/4, G3/8, G1/2, G3/4	–	–	–	–	–	■	–	■	■	■
		9	–	–	–	–	–	–	–	–	–	–	–	–
		12	–	G1, G1 1/4, G1 1/2, G2	–	–	–	–	–	■	■	■	■	■
Soft start and exhaust valves MS-SV		4	–	–	–	–	–	–	–	–	–	–	–	–
		6	G1/2	G1/4, G3/8, G1/2, G3/4	–	–	–	–	–	■	–	–	–	–
		9	–	–	–	–	–	–	–	–	–	–	–	–
		12	–	–	–	–	–	–	–	–	–	–	–	–

Filters MS-LF/LFM/LFX, MS series

FESTO

Product range overview – MS series service units

Type	Size	Bowl guard		Pressure indicator					Security		Options		→ Page/ Internet
		Plastic bowl with plastic bowl guard	Metal bowl	Cover plate (without pressure gauge)	Integrated MS pressure gauge	Adapter plate for EN pressure gauge G1/8	Adapter plate for EN pressure gauge G1/4	Pressure sensor	Rotary knob with detent, lockable via accessories	Rotary knob with integrated lock	Silencer	Flow direction from right to left	
Code		R	U	VS	AG	A8	A4	AD...	AS	E11	S	Z	
Individual devices													
Pressure regulators MS-LR	4	–	–	■	■	■	■	■	■	■	–	■	ms4-lr
	6	–	–	■	■	–	■	■	■	■	–	■	ms6-lr
	9	–	–	■	■	–	■	■	■	■	–	■	ms9-lr
	12	–	–	■	■	–	■	–	■	■	–	■	ms12-lr
Pressure regulators MS-LRB	4	–	–	■	■	■	■	■	■	■	–	■	ms4-lrb
	6	–	–	■	■	–	■	■	■	■	–	■	ms6-lrb
	9	–	–	–	–	–	–	–	–	–	–	–	–
	12	–	–	–	–	–	–	–	–	–	–	–	–
Precision pressure regulators MS-LRP	4	–	–	–	–	–	–	–	–	–	–	–	–
	6	–	–	■	–	■	■	■	■	■	–	■	ms6-lrp
	9	–	–	–	–	–	–	–	–	–	–	–	–
	12	–	–	–	–	–	–	–	–	–	–	–	–
Precision pressure regulators MS-LRPB	4	–	–	–	–	–	–	–	–	–	–	–	–
	6	–	–	■	–	■	■	■	■	■	–	■	ms6-lrpb
	9	–	–	–	–	–	–	–	–	–	–	–	–
	12	–	–	–	–	–	–	–	–	–	–	–	–
Electrical pressure regulators MS-LRE	4	–	–	–	–	–	–	–	–	–	–	–	–
	6	–	–	■	■	–	■	–	–	–	–	■	ms6-lre
	9	–	–	–	–	–	–	–	–	–	–	–	–
	12	–	–	–	–	–	–	–	–	–	–	–	–
Lubricators MS-LOE	4	■	■	–	–	–	–	–	–	–	–	■	ms4-loe
	6	■	■	–	–	–	–	–	–	–	–	■	ms6-loe
	9	–	–	–	–	–	–	–	–	–	–	–	–
	12	–	■	–	–	–	–	–	–	–	–	■	ms12-loe
Electrical on-off valves MS-EM(1)	4	–	–	■	■	■	■	■	–	–	■	■	ms4-em1
	6	–	–	■	■	–	■	■	–	–	■	■	ms6-em1
	9	–	–	■	■	–	■	■	–	–	■	■	ms9-em
	12	–	–	■	■	–	■	–	–	–	■	■	ms12-em
Electrical on-off valves MS-EE	4	–	–	■	■	■	■	■	–	–	■	■	ms4-ee
	6	–	–	■	■	–	■	■	–	–	■	■	ms6-ee
	9	–	–	■	■	–	■	■	–	–	■	■	ms9-ee
	12	–	–	■	■	–	■	–	–	–	■	■	ms12-ee
Electrical soft-start valves MS-DL	4	–	–	■	■	■	■	■	–	–	–	■	ms4-dl
	6	–	–	■	■	–	■	■	–	–	–	■	ms6-dl
	9	–	–	–	–	–	–	–	–	–	–	–	–
	12	–	–	■	■	–	■	–	–	–	–	■	ms12-dl
Electrical soft-start valves MS-DE	4	–	–	■	■	■	■	■	–	–	–	■	ms4-de
	6	–	–	■	■	–	■	■	–	–	–	■	ms6-de
	9	–	–	–	–	–	–	–	–	–	–	–	–
	12	–	–	■	■	–	■	–	–	–	–	■	ms12-de
Soft start and exhaust valves MS-SV	4	–	–	–	–	–	–	–	–	–	–	–	–
	6	–	–	■	■	–	■	■	–	–	■	■	ms6-sv
	9	–	–	–	–	–	–	–	–	–	–	–	–
	12	–	–	–	–	–	–	–	–	–	–	–	–

Filters MS-LF/LFM/LFX, MS series

Product range overview – MS series service units

FESTO

Type	Size	Pneumatic connection in housing	Connecting plate	Pressure regulation range [bar]				Supply voltage			
				0.1 ... 4	0.3 ... 7	0.1 ... 12	0.5 ... 16	24 V DC, connection pattern to EN 175301	24 V DC, connection pattern M12 to DESINA	110 V AC, connection pattern to EN 175301	230 V AC, connection pattern to EN 175301
Code			AG...	D5	D6	D7	D8	V24	V24P	V110	V230
Individual devices											
Membrane air dryers MS-LDM1		4	G1/8, G1/4	G1/8, G1/4, G3/8	–	–	–	–	–	–	–
		6	G1/4, G3/8, G1/2	G1/4, G3/8, G1/2, G3/4	–	–	–	–	–	–	–
		9	–	–	–	–	–	–	–	–	–
		12	–	–	–	–	–	–	–	–	–
Branching modules MS-FRM		4	G1/8, G1/4	G1/8, G1/4, G3/8	–	–	–	–	–	–	–
		6	G1/4, G3/8, G1/2	G1/4, G3/8, G1/2, G3/4	–	–	–	–	–	–	–
		9	G3/4, G1	G1/2, G3/4, G1, G1 1/4, G1 1/2	–	–	–	–	–	–	–
		12	–	G1, G1 1/4, G1 1/2, G2	–	–	–	–	–	–	–
Distributor blocks MS-FRM-FRZ		4	G1/4	–	–	–	–	–	–	–	–
		6	G1/2	–	–	–	–	–	–	–	–
		9	–	–	–	–	–	–	–	–	–
		12	–	–	–	–	–	–	–	–	–
Flow sensors SFAM		4	–	–	–	–	–	–	–	–	–
		6	G1/2	G1/2	–	–	–	–	–	–	–
		9	–	–	–	–	–	–	–	–	–
		12	–	–	–	–	–	–	–	–	–

Filters MS-LF/LFM/LFX, MS series

Product range overview – MS series service units




Type	Size	Bowl guard		Pressure indicator					Switch output		Options		→ Page/ Internet
		Plastic bowl with plastic bowl guard	Metal bowl	Cover plate (without pressure gauge)	Integrated MS pressure gauge	Adapter plate for EN pressure gauge G1/8	Adapter plate for EN pressure gauge G1/4	Pressure sensor	2x PNP	2x NPN	Silencer	Flow direction from right to left	
Code		R	U	VS	AG	A8	A4	AD...	P2/2S	N2/2S	S	Z/R	
Individual devices													
Membrane air dryers MS-LDM1	4	–	■	–	–	–	–	–	–	–	–	■	ms4-ldm1
	6	–	■	–	–	–	–	–	–	–	–	■	ms6-ldm1
	9	–	–	–	–	–	–	–	–	–	–	–	–
	12	–	–	–	–	–	–	–	–	–	–	–	–
Branching modules MS-FRM	4	–	–	■	■	■	■	■	–	–	–	■	ms4-frm
	6	–	–	■	■	–	■	■	–	–	–	■	ms6-frm
	9	–	–	■	■	–	■	■	–	–	–	■	ms9-frm
	12	–	–	■	–	–	–	–	–	–	–	–	ms12-frm
Distributor blocks MS-FRM-FRZ	4	–	–	–	–	–	–	–	–	–	–	■	ms4-frm
	6	–	–	–	–	–	–	–	–	–	–	■	ms6-frm
	9	–	–	–	–	–	–	–	–	–	–	–	–
	12	–	–	–	–	–	–	–	–	–	–	–	–
Flow sensors SFAM	4	–	–	–	–	–	–	–	■	■	–	■	–
	6	–	–	–	–	–	–	–	■	■	–	■	sfam
	9	–	–	–	–	–	–	–	–	–	–	–	–
	12	–	–	–	–	–	–	–	–	–	–	–	–

Filters MS4/MS6-LF/LFM/LFX, MS series

Peripherals overview

FESTO

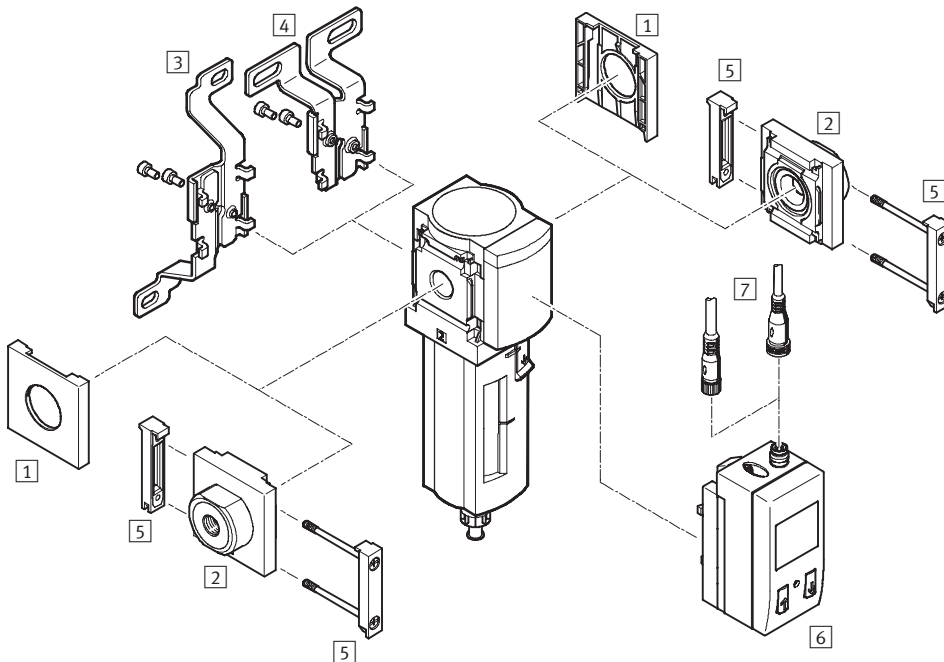

Note

Other accessories:

- Module connector for combination with sizes MS4/MS6 or size MS9 → Internet: amv, rmv, armv
- Adapter plate for mounting on profiles → Internet: ipm-80, ipm-40-80, ipm-80-80

Mounting attachments and accessories						
		Individual device		Combination		➔ Page/Internet
		without connecting plate	with connecting plate	without connecting plate	with connecting plate	
1	Cover plate MS4/6-END	■	–	■	–	ms4-end, ms6-end
2	Connecting plate MS4/6-AG...	–	■	–	■	ms4-ag, ms6-ag
3	Mounting bracket MS4/6-WB	■	■	–	–	ms4-wb, ms6-wb
4	Mounting bracket MS4-WBM	■	■	–	–	ms4-wbm
5	Module connector MS4/6-MV	–	■	■	■	ms4-mv, ms6-mv
6	Filter pollution indicator DP/DN/DPI/DNI	■ for LFM	■ for LFM	■ for LFM	■ for LFM	28
7	Connecting cable NEBU-M8...-LE3/NEBU-M12...-LE4	■ for LFM	■ for LFM	■ for LFM	■ for LFM	nebu
–	Mounting bracket MS4/6-WP/WPB/WPE/WPM	–	■	■	■	ms4-wp, ms6-wp

Filters MS4/MS6-LF/LFM/LFX, MS series

Type codes

		MS	6	-	LFM	-	1/4	-	A	R	M	-		-	DA
Series															
MS	Standard service unit														
Size															
4	Grid dimension 40 mm														
6	Grid dimension 62 mm														
Service function															
LF	Filter														
LFM	Fine and micro filter														
LFX	Activated carbon filter														
Pneumatic connection															
MS4															
1/8	G1/8 thread														
1/4	G1/4 thread														
MS6															
1/4	G1/4 thread														
3/8	G3/8 thread														
1/2	G1/2 thread														
Grade of filtration (for LF and LFM only)															
A	0.01 µm														
B	1 µm														
C	5 µm														
E	40 µm														
Bowl guard															
R	Plastic bowl guard														
U	Integrated as metal bowl														
Condensate drain (for LF and LFM only)															
M	Manual rotary														
V	Fully automatic														
Flow rate (for LFM and LFX only)															
	Standard														
HF	High flow rate														
Filter change sensor (for LFM only)															
	Without differential pressure indicator														
DA	Differential pressure indicator														

Further variants can be ordered using the modular system

Filters LF	→ 16
Fine and micro filters LFM	→ 28
Activated carbon filters LFX	→ 35


- Connecting plates
- Condensate drain
- Range of application (only for LFM and LFX)
- Filter pollution indicator (for LFM only)
- Type of mounting
- Alternative flow direction

Filters MS4/MS6-LF, MS series


FESTO

Technical data

Function
Condensate drain
manual rotary

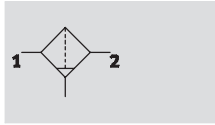

semi or fully automatic

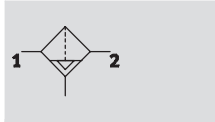

Flow rate
1,000 ... 4,100 l/min

Temperature range
-10 ... +60 °C

 Input pressure
0 ... 20 bar

www.festo.com/en/Spare_parts_service

Wearing parts kits
→ 15



The sintered filter with centrifugal separation removes contamination, rust and condensate from the compressed air. The filter cartridges are replaceable.

- Good particle and condensate separation
- High flow rate with minimal pressure drop
- Available with manual, semi-automatic, fully automatic or fully automatic, electrically actuated condensate drain

- Choice of filter cartridges: 5 µm or 40 µm
- New filter cartridges → 85

General technical data					
Size	MS4		MS6		
Pneumatic connection 1, 2	G $\frac{1}{8}$	G $\frac{1}{4}$	G $\frac{1}{4}$	G $\frac{3}{8}$	G $\frac{1}{2}$
Design	Sintered filter with centrifugal separation				
Type of mounting	Via accessories				
	In-line installation				
Assembly position	Vertical $\pm 5^\circ$				
Grade of filtration [µm]	5 (air purity class at the output 3.7.- to DIN ISO 8573-1)				
	40 (air purity class at the output 5.7.- to DIN ISO 8573-1)				
Bowl guard	Plastic bowl guard				
	Integrated as metal bowl				
Condensate drain	Manual rotary				
	Semi-automatic				
	Fully automatic				
	-				
			Fully automatic, electrical		
Max. condensate volume [cm 3]	19 (with plastic bowl guard)		38		
	25 (with metal bowl)				

Note: This product conforms to ISO 1179-1 and to ISO 228-1

Standard nominal flow rate $q_{nN}^{1)}$ [l/min]					
Size	MS4		MS6		
Pneumatic connection	G $\frac{1}{8}$	G $\frac{1}{4}$	G $\frac{1}{4}$	G $\frac{3}{8}$	G $\frac{1}{2}$
Grade of filtration 5 µm	1,000	1,300	2,000	3,000	3,200
40 µm	1,100	1,700	2,500	3,800	4,100

1) Measured at $p_1 = 6$ bar and $\Delta p = 1$ bar

Filters MS4/MS6-LF, MS series

FESTO

Technical data

Operating and environmental conditions							
Condensate drain	Manual rotary M		Semi-automatic H		Fully automatic V		Fully automatic, electrical E1 ... E4
Size	MS4	MS6	MS4	MS6	MS4	MS6	MS6
Input pressure [bar]	0 ... 14	0 ... 20	1.5 ... 12	1.5 ... 12	2 ... 12	2 ... 12	0.8 ... 16
Operating medium	Filtered compressed air or inert gases, lubricated or unlubricated, grade of filtration 40 µm						
Ambient temperature [°C]	-10 ... +60		+5 ... +60		+5 ... +60		+1 ... +60
Temperature of medium [°C]	-10 ... +60		+5 ... +60		+5 ... +60		+1 ... +60
Storage temperature [°C]	-10 ... +60		-10 ... +60		-10 ... +60		+1 ... +60
Corrosion resistance CRC ¹⁾	2						


1) Corrosion resistance class 2 according to Festo standard 940 070

Components requiring moderate corrosion resistance. Externally visible parts with primarily decorative surface requirements which are in direct contact with a normal industrial environment or media such as coolants or lubricating agents.

Weights [g]		
Size	MS4	MS6
Filter with plastic bowl guard R	189	600
Filter with metal bowl U	349	820
Filter with metal bowl U and fully automatic, electrically actuated condensate drain E1 ... E4	–	1,800

Materials

Sectional view

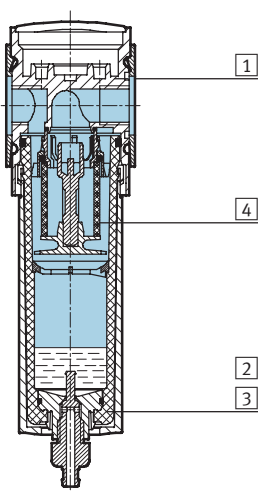



Filters	
1 Body	Die-cast aluminium
2 Plastic bowl guard	PC
3 Metal bowl	Wrought aluminium alloy, die-cast aluminium
Viewing window	PA
4 Filter element	PE
– Seals	NBR
Note on materials	RoHS-compliant (not with variant E1, E2, E3 or E4)
	Free of copper and PTFE

Standard flow rate q_n as a function of the differential pressure Δp_{1-2}

Grade of filtration 5 µm

Grade of filtration 40 µm

MS4-LF-1/8

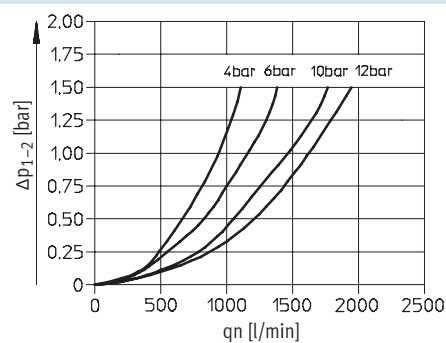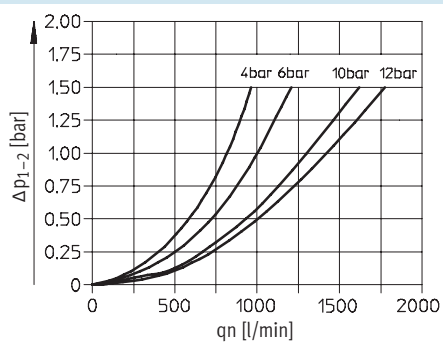

Filters MS4/MS6-LF, MS series

Technical data



FESTO

Standard flow rate q_n as a function of the differential pressure Δp_{1-2}



Grade of filtration 5 μm

Grade of filtration 40 μm



MS4-LF-1/4

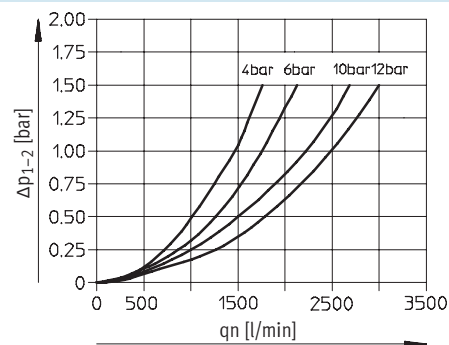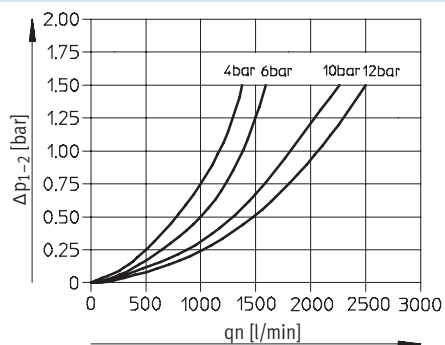



MS6-LF-1/4

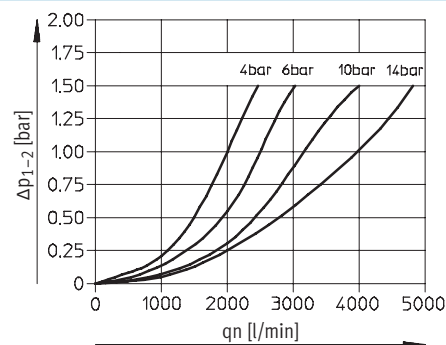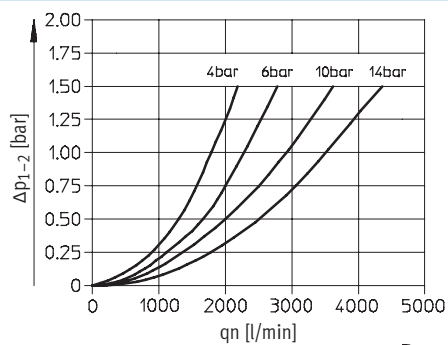

MS6-LF-3/8

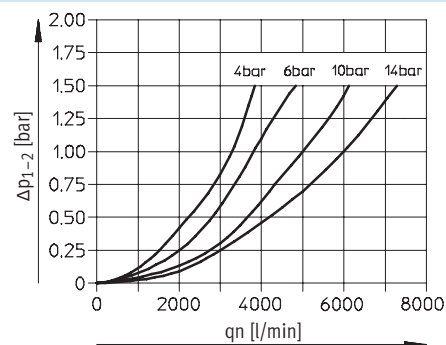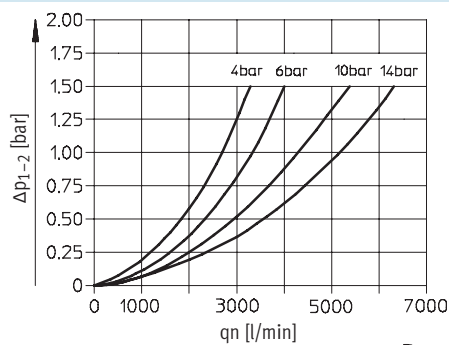

MS6-LF-1/2

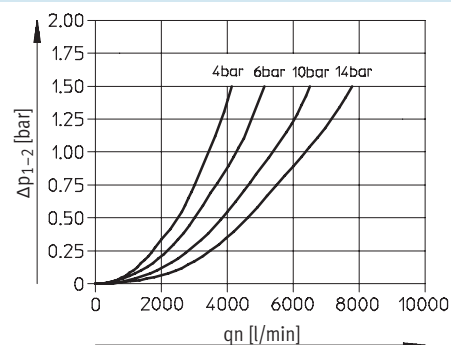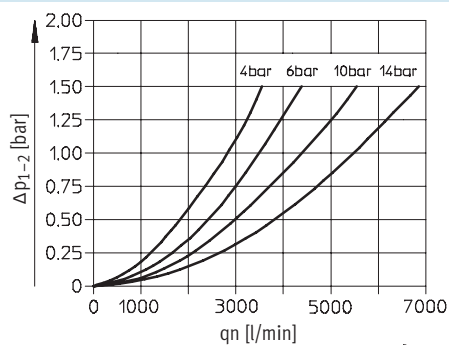

Filters MS4/MS6-LF, MS series


Technical data

FESTO

Dimensions – Standard

Download CAD Data → www.festo.com/us/cad

Manual rotary condensate drain

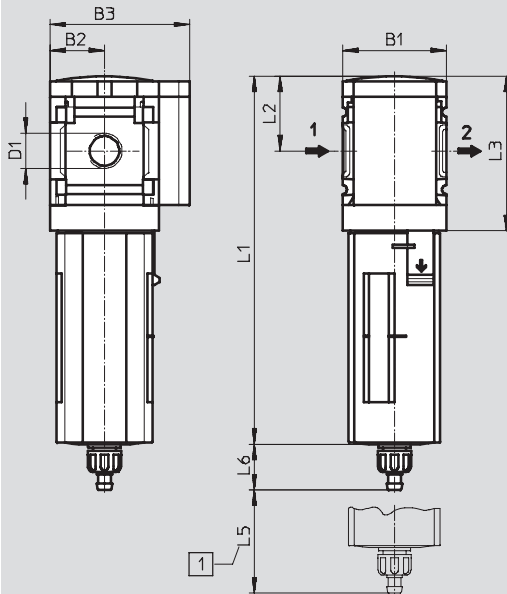

1 Installation dimensions

→ Flow direction

Type	B1	B2	B3	D1	L1		L2	L3	L5	L6	
					Bowl guard					Bowl guard	
					Plastic	Metal				Plastic	Metal
MS4-LF-1/8	40	21	54	G1/8	142.8	159.4	29	60.5	25	17.7	17.7
MS4-LF-1/4				G1/4							
MS6-LF-1/4	62	31	76	G1/4	192	198	42	87	68	15.8	19
MS6-LF-3/8				G3/8							
MS6-LF-1/2				G1/2							

Note: This product conforms to ISO 1179-1 and to ISO 228-1

Filters MS4/MS6-LF, MS series


Technical data

FESTO

Dimensions – Condensate drain


Download CAD Data → www.festo.com/us/cad

Manual rotary M

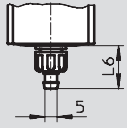


Barbed fitting for plastic tubing
PCN-4

Semi-automatic H

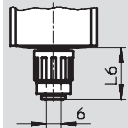

QS fitting for plastic tubing
PUN-6/PAN-6

Fully automatic V

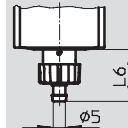

Barbed fitting for plastic tubing
PCN-4


Type	L6
Plastic bowl guard	
MS4-LF-...-M	17.7
MS6-LF-...-M	15.8
Metal bowl	
MS4-LF-...-M	17.7
MS6-LF-...-M	19

Type	L6
Plastic bowl guard	
MS4-LF-...-H	22.1
MS6-LF-...-H	20.2
Metal bowl	
MS4-LF-...-H	22.1
MS6-LF-...-H	22.8

Type	L6
Plastic bowl guard	
MS4-LF-...-V	20.4
MS6-LF-...-V	18.5
Metal bowl	
MS4-LF-...-V	20.4
MS6-LF-...-V	22

Fully automatic, electrically actuated E1 ... E4

Technical data → Internet: pwea

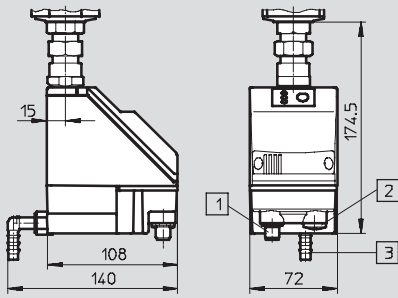

- 1 Variant E1
PWEA-AP-... with M12x1 plug,
5-pin for NEBU-M12...-LE5
- 2 Variant E2/E3/E4
PWEA-AC-... with cable conduit
fitting Pg9
- 3 Connection 360° rotatable for
plastic tubing PUN-H-12x2-...

Filters MS4/MS6-LF, MS series

Technical data

FESTO

Ordering data						
Size	Condensate drain	Connection	Grade of filtration 5 µm			Grade of filtration 40 µm
			Part No.	Type		Part No.
Plastic bowl guard						
MS4	manual rotary	G $\frac{1}{8}$	529403	MS4-LF- $\frac{1}{8}$ -CRM		529407 MS4-LF- $\frac{1}{8}$ -ERM
		G $\frac{1}{4}$	529395	MS4-LF- $\frac{1}{4}$ -CRM		529399 MS4-LF- $\frac{1}{4}$ -ERM
	fully automatic	G $\frac{1}{8}$	529405	MS4-LF- $\frac{1}{8}$ -CRV		529409 MS4-LF- $\frac{1}{8}$ -ERV
		G $\frac{1}{4}$	529397	MS4-LF- $\frac{1}{4}$ -CRV		529401 MS4-LF- $\frac{1}{4}$ -ERV
MS6	manual rotary	G $\frac{1}{4}$	529623	MS6-LF- $\frac{1}{4}$ -CRM		529631 MS6-LF- $\frac{1}{4}$ -ERM
		G $\frac{3}{8}$	529639	MS6-LF- $\frac{3}{8}$ -CRM		529647 MS6-LF- $\frac{3}{8}$ -ERM
		G $\frac{1}{2}$	529607	MS6-LF- $\frac{1}{2}$ -CRM		529615 MS6-LF- $\frac{1}{2}$ -ERM
	fully automatic	G $\frac{1}{4}$	529625	MS6-LF- $\frac{1}{4}$ -CRV		529633 MS6-LF- $\frac{1}{4}$ -ERV
		G $\frac{3}{8}$	529641	MS6-LF- $\frac{3}{8}$ -CRV		529649 MS6-LF- $\frac{3}{8}$ -ERV
		G $\frac{1}{2}$	529609	MS6-LF- $\frac{1}{2}$ -CRV		529617 MS6-LF- $\frac{1}{2}$ -ERV
Integrated as metal bowl						
MS4	manual rotary	G $\frac{1}{8}$	535638	MS4-LF- $\frac{1}{8}$ -CUM		535644 MS4-LF- $\frac{1}{8}$ -EUM
		G $\frac{1}{4}$	535654	MS4-LF- $\frac{1}{4}$ -CUM		535660 MS4-LF- $\frac{1}{4}$ -EUM
	fully automatic	G $\frac{1}{8}$	535640	MS4-LF- $\frac{1}{8}$ -CUV		535642 MS4-LF- $\frac{1}{8}$ -EUV
		G $\frac{1}{4}$	535656	MS4-LF- $\frac{1}{4}$ -CUV		535658 MS4-LF- $\frac{1}{4}$ -EUV
MS6	manual rotary	G $\frac{1}{4}$	529627	MS6-LF- $\frac{1}{4}$ -CUM		529635 MS6-LF- $\frac{1}{4}$ -EUM
		G $\frac{3}{8}$	529643	MS6-LF- $\frac{3}{8}$ -CUM		529651 MS6-LF- $\frac{3}{8}$ -EUM
		G $\frac{1}{2}$	529611	MS6-LF- $\frac{1}{2}$ -CUM		529619 MS6-LF- $\frac{1}{2}$ -EUM
	fully automatic	G $\frac{1}{4}$	529629	MS6-LF- $\frac{1}{4}$ -CUV		529637 MS6-LF- $\frac{1}{4}$ -EUV
		G $\frac{3}{8}$	529645	MS6-LF- $\frac{3}{8}$ -CUV		529653 MS6-LF- $\frac{3}{8}$ -EUV
		G $\frac{1}{2}$	529613	MS6-LF- $\frac{1}{2}$ -CUV		529621 MS6-LF- $\frac{1}{2}$ -EUV

Ordering data – Wearing parts kits		
Size	Part No.	Type
MS4	673639	MS4-LF
MS6	673640	MS6-LF

Filters MS4/MS6-LF, MS series

Ordering data – Modular products

FESTO

M Mandatory data →						
Module No.	Series	Size	Function	Connection size	Grade of filtration	Bowl
527695 527668	MS	4 6	LF	1/8, 1/4, 3/8, 1/2, AGA, AGB, AGC, AGD, AGE	E C	R U
Order example						
527695	MS	4	- LF	- AGB	- E	- R

Ordering table						
Grid dimension	[mm]	40	62	Condition s	Code	Enter code
M	Module No.	527695	527668			
	Series	Standard			MS	MS
	Size	4	6		...	
	Function	Filters			-LF	-LF
	Connection size	Thread G1/8	-		-1/8	
		Thread G1/4	Thread G1/4		-1/4	
		-	Thread G3/8		-3/8	
		-	Thread G1/2		-1/2	
		Connecting plate G1/8	-		-AGA	
		Connecting plate G1/4	Connecting plate G1/4		-AGB	
		Connecting plate G3/8	Connecting plate G3/8		-AGC	
		-	Connecting plate G1/2		-AGD	
		-	Connecting plate G3/4		-AGE	
	Grade of filtration	40 µm			-E	
		5 µm			-C	
	Bowl	Plastic bowl with plastic bowl guard			-R	
		Metal bowl			-U	

Transfer order code

	MS		-	LF	-		-		-	
--	----	--	---	----	---	--	---	--	---	--

Filters MS4/MS6-LF, MS series

Ordering data – Modular products

FESTO

→ [M] Mandatory data		[O] Options	
Condensate drain		Type of mounting	Alternative flow direction
M H V E1 E2 E3 E4		WP WPM WB WBM	Z
- M		- WP	- Z

Ordering table						
Grid dimension	[mm]	40	62	Condition s	Code	Enter code
↓ [M] Condensate drain	Manual				-M	
	Semi-automatic (P1 max. 12 bar)				-H	
	Fully automatic (P1 max. 12 bar)				-V	
	–	External fully automatic condensate drain, electrical, 24 V DC, M12	[1]		-E1	
	–	External fully automatic condensate drain, electrical, 110 V AC, terminals	[1]		-E2	
	–	External fully automatic condensate drain, electrical, 230 V AC, terminals	[1]		-E3	
	–	External fully automatic condensate drain, electrical, 24 V DC, terminals	[1]		-E4	
[O] Type of mounting	Mounting bracket			[2]	-WP	
	Mounting bracket			[2]	-WPM	
	Mounting bracket				-WB	
	Mounting bracket	–			-WBM	
	Alternative flow direction	Flow direction from right to left			-Z	

[1] E1, E2, E3, E4

Only with metal bowl U.

[2] WP, WPM

Only with connecting plate AGA, AGB, AGC, AGD or AGE.

Transfer order code

-		-		-	
---	--	---	--	---	--


Fine and micro filters MS4/MS6-LFM, MS series

Technical data


FESTO

Function


Condensate drain
manual rotary
without differential pressure indicator

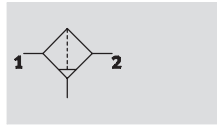


with differential pressure indicator or
filter pollution indicator

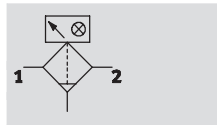

Condensate drain
semi or fully automatic
without differential pressure indicator

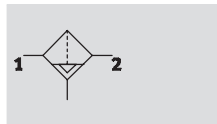

with differential pressure indicator or
filter pollution indicator

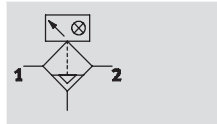

Flow rate

54 ... 3,000 l/min

Temperature range

-10 ... +60 °C



Supply pressure
0 ... 20 bar

www.festo.com/en/Spare_parts_service

Wearing parts kits
→ 27

- High-performance filter for exceptionally clean compressed air
- Air quality to DIN ISO 8573-1
- Available with manual, semi-automatic, fully automatic or fully automatic, electrically actuated condensate drain
- Available with differential pressure indicator for display of filter pollution
- Available with electronic filter pollution indicator
- Optionally with filter cartridge for low flow rates, suitable for sealing air and cleaning air
- Choice of filter cartridges: 0.01 µm or 1 µm
- New filter cartridges → 85

Micro filter MS-LFM-A:
ISO class 1 for particles:
Max. particle density 0.1 mg/m³
ISO class 2 for oil aerosols:
Max. oil concentration 0.1 mg/m³
Filter efficiency 99.9999%

Fine filter MS-LFM-B:
ISO class 2 for particles:
Max. particle density 1 mg/m³
ISO class 3 for oil aerosols:
Max. oil concentration 1 mg/m³
Filter efficiency 99.99%



General technical data					
Size	MS4		MS6		
Pneumatic connection 1, 2	G1/8	G1/4	G1/4	G3/8	G1/2
Constructional design	Fibre filter				
Type of mounting	Via accessories				
	In-line installation				
Mounting position	Vertical ±5°				
Grade of filtration [µm]	0.01 (micro filter MS-LFM-A, air purity class at the output 1.7.2 to DIN ISO 8573-1)				
	1 (fine filter MS-LFM-B, air purity class at the output 2.7.3 to DIN ISO 8573-1)				
Bowl guard	Plastic bowl guard				
	Integrated as metal bowl				
Condensate drain	Manual rotary				
	Semi-automatic				
	Fully automatic				
	–		Fully automatic, electrically actuated		
Differential pressure indication ¹⁾	Visual display				
	With filter pollution indicator based on differential pressure				
Residual oil content [mg/m³]	≤0.01 (micro filter MS-LFM-A)				
	≤0.5 (fine filter MS-LFM-B)				
Max. condensate volume [cm³]	19 (with plastic bowl guard)		38		
	25 (with metal shell)				

¹⁾ Recommended max. differential pressure for changing the filter cartridge is Δp₁₋₂ = 0.35 bar; for the micro filter MS6-LFM-A with range of application HP Δp₁₋₂ = 0.5 bar
Note: This product conforms to ISO 1179-1 and to ISO 228-1

Fine and micro filters MS4/MS6-LFM, MS series

Technical data

Standard flow rate q_{n1} [l/min]				
Size	MS4	MS6		
Variant	Standard	Standard	High flow rate HF	Range of application HP, suitable for sealing air and cleaning air
Micro filter MS-LFM-A				
Max. standard flow rate for air purity class $q_{n \max}$	360	900	2,500	400
Min. standard flow rate for air purity class $q_{n \min}$	54	135	150	60
Fine filter MS-LFM-B				
Max. standard flow rate for air purity class $q_{n \max}$	360	950	3,000	500
Min. standard flow rate for air purity class $q_{n \min}$	54	140	188	60

1) Measured at $p_1 = 6$ bar.

- Φ - 125 l/min must be available for the fully automatic condensate drain to close correctly.

Technical data – Filter pollution indicator				
Variant	DP	DN	DPI	DNI
Pressure measuring range [bar]	0 ... +1			
Measured variable	Differential pressure; percentage value for filter pollution			
Switch output	PNP	NPN	PNP	NPN
Analogue output [mA]	–		4 ... 20	
Operating voltage range [V DC]	15 ... 30			
Max. output current [mA]	150			
Protection class	IP65			
CE mark (see declaration of conformity)	In accordance with EU EMC directive			
	In accordance with EU Low Voltage Directive			

Operating and environmental conditions									
Variant	Condensate drain							Filter pollution indicator	
	Manual rotary		Semi-automatic		Fully automatic		Fully automatic, electrically actuated		
	M		H		V		E1 ... E4	DP/DN/DPI/DNI	
Size	MS4	MS6	MS4	MS6	MS4	MS6	MS6	MS4	MS6
Supply pressure [bar]	0 ... 14	0 ... 20	1.5 ... 12	1.5 ... 12	2 ... 12	2 ... 12	0.8 ... 16	max. 10	
Operating medium for micro filter MS-LFM-A	Filtered compressed air or inert gases, unlubricated, grade of filtration 1 µm								
Operating medium for fine filter MS-LFM-B	Filtered compressed air or inert gases, unlubricated, grade of filtration 5 µm								
Ambient temperature [°C]	-10 ... +60		+5 ... +60		+5 ... +60		+1 ... +60	0 ... +50	
Temperature of medium [°C]	-10 ... +60		+5 ... +60		+5 ... +60		+1 ... +60	0 ... +50	
Storage temperature [°C]	-10 ... +60		-10 ... +60		-10 ... +60		+1 ... +60	0 ... +50	
Corrosion resistance class CRC ¹⁾	2								

1) Corrosion resistance class 2 to Festo standard 940 070

Components subject to moderate corrosion stress. Externally visible parts with primarily decorative surface requirements which are in direct contact with a normal industrial environment or media such as coolants or lubricating agents.

Fine and micro filters MS4/MS6-LFM, MS series


Technical data

FESTO

Weight [g]			
Size	MS4	MS6	
Variant	Standard	Standard	High flow rate HF
Fine and micro filter with plastic bowl guard R	190	600	1,280
Fine and micro filter with metal bowl U	350	820	1,500
Fine and micro filter with metal bowl guard U and fully automatic, electrically actuated condensate drain E1 ... E4	–	1,800	2,180
Filter pollution indicator	80	100	100

Materials

Sectional view

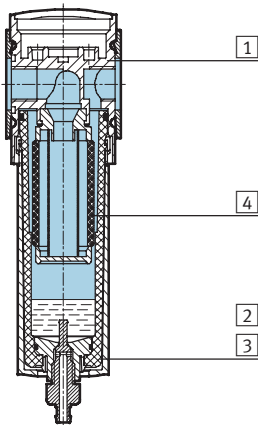

Fine and micro filters	
1 Housing	Die-cast aluminium
2 Plastic bowl guard	PC
3 Metal bowl	Wrought aluminium alloy, die-cast aluminium
Viewing window	PA
4 Filter	Borosilicate fibre
– Seals	NBR
Note on materials	RoHS-compliant (not with variant E1, E2, E3 or E4)
	Free of copper and PTFE



Filter pollution indicator	
Housing	PA POM
Adapter	PA
Display	PC
Seals	NBR
Note on materials	Free of copper and PTFE

Standard flow rate q_n as a function of the differential pressure Δp_{1-2}

Grade of filtration 0.01 μm

Grade of filtration 1 μm

MS4-LFM-1/8 and MS4-LFM-1/4

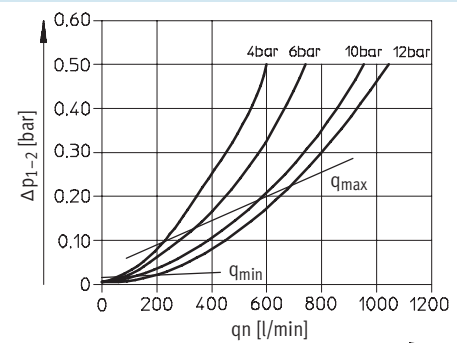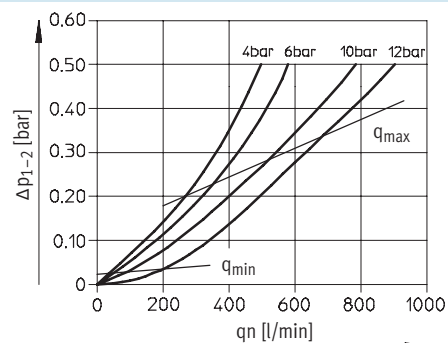

Fine and micro filters MS4/MS6-LFM, MS series



Technical data

Standard flow rate q_n as a function of the differential pressure Δp_{1-2}



Grade of filtration 0.01 μm

Grade of filtration 1 μm



MS6-LFM-1/4

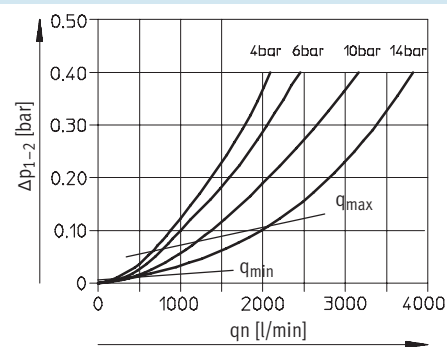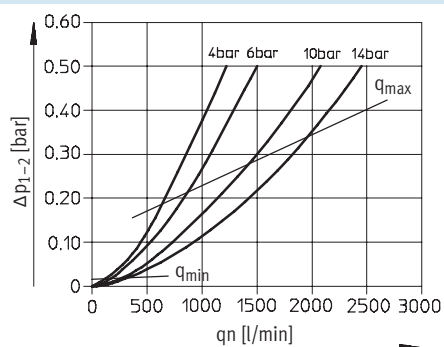

MS6-LFM-3/8

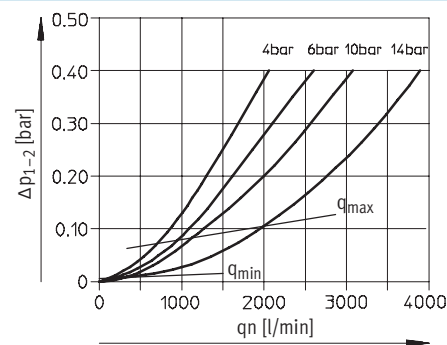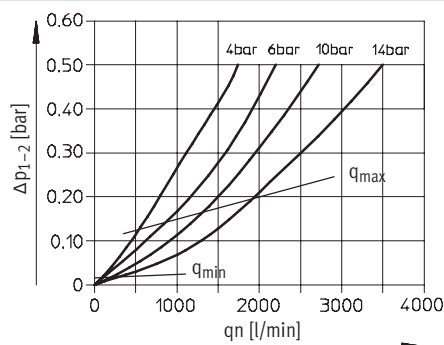

MS6-LFM-1/2

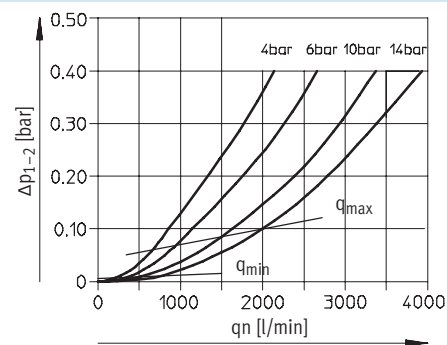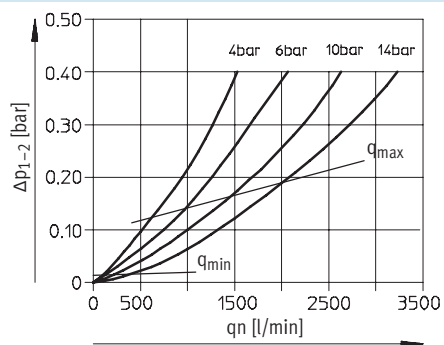


Fine and micro filters MS4/MS6-LFM, MS series

Technical data


FESTO

Standard flow rate q_n as a function of the differential pressure p_{1-2}


MS6-LFM-1/4-...-HF, Grade of filtration 0.01 μm

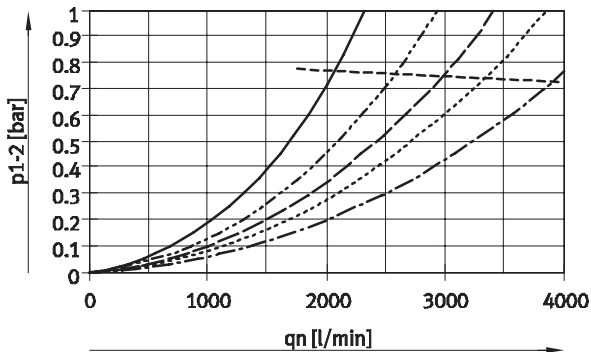


MS6-LFM-1/4-...-HF, Grade of filtration 1 μm

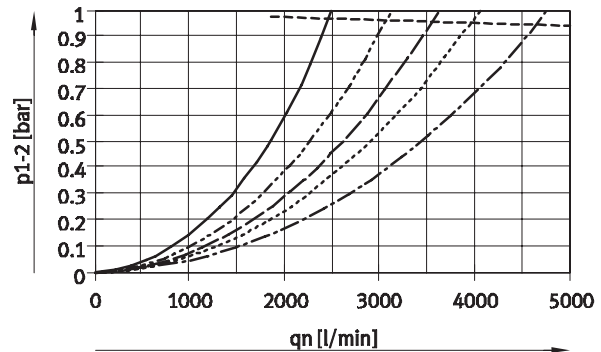


MS6-LFM-3/8-...-HF, Grade of filtration 0.01 μm

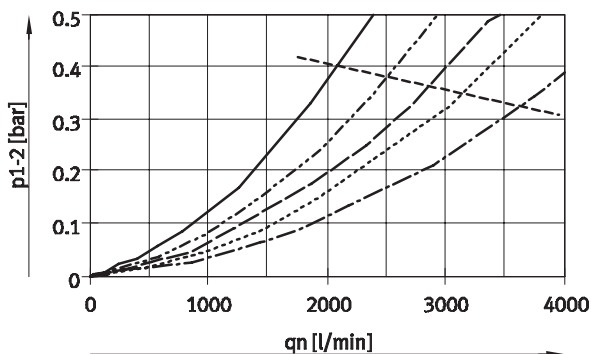


MS6-LFM-3/8-...-HF, Grade of filtration 1 μm

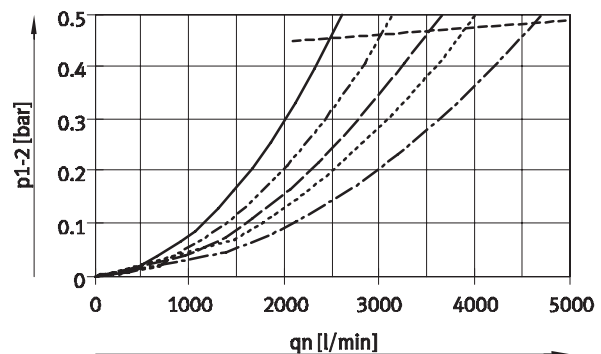

MS6-LFM-1/2-...-HF, Grade of filtration 0.01 μm

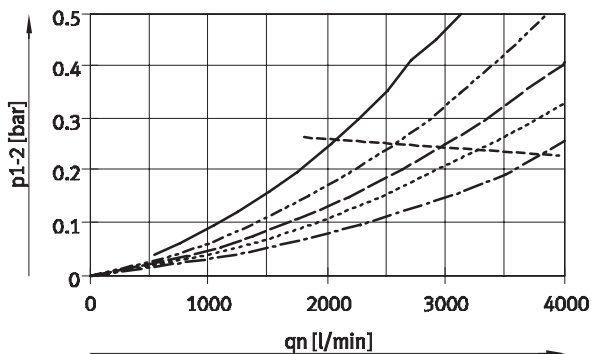

MS6-LFM-1/2-...-HF, Grade of filtration 1 μm

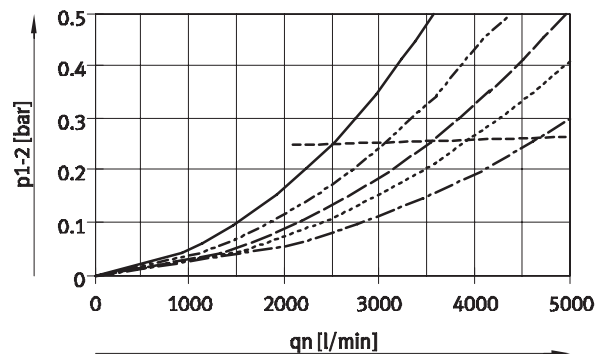

———— p_1 : 4 bar ($q_{\min}$: 103 l/min)
 - - - - - p_1 : 6 bar ($q_{\min}$: 125 l/min)
 - · - · - p_1 : 8 bar
 · · · · · p_1 : 10 bar ($q_{\min}$: 162 l/min)
 - - - - - p_1 : 14 bar ($q_{\min}$: 192 l/min)
 - - - - - $q_{\max}$

———— p_1 : 4 bar ($q_{\min}$: 124 l/min)
 - - - - - p_1 : 6 bar ($q_{\min}$: 150 l/min)
 - · - · - p_1 : 8 bar
 · · · · · p_1 : 10 bar ($q_{\min}$: 194 l/min)
 - - - - - p_1 : 14 bar ($q_{\min}$: 230 l/min)
 - - - - - $q_{\max}$

Fine and micro filters MS4/MS6-LFM, MS series

Technical data


FESTO

Dimensions – Standard/High flow rate HF

Download CAD Data → www.festo.com/us/cad

Standard, manual rotary condensate drain

High flow rate HF, manual rotary condensate drain

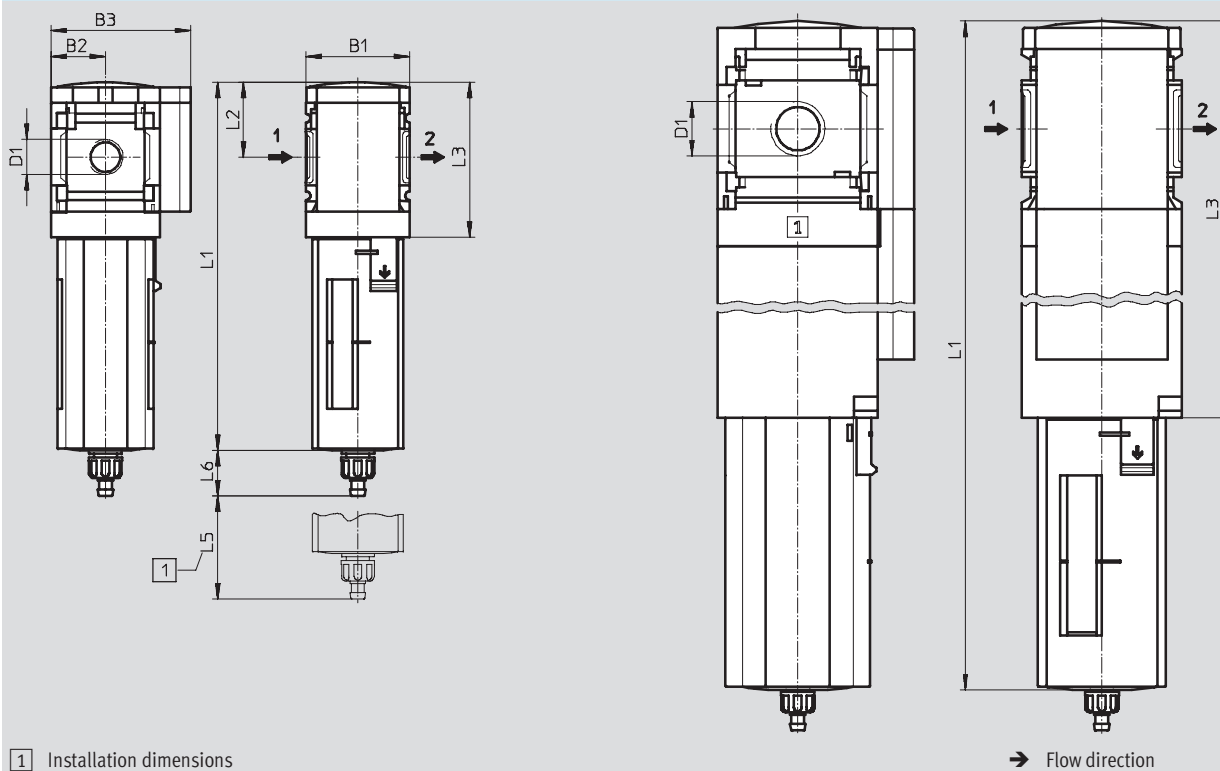

Type	B1	B2	B3	D1	L1		L2	L3	L5	L6	
					Bowl guard					Bowl guard	
					Plastic	Metal				Plastic	Metal
MS4-LFM-1/8	40	21	54	G1/8	142	160	29	60	25	17.7	17.7
MS4-LFM-1/4				G1/4							
MS6-LFM-1/4	62	31	76	G1/4	192	198	42	87	75	15.8	19
MS6-LFM-3/8				G3/8							
MS6-LFM-1/2				G1/2							
MS6-LFM-1/4-...-HF	62	31	76	G1/4	312	318	42	207	75	15.8	19
MS6-LFM-3/8-...-HF				G3/8							
MS6-LFM-1/2-...-HF				G1/2							

Note: This product conforms to ISO 1179-1 and to ISO 228-1


Fine and micro filters MS4/MS6-LFM, MS series

Technical data

FESTO

Dimensions – Differential pressure indicator DA

Download CAD Data → www.festo.com/us/cad

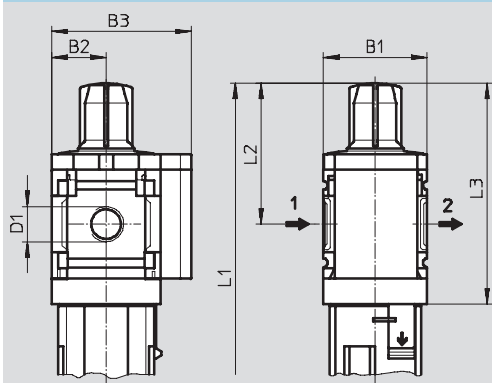

→ Flow direction

Type	B1	B2	B3	D1	L1		L2	L3
					Bowl guard			
					Plastic	Metal		
MS4-LFM-1/8-...-DA	40	21	54	G1/8	168	186	55	86
MS4-LFM-1/4-...-DA				G1/4				
MS6-LFM-1/4-...-DA	62	31	76	G1/4	218	224	68	113
MS6-LFM-3/8-...-DA				G3/8				
MS6-LFM-1/2-...-DA				G1/2				
MS6-LFM-1/4-...-HF-DA	62	31	76	G1/4	338	344	68	113
MS6-LFM-3/8-...-HF-DA				G3/8				
MS6-LFM-1/2-...-HF-DA				G1/2				

Note: This product conforms to ISO 1179-1 and to ISO 228-1


Fine and micro filters MS4/MS6-LFM, MS series

Technical data

FESTO

Dimensions – Filter pollution indicator DP/DN/DPI/DNI

Download CAD Data → www.festo.com/us/cad

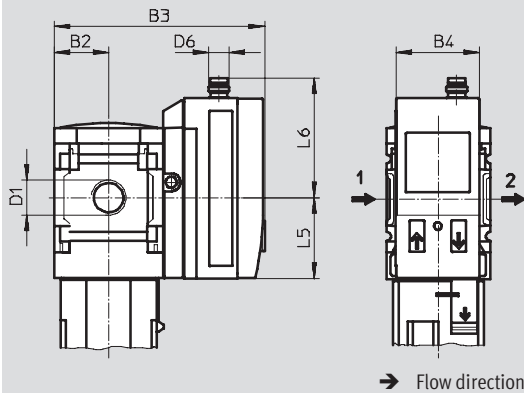

Variant DP:
Filter pollution indicator with 3-pin
M8x1 plug, 1 switch output PNP

Variant DN:
Filter pollution indicator with 3-pin
M8x1 plug, 1 switch output NPN

Variant DPI:
Filter pollution indicator with 4-pin
M12x1 plug, 1 switch output PNP
and 4 ... 20 mA analogue

Variant DNI:
Filter pollution indicator with 4-pin
M12x1 plug, 1 switch output NPN
and 4 ... 20 mA analogue

Type	B2	B3	B4	D1	D6	L5	L6
MS4-LFM-1/8-...-DP/DN	21	81.8	32.3	G1/8	M8x1	32	47
MS4-LFM-1/4-...-DP/DN				G1/4			
MS4-LFM-1/8-...-DPI/DNI	21	81.8	32.3	G1/8	M12x1	32	56
MS4-LFM-1/4-...-DPI/DNI				G1/4			
MS6-LFM-1/4-...-DP/DN	31	102	32.3	G1/4	M8x1	32	47
MS6-LFM-3/8-...-DP/DN				G3/8			
MS6-LFM-1/2-...-DP/DN				G1/2			
MS6-LFM-1/4-...-DPI/DNI	31	102	32.3	G1/4	M12x1	32	56
MS6-LFM-3/8-...-DPI/DNI				G3/8			
MS6-LFM-1/2-...-DPI/DNI				G1/2			

Note: This product conforms to ISO 1179-1 and to ISO 228-1

Fine and micro filters MS4/MS6-LFM, MS series


Technical data

FESTO

Dimensions – Condensate drain


Download CAD Data → www.festo.com/us/cad

Manual rotary M

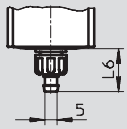


Barbed fitting for plastic tubing
PCN-4

Semi-automatic H

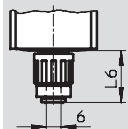

QS fitting for plastic tubing
PUN-6/PAN-6

Fully automatic V

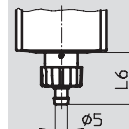

Barbed fitting for plastic tubing
PCN-4


Type	L6
Plastic bowl guard	
MS4-LFM-...-M	17.7
MS6-LFM-...-M	15.8
Metal bowl	
MS4-LFM-...-M	17.7
MS6-LFM-...-M	19

Type	L6
Plastic bowl guard	
MS4-LFM-...-H	22.1
MS6-LFM-...-H	20.2
Metal bowl	
MS4-LFM-...-H	22.1
MS6-LFM-...-H	22.8

Type	L6
Plastic bowl guard	
MS4-LFM-...-V	20.4
MS6-LFM-...-V	18.5
Metal bowl	
MS4-LFM-...-V	20.4
MS6-LFM-...-V	22

Fully automatic, electrically actuated E1 ... E4

Technical data → Internet: pwea

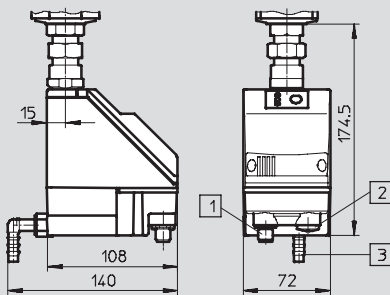

- 1 Variant E1
PWEA-AP-... with M12x1 plug,
5-pin for NEBU-M12...-LE5
- 2 Variant E2/E3/E4
PWEA-AC-... with cable conduit
fitting Pg9
- 3 Connection 360° rotatable for
plastic tubing PUN-H-12x2-...

Fine and micro filters MS4/MS6-LFM, MS series

Technical data

Ordering data						
Without differential pressure indicator						
Size	Condensate drain	Connection	Micro filter		Fine filter	
			Grade of filtration 0.01 μm		Grade of filtration 1 μm	
			Part No.	Type	Part No.	Type
Plastic bowl guard						
MS4	Manual rotary	G1/8	529463	MS4-LFM-1/8-ARM	529465	MS4-LFM-1/8-BRM
		G1/4	529459	MS4-LFM-1/4-ARM	529461	MS4-LFM-1/4-BRM
MS6	Manual rotary	G1/4	529663	MS6-LFM-1/4-ARM	529667	MS6-LFM-1/4-BRM
		G3/8	529671	MS6-LFM-3/8-ARM	529675	MS6-LFM-3/8-BRM
		G1/2	529655	MS6-LFM-1/2-ARM	529659	MS6-LFM-1/2-BRM
		Fully automatic	G1/4	530510	MS6-LFM-1/4-ARV	530514
	Fully automatic	G3/8	530518	MS6-LFM-3/8-ARV	530522	MS6-LFM-3/8-BRV
		G1/2	530502	MS6-LFM-1/2-ARV	530506	MS6-LFM-1/2-BRV
Integrated as metal bowl						
MS4	Fully automatic	G1/8	539208	MS4-LFM-1/8-AUV	539204	MS4-LFM-1/8-BUV
		G1/4	535768	MS4-LFM-1/4-AUV	535766	MS4-LFM-1/4-BUV
MS6	Fully automatic	G1/4	529665	MS6-LFM-1/4-AUV	529669	MS6-LFM-1/4-BUV
		G3/8	529673	MS6-LFM-3/8-AUV	529677	MS6-LFM-3/8-BUV
		G1/2	529657	MS6-LFM-1/2-AUV	529661	MS6-LFM-1/2-BUV

Ordering data						
With differential pressure indicator						
Size	Condensate drain	Connection	Micro filter		Fine filter	
			Grade of filtration 0.01 μm		Grade of filtration 1 μm	
			Part No.	Type	Part No.	Type
Plastic bowl guard						
MS4	Manual rotary	G1/8	536821	MS4-LFM-1/8-ARM-DA	536817	MS4-LFM-1/8-BRM-DA
		G1/4	536822	MS4-LFM-1/4-ARM-DA	536818	MS4-LFM-1/4-BRM-DA
MS6	Manual rotary	G1/4	536869	MS6-LFM-1/4-ARM-DA	536833	MS6-LFM-1/4-BRM-DA
		G3/8	536870	MS6-LFM-3/8-ARM-DA	536834	MS6-LFM-3/8-BRM-DA
		G1/2	536871	MS6-LFM-1/2-ARM-DA	536835	MS6-LFM-1/2-BRM-DA
	Fully automatic	G1/4	536875	MS6-LFM-1/4-ARV-DA	536839	MS6-LFM-1/4-BRV-DA
		G3/8	536876	MS6-LFM-3/8-ARV-DA	536840	MS6-LFM-3/8-BRV-DA
		G1/2	536877	MS6-LFM-1/2-ARV-DA	536841	MS6-LFM-1/2-BRV-DA
Integrated as metal bowl						
MS4	Fully automatic	G1/8	537213	MS4-LFM-1/8-AUV-DA	537209	MS4-LFM-1/8-BUV-DA
		G1/4	537214	MS4-LFM-1/4-AUV-DA	537210	MS4-LFM-1/4-BUV-DA
MS6	Fully automatic	G1/4	536881	MS6-LFM-1/4-AUV-DA	536845	MS6-LFM-1/4-BUV-DA
		G3/8	536882	MS6-LFM-3/8-AUV-DA	536846	MS6-LFM-3/8-BUV-DA
		G1/2	536883	MS6-LFM-1/2-AUV-DA	536847	MS6-LFM-1/2-BUV-DA
Integrated as metal bowl and high flow rate						
MS6	Fully automatic	G1/2	552926	MS6-LFM-1/2-AUV-HF-DA	552925	MS6-LFM-1/2-BUV-HF-DA

Ordering data – Wearing parts kits		
Size	Part No.	Type
MS4	673641	MS4-LFM
MS6	673642	MS6-LFM

Fine and micro filters MS4/MS6-LFM, MS series

Ordering data – Modular products

FESTO

M Mandatory data →						
Module No.	Series	Size	Function	Connection size	Grade of filtration	Bowl
527697 527670	MS	4 6	LFM	1/8, 1/4, 3/8, 1/2, AGA, AGB, AGC, AGD, AGE	B A	R U
Ordering example						
527697	MS	4	- LFM	- AGB	- B	- R

Ordering table						
Grid dimension	[mm]	40	62	Condition s	Code	Enter code
M Module No.		527697	527670			
Series		Standard			MS	MS
Size		4	6		...	
Function		Fine and micro filter			-LFM	-LFM
Connection size	Thread G1/8	-			-1/8	
	Thread G1/4	Thread G1/4			-1/4	
	-	Thread G3/8			-3/8	
	-	Thread G1/2			-1/2	
	Connecting plate G1/8	-			-AGA	
	Connecting plate G1/4	Connecting plate G1/4			-AGB	
	Connecting plate G3/8	Connecting plate G3/8			-AGC	
	-	Connecting plate G1/2			-AGD	
	-	Connecting plate G3/4			-AGE	
Grade of filtration	1 µm				-B	
	0.01 µm				-A	
Bowl	Plastic bowl with plastic bowl guard				-R	
	Metal bowl				-U	

Transfer order code

	MS		-	LFM	-		-		-	
--	----	--	---	-----	---	--	---	--	---	--

Fine and micro filters MS4/MS6-LFM, MS series

Ordering data – Modular products

FESTO

→ M Mandatory data		O Options			
Condensate drain	Flow rate	Range of application	Filter contamination sensing	Type of mounting	Alternative flow direction
M H V E1 E2 E3 E4	HF	HP	DA DP DN DPI DNI	WP WPM WB WBM	Z
- M -	-	-	-	- WP -	- Z -

Ordering table						
Grid dimension	[mm]	40	62	Condition s	Code	Enter code
↓ M Condensate drain	Manual				-M	
	Semi-automatic (P1 max. 12 bar)				-H	
	Fully automatic (P1 max. 12 bar)			[1]	-V	
	-	External fully automatic condensate drain, electrical, 24 V DC, M12		[2]	-E1	
	-	External fully automatic condensate drain, electrical, 110 V AC, terminals		[2]	-E2	
	-	External fully automatic condensate drain, electrical, 230 V AC, terminals		[2]	-E3	
	-	External fully automatic condensate drain, electrical, 24 V DC, terminals		[2]	-E4	
	-					
O Flow rate	-	High flow rate			-HF	
	Range of application	-	Suitable for sealing air and cleaning air	[3]	-HP	
	Filter contamination sensing	Differential pressure indicator, visual			-DA	
		Filter contamination indicator, M8 plug, PNP, 3-pin		[4]	-DP	
		Filter contamination indicator, M8 plug, NPN, 3-pin		[4]	-DN	
		Filter contamination indicator, M12 plug, PNP, 4-pin, analogue output 4 ... 20 mA		[4]	-DPI	
		Filter contamination indicator, M12 plug, PNP, 4-pin, analogue output 4 ... 20 mA		[4]	-DNI	
	Type of mounting	Mounting bracket		[5]	-WP	
		Mounting bracket		[5]	-WPM	
		Mounting bracket			-WB	
		Mounting bracket			-WBM	
	Alternative flow direction	Flow direction from right to left			-Z	

[1] **V** Size 4: only with metal bowl U

[2] **E1, E2, E3, E4**

Only with metal bowl U

[3] **HP** Not with flow rate HF or filter contamination sensing DA

[4] **DP, DN, DPI, DNI**

Measuring range max. 10 bar

[5] **WP, WPM** Only with connecting plate AGA, AGB, AGC, AGD or AGE

Transfer order code


- [] - [] - [] - [] - [] - []

Active carbon filters MS4/MS6-LFX, MS series

FESTO

Technical data

Function

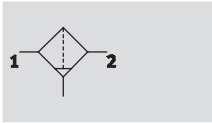

Flow rate

max. 2,500 l/min

Temperature range

-10 ... +60 °C



Input pressure
0 ... 20 bar



Note

Prefiltration with micro filter
MS-LFM-A, grade of filtration
0.01 µm, recommended.

- Removal of liquid and gaseous oil particles from compressed air using active carbon
- Eliminates odours and vapours
- Optionally with filter cartridge for low flow rates, suitable for sealing air and cleaning air
- New filter cartridges → 85

General technical data					
Size	MS4		MS6		
Pneumatic connection 1, 2	G $\frac{1}{8}$	G $\frac{1}{4}$	G $\frac{1}{4}$	G $\frac{3}{8}$	G $\frac{1}{2}$
Design	Active carbon filter				
Type of mounting	Via accessories				
	In-line installation				
Assembly position	Vertical $\pm 5^\circ$				
Air purity class at the output ¹⁾	1.7.1 to DIN ISO 8573-1				
Bowl guard	Plastic bowl guard				
	Integrated as metal bowl				
Residual oil content [mg/m ³]	≤0.003				

1) We recommend that the filter cartridge be replaced by a new one after 1,000 operating hours. (Applies to an ambient temperature of 21 °C. At higher temperatures the service life of the filter cartridge will be reduced.)
Note: This product conforms to ISO 1179-1 and to ISO 228-1

Standard flow rate $q_n^{1)}$ [l/min]				
Size	MS4	MS6		
Variant	Standard	Standard	High flow rate HF	Range of application HP, suitable for sealing air and cleaning air
Max. standard flow rate for air purity class q_n max	360	900	2,500	900

1) Measured at $p_1 = 6$ bar.

Active carbon filters MS4/MS6-LFX, MS series

Technical data


Operating and environmental conditions		
Size	MS4	MS6
Input pressure [bar]	0 ... 14	0 ... 20
Operating medium	Filtered, unlubricated compressed air, grade of filtration 0.01 µm	
Ambient temperature [°C]	-10 ... +60	
Temperature of medium [°C]	+5 ... +30	
Storage temperature [°C]	-10 ... +60	
Corrosion resistance CRC ¹⁾	2	

- 1) Corrosion resistance class 2 according to Festo standard 940 070
Components requiring moderate corrosion resistance. Externally visible parts with primarily decorative surface requirements which are in direct contact with a normal industrial environment or media such as coolants or lubricating agents.

Weights [g]			
Size	MS4	MS6	
Variant	Standard	Standard	High flow rate HF
Active carbon filter with plastic bowl guard R	190	600	1,280
Active carbon filter with metal bowl U	350	820	1,500

Materials

Sectional view

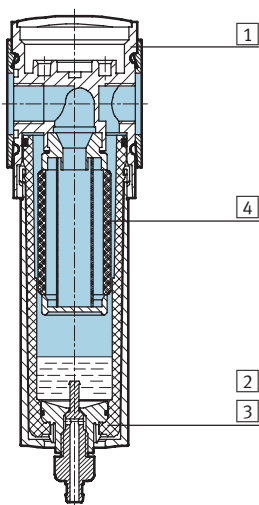

Active carbon filter	
1 Body	Die-cast aluminium
2 Plastic bowl guard	PC
3 Metal bowl	Wrought aluminium alloy, die-cast aluminium
Viewing window	PA
4 Filters	Active carbon
- Seals	NBR
Note on materials	RoHS-compliant
	Free of copper and PTFE


Active carbon filters MS4/MS6-LFX, MS series

Technical data


FESTO

Standard flow rate q_n as a function of the differential pressure Δp_{1-2}


MS4-LFX-1/8 and MS4-LFX-1/4

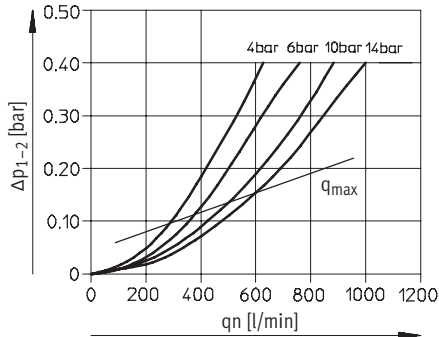


MS6-LFX-1/4

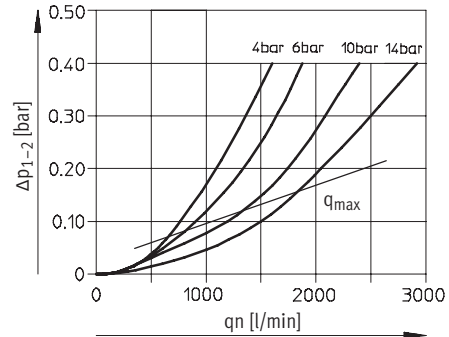

MS6-LFX-3/8

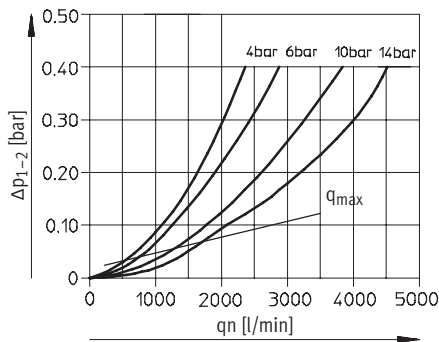

MS6-LFX-1/2

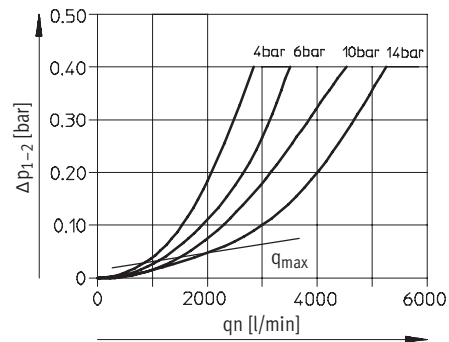


Active carbon filters MS4/MS6-LFX, MS series


Technical data

Standard flow rate q_n as a function of the differential pressure p_{1-2}


MS6-LFX-1/4-...-HF

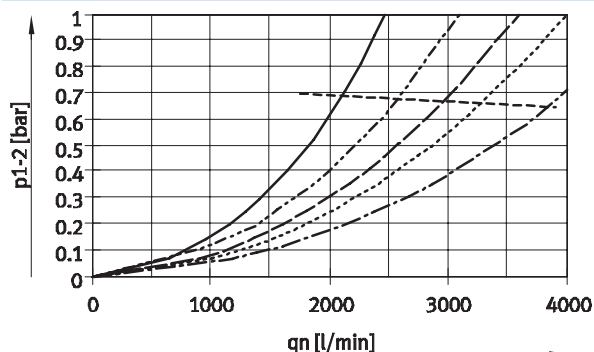

MS6-LFX-3/8-...-HF

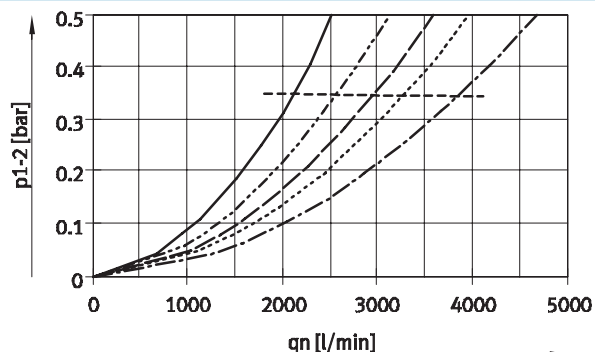

MS6-LFX-1/2-...-HF

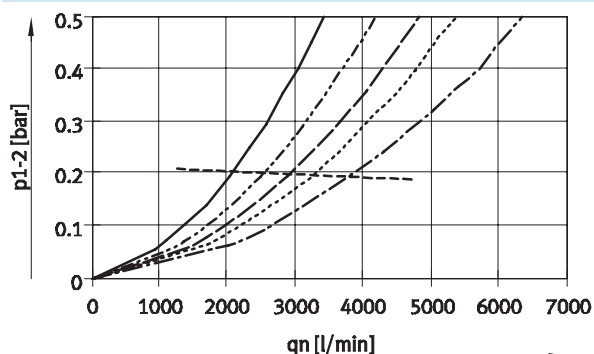

- p1: 4 bar
- - - p1: 6 bar
- · - p1: 8 bar
- · · p1: 10 bar
- - - p1: 14 bar
- Q_{max}

Active carbon filters MS4/MS6-LFX, MS series

Technical data


FESTO

Dimensions – Standard/High flow rate HF

Download CAD Data → www.festo.com/us/cad

Standard

High flow rate HF

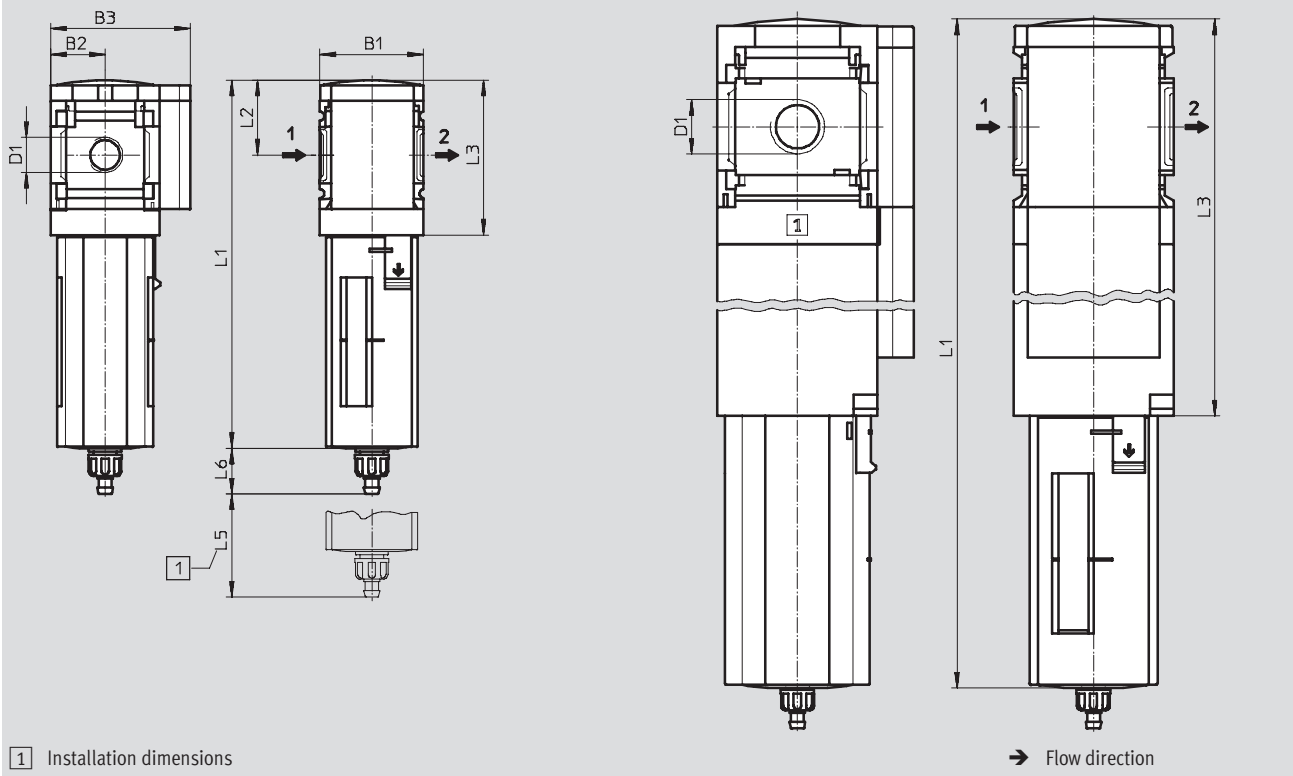

Type	B1	B2	B3	D1	L1		L2	L3	L5	L6	
					Bowl guard					Bowl guard	
					Plastic	Metal				Plastic	Metal
MS4-LFX-1/8	40.2	21	54	G1/8	142.8	160.4	29	60	75	17.7	18
MS4-LFX-1/4				G1/4							
MS6-LFX-1/4	62	31	76	G1/4	192	198	42	87	100	15.8	19
MS6-LFX-3/8				G3/8							
MS6-LFX-1/2				G1/2							
MS6-LFX-1/4-...-HF	62	31	76	G1/4	312	318	42	207	100	15.8	19
MS6-LFX-3/8-...-HF				G3/8							
MS6-LFX-1/2-...-HF				G1/2							

Note: This product conforms to ISO 1179-1 and to ISO 228-1

Ordering data						
Size	Connection	Plastic bowl guard		Integrated as metal bowl		
		Part No.	Type	Part No.	Type	
MS4	G1/8	536707	MS4-LFX-1/8-R	536709	MS4-LFX-1/8-U	
	G1/4	529467	MS4-LFX-1/4-R	535782	MS4-LFX-1/4-U	
MS6	G1/4	529683	MS6-LFX-1/4-R	529685	MS6-LFX-1/4-U	
	G3/8	529687	MS6-LFX-3/8-R	529689	MS6-LFX-3/8-U	
	G1/2	529679	MS6-LFX-1/2-R	529681	MS6-LFX-1/2-U	
High flow rate						
MS6	G1/2	–	–	552927	MS6-LFX-1/2-U-HF	

Activated carbon filters MS4/MS6-LFX, MS series

Ordering data – Modular products

M Mandatory data						O Options				
Module No.	Series	Size	Function	Connection size	Bowl	Flow rate	Range of application	Type of mounting	Alternative flow direction	
527699 527672	MS	4 6	LFX	1/8, 1/4, 3/8, 1/2, AGA, AGB, AGC, AGD, AGE	R U	HF	HP	WP WPM WB WBM	Z	
Ordering example										
527699	MS	4	- LFX	- AGB	- R	-	-	- WP	- Z	

Ordering table									
Grid dimension		[mm]	40	62	Condition s	Code	Enter code		
M	Module No.	527699			527672				
	Series	Standard						MS	MS
	Size	4			6			...	
	Function	Activated carbon filter						-LFX	-LFX
	Connection size	Thread G1/8			-			-1/8	
		Thread G1/4			Thread G1/4			-1/4	
		-			Thread G3/8			-3/8	
		-			Thread G1/2			-1/2	
		Connecting plate G1/8			-			-AGA	
		Connecting plate G1/4			Connecting plate G1/4			-AGB	
		Connecting plate G3/8			Connecting plate G3/8			-AGC	
		-			Connecting plate G1/2			-AGD	
		-			Connecting plate G3/4			-AGE	
	Bowl	Plastic bowl with plastic bowl guard						-R	
		Metal bowl						-U	
O	Flow rate	-			High flow rate			-HF	
	Range of application	-			Suitable for sealing air and cleaning air			1 -HP	
	Type of mounting	Mounting bracket						2 -WP	
		Mounting bracket						2 -WPM	
		Mounting bracket						-WB	
		Mounting bracket			-			-WBM	
	Alternative flow direction	Flow direction from right to left						-Z	

- 1 **HP** Not with flow rate HF
 2 **WP, WPM** Only with connecting plate AGA, AGB, AGC, AGD or AGE


Transfer order code

	MS		-	LFX	-		-		-		-		-		-	
--	----	--	---	-----	---	--	---	--	---	--	---	--	---	--	---	--

Filters MS9-LF, MS series

Peripherals overview

FESTO

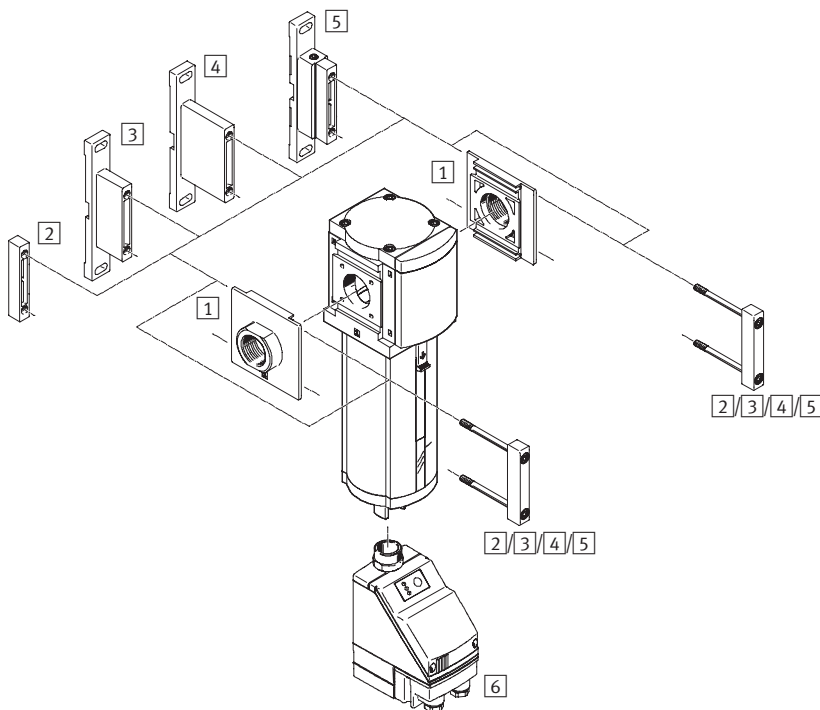

Note

Additional accessories:

- Module connector for combination with size MS6 or size MS12 → Internet: armv

Mounting attachments and accessories					
		Individual device		Combination	➔ Page/Internet
		without connecting thread	with connecting thread ¾ or 1		
1	Connecting plate MS9-AG...	■	–	■	ms9-ag
2	Module connector MS9-MV	■	–	■	ms9-mv
3	Mounting bracket MS9-WP	■	■	■	ms9-wp
4	Mounting bracket MS9-WPB	■	■	■	ms9-wp
5	Mounting bracket MS9-WPM	■	–	■	ms9-wp
6	Condensate drain, fully automatic, electrically actuated E1/E2/E3/E4	■	■	■	42

Filters MS9-LF, MS series

Type codes

		MS	9	-	LF	-	G	-	E	U	M
Series											
MS	Standard service unit										
Size											
9	Grid dimension 90 mm										
Service function											
LF	Filter										
Connection size											
G	Module without connecting thread, without connecting plate										
Grade of filtration											
C	5 µm										
E	40 µm										
Bowl guard											
U	Metal bowl										
Condensate drain											
M	Manual rotary										
V	Fully automatic										

Additional variants can be ordered using the modular system → 42


- Connecting plates
- Condensate drain
- Type of mounting
- Alternative flow direction

Filters MS9-LF, MS series


Technical data

Function

Condensate drain,
manual rotary

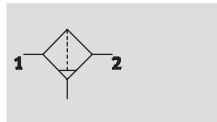

Condensate drain,
semi or fully automatic

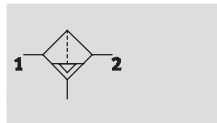

Flow rate

6,000 ... 16,000 l/min

Temperature range

-10 ... +60 °C



Supply pressure
0 ... 20 bar



- Good particle and condensate separation
- High flow rate with minimal pressure drop
- Available with manual, semi-automatic, fully automatic or fully automatic, electrically actuated condensate drain
- Choice of filter cartridges: 5 µm or 40 µm
- New filter cartridges → 86

General technical data				
Size	MS9			
Pneumatic connection 1, 2	G3/4	G1	G1/2 ... G1 1/2 (with connecting plate AG...)	– (without connecting thread G)
Design	Sintered filter with centrifugal separator			
Type of mounting	Via accessories			
	In-line installation			
Mounting position	Vertical ±5°			
Grade of filtration [µm]	5, air quality class at the output 3.7.– to DIN ISO 8573-1			
	40, air quality class at the output 5.7.– to DIN ISO 8573-1			
Bowl guard	Metal bowl			
Condensate drain	Manual rotary			
	Semi-automatic			
	Fully automatic			
	Fully automatic, electrically actuated			
Max. condensate volume [ml]	220			

Note: This product conforms to ISO 1179-1 and to ISO 228-1

Standard nominal flow rate q _N ¹⁾ [l/min]				
Pneumatic connection	Connecting plate AGD	Thread G3/4 or connecting plate AGE	Thread G1 or connecting plate AGF/AGG/AGH	
Grade of filtration 5 µm	6,000	8,500	9,500	
40 µm	8,000	12,500	16,000	

1) Measured at p₁ = 6 bar and Δp = 1 bar

Filters MS9-LF, MS series

Technical data

FESTO

Operating and environmental conditions				
Condensate drain	Manual rotary M	Semi-automatic H	Fully automatic V	Fully automatic, electrically actuated E1/E2/E3/E4
Supply pressure [bar]	0 ... 20	1.5 ... 12	2 ... 12	0.8 ... 16
Operating medium	Compressed air, air quality class 5.7.- to DIN ISO 8573-1			
Ambient temperature [°C]	-10 ... +60	+5 ... +60	+5 ... +60	+1 ... +60
Temperature of medium [°C]	-10 ... +60	+5 ... +60	+5 ... +60	+1 ... +60
Storage temperature [°C]	-10 ... +60	+5 ... +60	+5 ... +60	+1 ... +60
Corrosion resistance class CRC ¹⁾	2			


1) Corrosion resistance class 2 according to Festo standard 940 070

Components subject to moderate corrosion stress. Externally visible parts with primarily decorative surface requirements which are in direct contact with a normal industrial environment or media such as coolants or lubricating agents.

Weight [g]	
Filter	2,000
Filter with condensate drain, fully automatic, electrically actuated E1/E2/E3/E4	2,400

Materials

Sectional view

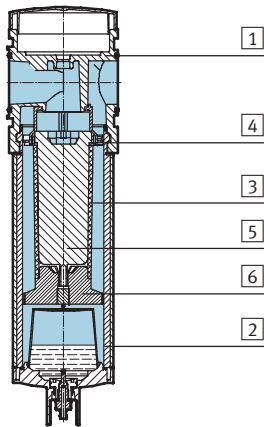


Filter		
1	Housing	Die-cast aluminium
2	Bowl	Wrought aluminium alloy
	Inspection window	Polyamide
3	Filter	Polyethylene
4	Spin disc	Polyacetal
5	Filter holder	Polyacetal
6	Separating plate	Polyacetal
-	Seals	Nitrile rubber
Note on materials		RoHS-compliant (not with variant E1, E2, E3 or E4)

Standard flow rate q_n as a function of differential pressure Δp_{1-2}

Grade of filtration 5 μm


MS9-LF-1/AGF, pneumatic connection G1

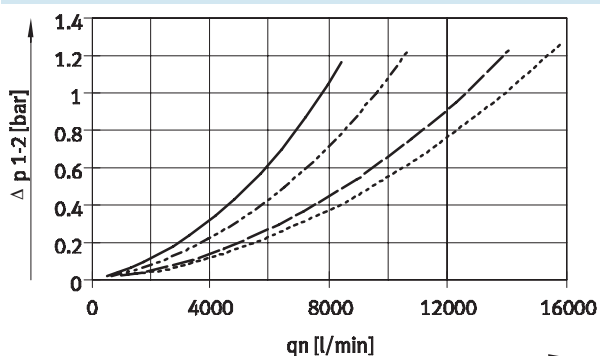

— 4 bar
- - - 6 bar
- · - · 10 bar
· · · · 12 bar

Grade of filtration 40 μm

MS9-LF-1/AGF, pneumatic connection G1

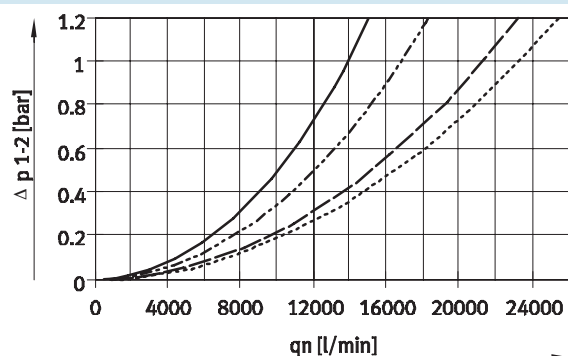

Filters MS9-LF, MS series


Technical data

FESTO

Dimensions – Basic version

Download CAD Data → www.festo.com/us/cad

Without connecting thread G

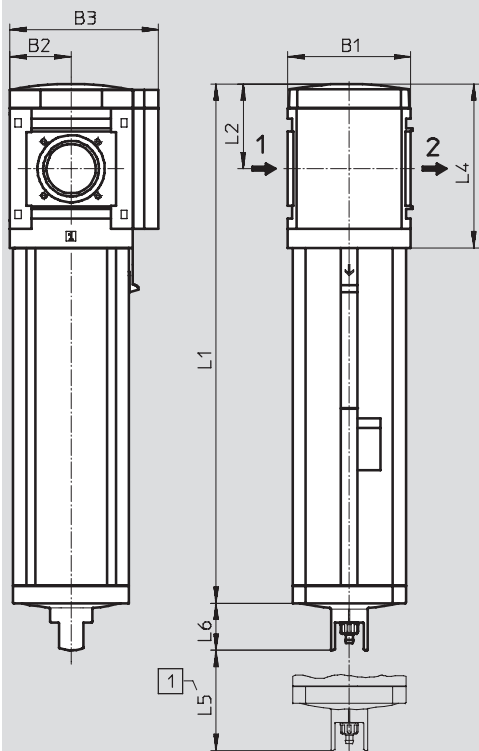

1 Installation dimensions

→ Flow direction


Type	B1	B2	B3	L1	L2	L4	L5	L6
MS9-LF-G	90	45	109	310.5	62	120	150	34.5

Dimensions – Connecting thread/connecting plate

Download CAD Data → www.festo.com/us/cad

With connecting thread 3/4 or 1

With connecting plate AG...

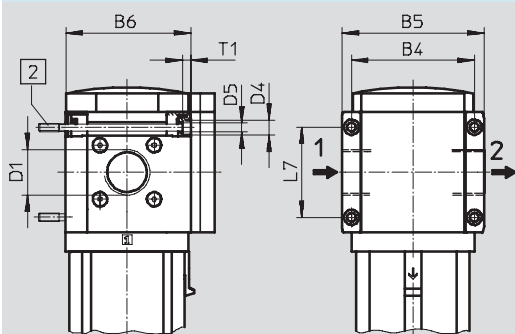

2 Mounting screw M6xmin.90 to DIN 912 (not included in the scope of delivery) for wall mounting without mounting bracket

→ Flow direction

Type	B4	B5	B6	B7	B8	D1	D4	D5	L7	T1	≅
MS9-LF-3/4	90	104	91.5	-	-	G3/4	11	6.5	66	6	-
MS9-LF-1						G1					
MS9-LF-AGD	-	-	-	112	132	G1/2	-	-	-	-	30
MS9-LF-AGE					132	G3/4					36
MS9-LF-AGF					142	G1					41
MS9-LF-AGG					162	G1 1/4					50
MS9-LF-AGH					176	G1 1/2					55

Note: This product conforms to ISO 1179-1 and to ISO 228-1


Filters MS9-LF, MS series

Technical data

Dimensions – Condensate drain


Download CAD Data → www.festo.com/us/cad

Manual rotary M/fully automatic V



Barbed fitting for plastic tubing
PCN-4


Semi-automatic H



QS connector for plastic tubing
PUN-6/PAN-6

Fully automatic, electrically actuated E1/E2/E3/E4

Technical data → Internet: [pwea](http://pwea.festo.com)

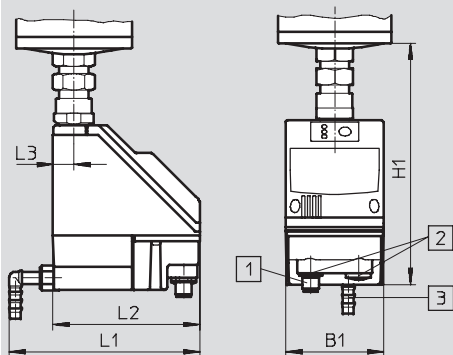

- 1 Variant E1:
Condensate drain PWEA-AP
with M12x1 plug, 5-pin for
NEBU-M12...-LE5
- 2 Variant E2/E3/E4:
Condensate drain PWEA-AC
with cable connector Pg9

- 3 Connection 360° rotatable for
plastic tubing PUN-H-12x2

Type	B1	D1	H1	L1	L2	L3
MS9-LF-...M/V	–	5	34.5	–	–	–
MS9-LF-...H		6				
MS9-LF-...E1/E2/E3/E4	72	–	178	140	108	15

Ordering data

Size	Condensate drain	Connection	Grade of filtration 5 µm		Grade of filtration 40 µm	
			Part No.	Type	Part No.	Type
MS9	Manual rotary	–	564108	MS9-LF-G-CUM	564106	MS9-LF-G-EUM
	Fully automatic	–	564109	MS9-LF-G-CUV	564107	MS9-LF-G-EUV

Filters MS9-LF, MS series

Ordering data – Modular products

FESTO

M Mandatory data →						
Module No.	Series	Size	Function	Connection size	Grade of filtration	Bowl
562532	MS	9	LF	¾, 1, AGD, AGE, AGF, AGG, AGH, G	E, C	U
Ordering example						
562532	MS	9	- LF	- AGD	- E	- U

Ordering table						
Grid dimension	[mm]	90		Condition s	Code	Enter code
M Module No.	562532					
Series	Standard				MS	MS
Size	9				9	9
Function	Filter				-LF	-LF
Connection size	Thread G¾				-¾	
	Thread G1				-1	
	Connecting plate G½				-AGD	
	Connecting plate G¾				-AGE	
	Connecting plate G1				-AGF	
	Connecting plate G1¼				-AGG	
	Connecting plate G1½				-AGH	
	Module without connecting thread, without connecting plate				-G	
Grade of filtration	40 µm				-E	
	5 µm				-C	
↓ Bowl	Metal bowl				-U	-U

Transfer order code

562532	MS	9	- LF			- U
---------------	-----------	----------	-------------	--	--	------------

Filters MS9-LF, MS series

Ordering data – Modular products

FESTO

→ M Mandatory data		O Options	
Condensate drain		Type of mounting	Alternative flow direction
M, H, V, E1 ... E4		WP, WPM, WPB	Z
- M		- WP	- Z

Ordering table					
Grid dimension	[mm]	90	Condition s	Code	Enter code
↓ M	Condensate drain	Manual		-M	
		Semi-automatic (P1 max. 12 bar)		-H	
		Fully automatic (P1 max. 12 bar)		-V	
	External, fully automatic, electric	24 V DC, M12 (P1 max. 16 bar)		-E1	
		110 V AC, terminals (P1 max. 16 bar)		-E2	
		230 V AC, terminals (P1 max. 16 bar)		-E3	
		24 V DC, terminals (P1 max. 16 bar)		-E4	
O	Type of mounting	Mounting bracket	1	-WP	
		Mounting bracket	1	-WPM	
		Mounting bracket for large wall gap	1	-WPB	
	Alternative flow direction	Flow direction from right to left		-Z	

1 WP, WPM, WPB Not with module G


Transfer order code

- - -

Fine and micro filters MS9-LFM, MS series

Peripherals overview

FESTO

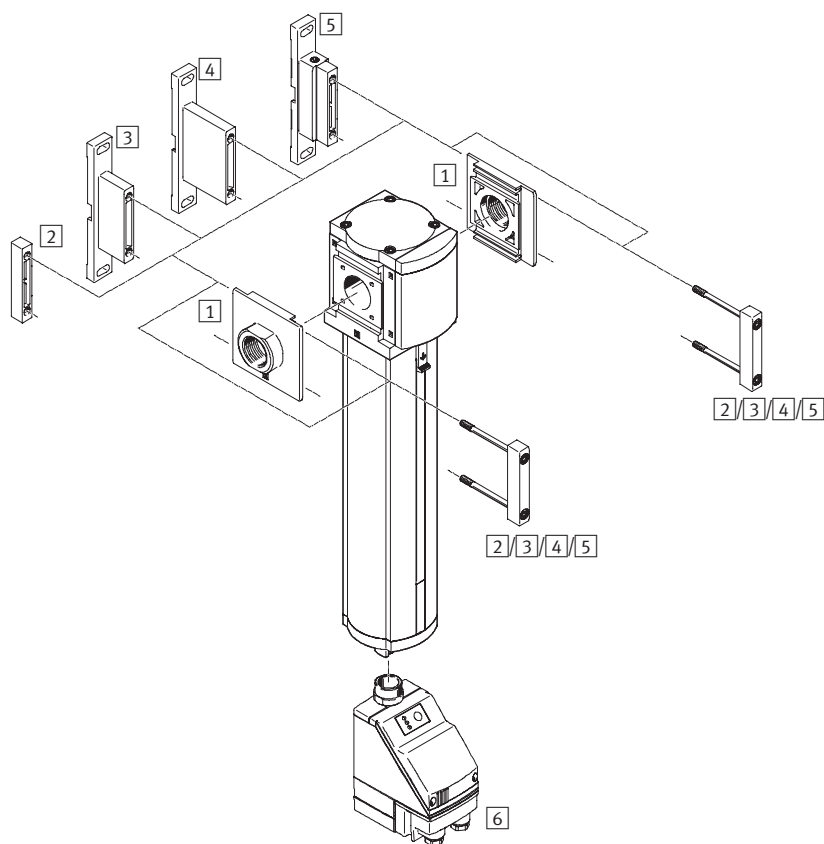

Note

Other accessories:

- Module connector for combination with size MS6 or size MS12

→ Internet: armv

Mounting attachments and accessories					
		Individual device		Combination	➔ Page/Internet
		without connecting thread	with connecting thread ¾ or 1		
1	Connecting plate MS9-AG...	■	–	■	ms9-ag
2	Module connector MS9-MV	■	–	■	ms9-mv
3	Mounting bracket MS9-WP	■	■	■	ms9-wp
4	Mounting bracket MS9-WPB	■	■	■	ms9-wp
5	Mounting bracket MS9-WPM	■	–	■	ms9-wp
6	Condensate drain, fully automatic, electrically actuated E1/E2/E3/E4	■	■	■	54

Fine and micro filters MS9-LFM, MS series

Type codes

		MS	9	-	LFM	-	1	-	A	U	M	-	HF	-	DA
Series															
MS	Standard service unit														
Size															
9	Grid dimension 90 mm														
Service function															
LFM	Fine and micro filter														
Pneumatic connection															
3/4	Thread G3/4														
1	Thread G1														
G	Module without connecting thread, without connecting plate														
Grade of filtration															
A	0.01 µm														
B	1 µm														
Bowl guard															
U	Metal bowl guard														
Condensate drain															
M	Manual rotary														
V	Fully automatic														
Flow rate															
	Standard														
HF	High flow rate														
Filter contamination sensor															
	Without differential pressure indicator														
DA	Differential pressure indicator														

Further variants can be ordered using the modular system → 54

- Connecting plates
- Condensate drain
- Type of mounting
- Alternative flow direction

Fine and micro filters MS9-LFM, MS series


Technical data

Function


Condensate drain

Manual rotary

Without differential pressure indicator

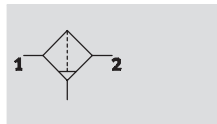


With differential pressure indicator

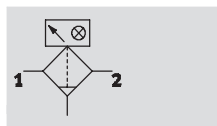


Condensate drain

Semi or fully automatic

Without differential pressure indicator

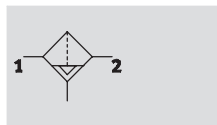

With differential pressure indicator

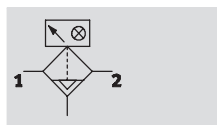

Flow rate

325 ... 10,000 l/min

Temperature range

-10 ... +60 °C



Supply pressure
0 ... 20 bar



- High-performance filter for exceptionally clean compressed air
- Air quality to DIN ISO 8573-1
- Available with manual, semi-automatic, fully automatic or fully automatic, electrically actuated condensate drain
- Available with differential pressure indicator for indication of contamination
- Choice of filter cartridges: 0.01 µm or 1 µm
- New filter cartridges → 86

MS9-LFM-A:

ISO class 1 for particles:

max. particle density 0.1 mg/m³

ISO class 2 for oil aerosols:

max. oil concentration 0.1 mg/m³

Filter efficiency 99.9999%

MS9-LFM-B:

ISO class 2 for particles:

max. particle density 1 mg/m³

ISO class 3 for oil aerosols:

max. oil concentration 1 mg/m³

Filter efficiency 99.99%

General technical data				
Size	MS9			
Pneumatic connection 1, 2	G3/4	G1	G1/2 ... G1 1/2 (with connecting plate AG...)	– (without connecting thread G)
Constructional design	Fibre filter			
Type of mounting	Via accessories			
	In-line installation			
Installation position	Vertical ±5°			
Grade of filtration [µm]	0.01 (micro filter MS9-LFM-A, air purity class at the output 1.7.2 to DIN ISO 8573-1)			
	1 (fine filter MS9-LFM-B, air purity class at the output 2.7.3 to DIN ISO 8573-1)			
Bowl guard	Metal bowl guard			
Condensate drain	Manual rotary			
	Semi-automatic			
	Fully automatic			
	Fully automatic, electrically actuated			
Differential pressure indicator	Visual indicator			
Residual oil content [mg/m ³]	≤0.01 (micro filter MS9-LFM-A)			
	≤0.5 (fine filter MS9-LFM-B)			
Max. condensate volume [cm ³]	225			

Note: This product conforms to ISO 1179-1 and to ISO 228-1

Fine and micro filters MS9-LFM, MS series

Technical data

FESTO

Standard flow rate $q_n^{1)}$ [l/min]		
Version	Standard	High flow rate HF
Micro filter MS9-LFM-A		
q_n min	325	390
q_n max	6,500	7,800
Fine filter MS9-LFM-B		
q_n min	350	500
q_n max	7,000	10,000

1) Measured at $p_1 = 6$ bar

Operating and environmental conditions				
Version	Condensate drain			
	Manual rotary	Semi-automatic	Fully automatic	Fully automatic, electrically actuated
	M	H	V	E1 ... E4
Supply pressure [bar]	0 ... 20	1.5 ... 12	2 ... 12	0.8 ... 16
Operating medium for micro filter LFM-A	Filtered compressed air, unlubricated, grade of filtration 1 μ m			
Operating medium for fine filter LFM-B	Filtered compressed air, unlubricated, grade of filtration 5 μ m			
Ambient temperature [°C]	-10 ... +60	+5 ... +60	+5 ... +60	+1 ... +60
Temperature of medium [°C]	-10 ... +60	+5 ... +60	+5 ... +60	+1 ... +60
Storage temperature [°C]	-10 ... +60	+5 ... +60	-10 ... +60	+1 ... +60
Corrosion resistance CRC ¹⁾	2			


1) Corrosion resistance class 2 as per Festo standard 940 070

Components subject to moderate corrosion stress. Externally visible parts with primarily decorative surface requirements which are in direct contact with a normal industrial environment or media such as coolants or lubricating agents.

Weights [g]		
Version	Standard	High flow rate HF
Fine and micro filter	2,000	2,500
Fine and micro filter with condensate drain fully automatic, electrically actuated E1 ... E4	2,900	2,900

Materials

Sectional view

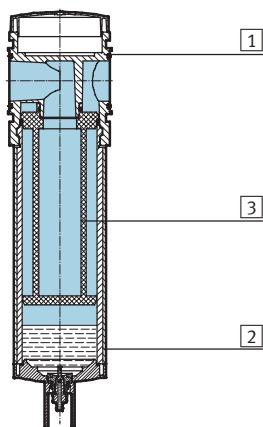

Fine and micro filters		
1	Housing	Die-cast aluminium
2	Bowl	Wrought aluminium alloy
	Inspection window	Polyamide
3	Filter	Borosilicate fibre
-	Seals	Nitrile rubber
	Note on materials	Free of copper and PTFE

Fine and micro filters MS9-LFM, MS series


Technical data

FESTO

Standard flow rate q_n as a function of the differential pressure p_{1-2}


Grade of filtration 0.01 μm

MS9-LFM-AGD, Pneumatic connection G $\frac{1}{2}$

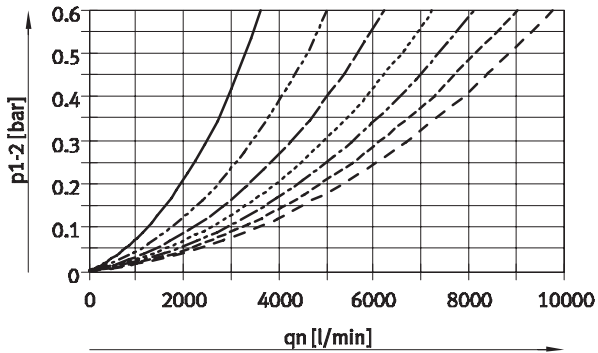


Grade of filtration 0.01 μm

MS9-LFM- $\frac{3}{4}$ /AGE, Pneumatic connection G $\frac{3}{4}$

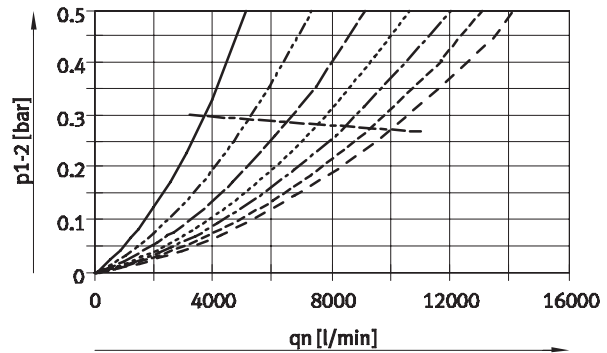


Grade of filtration 0.01 μm

MS9-LFM-1/AGE, Pneumatic connection G1

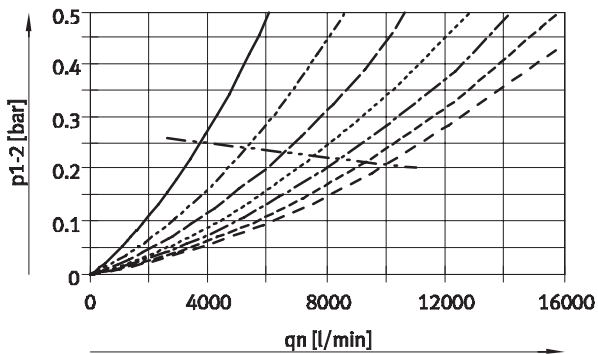


Grade of filtration 0.01 μm

MS9-LFM-AGG, Pneumatic connection G1 $\frac{1}{4}$

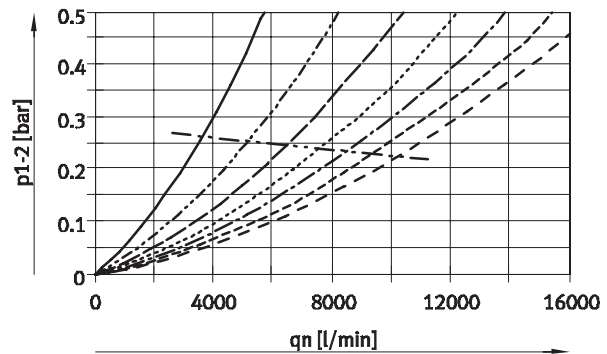

Grade of filtration 0.01 μm

MS9-LFM-AGH, Pneumatic connection G1 $\frac{1}{2}$

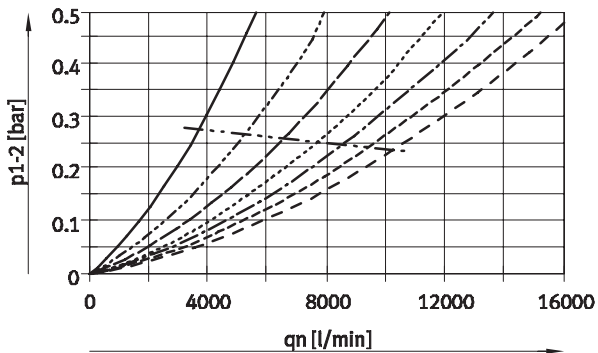

- 2 bar
 - - - 4 bar ($q_{n \min}$: 268 l/min)
 - · - 6 bar ($q_{n \min}$: 325 l/min)
 - 8 bar
 - - - - 10 bar ($q_{n \min}$: 420 l/min)
 - - - - 12 bar
 - - - - 14 bar ($q_{n \min}$: 498 l/min)
 - · - · - $q_{n \max}$
- (with MS9-LFM-AGD: $q_{n \max}$ -values lie above the measured q_n -values)

Fine and micro filters MS9-LFM, MS series


Technical data

FESTO

Standard flow rate q_n as a function of the differential pressure p_{1-2}


Grade of filtration $1\ \mu\text{m}$

MS9-LFM-AGD, Pneumatic connection $G\frac{1}{2}$

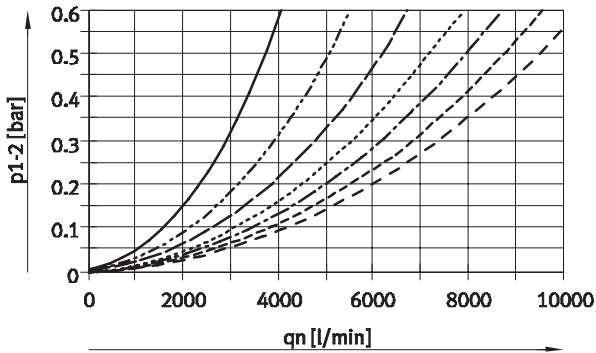


Grade of filtration $1\ \mu\text{m}$

MS9-LFM- $\frac{3}{4}$ /AGE, Pneumatic connection $G\frac{3}{4}$

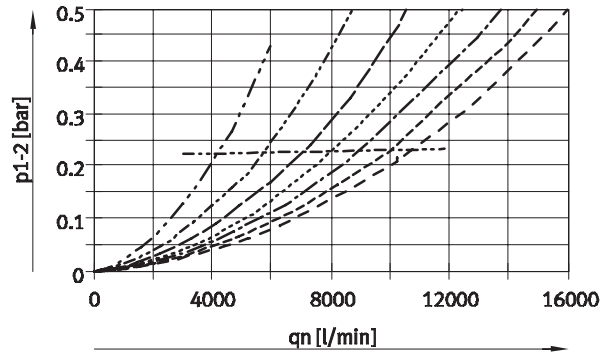


Grade of filtration $1\ \mu\text{m}$

MS9-LFM-1/AGE, Pneumatic connection $G1$

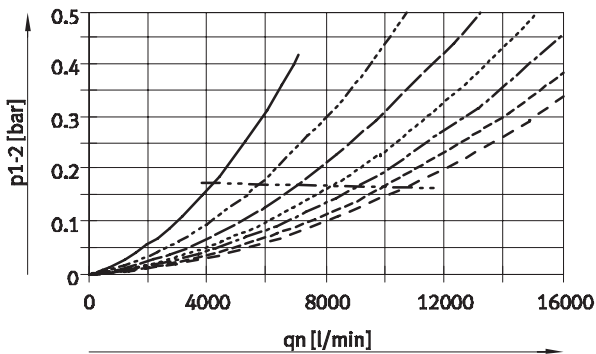


Grade of filtration $1\ \mu\text{m}$

MS9-LFM-AGG, Pneumatic connection $G1\frac{1}{4}$

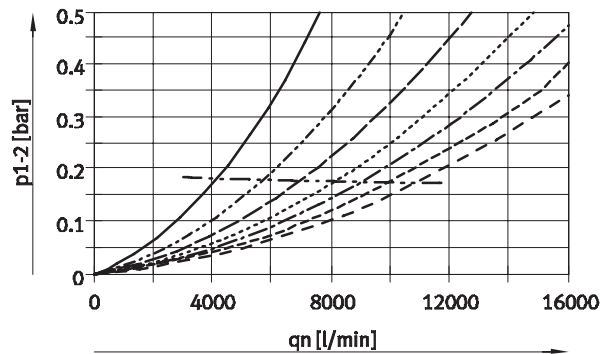

Grade of filtration $1\ \mu\text{m}$

MS9-LFM-AGH, Pneumatic connection $G1\frac{1}{2}$

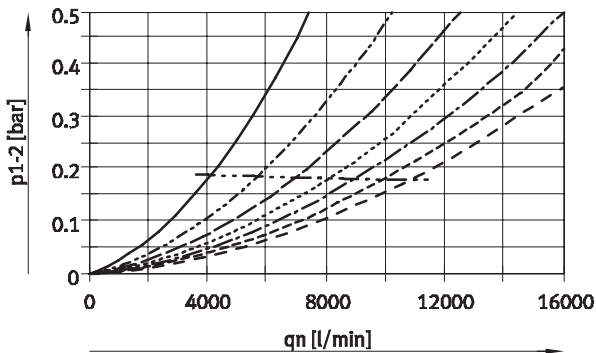

- 2 bar
- - - 4 bar ($q_{n\ min}$: 289 l/min)
- · - 6 bar ($q_{n\ min}$: 350 l/min)
- · · 8 bar
- - - 10 bar ($q_{n\ min}$: 450 l/min)
- - - 12 bar
- - - 14 bar ($q_{n\ min}$: 540 l/min)
- - - $q_{n\ max}$
- (with MS9-LFM-AGD: $q_{n\ max}$ -values lie above the measured q_n -values)

Fine and micro filters MS9-LFM, MS series


Technical data

FESTO

Standard flow rate q_n as a function of the differential pressure p_{1-2}

Grade of filtration 0.01 μm


MS9-LFM- $\frac{3}{4}$ -...-HF, Pneumatic connection G $\frac{3}{4}$

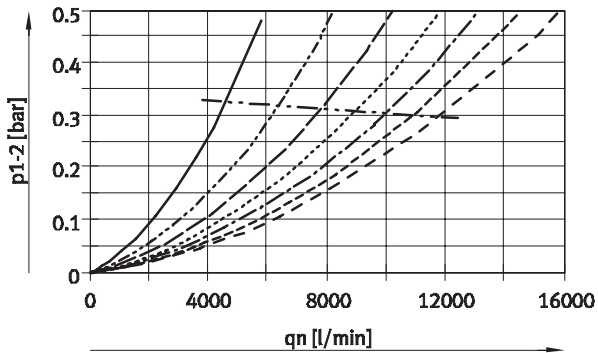

- 2 bar
- - - 4 bar
- · - 6 bar ($q_{n \min}$: 390 l/min)
- 8 bar
- - - - 10 bar
- - - - 12 bar
- · - · 14 bar
- $q_n \max$


Grade of filtration 0.01 μm

MS9-LFM-1-...-HF, Pneumatic connection G1

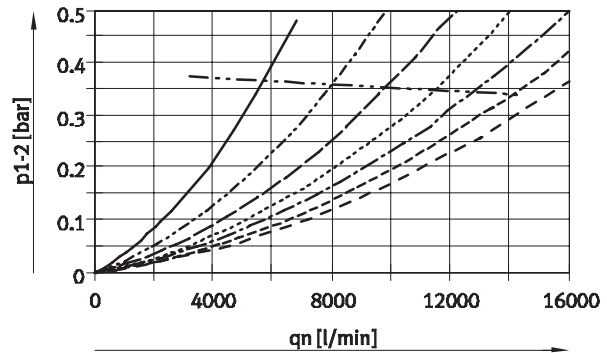

Grade of filtration 1 μm


MS9-LFM- $\frac{3}{4}$ -...-HF, Pneumatic connection G $\frac{3}{4}$

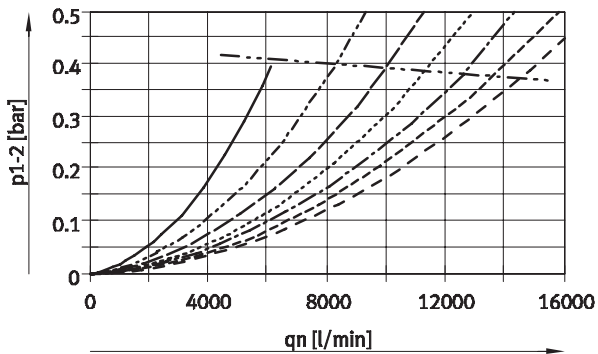

- 2 bar
- - - 4 bar
- · - 6 bar ($q_{n \min}$: 500 l/min)
- 8 bar
- - - - 10 bar
- - - - 12 bar
- · - · 14 bar
- $q_n \max$

Grade of filtration 1 μm

MS9-LFM-1-...-HF, Pneumatic connection G1

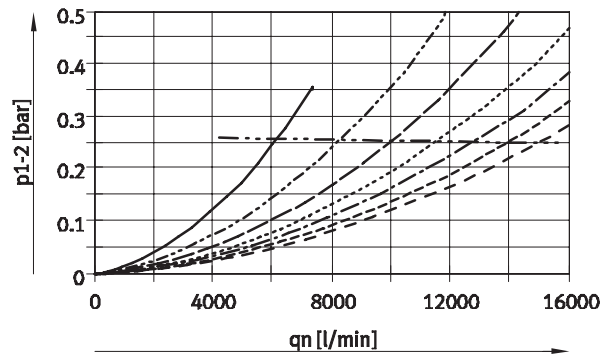

Fine and micro filters MS9-LFM, MS series

Technical data


FESTO

Dimensions – Basic version

without connecting thread G

Download CAD Data → www.festo.com/us/cad

without connecting thread G, with differential pressure indicator DA

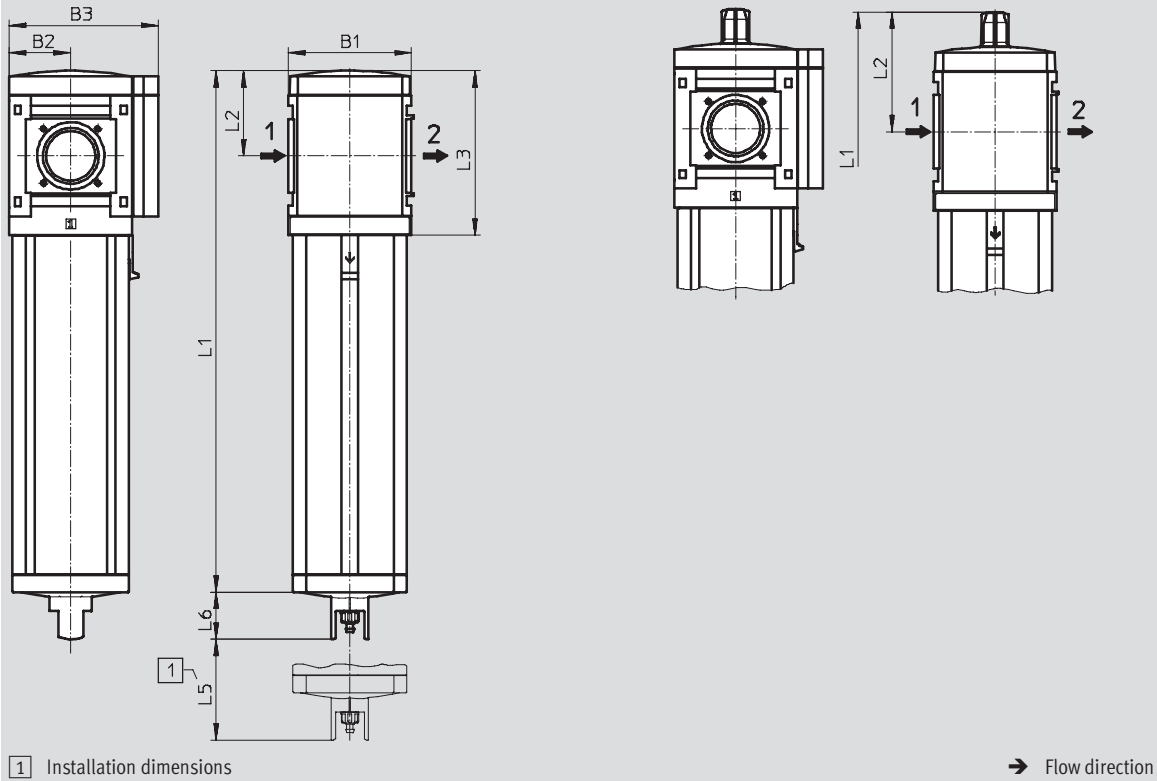

Type	B1	B2	B3	L1		L2	L3	L5	L6
				Standard	High flow rate HF				
MS9-LFM-G	90	45	109	380.5	480.5	62	120	50	34.5
MS9-LFM-G-...-DA				405.5	505.5	87			

Fine and micro filters MS9-LFM, MS series

Technical data


FESTO

Dimensions – Connecting thread/connecting plate

Download CAD Data → www.festo.com/us/cad

with connecting thread 3/4 or 1

with connecting plate AG...

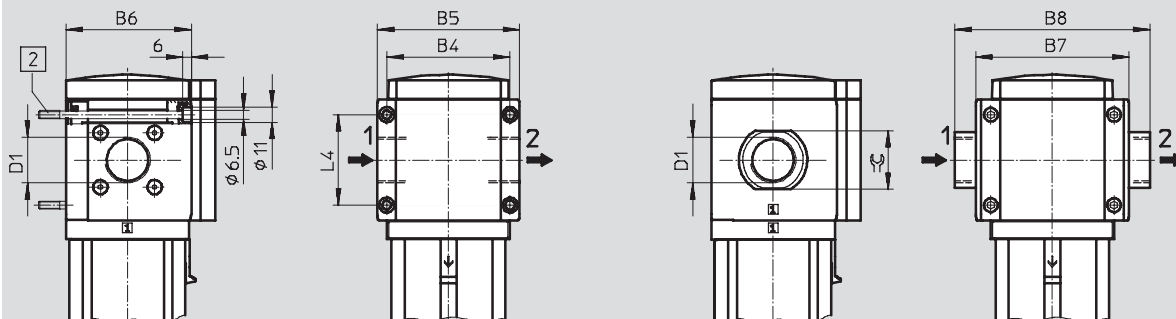

2 Mounting screw M6xmin.90 to DIN 912 (not included in scope of delivery) for wall mounting without mounting bracket

→ Flow direction

Type	B4	B5	B6	B7	B8	D1	L4	≡
MS9-LFM-3/4	90	104	91.5	-	-	G3/4	66	-
MS9-LFM-1						G1		
MS9-LFM-AGD	-	-	-	112	132	G1/2	-	30
MS9-LFM-AGE					132	G3/4		36
MS9-LFM-AGF					142	G1		41
MS9-LFM-AGG					162	G1 1/4		50
MS9-LFM-AGH					176	G1 1/2		55


Note: This product conforms to ISO 1179-1 and to ISO 228-1

Dimensions – Condensate drain


Download CAD Data → www.festo.com/us/cad

Manual rotary M/fully automatic V

Semi-automatic H

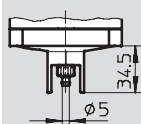


Barbed fitting for plastic tubing
PCN-4

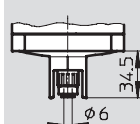

QS fitting for plastic tubing
PUN-6/PAN-6

Fully automatic, electrically actuated E1 ... E4

Technical data → Internet: [pwea](http://pwea.com)

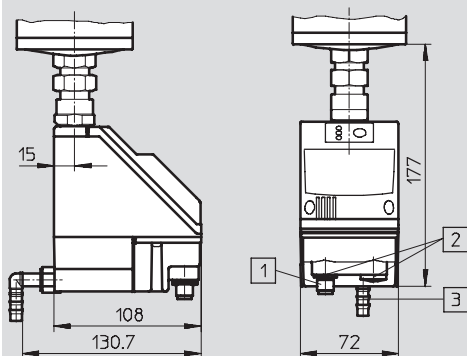

- 1 Variant E1
PWEA-AP-... with M12x1 plug,
5-pin for NEBU-M12...-LE5
- 2 Variants E2/E3/E4
PWEA-AC-... with cable conduit
fitting Pg9
- 3 Connection 360° rotatable for
plastic tubing PUN-H-12x2-...

Fine and micro filters MS9-LFM, MS series

Technical data

FESTO

Ordering data						
Without differential pressure indicator						
Size	Condensate drain	Connection	Micro filter		Fine filter	
			Grade of filtration 0.01 μm		Grade of filtration 1 μm	
			Part No.	Type	Part No.	Type
Standard						
MS9	Manual rotary	G¾	553070	MS9-LFM-¾-AUM	553074	MS9-LFM-¾-BUM
		G1	553000	MS9-LFM-1-AUM	553004	MS9-LFM-1-BUM
		—	564047	MS9-LFM-G-AUM	564039	MS9-LFM-G-BUM
	Fully automatic	G¾	553072	MS9-LFM-¾-AUV	553076	MS9-LFM-¾-BUV
		G1	553002	MS9-LFM-1-AUV	553006	MS9-LFM-1-BUV
		—	564049	MS9-LFM-G-AUV	564041	MS9-LFM-G-BUV
High flow rate						
MS9	Manual rotary	G¾	552964	MS9-LFM-¾-AUM-HF	552968	MS9-LFM-¾-BUM-HF
		G1	553038	MS9-LFM-1-AUM-HF	553042	MS9-LFM-1-BUM-HF
		—	564051	MS9-LFM-G-AUM-HF	564043	MS9-LFM-G-BUM-HF
	Fully automatic	G¾	552966	MS9-LFM-¾-AUV-HF	552970	MS9-LFM-¾-BUV-HF
		G1	553040	MS9-LFM-1-AUV-HF	553044	MS9-LFM-1-BUV-HF
		—	564053	MS9-LFM-G-AUV-HF	564045	MS9-LFM-G-BUV-HF

Ordering data								
With differential pressure indicator								
Size	Condensate drain	Connection	Micro filter			Fine filter		
			Grade of filtration 0.01 μm			Grade of filtration 1 μm		
			Part No.	Type		Part No.	Type	
Standard								
MS9	Manual rotary	G¾	553078	MS9-LFM-¾-AUM-DA		553082	MS9-LFM-¾-BUM-DA	
		G1	553008	MS9-LFM-1-AUM-DA		553012	MS9-LFM-1-BUM-DA	
		—	564048	MS9-LFM-G-AUM-DA		564040	MS9-LFM-G-BUM-DA	
	Fully automatic	G¾	553080	MS9-LFM-¾-AUV-DA		553084	MS9-LFM-¾-BUV-DA	
		G1	553010	MS9-LFM-1-AUV-DA		553014	MS9-LFM-1-BUV-DA	
		—	564050	MS9-LFM-G-AUV-DA		564042	MS9-LFM-G-BUV-DA	
	High flow rate							
MS9	Manual rotary	G¾	552972	MS9-LFM-¾-AUM-HF-DA		552976	MS9-LFM-¾-BUM-HF-DA	
		G1	553046	MS9-LFM-1-AUM-HF-DA		553050	MS9-LFM-1-BUM-HF-DA	
		—	564052	MS9-LFM-G-AUM-HF-DA		564044	MS9-LFM-G-BUM-HF-DA	
	Fully automatic	G¾	552974	MS9-LFM-¾-AUV-HF-DA		552978	MS9-LFM-¾-BUV-HF-DA	
		G1	553048	MS9-LFM-1-AUV-HF-DA		553052	MS9-LFM-1-BUV-HF-DA	
		—	564054	MS9-LFM-G-AUV-HF-DA		564046	MS9-LFM-G-BUV-HF-DA	

Fine and micro filters MS9-LFM, MS series

Ordering data – Modular products

FESTO

M Mandatory data →						
Module No.	Series	Size	Function	Connection size	Grade of filtration	Bowl
552940	MS	9	LFM	3/4, 1 AGD, AGE, AGF, AGG, AGH G	B A	U
Order example						
552940	MS	9	- LFM	- AGD	- B	- U

Ordering table					
Grid dimension	[mm]	90	Condition s	Code	Enter code
M Module No.	552940				
Series	Standard service unit			MS	MS
Size	9			9	9
Function	Fine and micro filter			-LFM	-LFM
Connection size	Thread G3/4			-3/4	
	Thread G1			-1	
	Connecting plate G1/2			-AGD	
	Connecting plate G3/4			-AGE	
	Connecting plate G1			-AGF	
	Connecting plate G1 1/4			-AGG	
	Connecting plate G1 1/2			-AGH	
	Module without connecting thread, without connecting plate			-G	
Grade of filtration	µm	1		-B	
		0.01		-A	
Bowl	Metal bowl			-U	-U

Transfer order code

552940	MS	9	- LFM	-		-		- U
--------	----	---	-------	---	--	---	--	-----

Fine and micro filters MS9-LFM, MS series

Ordering data – Modular products

FESTO

→ M Mandatory data		O Options		
Condensate drain	Flow rate	Filter contamination sensor	Type of mounting	Alternative flow direction
M H V E1 E2 E3 E4	HF	DA	WP WPM WPB	Z
- M	- HF	- DA	- WP	- Z

Ordering table					
Grid dimension	[mm]	90	Condition s	Code	Enter code
↓ M	Condensate drain	Manual		-M	
		Semi-automatic (P1 max. 12 bar)		-H	
		Fully automatic (P1 max. 12 bar)		-V	
		External fully automatic condensate drain, electrical, 24 V DC, M12		-E1	
		External fully automatic condensate drain, electrical, 110 V AC, terminal strip		-E2	
		External fully automatic condensate drain, electrical, 230 V AC, terminal strip		-E3	
		External fully automatic condensate drain, electrical, 24 V DC, terminal strip		-E4	
O	Flow rate	High flow rate		-HF	
	Filter contamination sensor	Differential pressure indicator, visual		-DA	
	Type of mounting	Mounting bracket	1	-WP	
		Mounting bracket	1	-WPM	
		Wall mounting bracket for large wall gap	1	-WPB	
	Alternative flow direction	Flow direction from right to left		-Z	

1 WP, WPM, WPB Not with module G


Transfer order code

- - - - -

Activated carbon filters MS9-LFX, MS series

Peripherals overview

FESTO

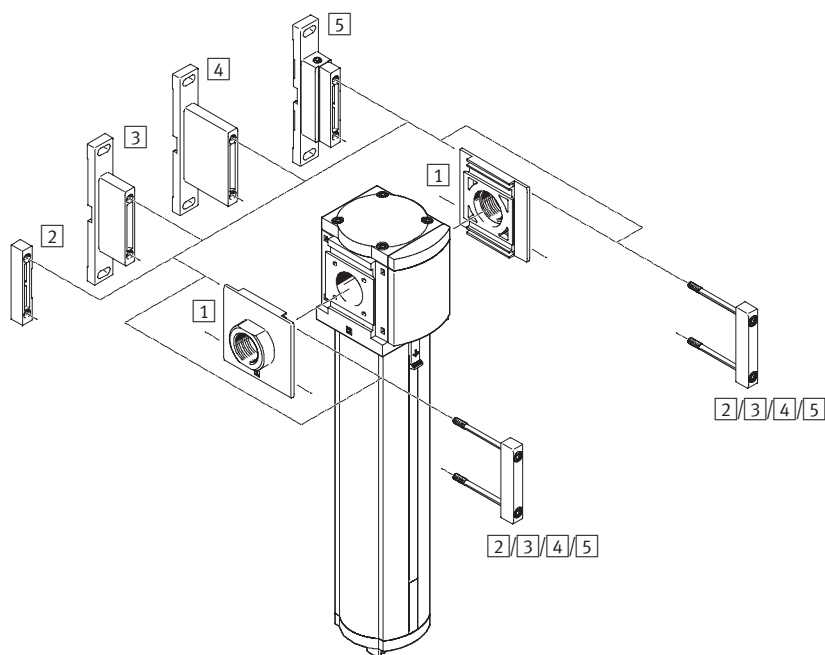

Note

Other accessories:

- Module connector for combination with size MS6 or size MS12

→ Internet: armv

Mounting attachments and accessories					
		Individual device		Combination	➔ Page/Internet
		without connecting thread	with connecting thread ¾ or 1		
1	Connecting plate MS9-AG...	■	–	■	ms9-ag
2	Module connector MS9-MV	■	–	■	ms9-mv
3	Mounting bracket MS9-WP	■	■	■	ms9-wp
4	Mounting bracket MS9-WPB	■	■	■	ms9-wp
5	Mounting bracket MS9-WPM	■	–	■	ms9-wp

Activated carbon filters MS9-LFX, MS series

Type codes

		MS	9	–	LFX	–	¾	–	U
Series									
MS	Standard service unit								
Size									
9	Grid dimension 90 mm								
Service function									
LFX	Activated carbon filter								
Pneumatic connection									
¾	Thread G¾								
1	Thread G1								
G	Module without connecting thread, without connecting plate								
Bowl guard									
U	Metal bowl guard								

Further variants can be ordered using the modular system → 62


- Connecting plates
- Type of mounting
- Alternative flow direction

Activated carbon filters MS9-LFX, MS series

FESTO

Technical data

Function

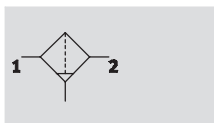

Flow rate
max. 6,500 l/min

Temperature range
-10 ... +60 °C

 Supply pressure
0 ... 20 bar



- Removal of liquid and gaseous oil particles from compressed air using activated carbon
- Eliminates odours and vapours
- Prefiltration with micro filter MS9-LFM-A, grade of filtration 0.01 µm, recommended
- New filter cartridges → 86

General technical data				
Size	MS9			
Pneumatic connection 1, 2	G3/4	G1	G1/2 ... G1 1/2 (with connecting plate AG...)	– (without connecting thread G)
Constructional design	Activated carbon filter			
Type of mounting	Via accessories In-line installation			
Installation position	Vertical ±5°			
Air purity class at the output ¹⁾	1.7.1 to DIN ISO 8573-1			
Bowl guard	Metal bowl guard			
Residual oil content	[mg/m ³]	≤0.003		

1) It is recommended to replace filter cartridges after 1,000 operating hours (applies to an ambient temperature of 21 °C). The service life of a filter cartridge is reduced at higher temperatures.
Note: This product conforms to ISO 1179-1 and to ISO 228-1

Standard flow rate qn ¹⁾ [l/min]	
qn max.	6,500

1) Measured at p1 = 6 bar

Operating and environmental conditions		
Supply pressure	[bar]	0 ... 20
Operating medium	Filtered compressed air, unlubricated, grade of filtration 0.01 µm	
Ambient temperature	[°C]	-10 ... +60
Temperature of medium	[°C]	+5 ... +30
Storage temperature	[°C]	-10 ... +60
Corrosion resistance	CRC ¹⁾	2

1) Corrosion resistance class 2 as per Festo standard 940 070
Components subject to moderate corrosion stress. Externally visible parts with primarily decorative surface requirements which are in direct contact with a normal industrial environment or media such as coolants or lubricating agents.


Weights [g]	
Activated carbon filter	2,000

Activated carbon filters MS9-LFX, MS series

Technical data

Materials

Sectional view

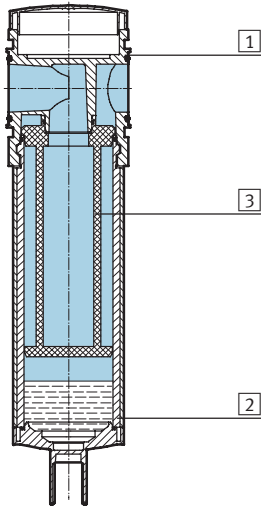


Activated carbon filter


1	Housing	Die-cast aluminium
2	Bowl	Wrought aluminium alloy
	Inspection window	Polyamide
3	Filter	Activated carbon
-	Seals	Nitrile rubber
	Note on materials	Free of copper and PTFE

Standard flow rate q_n as a function of the differential pressure p_{1-2}


MS9-LFX-AGD, Pneumatic connection G $\frac{1}{2}$

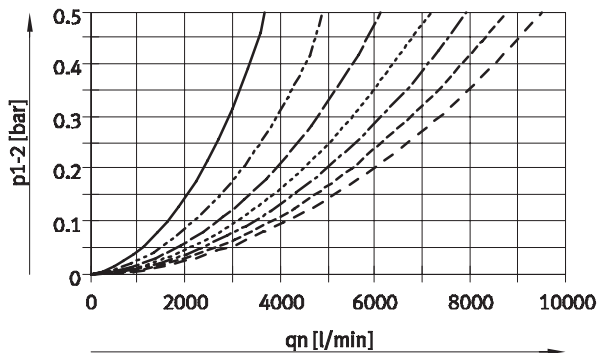


MS9-LFX- $\frac{3}{4}$ /AGE, Pneumatic connection G $\frac{3}{4}$

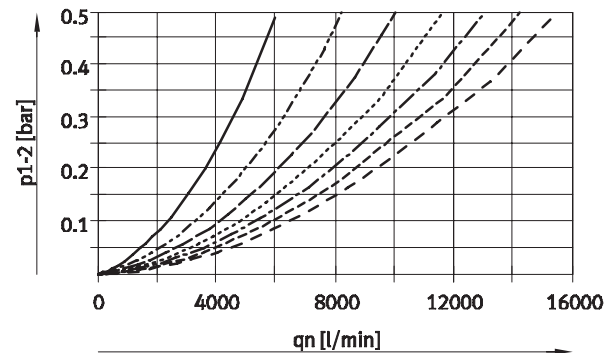

MS9-LFX-1/AGE, Pneumatic connection G1

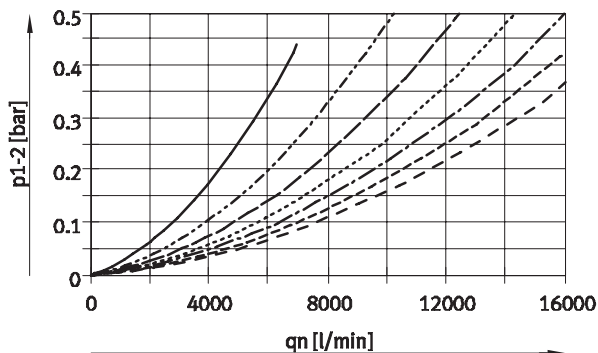

MS9-LFX-AGH, Pneumatic connection G1 $\frac{1}{2}$

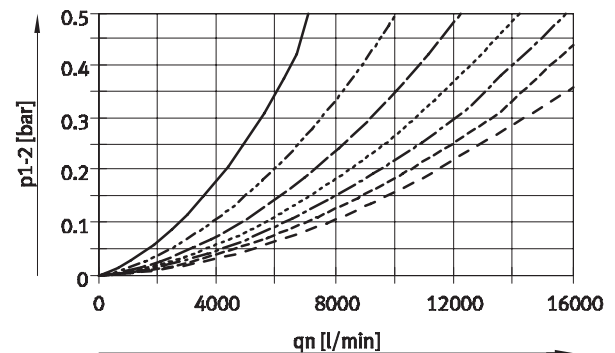

- 2 bar
- - - 4 bar
- · · 6 bar
- · - 8 bar
- - - 10 bar
- · - 12 bar
- - - 14 bar

Activated carbon filters MS9-LFX, MS series


FESTO

Technical data

Dimensions – Basic version

Download CAD Data → www.festo.com/us/cad

without connecting thread G

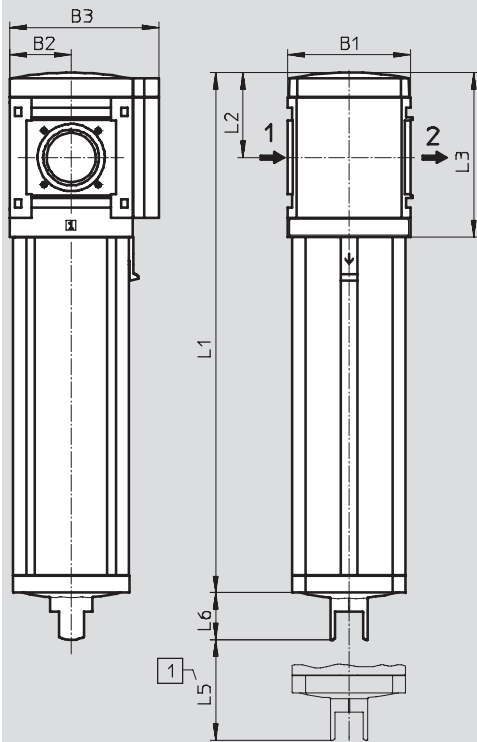

1 Installation dimensions

→ Flow direction

Type	B1	B2	B3	L1	L2	L3	L5	L6
MS9-LFX-G	90	45	109	380.5	62	120	50	34.5

Activated carbon filters MS9-LFX, MS series


Technical data

Dimensions – Connecting thread/connecting plate

Download CAD Data → www.festo.com/us/cad

with connecting thread $\frac{3}{4}$ or 1

with connecting plate AG...

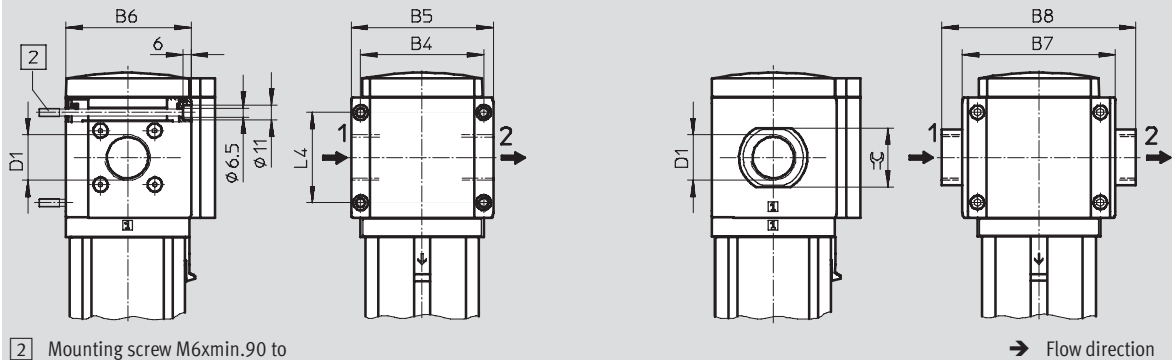

Type	B4	B5	B6	B7	B8	D1	L4	☞
MS9-LFX- $\frac{3}{4}$	90	104	91.5	–	–	G $\frac{3}{4}$	66	–
MS9-LFX-1						G1		
MS9-LFX-AGD	–	–	–	112	132	G $\frac{1}{2}$	–	30
MS9-LFX-AGE					132	G $\frac{3}{4}$		36
MS9-LFX-AGF					142	G1		41
MS9-LFX-AGG					162	G1 $\frac{1}{4}$		50
MS9-LFX-AGH					176	G1 $\frac{1}{2}$		55

Note: This product conforms to ISO 1179-1 and to ISO 228-1

Ordering data

Size	Connection	Part No.	Type
MS9	G $\frac{3}{4}$	552996	MS9-LFX- $\frac{3}{4}$ -U
	G1	553032	MS9-LFX-1-U
	–	564038	MS9-LFX-G-U

Activated carbon filters MS9-LFX, MS series

FESTO

Ordering data – Modular products

M Mandatory data						O Options	
Module No.	Series	Size	Function	Connection size	Bowl	Type of mounting	Alternative flow direction
552942	MS	9	LFX	3/4, 1 AGD, AGE, AGF, AGG, AGH G	U	WP WPM WPB	Z
Order example							
552942	MS	9	- LFX	- AGD	- U	- WP	- Z

Ordering table							
Grid dimension		[mm]	90	Condition	s	Code	Enter code
M	Module No.	552942					
	Series	Standard service unit				MS	MS
	Size	9				9	9
	Function	Activated carbon filter				-LFX	-LFX
	Connection size	Thread G3/4				-3/4	
		Thread G1				-1	
		Connecting plate G1/2				-AGD	
		Connecting plate G3/4				-AGE	
		Connecting plate G1				-AGF	
		Connecting plate G1 1/4				-AGG	
		Connecting plate G1 1/2				-AGH	
		Module without connecting thread, without connecting plate				-G	
	Bowl	Metal bowl				-U	-U
O	Type of mounting	Mounting bracket		1		-WP	
		Mounting bracket		1		-WPM	
		Wall mounting bracket for large wall gap		1		-WPB	
	Alternative flow direction	Flow direction from right to left				-Z	-Z

1 WP, WPM, WPB

Not with module G


Transfer order code

552942	MS	9	- LFX	-		- U	-		-	
--------	----	---	-------	---	--	-----	---	--	---	--

Filters MS12-LF, MS series

Peripherals overview

FESTO

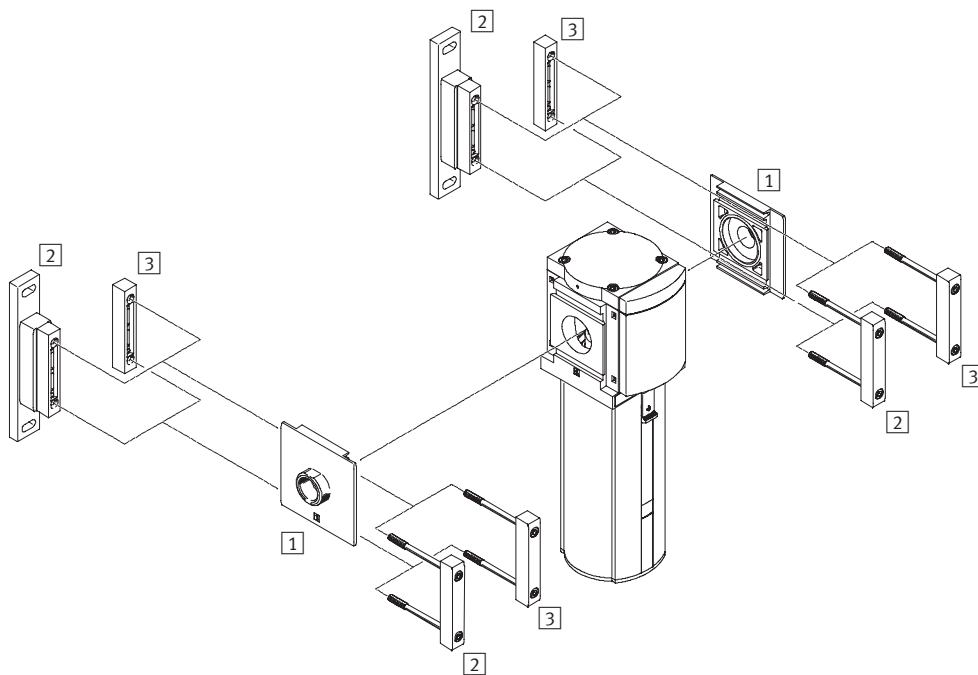

Note

Additional accessories:

- Module connector for combination with size MS9 → Internet: armv

Mounting attachments and accessories

		→ Page/Internet
1	Connecting plate MS12-AG...	ms12-ag
2	Mounting bracket MS12-WP	ms12-wp
3	Module connector MS12-MV	ms12-mv

Filters MS12-LF, MS series

Type codes

FESTO

		MS	12	-	LF	-	G	-	C	U	V
Series											
MS	Standard service unit										
Size											
12	Grid dimension 124 mm										
Service function											
LF	Filter										
Connection size											
G	Module without connecting thread, without connecting plate Connecting plates → Accessories										
Grade of filtration											
C	5 µm										
E	40 µm										
Bowl guard											
U	Metal bowl										
Condensate drain											
V	Fully automatic										

Further variants can be ordered using the modular system → 69


- Connecting plates
- Condensate drain
- Type of mounting
- Alternative flow direction

Filters MS12-LF, MS series


FESTO

Technical data

Function
Condensate drain
manual rotary

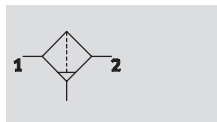

fully automatic

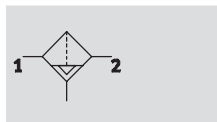

Flow rate
11,500 ... 16,000 l/min

Temperature range
-10 ... +60 °C

 Input pressure
0.8 ... 20 bar



The sintered filter with centrifugal separation removes contamination, rust and condensate from the compressed air. The filter cartridges are replaceable.

- Good particle and condensate separation
- High flow rate with minimal pressure drop
- Available with manual, fully automatic or fully automatic, electrically actuated condensate drain
- Choice of filter cartridges: 5 µm or 40 µm
- New filter cartridges → 87

General technical data				
Pneumatic connection 1, 2 ¹⁾	G1	G1¼	G1½	G2
Design	Sintered filter with centrifugal separation			
Type of mounting	Via accessories			
	In-line installation			
Assembly position	Vertical ±5°			
Grade of filtration [µm]	5 (air purity class at the output 3.7.- to DIN ISO 8573-1)			
	40 (air purity class at the output 5.7.- to DIN ISO 8573-1)			
Bowl guard	Metal bowl			
Condensate drain	Manual rotary			
	Fully automatic			
	Fully automatic, electrical actuated			
Max. condensate volume [cm³]	400			

1) Dependent on connecting plate selected, must be ordered separately as an accessory → Internet: ms12-ag
Note: This product conforms to ISO 1179-1 and to ISO 228-1

Standard nominal flow rate q _N ¹⁾ [l/min]					
Pneumatic connection		G1	G1¼	G1½	G2
Grade of filtration	5 µm	11,500	12,500	13,500	14,000
	40 µm	12,500	13,000	14,000	16,000

1) Dependent on connecting plate selected, must be ordered separately as an accessory → Internet: ms12-ag
Measured at p₁ = 6 bar and Δp = 0.5 bar

Filters MS12-LF, MS series

Technical data

FESTO

Operating and environmental conditions			
Condensate drain	Manual rotary M	Fully automatic V	Fully automatic, electrical actuated E1 ... E4
Input pressure [bar]	0.8 ... 20	2 ... 12	0.8 ... 16
Operating medium	Compressed air, air quality class 5.7.- to DIN ISO 8573-1		
Ambient temperature [°C]	-10 ... +60	+5 ... +60	+1 ... +60
Temperature of medium [°C]	-10 ... +60	+5 ... +60	+1 ... +60
Storage temperature [°C]	-10 ... +60	-10 ... +60	+1 ... +60
Corrosion resistance CRC ¹⁾	2		


1) Corrosion resistance class 2 according to Festo standard 940 070

Components requiring moderate corrosion resistance. Externally visible parts with primarily decorative surface requirements which are in direct contact with a normal industrial environment or media such as coolants or lubricating agents.

Weights [g]	
Filter with metal bowl U	6,500
Filter with metal bowl U and fully automatic, electrically actuated condensate drain E1 ... E4	7,200

Materials

Sectional view

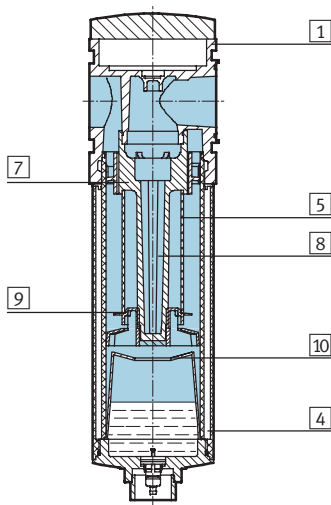

Filter		
1	Body	Die-cast aluminium
4	Metal bowl	Wrought aluminium alloy
5	Filter element	Sintered bronze
7	Spin disc	Polyacetate
8	Filter holder	Polyacetate
9	Separating plate	Polyacetate
10	Stabilising disc	Polyacetate
-	Seals	Nitrile rubber



Standard flow rate q_n as a function of the differential pressure Δp_{1-2}

Grade of filtration 5 μm

With connecting plate MS12-AGF
Pneumatic connection G1

With connecting plate MS12-AGI
Pneumatic connection G2

$p_1 = 6 \text{ bar}$

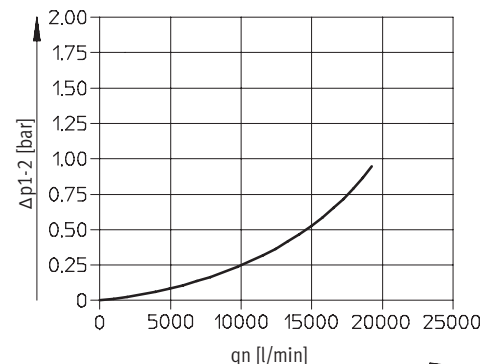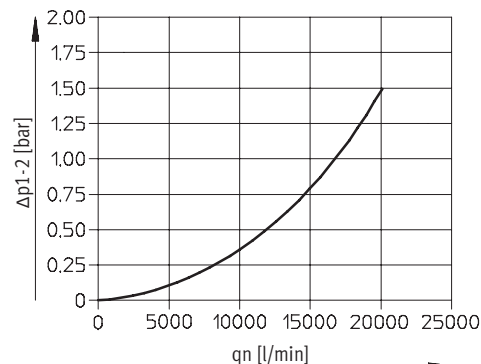

Filters MS12-LF, MS series

Technical data

FESTO

Standard flow rate q_n as a function of the differential pressure Δp_{1-2}

Grade of filtration 40 μm



With connecting plate MS12-AGF

Pneumatic connection G1

With connecting plate MS12-AGI


Pneumatic connection G2

$p_1 = 6 \text{ bar}$

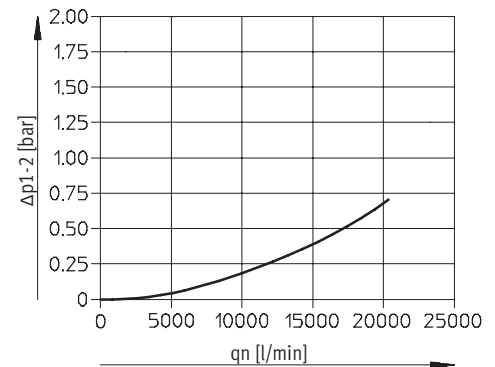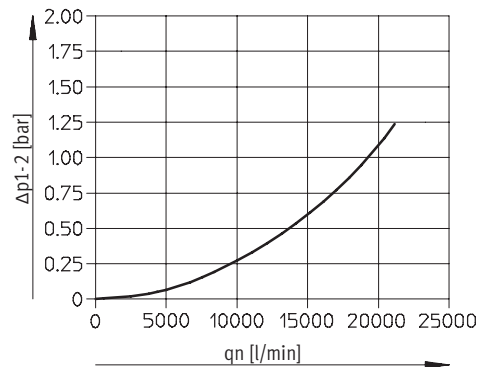

Dimensions – Standard

Download CAD Data → www.festo.com/us/cad

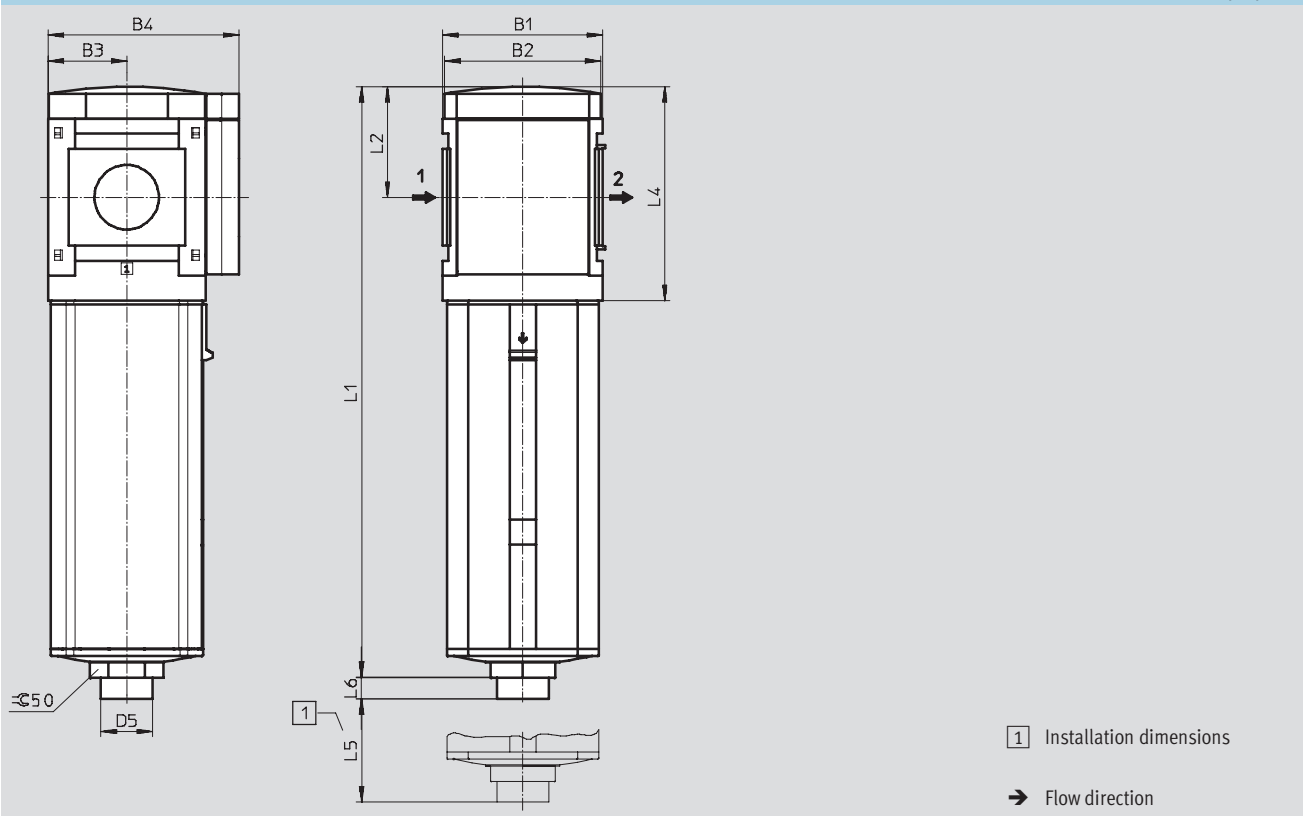

Type	B1	B2	B3	B4	D5 Ø	L1	L2	L4	L5	L6
MS12-LF	124	122	61	148	40	458	86	166	250	16

Filters MS12-LF, MS series


Technical data

FESTO

Dimensions – Condensate drain


Download CAD Data → www.festo.com/us/cad

Manual rotary M

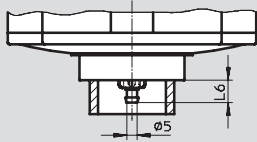

Barbed fitting for plastic tubing
PCN-4

Fully automatic V

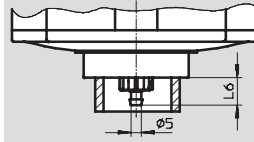


Barbed fitting for plastic tubing
PCN-4

Type	L6
MS12-LF-...-M	11

Type	L6
MS12-LF-...-V	13

Fully automatic, electrically actuated E1 ... E4

Technical data → Internet: pwea

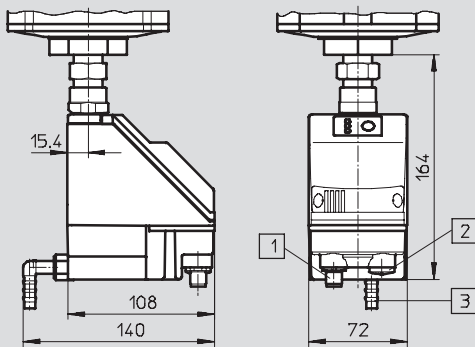

- 1 Variant E1
PWEA-AP-... with M12x1 plug,
5-pin for NEBU-M12...-LE5
- 2 Variant E2/E3/E4
PWEA-AC-... with cable conduit
fitting Pg9
- 3 Connection 360° rotatable for
plastic tubing PUN-H-12x2-...

Ordering data

Metal bowl

Size	Condensate drain	Connection	Grade of filtration 5 µm		Grade of filtration 40 µm	
			Part No.	Type	Part No.	Type
MS12	fully automatic	G1 ... G2 ¹⁾	537152	MS12-LF-G-CUV	537151	MS12-LF-G-EUV

1) Connecting plate must be ordered separately as an accessory → Internet: ms12-ag

Note: This product conforms to ISO 1179-1 and to ISO 228-1

Filters MS12-LF, MS series

Ordering data – Modular products

FESTO

M Mandatory data								O Options	
Module No.	Series	Size	Function	Connection size	Grade of filtration	Bowl	Condensate drain	Type of mounting	Alternative flow direction
535023	MS	12	LF	AGF AGG AGH AGI G	E C	U	M V E1 E2 E3 E4	WP	Z
Order example									
535023	MS	12	- LF	- G	- E	- U	- V	-	-

Ordering table					
Grid dimension	[mm]	124	Conditions	Code	Enter code
M Module No.	535023				
Series	Standard			MS	MS
Size	12			12	12
Function	Filter			-LF	-LF
Connection size	Connecting plate G1			-AGF	
	Connecting plate G1¼			-AGG	
	Connecting plate G1½			-AGH	
	Connecting plate G2			-AGI	
	Module without connecting thread, without connecting plate			-G	
Grade of filtration	40 µm			-E	
	5 µm			-C	
Bowl	Metal bowl			-U	-U
Condensate drain	Manual			-M	
	Fully automatic (P1 max. 12 bar)			-V	
	External fully automatic condensate drain, electrical, 24 V DC, M12			-E1	
	External fully automatic condensate drain, electrical, 110 V AC, terminals			-E2	
	External fully automatic condensate drain, electrical, 230 V AC, terminals			-E3	
	External fully automatic condensate drain, electrical, 24 V DC, terminals			-E4	
O Type of mounting	Mounting bracket		1	-WP	
Alternative flow direction	Flow direction from right to left			-Z	

1 WP Only with connecting plate AGF, AGG, AGH or AGI.


Transfer order code

535023 MS 12 - LF - - U - - -

Fine and micro filters MS12-LFM, MS series

Peripherals overview

FESTO

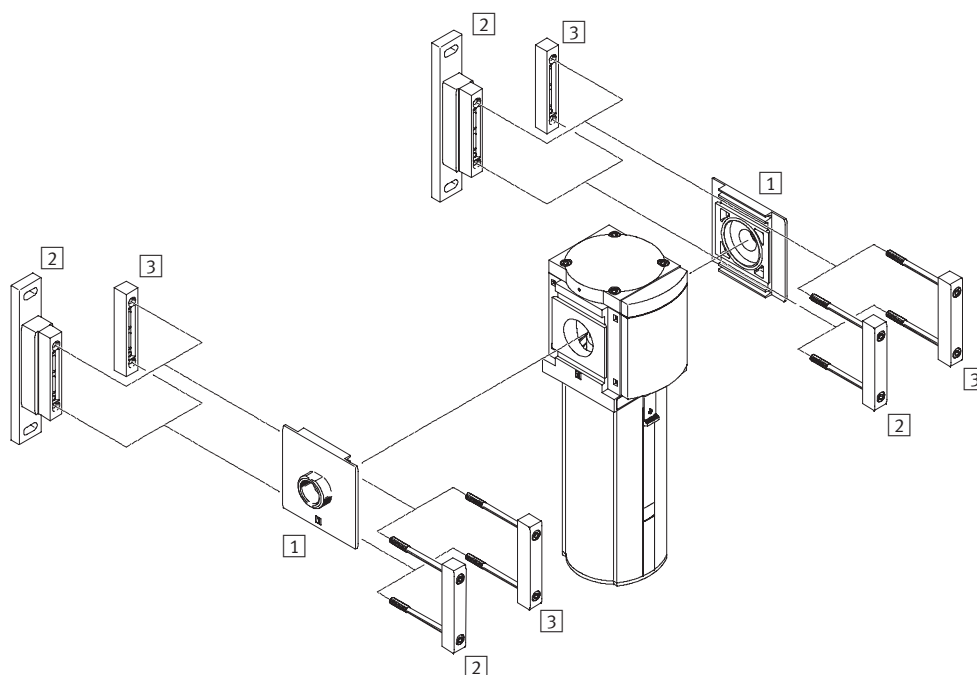

Note

Additional accessories:

- Module connector for combination with size MS9 →
Internet: armv

Mounting attachments and accessories

		→ Page/Internet
1	Connecting plate MS12-AG...	ms12-ag
2	Mounting bracket MS12-WP	ms12-wp
3	Module connector MS12-MV	ms12-mv

Fine and micro filters MS12-LFM, MS series

FESTO

Type codes

		MS	12	-	LFM	-	G	-	B	U	V
Series											
MS	Standard service unit										
Size											
12	Grid dimension 124 mm										
Service function											
LFM	Fine and micro filter										
Connection size											
G	Module without connecting thread, without connecting plate Connecting plates → Accessories										
Grade of filtration											
A	0.01 µm										
B	1 µm										
Bowl guard											
U	Metal bowl										
Condensate drain											
V	Fully automatic										

Further variants can be ordered using the modular system → 78

- Connecting plates
- Condensate drain
- Filter change sensor
- Type of mounting
- Alternative flow direction


Fine and micro filters MS12-LFM, MS series

FESTO


Technical data

Function


Condensate drain
manual rotary
without differential pressure indicator

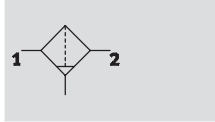


with differential pressure indicator

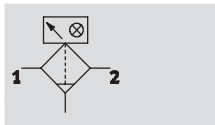

Condensate drain
fully automatic
without differential pressure indicator

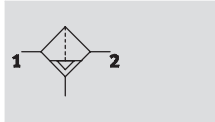

with differential pressure indicator

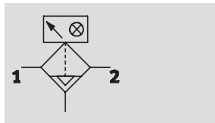

Flow rate

500 ... 50,000 l/min

Temperature range

-10 ... +60 °C



Input pressure
0.8 ... 20 bar



- High-performance filter for exceptionally clean compressed air
- Air quality to DIN ISO 8573-1
- Available with manual, fully automatic or fully automatic, electrically actuated condensate drain
- Available with differential pressure indicator for optical indication of filter contamination
- Choice of filter cartridges: 0.01 µm or 1 µm
- New filter cartridges → 87

MS12-LFM-A:

ISO class 1 for particles:
max. particle density 0.1 mg/m³
ISO class 2 for oil aerosols:
max. oil concentration 0.1 mg/m³
Filter efficiency 99.9999%

MS12-LFM-B:

ISO class 2 for particles:
max. particle density 1 mg/m³
ISO class 3 for oil aerosols:
max. oil concentration 1 mg/m³
Filter efficiency 99.99%

General technical data				
Pneumatic connection 1, 2 ¹⁾	G1	G1¼	G1½	G2
Design	Fibre filter			
Type of mounting	Via accessories			
	In-line installation			
Assembly position	Vertical ±5°			
Grade of filtration	0.01 (micro filter MS12-LFM-A, air purity class at the output 1.7.2 to DIN ISO 8573-1)			
	1 (fine filter MS12-LFM-B, air purity class at the output 2.7.3 to DIN ISO 8573-1)			
Bowl guard	Metal bowl			
Condensate drain	Manual rotary			
	Fully automatic			
	Fully automatic, electrical actuated			
Max. condensate volume	400			

1) Dependent on connecting plate selected, must be ordered separately as an accessory → Internet: ms12-ag

Note: This product conforms to ISO 1179-1 and to ISO 228-1

Fine and micro filters MS12-LFM, MS series

FESTO

Technical data

Standard flow rate q_n [l/min]				
Input pressure p_1	4 bar	6 bar	10 bar	14 bar
Micro filter MS12-LFM-A				
Max. standard flow rate for air purity class $q_{n \max}$	16,670	23,300	36,670	50,000
Min. standard flow rate for air purity class $q_{n \min}$	500	700	1,100	1,500
Fine filter MS12-LFM-B				
Max. standard flow rate for air purity class $q_{n \max}$	16,670	23,300	36,670	50,000
Min. standard flow rate for air purity class $q_{n \min}$	625	950	1,390	1,675

Operating and environmental conditions			
Condensate drain	Manual rotary M	Fully automatic V	Fully automatic, electrical actuated E1 ... E4
Input pressure p_1 [bar]	0.8 ... 20	2 ... 12	0.8 ... 16
Operating medium micro filter MS12-LFM-A	Compressed air, filtered, unlubricated, grade of filtration 1 μm		
Operating medium fine filter MS12-LFM-B	Compressed air, filtered, unlubricated, grade of filtration 5 μm		
Ambient temperature [°C]	-10 ... +60	+5 ... +60	+1 ... +60
Temperature of medium [°C]	-10 ... +60	+5 ... +60	+1 ... +60
Storage temperature [°C]	-10 ... +60	-10 ... +60	+1 ... +60
Corrosion resistance CRC ¹⁾	2		


1) Corrosion resistance class 2 according to Festo standard 940 070

Components requiring moderate corrosion resistance. Externally visible parts with primarily decorative surface requirements which are in direct contact with a normal industrial environment or media such as coolants or lubricating agents.

Weights [g]	
Fine and micro filter with metal bowl U	7,000
Fine and micro filter with metal bowl U and fully automatic, electrically actuated condensate drain E1 ... E4	7,700

Materials

Sectional view

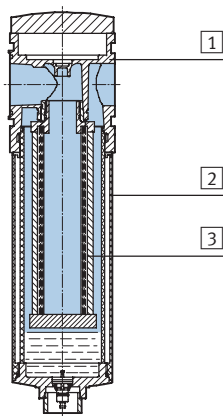

Fine and micro filter	
[1] Body	Die-cast aluminium
[2] Metal bowl	Wrought aluminium alloy
[3] Filter element	Borosilicate mesh
– Seals	Nitrile rubber

Fine and micro filters MS12-LFM, MS series


Technical data

FESTO

Standard flow rate q_n as a function of the differential pressure p_{1-2}


Grade of filtration 0.01 μm

With connecting plate MS12-AGF, Pneumatic connection G1

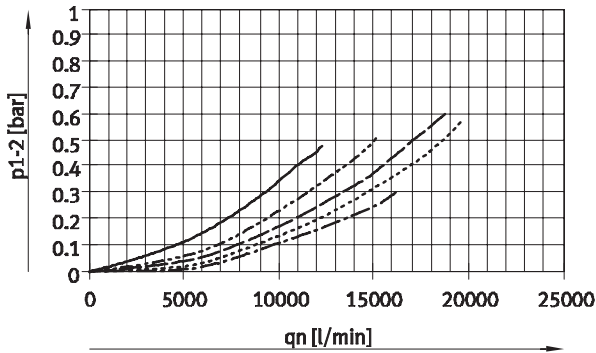


Grade of filtration 0.01 μm

With connecting plate MS12-AGG, Pneumatic connection G1 $\frac{1}{4}$

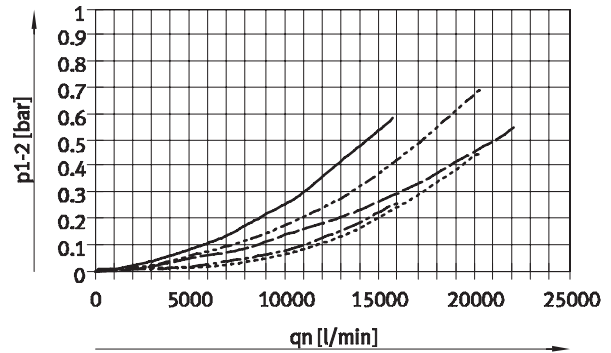


Grade of filtration 0.01 μm

With connecting plate MS12-AGH, Pneumatic connection G1 $\frac{1}{2}$

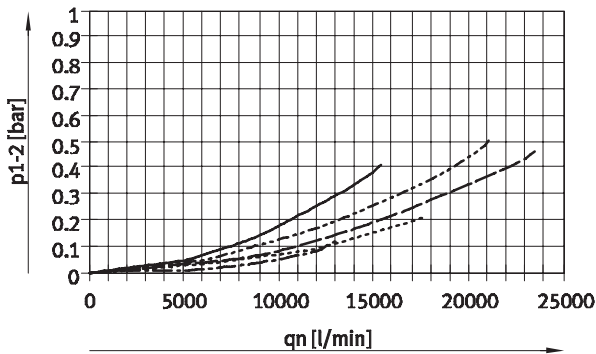

Grade of filtration 0.01 μm

With connecting plate MS12-AGI, Pneumatic connection G2

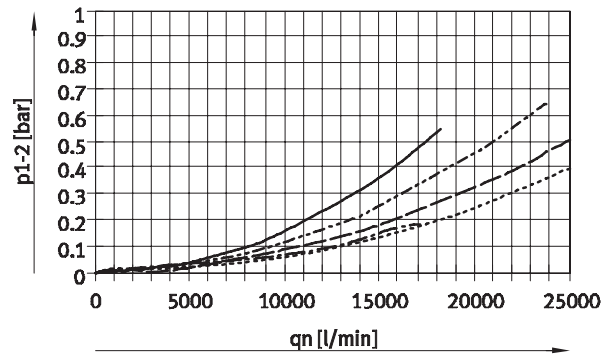

- p_1 : 4 bar
- - - p_1 : 6 bar
- - - p_1 : 8 bar
- p_1 : 10 bar
- . - . p_1 : 12 bar

Fine and micro filters MS12-LFM, MS series


FESTO

Technical data

Standard flow rate q_n as a function of the differential pressure p_{1-2}


Grade of filtration $1\ \mu\text{m}$

With connecting plate MS12-AGF, Pneumatic connection G1

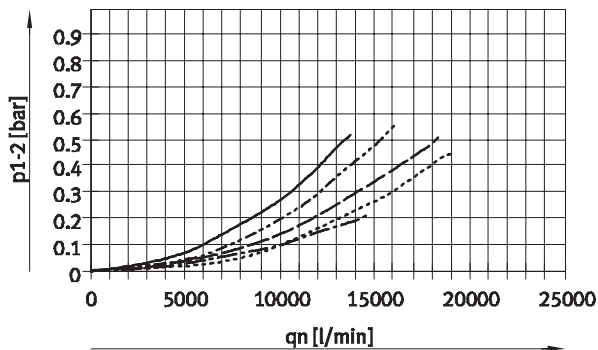


Grade of filtration $1\ \mu\text{m}$

With connecting plate MS12-AGG, Pneumatic connection G1¼

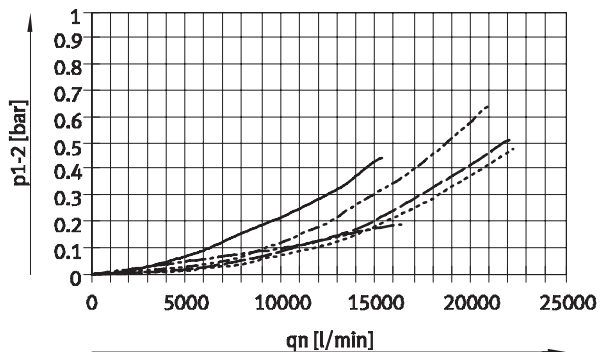


Grade of filtration $1\ \mu\text{m}$

With connecting plate MS12-AGH, Pneumatic connection G1½

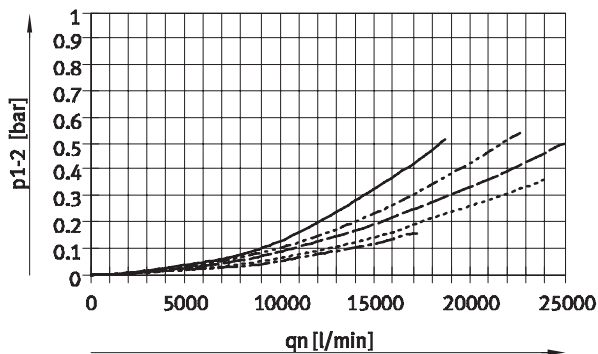

Grade of filtration $1\ \mu\text{m}$

With connecting plate MS12-AGI, Pneumatic connection G2

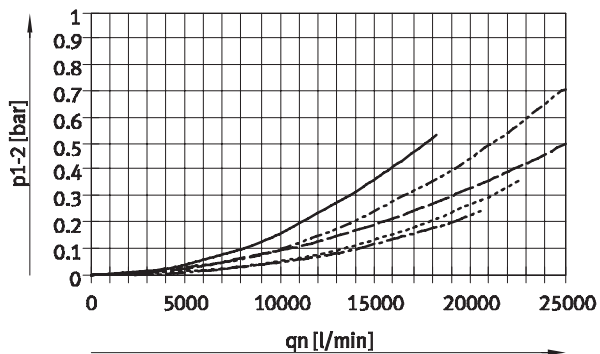

- p_1 : 4 bar
- - - p_1 : 6 bar
- - - - p_1 : 8 bar
- · · p_1 : 10 bar
- · - p_1 : 12 bar


Fine and micro filters MS12-LFM, MS series

Technical data

FESTO

Dimensions – Standard

Download CAD Data → www.festo.com/us/cad

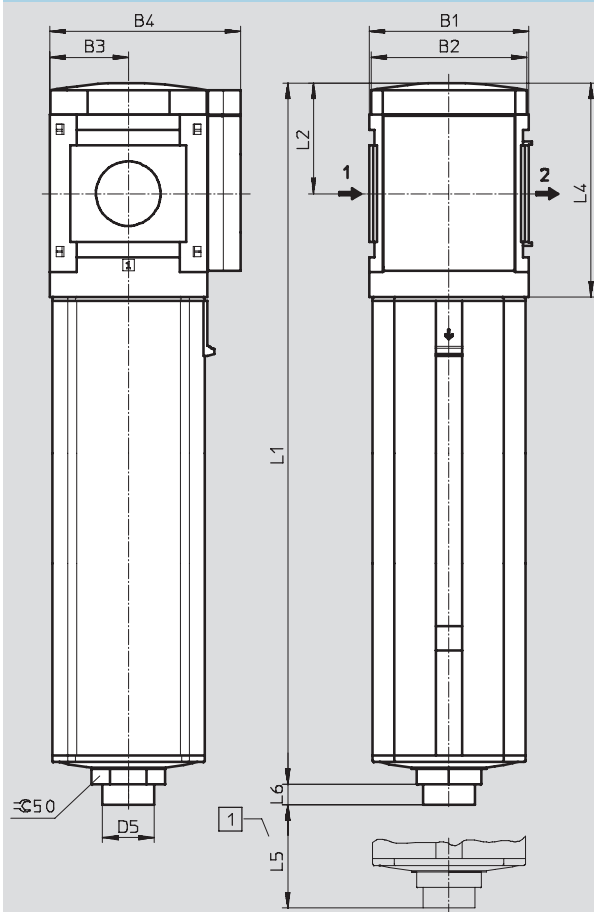

1 Installation dimensions

→ Flow direction

Type	B1	B2	B3	B4	D5 Ø	L1	L2	L4	L5	L6
MS12-LFM	124	122	61	148	40	543	86	166	350	16


Fine and micro filters MS12-LFM, MS series

Technical data

FESTO

Dimensions – Differential pressure indicator

Download CAD Data → www.festo.com/us/cad

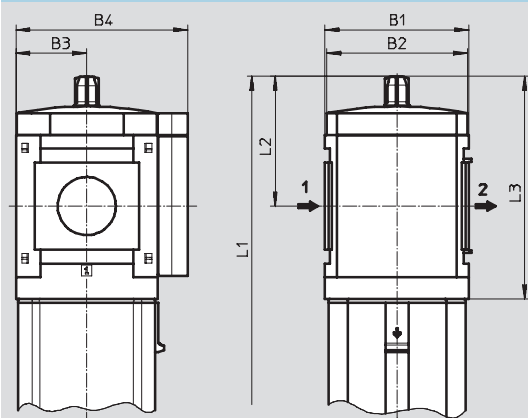


→ Flow direction

Type	B1	B2	B3	B4	L1	L2	L3
MS12-LFM-...-DA	124	122	61	148	569	112	192

Dimensions – Condensate drain


Download CAD Data → www.festo.com/us/cad

Manual rotary M

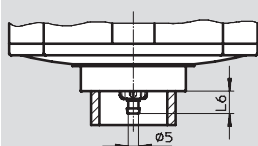

Barbed fitting for plastic tubing
PCN-4

Fully automatic V

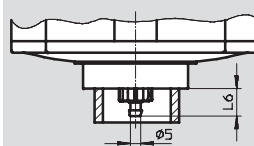


Barbed fitting for plastic tubing
PCN-4

Type	L6
MS12-LFM-...-M	11

Type	L6
MS12-LFM-...-V	13

Fully automatic, electrically actuated E1 ... E4

Technical data → Internet: pwea

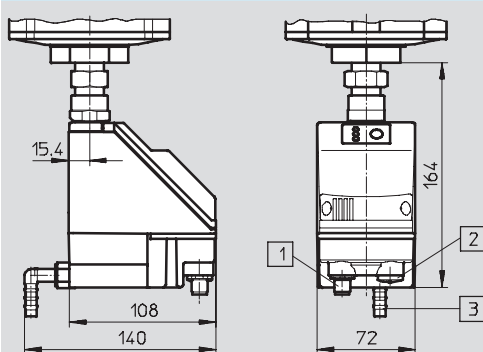

- 1 Variant E1
PWEA-AP-... with M12x1 plug,
5-pin for NEBU-M12...-LE5
- 2 Variant E2/E3/E4
PWEA-AC-... with cable conduit
fitting Pg9
- 3 Connection 360° rotatable for
plastic tubing PUN-H-12x2-...

Ordering data

Metal bowl

Size	Condensate drain	Connection	Micro filter Grade of filtration 0.01 µm		Fine filter Grade of filtration 1 µm	
			Part No.	Type	Part No.	Type
MS12	fully automatic	G1 ... G2 ¹⁾	537154	MS12-LFM-G-AUV	537153	MS12-LFM-G-BUV

1) Connecting plate must be ordered separately as an accessory → Internet: ms12-ag
Note: This product conforms to ISO 1179-1 and to ISO 228-1

Fine and micro filters MS12-LFM, MS series

FESTO

Ordering data – Modular products

M Mandatory data								O Options		
Module No.	Series	Size	Function	Connection size	Grade of filtration	Bowl	Condensate drain	Filter change sensor	Type of mounting	Alternative flow direction
535042	MS	12	LFM	AGF AGG AGH AGI G	B A	U	M V E1 E2 E3 E4	DA	WP	Z
Order example										
535042	MS	12	- LFM	- AGI	- A	- U	- M	-	-	-

Ordering table					
Grid dimension	[mm]	124	Conditions	Code	Enter code
M	Module No.	535042			
	Series	Standard		MS	MS
	Size	12		12	12
	Function	Fine and micro filter		-LFM	-LFM
	Connection size	Connecting plate G1		-AGF	
		Connecting plate G1¼		-AGG	
		Connecting plate G1½		-AGH	
		Connecting plate G2		-AGI	
		Module without connecting thread, without connecting plate		-G	
	Grade of filtration	1 µm		-B	
		0.01 µm		-A	
	Bowl	Metal bowl		-U	-U
	Condensate drain	Manual		-M	
		Fully automatic (P1 max. 12 bar)		-V	
		External fully automatic condensate drain, electrical, 24 V DC, M12		-E1	
		External fully automatic condensate drain, electrical, 110 V AC, terminals		-E2	
		External fully automatic condensate drain, electrical, 230 V AC, terminals		-E3	
		External fully automatic condensate drain, electrical, 24 V DC, terminals		-E4	
O	Filter change sensor	Differential pressure indicator, optical		-DA	
	Type of mounting	Mounting bracket	1	-WP	
	Alternative flow direction	Flow direction from right to left		-Z	


1 WP Only with connecting plate AGF, AGG, AGH or AGI.

Transfer order code

535042	MS	12	- LFM	-	-	- U	-	-	-
--------	----	----	-------	---	---	-----	---	---	---

Active carbon filters MS12-LFX, MS series

Peripherals overview

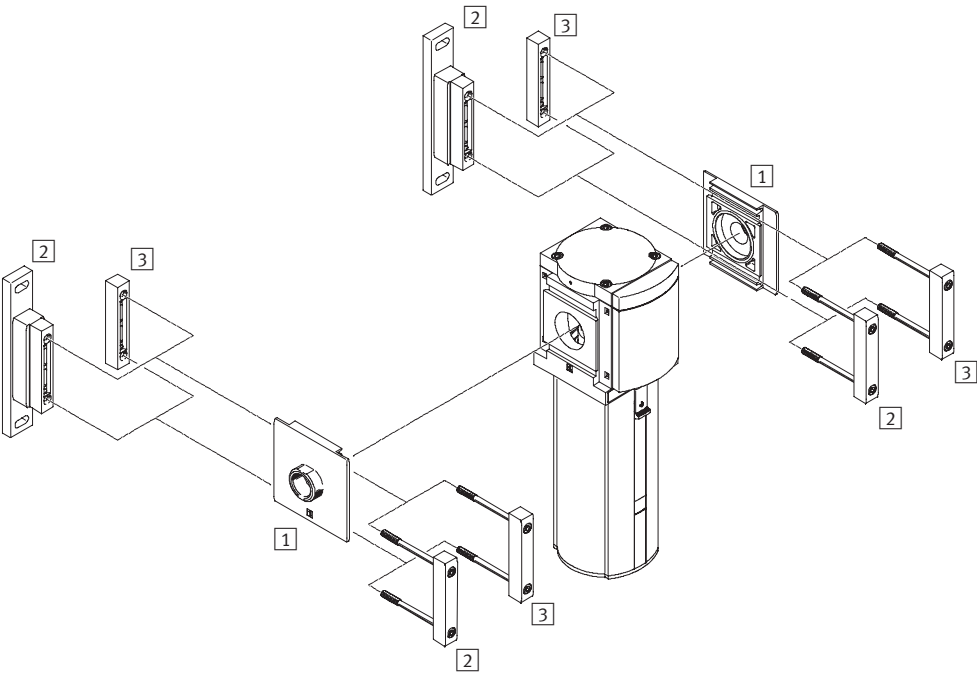

Note

Additional accessories:

- Module connector for combination with size MS9 → Internet: armv

Mounting attachments and accessories		→ Page/Internet
1	Connecting plate MS12-AG...	ms12-ag
2	Mounting bracket MS12-WP	ms12-wp
3	Module connector MS12-MV	ms12-mv

Active carbon filters MS12-LFX, MS series

FESTO

Type codes

		MS	12	–	LFX	–	G	–	U
Series									
MS	Standard service unit								
Size									
12	Grid dimension 124 mm								
Service function									
LFX	Active carbon filter								
Connection size									
G	Module without connecting thread, without connecting plate Connecting plates → Accessories								
Bowl guard									
U	Metal bowl								

Further variants can be ordered using the modular system → 84


- Connecting plates
- Type of mounting
- Alternative flow direction

Active carbon filters MS12-LFX, MS series

FESTO

Technical data

Function

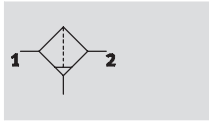

Flow rate

5,065 ... 15,190 l/min

Temperature range

-10 ... +60 °C



Input pressure
0 ... 20 bar



- Removal of liquid and gaseous oil particles from compressed air using active carbon
- Eliminates odours and vapours
- Prefiltration with micro filter MS12-LFM-A, grade of filtration 0.01 µm, recommended
- New filter cartridges → 87

General technical data				
Pneumatic connection 1, 2 ¹⁾	G1	G1¼	G1½	G2
Design	Active carbon filter			
Type of mounting	Via accessories			
	In-line installation			
Assembly position	Vertical ±5°			
Air purity class at the output ²⁾	1.7.1 to DIN ISO 8573-1			
Bowl guard	Metal bowl			
Residual oil content	[mg/m ³]	≤ 0.003		

1) Dependent on connecting plate selected, must be ordered separately as an accessory → Internet: ms12-ag

2) We recommend that the filter cartridge be replaced by a new one after 1,000 operating hours. (Applies to an ambient temperature of 21 °C. At higher temperatures the service life of the filter cartridge will be reduced.)

Note: This product conforms to ISO 1179-1 and to ISO 228-1

Standard flow rate q _n [l/min]				
Input pressure p ₁	4 bar	6 bar	10 bar	14 bar
Max. standard flow rate for air purity class q _{n max}	5,065	7,090	11,150	15,190

Operating and environmental conditions		
Input pressure p ₁	[bar]	0 ... 20
Operating medium	Compressed air, filtered, unlubricated, grade of filtration 0.01 µm	
Ambient temperature	[°C]	-10 ... +60
Temperature of medium	[°C]	+5 ... +30
Storage temperature	[°C]	-10 ... +60
Corrosion resistance	CRC ¹⁾	2

1) Corrosion resistance class 2 according to Festo standard 940 070

Components requiring moderate corrosion resistance. Externally visible parts with primarily decorative surface requirements which are in direct contact with a normal industrial environment or media such as coolants or lubricating agents.

Weights [g]	
Active carbon filter with metal bowl U	7,000


Active carbon filters MS12-LFX, MS series

Technical data

FESTO

Materials

Sectional view

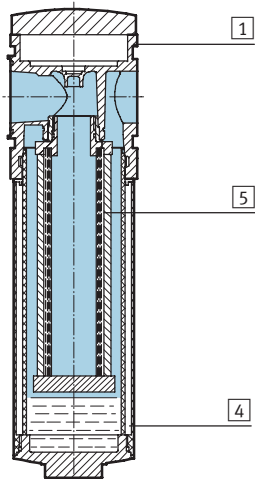


Active carbon filter


1	Body	Die-cast aluminium
4	Metal bowl	Wrought aluminium alloy
5	Filter	Active carbon
-	Seals	Nitrile rubber
Note on materials		Free of copper and PTFE

Standard flow rate q_n as a function of the differential pressure p_{1-2}


With connecting plate MS12-AGF, Pneumatic connection G1

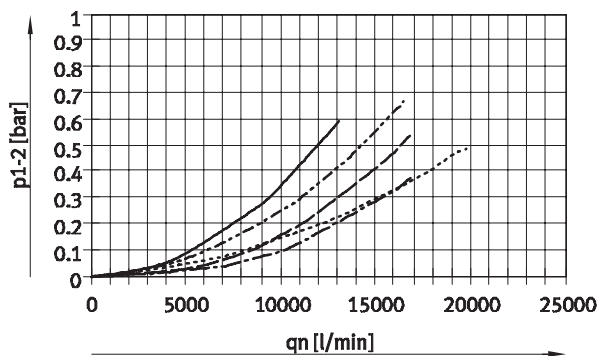


With connecting plate MS12-AGG, Pneumatic connection G1¼

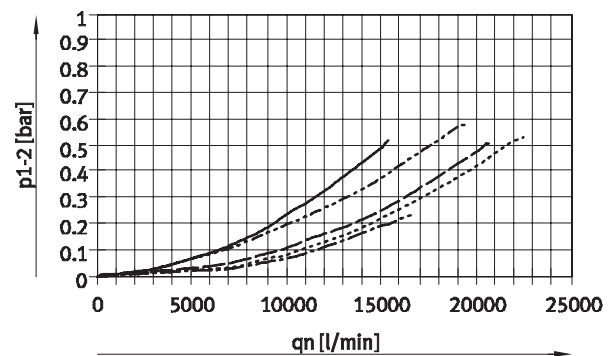

With connecting plate MS12-AGH, Pneumatic connection G1½

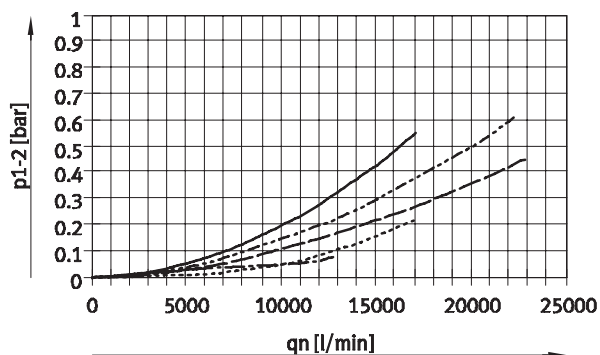

With connecting plate MS12-AGI, Pneumatic connection G2

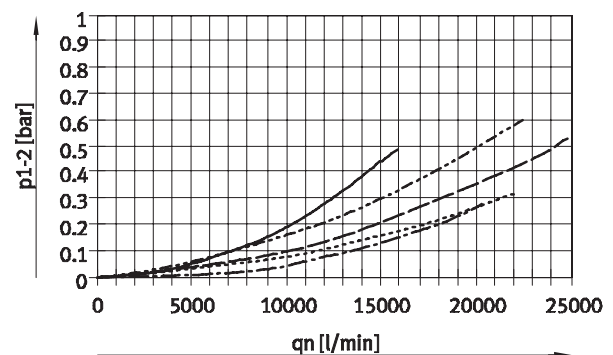

- p1: 4 bar
- - - p1: 6 bar
- p1: 8 bar
- - - p1: 10 bar
- - - p1: 12 bar


Active carbon filters MS12-LFX, MS series

Technical data

FESTO

Dimensions – Standard

Download CAD Data → www.festo.com/us/cad

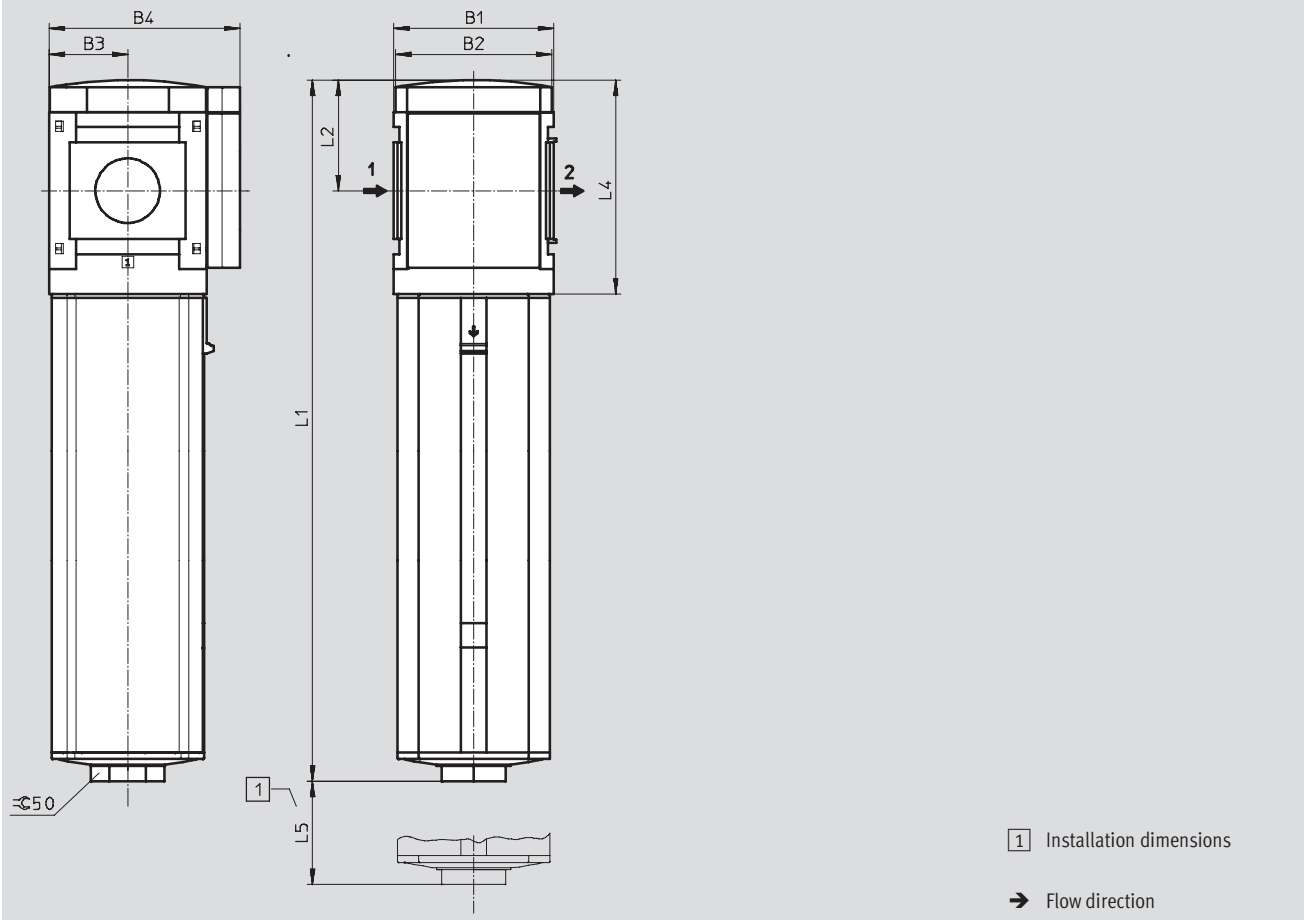

Type	B1	B2	B3	B4	L1	L2	L4	L5
MS12-LFX	124	122	61	148	543	86	166	350

Ordering data

Metal bowl

Size	Connection	Part No.	Type
MS12	G1 ... G2 ¹⁾	537155	MS12-LFX-G-U

1) Connecting plate must be ordered separately as an accessory → Internet: ms12-ag

Note: This product conforms to ISO 1179-1 and to ISO 228-1

Active carbon filters MS12-LFX, MS series

FESTO

Ordering data – Modular products

M Mandatory data						O Options	
Module No.	Series	Size	Function	Connection size	Bowl	Type of mounting	Alternative flow direction
535043	MS	12	LFX	AGF AGG AGH AGI G	U	WP	Z
Order example							
535043	MS	12	- LFX	- AGF	- U	- WP	- Z

Ordering table							
Grid dimension		[mm]	124	Condition s	Code		Enter code
M	Module No.	535043					
	Series	Standard			MS		MS
	Size	12			12		12
	Function	Active carbon filter			-LFX		-LFX
	Connection size	Connecting plate G1			-AGF		
		Connecting plate G1¼			-AGG		
		Connecting plate G1½			-AGH		
		Connecting plate G2			-AGI		
		Module without connecting thread, without connecting plate			-G		
	Bowl	Metal bowl			-U		-U
O	Type of mounting	Mounting bracket		1	-WP		
	Alternative flow direction	Flow direction from right to left			-Z		

1 WP Only with connecting plate AGF, AGG, AGH or AGI.

Transfer order code

535043 MS 12 - LFX - U - -

Filters MS-LF/LFM/LFX, MS series

Accessories

Filter cartridges, MS4/MS6 series



Ordering data				
Size	Filter cartridge	Grade of filtration [μm]	Part No.	Type
MS4	Micro-filter cartridge	0.01	162674	MS4/D-MINI-LFM-A
	Fine-filter cartridge	1	162677	MS4/D-MINI-LFM-B
	Filter cartridge (colour: blue)	5	534501	MS4-LFP-C
	Filter cartridge (colour: white)	40	534502	MS4-LFP-E
	Activated carbon filter cartridge	–	532912	MS4/D-MINI-LFX
MS6	Micro-filter cartridge	0.01	532909	MS6-LFM-A
	Fine-filter cartridge	1	532910	MS6-LFM-B
	Filter cartridge (colour: blue)	5	534499	MS6-LFP-C
	Filter cartridge (colour: white)	40	534500	MS6-LFP-E
	Activated carbon filter cartridge	–	532911	MS6-LFX
High flow rate HF				
MS6	Micro-filter cartridge	0.01	552093	MS6-LFM-A-HF
	Fine-filter cartridge	1	552092	MS6-LFM-B-HF
	Activated carbon filter cartridge	–	552094	MS6-LFX-HF
Range of application HP, suitable for sealing air and cleaning air				
MS6	Micro-filter cartridge	0,01	547922	MS6-LFM-AI 
	Fine-filter cartridge	1	547923	MS6-LFM-BI 
	Activated carbon filter cartridge	–	547925	MS6-LFX-AKI 

Filters MS-LF/LFM/LFX, MS series

Accessories

FESTO

Filter cartridges, MS9 series



Ordering data				
Size	Filter cartridge	Grade of filtration [μm]	Part No.	Type
MS9	Micro-filter cartridge	0.01	553036	MS9-LFM-A
	Fine-filter cartridge	1	553037	MS9-LFM-B
	Filter cartridge	5	570309	MS9-LFP-C
	Filter cartridge	40	570310	MS9-LFP-E
	Activated carbon filter cartridge	–	552946	MS9-LFX
High flow rate HF				
MS9	Micro-filter cartridge	0.01	552944	MS9-LFM-A-HF
	Fine-filter cartridge	1	552945	MS9-LFM-B-HF

Filters MS-LF/LFM/LFX, MS series

Accessories



Filter cartridges, MS12 series



Ordering data				
Size	Filter cartridge	Grade of filtration [µm]	Part No.	Type
MS12	Micro-filter cartridge	0.01	537146	MS12-LFM-A
	Fine-filter cartridge	1	537145	MS12-LFM-B
	Filter cartridge	5	537143	MS12-LFP-C
	Filter cartridge	40	537144	MS12-LFP-E
	Activated carbon filter cartridge	-	537147	MS12-LFX

Product Range and Company Overview

A Complete Suite of Automation Services

Our experienced engineers provide complete support at every stage of your development process, including: conceptualization, analysis, engineering, design, assembly, documentation, validation, and production.



Custom Automation Components
Complete custom engineered solutions



Custom Control Cabinets
Comprehensive engineering support and on-site services



Complete Systems
Shipment, stocking and storage services

The Broadest Range of Automation Components

With a comprehensive line of more than 30,000 automation components, Festo is capable of solving the most complex automation requirements.



Electromechanical
Electromechanical actuators, motors, controllers & drives



Pneumatics
Pneumatic linear and rotary actuators, valves, and air supply



PLCs and I/O Devices
PLC's, operator interfaces, sensors and I/O devices

Supporting Advanced Automation... As No One Else Can!

Festo is a leading global manufacturer of pneumatic and electromechanical systems, components and controls for industrial automation, with more than 12,000 employees in 56 national headquarters serving more than 180 countries. For more than 80 years, Festo has continuously elevated the state of manufacturing with innovations and optimized motion control solutions that deliver higher performing, more profitable automated manufacturing and processing equipment. Our dedication to the advancement of automation extends beyond technology to the education and development of current and future automation and robotics designers with simulation tools, teaching programs, and on-site services.

Quality Assurance, ISO 9001 and ISO 14001 Certifications

Festo Corporation is committed to supply all Festo products and services that will meet or exceed our customers' requirements in product quality, delivery, customer service and satisfaction.

To meet this commitment, we strive to ensure a consistent, integrated, and systematic approach to management that will meet or exceed the requirements of the ISO 9001 standard for Quality Management and the ISO 14001 standard for Environmental Management.



© Copyright 2008, Festo Corporation. While every effort is made to ensure that all dimensions and specifications are correct, Festo cannot guarantee that publications are completely free of any error, in particular typing or printing errors. Accordingly, Festo cannot be held responsible for the same. For Liability and Warranty conditions, refer to our "Terms and Conditions of Sale", available from your local Festo office. All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, electronic, mechanical, photocopying or otherwise, without the prior written permission of Festo. All technical data subject to change according to technical update.



Printed on recycled paper at New Horizon Graphic, Inc., FSC certified as an environmentally friendly printing plant.

Festo North America

Festo Regional Contact Center

5300 Explorer Drive
Mississauga, Ontario L4W 5G4
Canada

USA Customers:

For ordering assistance,

Call: 1.800.99.FESTO (1.800.993.3786)

Fax: 1.800.96.FESTO (1.800.963.3786)

Email: customer.service@us.festo.com

For technical support,

Call: 1.866.GO.FESTO (1.866.463.3786)

Fax: 1.800.96.FESTO (1.800.963.3786)

Email: product.support@us.festo.com

Canadian Customers:

Call: 1.877.GO.FESTO (1.877.463.3786)

Fax: 1.877.FX.FESTO (1.877.393.3786)

Email: festo.canada@ca.festo.com

USA Headquarters

Festo Corporation
395 Moreland Road
P.O. Box 18023
Hauppauge, NY 11788, USA
www.festo.com/us

USA Sales Offices

Appleton

North 922 Tower View Drive, Suite N
Greenville, WI 54942, USA

Boston

120 Presidential Way, Suite 330
Woburn, MA 01801, USA

Chicago

1441 East Business Center Drive
Mt. Prospect, IL 60056, USA

Dallas

1825 Lakeway Drive, Suite 600
Lewisville, TX 75057, USA

Detroit – Automotive Engineering Center

2601 Cambridge Court, Suite 320
Auburn Hills, MI 48326, USA

New York

395 Moreland Road
Hauppauge, NY 11788, USA

Silicon Valley

4935 Southfront Road, Suite F
Livermore, CA 94550, USA

United States



USA Headquarters, East: Festo Corp., 395 Moreland Road, Hauppauge, NY 11788

Phone: 1.631.435.0800; Fax: 1.631.435.8026;

Email: info@festo-usa.com

www.festo.com/us

Canada



Headquarters: Festo Inc., 5300 Explorer Drive, Mississauga, Ontario L4W 5G4

Phone: 1.905.624.9000; Fax: 1.905.624.9001;

Email: festo.canada@ca.festo.com

www.festo.ca

Mexico



Headquarters: Festo Pneumatic, S.A., Av. Ceylán 3, Col. Tequesquahuac,
54020 Tlalneapantla, Edo. de México

Phone: 011 52 [55] 53 21 66 00; Fax: 011 52 [55] 53 21 66 65;

Email: festo.mexico@mx.festo.com

www.festo.com/mx

Central USA

Festo Corporation
1441 East Business
Center Drive
Mt. Prospect, IL 60056, USA
Phone: 1.847.759.2600
Fax: 1.847.768.9480



Western USA

Festo Corporation
4935 Southfront Road,
Suite F
Livermore, CA 94550, USA
Phone: 1.925.371.1099
Fax: 1.925.245.1286



Festo Worldwide

Argentina Australia Austria Belarus Belgium Brazil Bulgaria Canada Chile China Colombia Croatia Czech Republic Denmark
Estonia Finland France Germany Great Britain Greece Hong Kong Hungary India Indonesia Iran Ireland Israel Italy Japan Latvia
Lithuania Malaysia Mexico Netherlands New Zealand Norway Peru Philippines Poland Romania Russia Serbia Singapore
Slovakia Slovenia South Africa South Korea Spain Sweden Switzerland Taiwan Thailand Turkey Ukraine United States Venezuela

www.festo.com