


## Valve terminals type 10 CPV, Compact Performance, NPT


**FESTO**

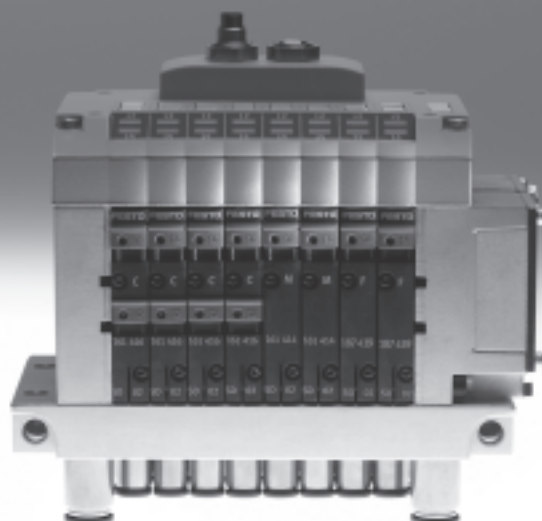

# Valve terminals type 10 CPV, Compact Performance, NPT

**FESTO**

Key features

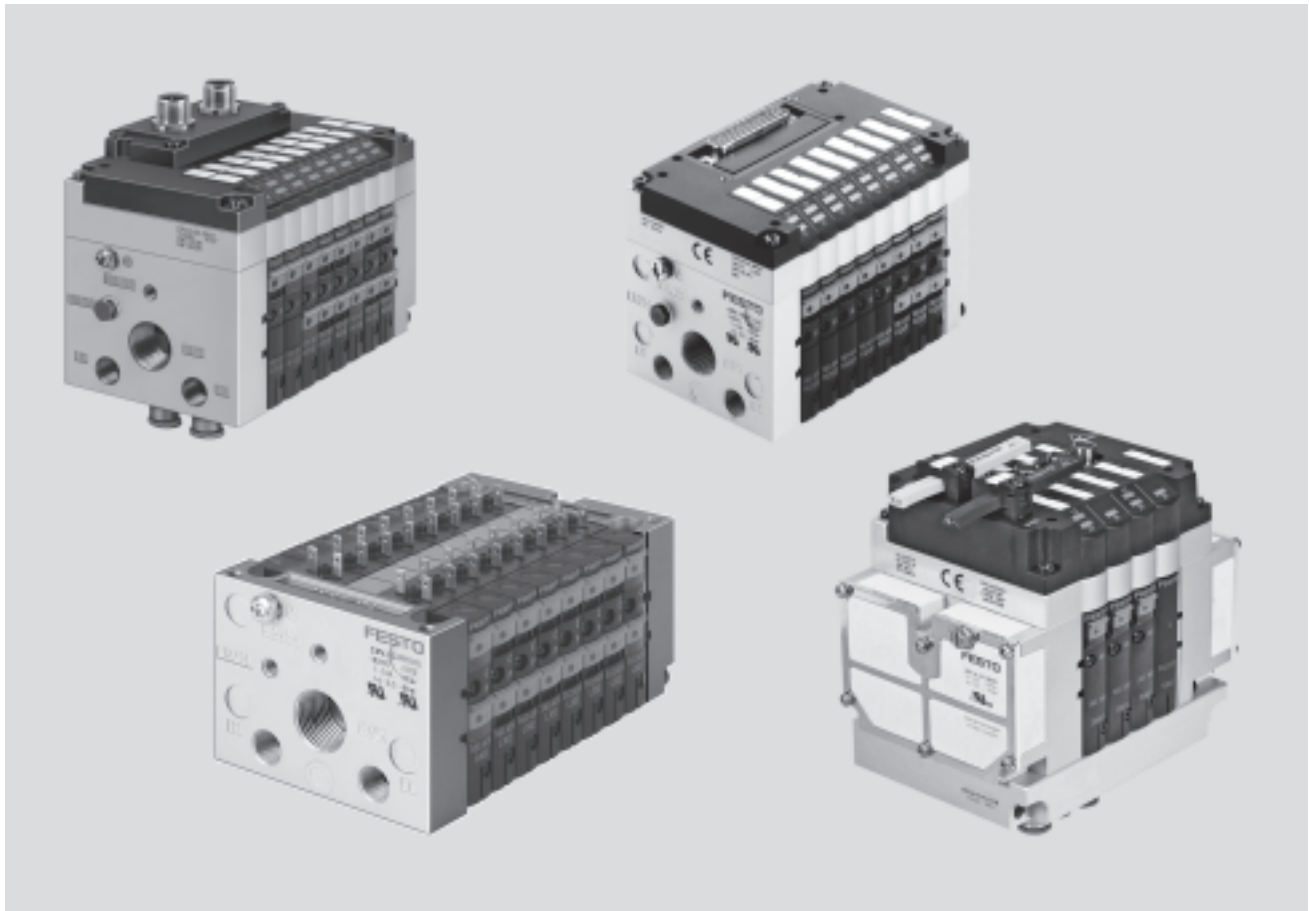

## Innovative

- Cubic design for exceptional performance and low weight
- Low installation and bus connection costs
- Ideal for decentralised machines and system structures, for example
  - in handling technology
  - in conveyor technology
  - in the packaging industry
  - in sorting systems
  - in upstream machine functions
- Integrated diagnostics, condition monitoring (Fieldbus Direct)
- A string extension for Fieldbus Direct of 8 ... 32 inputs and 8 ... 32 outputs is possible without any difficulty (version-dependent)

## Versatile

- Flexible and cost-effective connection of 2 to 8 valve slices
- Highly flexible thanks to:
  - various pneumatic functions (valve variants)
  - different pressure ranges
  - vacuum switches
  - integrated vacuum generation
  - relay plates with floating electrical outputs
- Separator plates for creating pressure zones
- Valves with integrated separation of ducts 1 and 11
- Blanking plates for future expansion

## Reliable

- LED displays
- Manual valve overrides
- Protection class to IP65
- Protection class IP65 also in conjunction with pneumatic multiple connector plate for control cabinet assembly
- CE mark
- ATEX certification (see Technical Data)

## Easy to mount

- Ready-to-install and tested unit
- Lower selection, ordering, installation and commissioning costs
- Secure mounting on wall or H-rail
- Pneumatic multiple connector plate
  - fast assembly without the need to replace the connected tubing
- Optimised assembly for control cabinets

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Key features

## CPV – The benefits at a glance

The CPV valve terminal is of unique design. It provides the flexible combination of pneumatic performance, electrical connection technologies and a wide range of mounting options. The pneumatic multiple connector plate supports space-saving installation in control cabinets. In many cases the valve terminal can be installed in the previously unused wall area of the control cabinet. There is no need to connect the valves in the control cabinet. All tube couplings can also be laid externally. Instead of

individual holes, the pneumatic multiple connector plate requires only one rectangular cutout.

The generously sized flow ducts and powerful flat plate silencers ensure high flow rates.

All valves are in the form of valve slices. They are optimised for flow performance and are also extremely compact. Two functions per valve slice (e.g. 2x 3/2-way valves) mean that twice the component density can be achieved. This saves space and reduces costs.

The cubic design permits exceptional performance yet a comparatively low weight. The benefits of this design are obvious when the valve terminal is used on a moving installation.

However, robustness must not be sacrificed in favour of compactness. The connecting thread and mounting attachments are metallic.

The manual override for the valves can be adapted for different operating situations. If, for example, a detenting manual override is required for setting-up mode, the manual override can be easily converted for that

application in a way that rules out operational errors.

The clear, large labelling system also contributes to the safe operation of the valve terminal.

A particular plus is the range of electrical connection technologies supported. All types of valve actuation are possible, from individual valve connections up to bus systems with versatile expansion options. The integration of electrical input and output modules permits cost-effective solutions within the different installation concepts.

## The design principle

The cubic design provides a clearly assigned function on each side. Thus, for example, the electrical connection is mounted on the top.

An optional inscription label holder can be placed on the front of the valve terminal.

The different combination options ensure the optimum solution for the task at hand.

- Compressed air supply connections on the left, right or underneath
- Pneumatic working ports and function blocks (vertical stacking) underneath

- Manual operation/identification on the front
- Electrical connection surface on the top
- Mounting surface at the back or the front via a pneumatic multiple connector plate

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Key features

## Main features

Simple electrical connections:


- Individual connection/ET200X/ET200pro
- Multi-pin plug
- AS-interface
- Installation system CP/CPI
- Fieldbus Direct

Operating voltage connection

Quick mounting:

- Directly using screws
- On a H-rail
- Via the pneumatic multiple connector plate

Robust metal thread or pre-assembled QS push-in fittings for imperial tube couplings

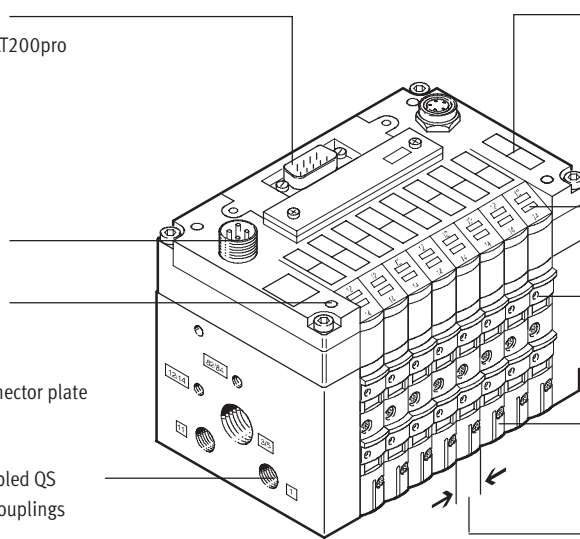

Inscription labels

Reduced downtimes:  
On-the-spot diagnostics via LEDs

Reliable operation:  
Manual override, non-detenting, detenting  
or blocked

Comprehensive range of valve functions,  
pressure zone creation, blanking plates

Width  
– 10 mm  
– 14 mm  
– 18 mm

## Equipment options

### Valve functions

- |                                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                                                                                                                                                                                                                                                                                                                                                              |                                                                                                                                                                                                                                                                                                                                                              |                                                                                                                                                                                                                                                       |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> <li>• 5/2-way valve, single solenoid</li> <li>• 5/2-way valve (with duct separation 1, 11), single solenoid</li> <li>• 5/2-way valve, single solenoid, fast-switching</li> <li>• 5/2-way valve, double solenoid</li> <li>• 5/2-way valve (with duct separation 1, 11), double-solenoid</li> <li>• 2x 3/2-way valve, normally closed</li> <li>• 2x 3/2-way valve (with duct separation 1, 11), normally closed</li> </ul> | <ul style="list-style-type: none"> <li>• 2x 3/2-way valve, normally open</li> <li>• 2x 3/2-way valve (with duct separation 1, 11), normally open</li> <li>• 2x 3/2-way valve, 1x normally open, 1x closed</li> <li>• 2x 3/2-way valve, (with duct separation 1, 11) 1x normally open, 1x closed</li> <li>• 2x 3/2-way valve, normally closed, integrated back pressure protection</li> </ul> | <ul style="list-style-type: none"> <li>• 5/3-way valve, mid-position closed</li> <li>• 2x 2/2-way valve, normally closed</li> <li>• 2x 2/2-way valve (with duct separation 1, 11), normally closed</li> <li>• 2x 2/2-way valve, 1x normally open, 1x closed</li> <li>• 2x 2/2-way valve, (with duct separation 1, 11) 1x normally open, 1x closed</li> </ul> | <ul style="list-style-type: none"> <li>• Vacuum generator</li> <li>• Vacuum generator and 2/2-way valve with ejector pulse</li> <li>• On some terminals a relay plate with two floating contacts can be chosen instead of a valve sub-base</li> </ul> |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## Special features

### Individual connection

- 2 ... 8 valve positions, max. 16 solenoid coils

### Multi-pin plug connection

- 4, 6 or 8 valve positions, max. 16 solenoid coils

### AS-interface

- 2, 4 or 8 valve positions, max. 8 solenoid coils
- 4 or 8 inputs for 4 or 8 valve positions

### Installation system CP/CPI

- 4, 6 or 8 valve positions, max. 16 solenoid coils
- With CP/CPI string extension, further valve terminals and I/O modules with CP/CPI function can be connected

### Fieldbus Direct

- 8 valve positions, max. 16 solenoid coils
- With CP/CPI string extension, further valve terminals and I/O modules with CP/CPI functions can be connected

### Electrical connection for ET200X/ET200pro

- 8 valve positions, max. 16 solenoid coils

### Note

A moulded seal is required for the valve terminal CPV10-ET200pro in order to achieve the IP protection class.

The moulded seal CPV10-...GE-8 or CPV14-...GE-8 must be ordered separately.


# Valve terminals type 10 CPV, Compact Performance, NPT

Key features

FESTO

## Electrical connections

### Individual connection

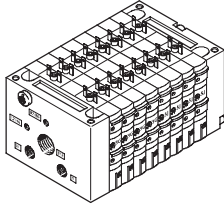

Connection is independent of the control technology used and is flexible thanks to pre-assembled cables. This ensures correct polarity during installation. The connector plug is equipped with an LED which indicates switching status, and an overvoltage


protective circuit. It also features a built-in current reduction circuit. Individual connection permits the selection of 2 to 16 solenoid coils (divided between two to eight valve slices, including in uneven stages).

An intrinsically safe version rounds off the range.

Further information

➔ Internet: [cpv10-ex-vi](#)

### Multi-pin plug connection


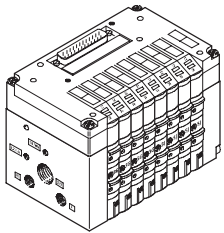


Control signals from the controller to the valve terminal are transmitted via a pre-assembled multi-wire cable, which substantially reduces

installation time. The current reduction circuit for the valves is also integrated in the multi-pin plug connection.

This valve terminal can be equipped with 4 to 16 solenoid coils (4, 6 or 8 valve slices).

### AS-interface connection

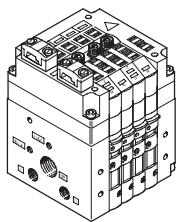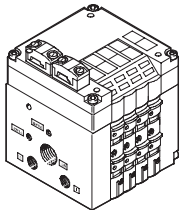

A special feature of the AS-interface is the simultaneous transmission of data and supply power via a two-wire cable. The encoded cable profile prevents connection with incorrect polarity. If the valves have to be disconnected from mains power in an emergency, they can also be supplied with electrical power via a separate connection. Two versions are available for valve terminals for A/B operation.

The valve terminal with AS-interface can be configured as follows:

- Without inputs, with two or four valve slices (max. 4 solenoid coils) and additional power supply
- With four inputs and four valve slices (max. 8 solenoid coils)
- With four or eight inputs and four or eight valve slices (max. 8 solenoid coils) and additional power supply

- With four or eight inputs and four or eight valve slices including vacant position or positions (max. 6 solenoid coils for A/B operation to SPEC.2.1) and additional power supply. In A/B operation to SPEC. 3.0 with profile 7.A.7 eight solenoid coils can be connected in contrast to the SPEC 2.1 version

Further information

➔ Internet: [as-interface](#)

#### Note

Valve terminals to SPEC.2.1 cannot be operated on a master to SPEC.3.0 with profile 7.A.7.


# Valve terminals type 10 CPV, Compact Performance, NPT

Key features

**FESTO**

## Electrical connections

Installation system CP/CPI

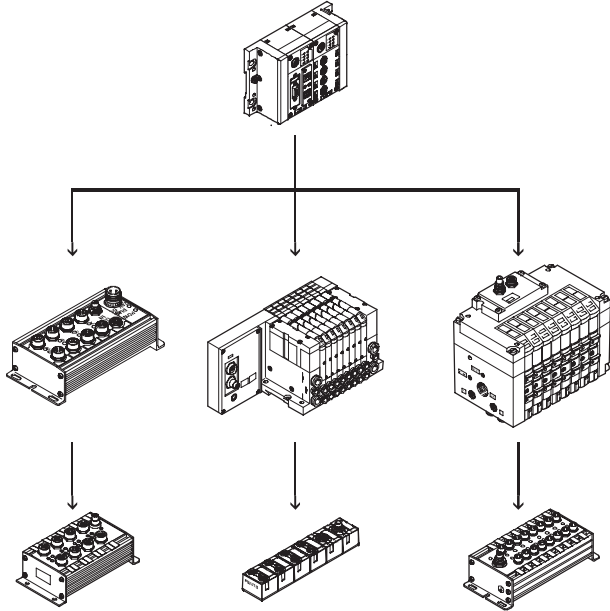

Valve terminals with fieldbus connection are intended for connection to higher-order fieldbus nodes or to control blocks. A fieldbus node or control block also enables the connection of decentralised input/output modules.

The following fieldbus protocols are supported:


- Festo fieldbus, ABB CS31, Moeller Suconet K
- Interbus
- Allen Bradley (1771 RIO)
- DeviceNet
- Profibus DP
- CANopen
- CC-Link

Four strings with up to 32 inputs and 32 outputs (version-dependent) can be connected to a fieldbus node or control block. The CPV valve terminal is treated like an output module with up to 8 outputs (4, 6 or 8 valve slices or 4 to 16 solenoid coils per terminal). The connecting cables transmit all required electrical signals (control signals, operating voltage for the internal electronics of the module and load voltage supply for connected valves).

Further information

➔ Internet: ctec

## Fieldbus Direct

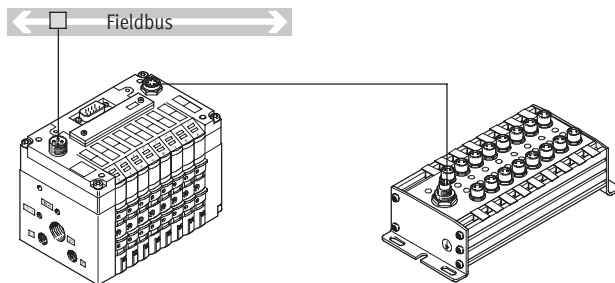


Fieldbus Direct is a system for the compact connection of a CPV, CPV-SC, CPA-SC or CDVI valve terminal to different fieldbus standards such as Profibus and DeviceNet.

The fieldbus node is directly integrated in the electrical interface of the valve terminal and therefore takes up only a minimal amount of space. The CPI string extension option allows the functions and components of the CPI system to be used.

The new high-performance CPI string extension offers up to 4 supplementary CPI modules, combined with CP or CPI-compatible valve terminals for extension purposes. An expansion of the system, Fieldbus Direct of 8 ... 32 inputs and 8 ... 32 outputs is possible without any difficulty.

## ET200X/ET200pro pneumatic interface for CPV10 and CPV14

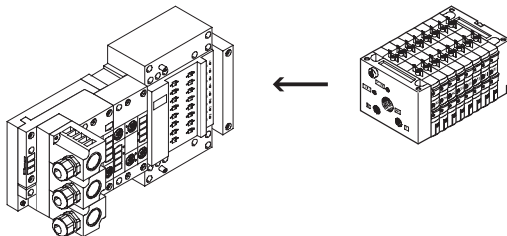

Adaptation of the CPV valve terminal to the input/output module ET200X/ET200pro from Siemens: The combination of the ET200X/ET200pro functional modules and the pneumatic functions of the CPV valve terminal provides a highly integrateable automation solution for systems using electrical and pneumatic drives with:

- 8 valve slices for up to 16 CPV valves
- Fast and secure contacting to IP65
- CPV10 and CPV14 valve terminals
- Not permitted for CPV10-EX-VI
- High degree of protection IP65/IP67
- Modular design

## Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Selection and development

### Valve terminal configurator

Online via: → [www.festo.com/us/engineering](http://www.festo.com/us/engineering)

The appropriate valve terminal can be chosen quickly and easily using the online catalogue. This includes an easy-to-use valve terminal configurator, which makes it much easier to find the right product.

The valve terminals are fully assembled according to your order specification and are individually tested. This reduces assembly and installation time to a minimum.

You order a valve terminal type 10 using the order code.


Ordering system for type 10  
→ Internet: type 10

### 2D/3D CAD data

Online via: → [www.festo.com/us/engineering](http://www.festo.com/us/engineering)

You can request the CAD data for a valve terminal you have configured. To do so, perform the product search as described above. Go to the shopping basket and click on the CAD

icon (compass). On the next page you can generate a 3D preview or request another data format of your choice by e-mail.

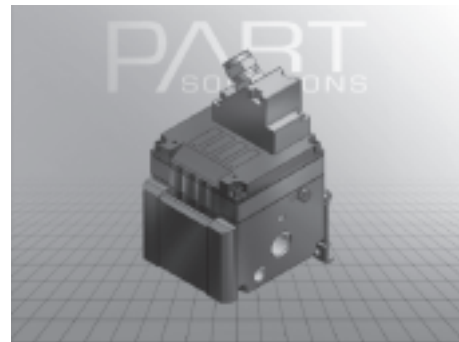


# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Peripherals overview

## Overview – CPV valve terminal

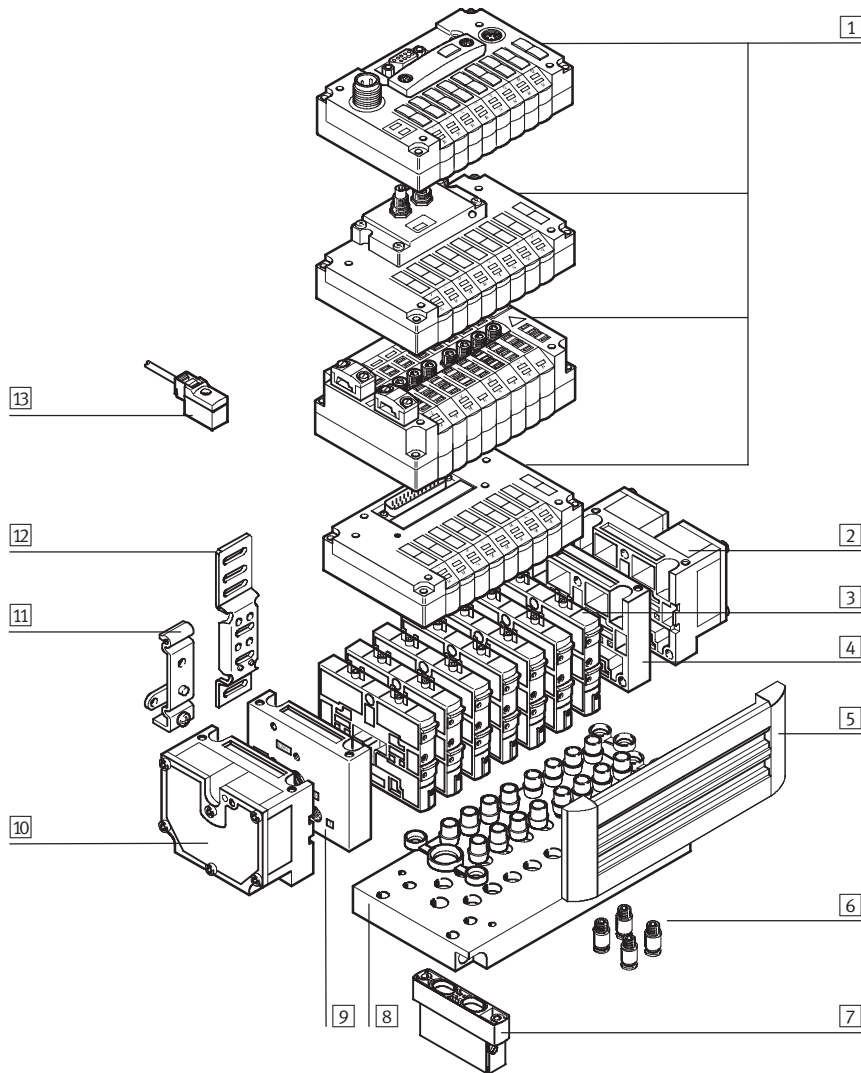

- |                                                                                                                            |                                                                                                         |                                                                                                        |                                                     |
|----------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|-----------------------------------------------------|
| 1 Basic electrical unit (Fieldbus Direct, CP/CPI installation system, AS-interface, multi-pin plug, individual connection) | 3 Comprehensive range of valve functions                                                                | 7 Function block (vertical stacking)                                                                   | 10 Left-hand end plate with flat plate silencer     |
| 2 Right-hand end plate with flat plate silencer                                                                            | 4 Right-hand end plate (threaded connection not in conjunction with pneumatic multiple connector plate) | 8 Pneumatic multiple connector plate                                                                   | 11 H-rail mounting                                  |
|                                                                                                                            | 5 Holder for inscription labels                                                                         | 9 Left-hand end plate (threaded connection not in conjunction with pneumatic multiple connector plate) | 12 Wall mounting                                    |
|                                                                                                                            | 6 QS push-in fittings for imperial tube couplings                                                       |                                                                                                        | 13 Plug socket with cable for individual connection |

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Key features – Pneumatic components

## Valves

CPV valves are valves with integrated sub-base, i.e. in addition to the valve function they contain all of the pneumatic ducts for supply, exhaust and the working ports. The supply ducts are a central component of the

valve slices and allow a direct flow of air through the valve slices. This helps achieve maximum flow rates. All valves have a pneumatic pilot control for optimising performance. The valve function is

based on a piston spool system with a patented sealing principle that guarantees its suitability for a wide range of applications as well as a long service life. The pneumatic components and





functions are always identical for all actuator types. Most functions are also available in the various valve sizes (grid dimensions). Restrictions should be noted where applicable.

| Valve function |                |      |    |    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|----------------|----------------|------|----|----|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Code           | Circuit symbol | Size |    |    | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|                |                | 10   | 14 | 18 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| M, MK          |                | ■    | ■  | ■  | 5/2-way valve, single solenoid <ul style="list-style-type: none"><li>• Pneumatic spring return</li><li>• Piston spool valve</li><li>• With duct separation 1, 11 for valve MK</li><li>• Size 18 only available for valve M</li></ul>                                                                                                                                                                                                                                                                                              |
| F              |                | ■    | –  | –  | 5/2-way valve, single solenoid <ul style="list-style-type: none"><li>• Pneumatic spring return</li><li>• Piston spool valve</li><li>• Fast switching</li></ul>                                                                                                                                                                                                                                                                                                                                                                    |
| J, JK          |                | ■    | ■  | ■  | 5/2-way valve, double solenoid <ul style="list-style-type: none"><li>• Piston spool valve</li><li>• With duct separation 1, 11 for valve JK</li><li>• Size 18 only available for valve J</li></ul>                                                                                                                                                                                                                                                                                                                                |
| C, CK          |                | ■    | ■  | ■  | 2x 3/2-way valve, single solenoid <ul style="list-style-type: none"><li>• Normally closed</li><li>• Pneumatic spring return</li><li>• Piston spool valve</li><li>• With duct separation 1, 11 for valve CK</li><li>• Size 18 only available for valve C</li></ul>                                                                                                                                                                                                                                                                 |
| CY             |                | ■    | –  | –  | 2x 3/2-way valve, single solenoid <ul style="list-style-type: none"><li>• Normally closed</li><li>• Pneumatic spring return</li><li>• Integrated back pressure protection</li><li>• Piston spool valve</li><li>• Not suitable for vacuum</li></ul> <div><b>Note</b><br/>If it is necessary to ensure that the back pressure flaps are closed securely in the event of a sudden drop in operating pressure or if the operating pressure is switched off, the valve terminal must be operated with external pilot air supply.</div> |

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Key features – Pneumatic components
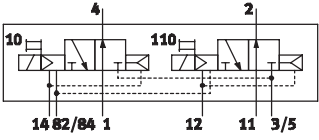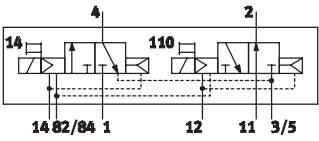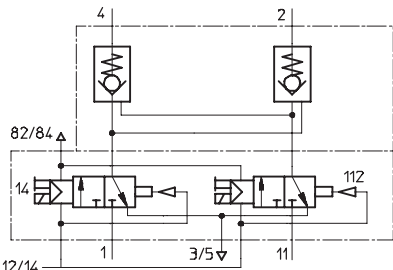
| Valve function |                                                                                     |      |    |    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|----------------|-------------------------------------------------------------------------------------|------|----|----|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Code           | Circuit symbol                                                                      | Size |    |    | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|                |                                                                                     | 10   | 14 | 18 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| N, NK          |    | ■    | ■  | ■  | <p>2x 3/2-way valve, single solenoid</p> <ul style="list-style-type: none"><li>• Normally open</li><li>• Pneumatic spring return</li><li>• Piston spool valve</li><li>• With duct separation 1, 11 for valve NK</li><li>• Size 18 only available for valve N</li></ul> <p>The function of a 5/3-way valve with mid-position pressurised can be implemented with these valves with initial position open</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| H, HK          |    | ■    | ■  | ■  | <p>2x 3/2-way valve, single solenoid</p> <ul style="list-style-type: none"><li>• Normal position<ul style="list-style-type: none"><li>– 1x open (pilot control 12)</li><li>– 1x closed (pilot control 14)</li></ul></li><li>• Pneumatic spring return</li><li>• Piston spool valve</li><li>• With duct separation 1, 11 for valve HK</li><li>• Size 18 only available for valve H</li></ul> <p>For optimised cylinder movement. Corresponds to valve function M with simultaneous actuation of both solenoid coils (5/2-way, single solenoid). Since the piston area on each side can be pressurised or exhausted separately, it means that the cylinder can move faster.</p>                                                                                                                                                                                                                                                                                                                                  |
| G              |  | –    | –  | ■  | <p>5/3-way valve, mid-position closed</p> <ul style="list-style-type: none"><li>• Mechanical spring return</li><li>• Piston spool valve</li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|                |  | ■    | ■  | –  | <p>5/3G<sup>1)</sup>, function, mid-position closed</p> <p>For size 10 and 14</p> <p>The valve function “mid-position closed” is created using a 2x 3/2-way valve, normally closed (code C).</p> <p>The valve kit CPV10-BS-5/3G-M7 or CPV14-BS-5/3G-1/8 (incorporating a double piloted non-return valve function) is used for this. This valve kit is intended for applications with one working pressure level per valve slice, i.e. it should not be used in dual-pressure applications (where the pressure levels at port 1 and 11 are different).</p> <p>If other valve slices are to be used in dual-pressure mode, then the valve slice equipped with the 5/3G valve kit must be separated from compressed air duct 1 and 11 by means of a separator plate (code T).</p> <p>Not in first or last valve position with pneumatic multiple connector plate P and M. Not used with pneumatic multiple connector plate GQC and GQD.</p> <ul style="list-style-type: none"><li>• Piston spool valve</li></ul> |

1) Cannot be assembled in conjunction with the control cabinet version of the pneumatic multiple connector plate CPV10-VI-P...-C or CPV10-VI-P...-D.






## Note

A filter must be installed upstream of valves operated in vacuum mode. This prevents any foreign matter in the intake air getting into the valve (e.g. when operating a suction cup).

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Key features – Pneumatic components
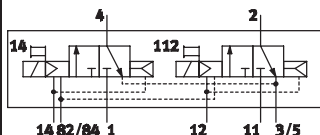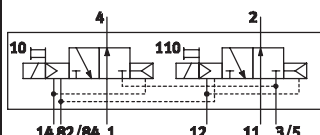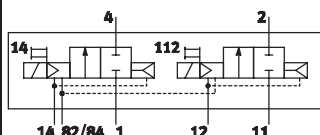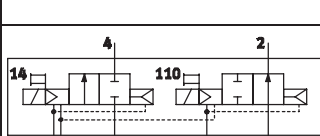
| Valve function |                                                                                                                              |      |    |    |                                                                                                                                                                                                                                                                                                                                                                                           |
|----------------|------------------------------------------------------------------------------------------------------------------------------|------|----|----|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Code           | Circuit symbol                                                                                                               | Size |    |    | Description                                                                                                                                                                                                                                                                                                                                                                               |
|                |                                                                                                                              | 10   | 14 | 18 |                                                                                                                                                                                                                                                                                                                                                                                           |
|                |                                             | ■    | ■  | ■  | <p>5/3E function, mid-position exhausted</p> <p>The valve function “mid-position exhausted” is created using a 2x 3/2-way valve, normally closed (code C, CK).</p> <ul style="list-style-type: none"><li>• Pneumatic spring return</li><li>• Piston spool valve</li></ul>                                                                                                                 |
|                |                                             | ■    | ■  | ■  | <p>5/3B function, mid-position pressurised</p> <p>The valve function “mid-position pressurised” is created using a 2x 3/2-way valve, normally open (code N, NK).</p> <ul style="list-style-type: none"><li>• Pneumatic spring return</li><li>• Piston spool valve</li></ul>                                                                                                               |
| D, DK          |                                             | ■    | ■  | ■  | <p>2x 2/2-way valve, single solenoid</p> <ul style="list-style-type: none"><li>• Normally closed</li><li>• Pneumatic spring return</li><li>• Piston spool valve</li><li>• With duct separation 1, 11 for valve DK</li><li>• Size 18 only available for valve D</li></ul>                                                                                                                  |
| I, IK          |                                            | ■    | ■  | ■  | <p>2x 2/2-way valve, single solenoid</p> <ul style="list-style-type: none"><li>• Normal position<ul style="list-style-type: none"><li>– 1x open (control side 12)</li><li>– 1x closed (control side 14)</li></ul></li><li>• Pneumatic spring return</li><li>• Piston spool valve</li><li>• With duct separation 1, 11 for valve IK</li><li>• Size 18 only available for valve I</li></ul> |
| R              | <p>Relay plate (2 floating contacts)</p>  | ■    | ■  | –  | <p>A relay plate (code R) with (normally open contacts) can also be used instead of a valve slice. Each relay plate has two relays for actuating two electrically isolated outputs. Load capacity: 24 V DC, 1 A.</p> <ul style="list-style-type: none"><li>• Connecting cable KRP-1-24-...</li><li>• An inscription label holder cannot be used</li></ul>                                 |

# Valve terminals type 10 CPV, Compact Performance, NPT



Key features – Pneumatic components

| Additional pneumatic functions |                                                         |      |    |    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------------------------------|---------------------------------------------------------|------|----|----|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Code                           | Circuit symbol                                          | Size |    |    | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|                                |                                                         | 10   | 14 | 18 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| A                              | <p>Vacuum generator</p>                                 | ■    | ■  | ■  | <p>Vacuum generation according to the ejector principle.</p> <p>Vacuum slices of different widths for different suction capacities.</p> <p>Combinations with a number of vacuum slices and/or directional control function slices are possible on the same valve terminal.</p> <p>In principle, an open connection is formed between the exhaust duct 3/5 and the working line 4. When the nozzle is not switched, the resulting back pressure in the exhaust duct flows back into the working line. When the nozzle is switched, the vacuum can be greatly reduced by the resulting back pressure.</p>            |
| E                              | <p>Vacuum generator with ejector pulse</p>              | ■    | ■  | ■  | <p>This effect is improved through optimised exhausting. It does not occur where there is only one vacuum generator per valve terminal and where separator plates (code S) are used for separation.</p> <p>Vacuum generator on pilot side 14</p> <ul style="list-style-type: none"> <li>• Reset via mechanical spring and pneumatic spring</li> <li>• Ejector pulse on pilot side 12 (code E)</li> <li>• Note air supply and exhaust when using more than two vacuum generators</li> </ul>                                                                                                                         |
| P                              | <p>Input (valve side)</p> <p>Output (cylinder side)</p> | ■    | ■  | –  | <p>2x one-way flow control valve, supply air flow control</p> <p>Module (actuator) for direct flange mounting on the CPV valves.</p> <p>Also suitable for pneumatic multiple connector plates.</p> <p>Different valve actuators cannot be combined.</p> <p>Not with valve function G</p> <ul style="list-style-type: none"> <li>• Not in first or last valve position with accessories M, P, V (pneumatic multiple connector plate)</li> <li>• Not used with accessories GQC and GQD (pneumatic multiple connector plate)</li> </ul>                                                                               |
| Q                              | <p>Input (valve side)</p> <p>Output (cylinder side)</p> | ■    | ■  | –  | <p>2x one-way flow control valve, exhaust air flow control</p> <p>Module (actuator) for direct flange mounting on the CPV valves.</p> <p>Also suitable for pneumatic multiple connector plates.</p> <p>Different valve actuators cannot be combined.</p> <ul style="list-style-type: none"> <li>• Not with valve function G</li> <li>• Not in first or last valve position with accessories M, P, V (pneumatic multiple connector plate)</li> <li>• Not used with accessories GQC and GQD (pneumatic multiple connector plate)</li> </ul>                                                                          |
| V                              | <p>Input (valve side)</p> <p>Output (cylinder side)</p> | ■    | ■  | –  | <p>One-way flow control valve for vacuum</p> <p>The module CPV-...-BS-GRZ-V-... has a built-in non-return valve as well as a flow control function for adjusting the ejector pulse. The non-return valve serves to temporarily maintain the vacuum, even if the vacuum generator is switched off.</p> <p>The module is suitable for vacuum generators (code A, E).</p> <ul style="list-style-type: none"> <li>• Not in first or last valve position with accessories M, P, V (pneumatic multiple connector plate)</li> <li>• Not used with accessories GQC and GQD (pneumatic multiple connector plate)</li> </ul> |

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Key features – Pneumatic components

## Creating pressure zones

Different pressures at port 1 and 11 result in two pressure levels per valve. This means, for example, that a cylinder drive can be advanced using high pressure and retracted using low pressure to save energy.

The maximum number of pressure zones possible is determined by the combination of the following components:

- Use of a separator plate
- End plate pair type
- Valve slice type
- Number of valve slices

With the aid of separator plates or valves with integrated duct separation you can divide the CPV valve terminal into 2 to 4 pressure zones.

| Separator plates/valves with integrated duct separation |                                                                                                  |      |    |    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------------------------------|--------------------------------------------------------------------------------------------------|------|----|----|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Code                                                    | Graphical symbol                                                                                 | Size |    |    | Note                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|                                                         |                                                                                                  | 10   | 14 | 18 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| T                                                       | Separator plate for creating pressure zones, supply duct 1 and 11 separated<br><br>              | ■    | ■  | ■  | A separator plate (code T) is used to separate the duct for the air supply (port 1 and 11) to provide two pressure zones. <ul style="list-style-type: none"> <li>• Not in first or last valve position</li> <li>• Not with compressed air supply A, B, C, D, U, V, W, X</li> </ul>                                                                                                                                                                                   |
| S                                                       | Separator plate for creating pressure zones, supply duct 1, 11 and exhaust 3/5 separated<br><br> | ■    | ■  | ■  | The separator plate (code S) separates the exhaust duct 3/5 as well as the supply duct 1 and 11. This plate should be used if one of the pressure zones is under vacuum to avoid any effects on the vacuum or to prevent back pressure on neighbouring valve functions. <ul style="list-style-type: none"> <li>• Not in first or last valve position</li> <li>• Not with compressed air supply A, B, C, D, U, V, W, X (single-side compressed air supply)</li> </ul> |
| L                                                       | Blanking plate (vacant position)<br><br>                                                         | ■    | ■  | ■  | A vacant position is created using a blanking plate (code L, where a valve can be positioned at a later date).                                                                                                                                                                                                                                                                                                                                                       |
| MK, JK, CK, NK, DK, IK                                  | Valve with integrated separation of ducts 1 and 11<br><br>                                       | ■    | ■  | –  | With these valves the ducts for the air supply (connections 1 and 11) are closed to the right-hand side of the valve with a cast membrane. The advantage of using this instead of a separator plate is that no valve location is occupied by a separator plate.                                                                                                                                                                                                      |

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Key features – Pneumatic components

## Examples: Compressed air supply


External pilot air supply, flat plate silencer at both ends

Compressed air supply via pneumatic multiple connector plate

Code H

The diagram opposite shows an example of the configuration and connection of the compressed air supply with external pilot air supply. Port 12/14 on the pneumatic multiple connector plate is equipped with a fitting for this purpose. Ports 3/5 and 82/84 are vented via the flat plate silencers.

One separating seal each can be used optionally to create pressure zones.

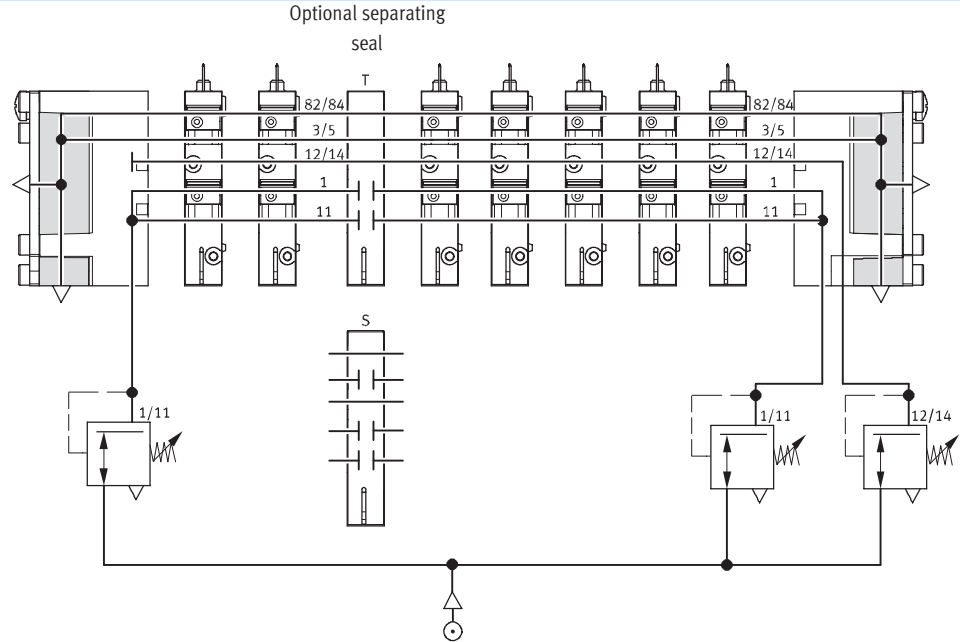


## Internal pilot air supply, ducted exhaust air or screw-in silencer

Compressed air supply via end plates:

Code Z

The diagram opposite shows an example of the configuration and connection of the compressed air supply with internal pilot air supply. The pilot air is branched at the right-hand end plate of port 1 or 11. Ports 3/5 and 82/84 are vented via the screw-in silencer.

One separating seal each can be used optionally to create pressure zones.

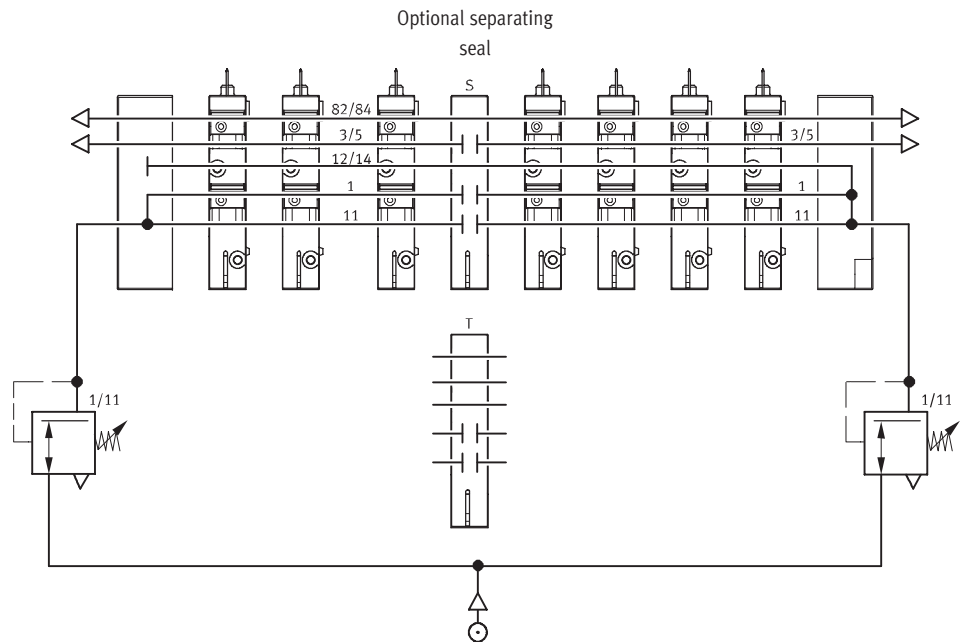

# Valve terminals type 10 CPV, Compact Performance, NPT


Key features – Pneumatic components

FESTO

## Example: Creating pressure zones


CPV with separator plate T

With the CPV valve terminals up to 4 pressure zones can be implemented. The diagram shows an example of the configuration and connection of four pressure zones using separator plate code T – with external pilot air supply.

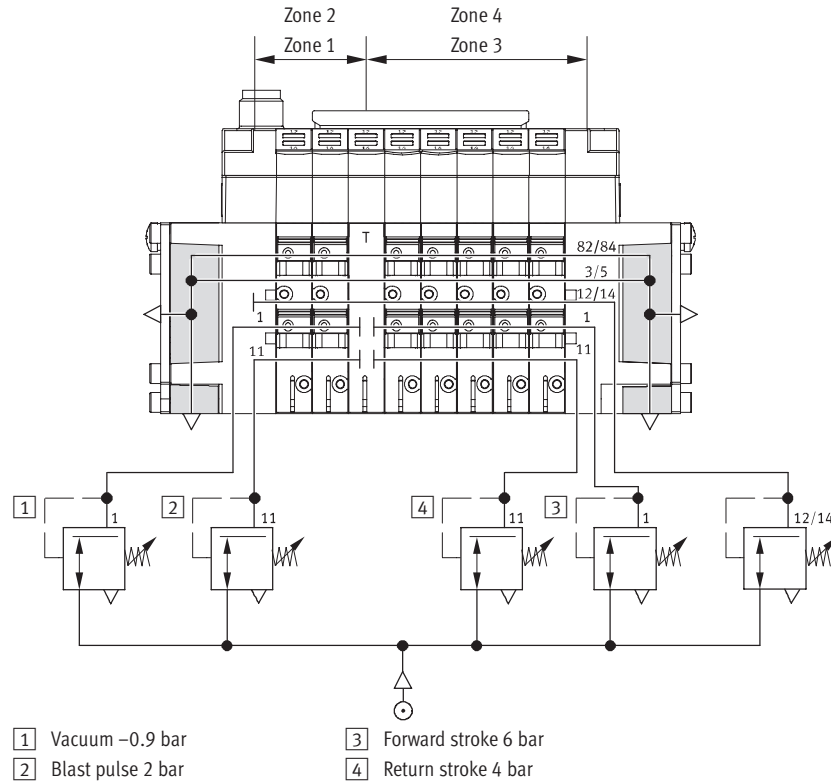

## CPV with integrated duct separation 1 and 11 by valves ...K

With the CPV valve terminals up to four pressure zones can be implemented. The diagram shows as an example the structure and connection of four pressure zones with external pilot air supply and the use of a valve ...K with integrated duct separation 1 and 11.

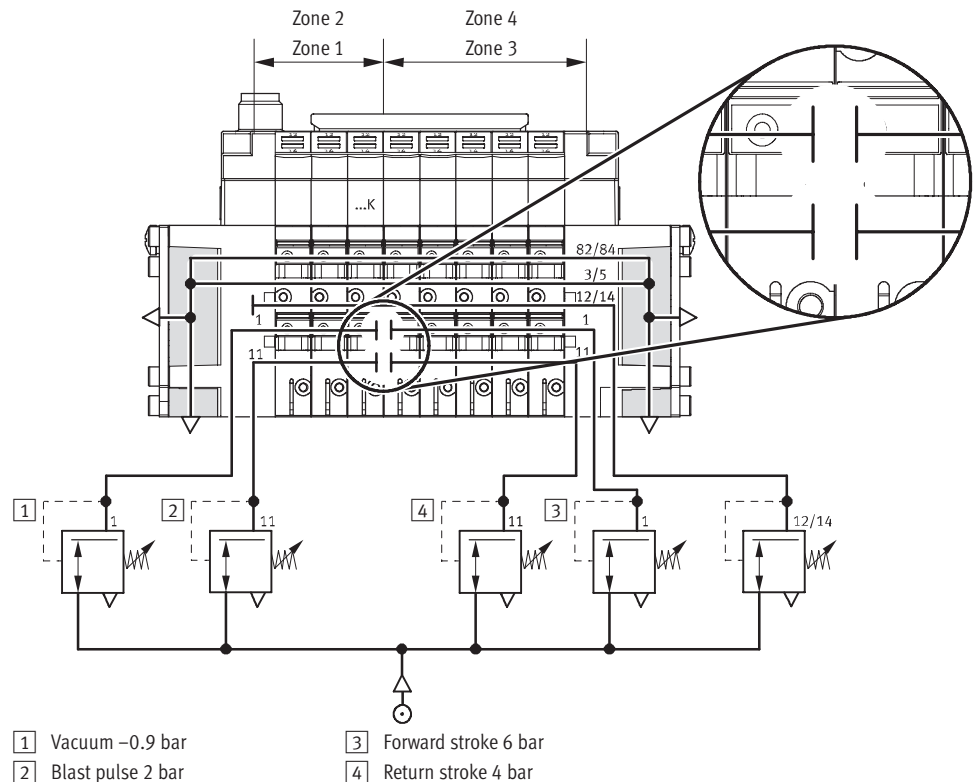

# Valve terminals type 10 CPV, Compact Performance, NPT

Key features – Pneumatic components

FESTO

## Compressed air supply and venting

The two end plates which supply the valve slices with pressure and exhaust are a characteristic feature of a CPV valve terminal:

- Large duct cross sections ensure maximum flow rates even when multiple valves are switched in parallel

- Large flat plate silencers in the end plates
- Internal/external pilot air supply

Each individual valve is supplied with compressed air from two individual ducts (supply ports 1/11) and

exhausted via a large, integrated exhaust duct (exhaust 3/5). This design permits unique flexibility and functionality. It is the easiest way of realising a number of pressure zones per terminal or combinations of vacuum applications.

The valve terminal is supplied via end plates, either on the left, on the right, or on both sides. End plate combinations other than those listed are possible (on request).

## Pilot air supply

### Internal pilot air supply

Internal pilot air supply can be selected if the supply pressure at pneumatic connection 1 is 3 ... 8 bar. The branch is located in the left or right-hand end plate with internal pilot air supply. There is no port 12/14.


### External pilot air supply

External pilot air supply is required if the supply pressure at pneumatic connection 1 is less than 3 bar or greater than 8 bar. In this case, pressure of 3 ... 8 bar is applied at port 12/14. If a gradual pressure build-up in the

system using a pressurised on-off valve is required, external pilot air supply should be selected, as the control pressure applied during switch-on is already very high. External pilot air supply is also

required if it is necessary to ensure that the back pressure flaps (valve order code CY) are closed securely in the event of a sudden drop in operating pressure or if the operating pressure is switched off.

## End plates

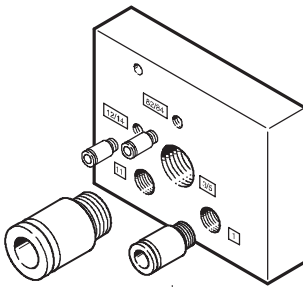







Example of an end plate:  
The figure shows a left-hand end plate with external pilot air supply. The exhaust connections 3/5 and 82/84 can be fitted with threaded connections or silencers. An end plate for internal pilot air supply does not

have ports 12/14 and 11. Port 82/84 is always present and should be provided with a silencer. The port 12/14 is connected internally with port 1 on an end plate for internal pilot air supply.

# Valve terminals type 10 CPV, Compact Performance, NPT

Key features – Pneumatic components



**FESTO**

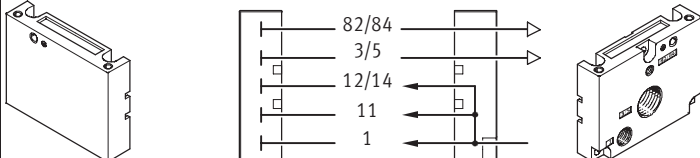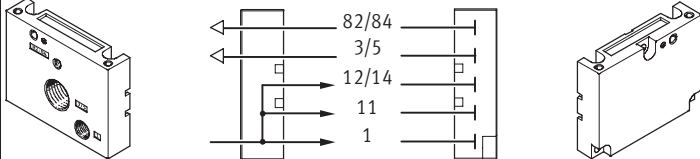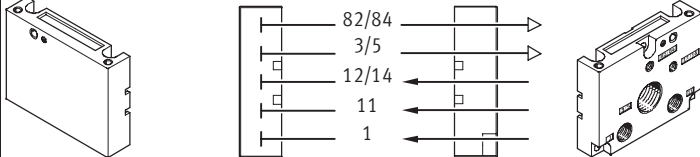
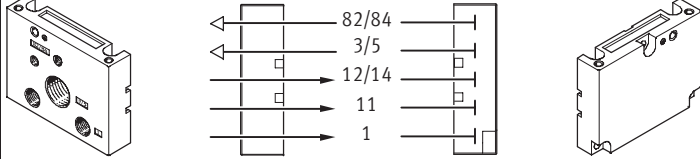
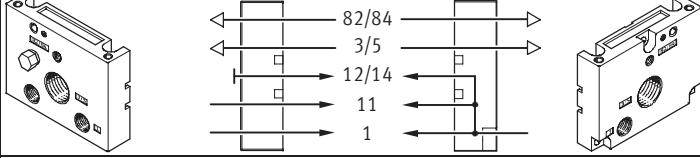
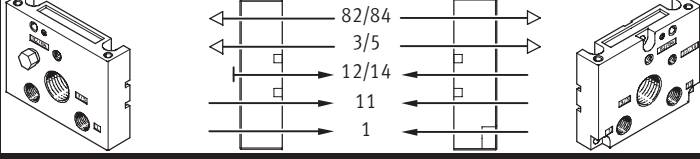
| End plate combination for compressed air supply via end plate |                                                                                                                  |      |    |    |                                                                                                                                                                                                            |  |
|---------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|------|----|----|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| Code                                                          | Graphical symbol<br>Type of pilot air supply (internal/external)                                                 | Size |    |    | Note                                                                                                                                                                                                       |  |
|                                                               |                                                                                                                  | 10   | 14 | 18 |                                                                                                                                                                                                            |  |
| U                                                             | Internal pilot air supply<br>   | ■    | ■  | ■  | <ul style="list-style-type: none"> <li>Ports in right-hand end plate only</li> <li>No pressure zone separation permissible</li> <li>Not suitable for vacuum</li> </ul>                                     |  |
| V                                                             | Internal pilot air supply<br>   | ■    | ■  | ■  | <ul style="list-style-type: none"> <li>Ports in left-hand end plate only</li> <li>No pressure zone separation permissible</li> <li>Not suitable for vacuum</li> </ul>                                      |  |
| W                                                             | External pilot air supply<br>  | ■    | ■  | ■  | <ul style="list-style-type: none"> <li>Ports in right-hand end plate only</li> <li>No pressure zone separation permissible</li> <li>Suitable for vacuum</li> </ul>                                         |  |
| X                                                             | External pilot air supply<br> | ■    | ■  | ■  | <ul style="list-style-type: none"> <li>Ports in left-hand end plate only</li> <li>No pressure zone separation permissible</li> <li>Suitable for vacuum</li> </ul>                                          |  |
| Y                                                             | Internal pilot air supply<br> | ■    | ■  | ■  | <ul style="list-style-type: none"> <li>Ports in left-hand and right-hand end plate</li> <li>Maximum three pressure zones</li> <li>Valves to the left of the separator plate suitable for vacuum</li> </ul> |  |
| Z                                                             | External pilot air supply<br> | ■    | ■  | ■  | <ul style="list-style-type: none"> <li>Ports in left-hand and right-hand end plate</li> <li>Maximum four pressure zones</li> <li>Suitable for vacuum</li> </ul>                                            |  |

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Key features – Pneumatic components





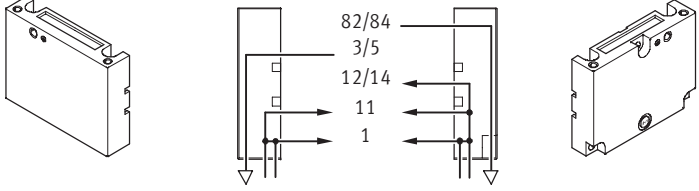
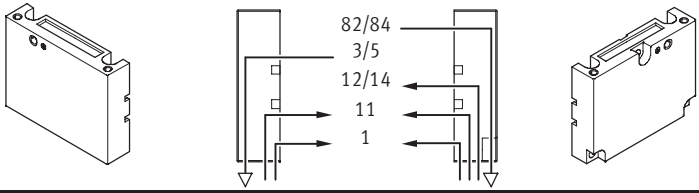
| End plate combination for compressed air supply via pneumatic multiple connector plate |                                                                                                                |      |    |    |                                                                                                                                                                                                                                                                                                                                                                                |
|----------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|------|----|----|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Code                                                                                   | Graphical symbol<br>Type of pilot air supply (internal/external)                                               | Size |    |    | Note                                                                                                                                                                                                                                                                                                                                                                           |
|                                                                                        |                                                                                                                | 10   | 14 | 18 |                                                                                                                                                                                                                                                                                                                                                                                |
| Y                                                                                      | Internal pilot air supply<br> | ■    | ■  | ■  | <ul style="list-style-type: none"> <li>Ports on pneumatic multiple connector plate</li> <li>Pressure zone separation only permissible with separator plate (code T)</li> <li>Maximum two pressure zones</li> <li>Valves to the left of the separator plate suitable for vacuum</li> <li>Only for accessories M, P, V, GQC, GQD (pneumatic multiple connector plate)</li> </ul> |
| Z                                                                                      | External pilot air supply<br> | ■    | ■  | ■  | <ul style="list-style-type: none"> <li>Ports on pneumatic multiple connector plate</li> <li>Pressure zone separation only permissible with separator plate (code T)</li> <li>Maximum three pressure zones</li> <li>Suitable for vacuum</li> <li>Only for accessories M, P, V, GQC, GQD (pneumatic multiple connector plate)</li> </ul>                                         |
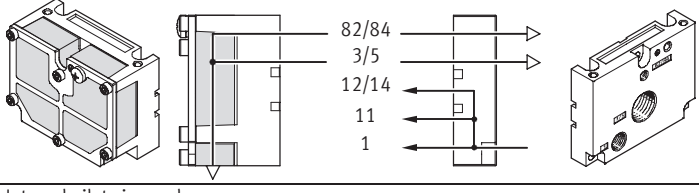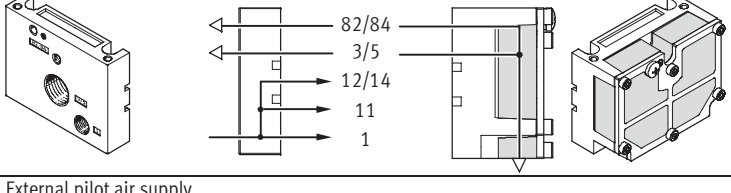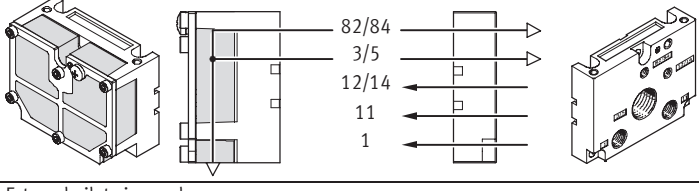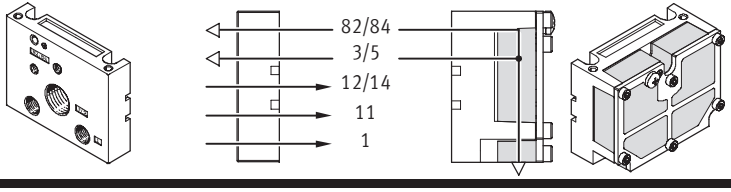
| End plate combination for compressed air supply via end plates with flat plate silencer |                                                                                                                  |      |    |    |                                                                                                                                                                   |
|-----------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|------|----|----|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Code                                                                                    | Graphical symbol<br>Type of pilot air supply (internal/external)                                                 | Size |    |    | Note                                                                                                                                                              |
|                                                                                         |                                                                                                                  | 10   | 14 | 18 |                                                                                                                                                                   |
| A                                                                                       | Internal pilot air supply<br> | ■    | ■  | ■  | <ul style="list-style-type: none"> <li>Ports in right-hand end plate</li> <li>No pressure zone separation permissible</li> <li>Not suitable for vacuum</li> </ul> |
| B                                                                                       | Internal pilot air supply<br> | ■    | ■  | ■  | <ul style="list-style-type: none"> <li>Ports in left-hand end plate</li> <li>No pressure zone separation permissible</li> <li>Not suitable for vacuum</li> </ul>  |
| C                                                                                       | External pilot air supply<br> | ■    | ■  | ■  | <ul style="list-style-type: none"> <li>Ports in right-hand end plate</li> <li>No pressure zone separation permissible</li> <li>Suitable for vacuum</li> </ul>     |
| D                                                                                       | External pilot air supply<br> | ■    | ■  | ■  | <ul style="list-style-type: none"> <li>Ports in left-hand end plate</li> <li>No pressure zone separation permissible</li> <li>Suitable for vacuum</li> </ul>      |

# Valve terminals type 10 CPV, Compact Performance, NPT

Key features – Pneumatic components

**FESTO**

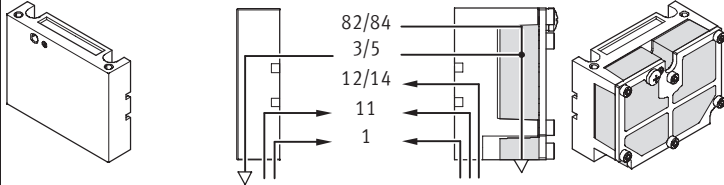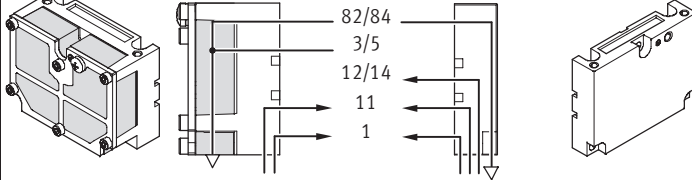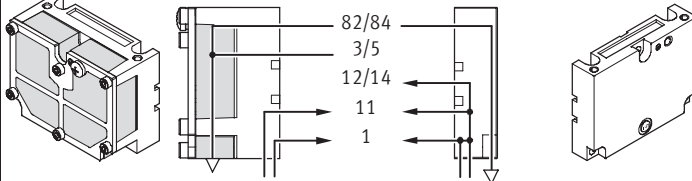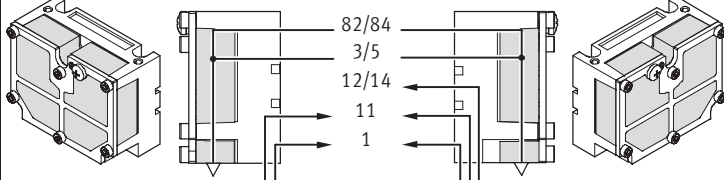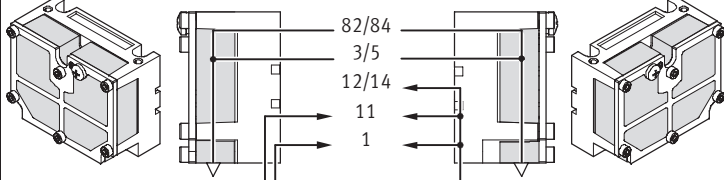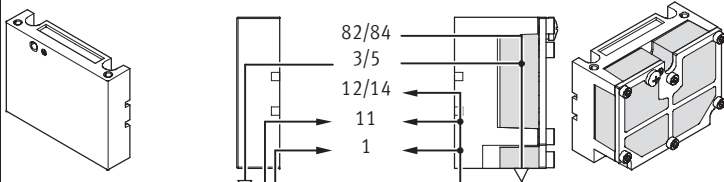
| End plate combination for compressed air supply via pneumatic multiple connector plate with flat plate silencer |                                                                                                                  |      |    |    |                                                                                                                                                                                                                                                                                                                                                                                                                 |  |
|-----------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|------|----|----|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| Code                                                                                                            | Graphical symbol<br>Type of pilot air supply (internal/external)                                                 | Size |    |    | Note                                                                                                                                                                                                                                                                                                                                                                                                            |  |
|                                                                                                                 |                                                                                                                  | 10   | 14 | 18 |                                                                                                                                                                                                                                                                                                                                                                                                                 |  |
| E                                                                                                               | External pilot air supply<br>   | ■    | ■  | ■  | <ul style="list-style-type: none"> <li>Ports on pneumatic multiple connector plate</li> <li>Exhaust air vented via flat plate silencers on the right</li> <li>Pressure zone separation only permissible with separator plate (code T)</li> <li>Maximum four pressure zones</li> <li>Suitable for vacuum</li> <li>Only for accessories M, P, V, GQC, GQD (pneumatic multiple connector plate)</li> </ul>         |  |
| F                                                                                                               | External pilot air supply<br>   | ■    | ■  | ■  | <ul style="list-style-type: none"> <li>Ports on pneumatic multiple connector plate</li> <li>Exhaust air vented via flat plate silencers on the left</li> <li>Pressure zone separation only permissible with separator plate (code T)</li> <li>Maximum four pressure zones</li> <li>Suitable for vacuum</li> <li>Only for accessories M, P, V, GQC, GQD (pneumatic multiple connector plate)</li> </ul>          |  |
| G                                                                                                               | Internal pilot air supply<br> | ■    | ■  | ■  | <ul style="list-style-type: none"> <li>Ports on pneumatic multiple connector plate</li> <li>Exhaust air vented via flat plate silencers on the left</li> <li>Pressure zone separation only permissible with separator plate (code T)</li> <li>Maximum three pressure zones</li> <li>Not suitable for vacuum</li> <li>Only for accessories M, P, V, GQC, GQD (pneumatic multiple connector plate)</li> </ul>     |  |
| H                                                                                                               | External pilot air supply<br> | ■    | ■  | ■  | <ul style="list-style-type: none"> <li>Ports on pneumatic multiple connector plate</li> <li>Exhaust air vented via flat plate silencers at both ends</li> <li>Pressure zone separation permissible</li> <li>Suitable for vacuum</li> <li>Only for accessories M, P, V, GQC, GQD (pneumatic multiple connector plate)</li> </ul>                                                                                 |  |
| J                                                                                                               | Internal pilot air supply<br> | ■    | ■  | ■  | <ul style="list-style-type: none"> <li>Ports on pneumatic multiple connector plate</li> <li>Exhaust air vented via flat plate silencers at both ends</li> <li>Pressure zone separation permissible</li> <li>Maximum three pressure zones</li> <li>Valves to the left of the separator plate suitable for vacuum</li> <li>Only for accessories M, P, V, GQC, GQD (pneumatic multiple connector plate)</li> </ul> |  |
| K                                                                                                               | Internal pilot air supply<br> | ■    | ■  | ■  | <ul style="list-style-type: none"> <li>Ports on pneumatic multiple connector plate</li> <li>Exhaust air vented via flat plate silencers on the right</li> <li>Pressure zone separation permissible</li> <li>Maximum three pressure zones</li> <li>Suitable for vacuum in combination with separator plate</li> <li>Only for accessories M, P, V, GQC, GQD (pneumatic multiple connector plate)</li> </ul>       |  |

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Key features – Pneumatic components

## Pneumatic connection



The working ports are located directly in the valve slices. Threaded connections and Quick Star push-in fittings (QS) are available for different tubing sizes. The supply ports are located in the end plates or the pneumatic multiple connector plate.

Push-in fittings are available fully assembled.

The following working ports can be selected:

- Threaded connections: Code C

- Large push-in fittings: Code D
  - Small push-in fittings: Code E
- Connection sizes for the threaded and QS push-in fittings can be found in the table below.

## Pneumatic multiple connector plate

One-piece “connection plates” that contain both working lines and supply ports can be combined with a pneumatic multiple connector plate. These plates enable the valve terminal as a pneumatic “function” to be separated from the valve ports.


The pneumatic multiple connector plate enables different mounting options from wall mounting to direct passage through a cabinet wall.

Service-friendly and flexible connection technology thanks to the following:


- Common connection via the pneumatic multiple connector plate with all connections on one side

- The valve terminal can be removed/fitted using only four screws, whereby the pneumatics remain fully connected
- Quick removal/fitting
- No errors when recommissioning as a result of incorrect connection of tubing

## CPV valve terminal

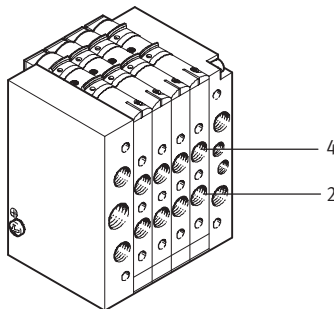

## Pneumatic multiple connector plate

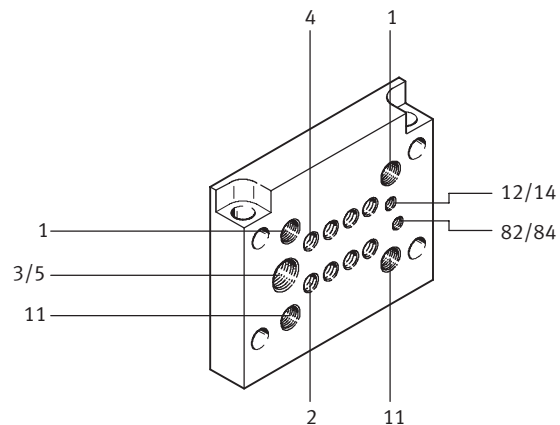


| Connection sizes             |                       |                 |                 |                                                                       |
|------------------------------|-----------------------|-----------------|-----------------|-----------------------------------------------------------------------|
| Connection to ISO 5599       | CPV10                 | CPV14           | CPV18           | Remarks                                                               |
| 1/11 Working air             | G $\frac{1}{8}$       | G $\frac{1}{4}$ | G $\frac{3}{8}$ | Fitting in end plate or pneumatic multiple connector plate            |
| 2/4 Working port             | M7                    | G $\frac{1}{8}$ | G $\frac{1}{4}$ | Connection in valve slice, connection for push-in fitting in brackets |
| 3/5 Exhaust air port         | G $\frac{3}{8}$       | G $\frac{1}{2}$ | G $\frac{1}{2}$ | Via right-hand/left-hand end plate                                    |
|                              | G $\frac{1}{4}$       | G $\frac{3}{8}$ | G $\frac{1}{2}$ | Pneumatic multiple connector plate                                    |
| 12/14 Pilot air supply port  | M5                    | G $\frac{1}{8}$ | G $\frac{1}{4}$ | Fitting in end plate or pneumatic multiple connector plate            |
| 82/84 Pilot exhaust air port | M5                    | G $\frac{1}{8}$ | G $\frac{1}{4}$ | Via right-hand/left-hand end plate                                    |
|                              | M7 (M5) <sup>1)</sup> | G $\frac{1}{8}$ | G $\frac{1}{4}$ | Pneumatic multiple connector plate                                    |

1) With flanged pneumatic multiple connector plate.

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO


Key features – Pneumatic components
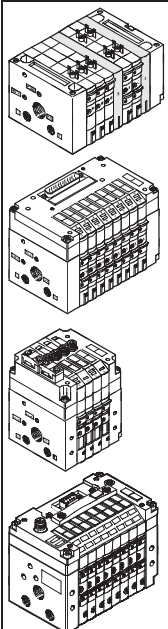
| Pneumatic connection: Fitting set for compressed air supply                        |                                                      |                |                 |                   |                   |                  |
|------------------------------------------------------------------------------------|------------------------------------------------------|----------------|-----------------|-------------------|-------------------|------------------|
|                                                                                    | Code<br>Compressed<br>air supply                     | Port           | Designation     | Size 10<br>Type   | Size 14<br>Type   | Size 18<br>Type  |
|  | Without pneumatic multiple connector plate           |                |                 |                   |                   |                  |
|                                                                                    | U, V                                                 | 82/84          | Silencer        | U-M5              | U-1/8-B           | U-1/4-B          |
|                                                                                    |                                                      | 3/5            | Silencer        | U-3/8-B           | U-1/2-B           | U-1/2-B          |
|                                                                                    |                                                      | 1              | Push-in fitting | QS-1/8-5/16-I-U-M | QS-1/4-3/8-I-U-M  | QS-3/8-3/8-I     |
|                                                                                    | W, X                                                 | 82/84          | Silencer        | U-M5              | U-1/8-B           | U-1/4-B          |
|                                                                                    |                                                      | 3/5            | Silencer        | U-3/8-B           | U-1/2-B           | U-1/2-B          |
|                                                                                    |                                                      | 1              | Push-in fitting | QS-1/8-5/16-I-U-M | QS-1/4-3/8-I-U-M  | QS-3/8-3/8-I     |
|                                                                                    |                                                      | 12/14          | Push-in fitting | QSM-M5-1/4-I-U-M  | QS-1/8-5/16-I-U-M | QS-1/4-3/8-I-U-M |
|                                                                                    | Y                                                    | 82/84 on right | Silencer        | U-M5              | U-1/8-B           | U-1/4-B          |
|                                                                                    |                                                      | 82/84 on left  | Blanking plug   | B-M5              | B-1/8             | B-1/4            |
|                                                                                    |                                                      | 3/5 on right   | Silencer        | U-3/8-B           | U-1/2-B           | U-1/2-B          |
|                                                                                    |                                                      | 3/5 on left    | Blanking plug   | B-3/8             | B-1/2             | B-1/2            |
|                                                                                    |                                                      | 1/11 on left   | Push-in fitting | QS-1/8-5/16-I-U-M | QS-1/4-3/8-I-U-M  | QS-3/8-3/8-I     |
|                                                                                    | Z                                                    | 82/84 on right | Silencer        | U-M5              | U-1/8-B           | U-1/4-B          |
|                                                                                    |                                                      | 82/84 on left  | Blanking plug   | B-M5              | B-1/8             | B-1/4            |
|                                                                                    |                                                      | 3/5 on right   | Silencer        | U-3/8-B           | U-1/2-B           | U-1/2-B          |
|                                                                                    |                                                      | 3/5 on left    | Blanking plug   | B-3/8             | B-1/2             | B-1/2            |
|                                                                                    |                                                      | 12/14 on right | Push-in fitting | QSM-M5-1/4-I-U-M  | QS-1/8-5/16-I-U-M | QS-1/4-3/8-I-U-M |
|                                                                                    |                                                      | 12/14 on left  | Blanking plug   | B-M5              | B-1/8             | B-1/4            |
|                                                                                    |                                                      | 1/11           | Push-in fitting | QS-1/8-5/16-I-U-M | QS-1/4-3/8-I-U-M  | QS-3/8-3/8-I     |
|                                                                                    | With pneumatic multiple connector plate; code M      |                |                 |                   |                   |                  |
|                                                                                    | Y                                                    | 82/84          | Silencer        | UC-M7             | U-1/8-B           | U-1/4-B          |
|                                                                                    |                                                      | 12/14          | Blanking plug   | B-M7              | B-1/8             | B-1/4            |
|                                                                                    |                                                      | 3/5            | Silencer        | U-1/4-B           | U-3/8-B           | U-1/2-B          |
|                                                                                    |                                                      | 1/11 on left   | Push-in fitting | QS-1/8-5/16-I-U-M | QS-1/4-3/8-I-U-M  | QS-3/8-3/8-I     |
|                                                                                    |                                                      | 11 on right    | Blanking plug   | B-1/8             | B-1/4             | B-3/8            |
|                                                                                    | Z                                                    | 82/84          | Silencer        | UC-M7             | U-1/8-B           | U-1/4-B          |
|                                                                                    |                                                      | 3/5            | Silencer        | U-1/4-B           | U-3/8-B           | U-1/2-B          |
|                                                                                    |                                                      | 12/14          | Push-in fitting | QSM-M7-1/4-I-U-M  | QS-1/8-5/16-I-U-M | QS-1/4-3/8-I-U-M |
|                                                                                    |                                                      | 1/11 on left   | Push-in fitting | QS-1/8-5/16-I-U-M | QS-1/4-3/8-I-U-M  | QS-3/8-3/8-I     |
|                                                                                    | With pneumatic multiple connector plate; code P, GQC |                |                 |                   |                   |                  |
|                                                                                    | Y                                                    | 82/84          | Silencer        | U-M5              | U-1/8-B           | U-1/4-B          |
|                                                                                    |                                                      | 12/14          | Blanking plug   | B-M5              | B-1/8             | B-1/4            |
|                                                                                    |                                                      | 3/5            | Silencer        | U-1/4-B           | U-3/8-B           | U-1/2-B          |
|                                                                                    |                                                      | 1/11 on left   | Push-in fitting | QS-1/8-8-I        | QS-1/4-3/8-I-U-M  | QS-3/8-12-I      |
|                                                                                    |                                                      | 11 on right    | Blanking plug   | B-1/8             | B-1/4             | B-3/8            |
|                                                                                    | Z                                                    | 82/84          | Silencer        | U-M5              | U-1/8-B           | U-1/4-B          |
|                                                                                    |                                                      | 3/5            | Silencer        | U-1/4-B           | U-3/8-B           | U-1/2-B          |
|                                                                                    |                                                      | 12/14          | Push-in fitting | QSM-M5-1/4-I-U-M  | QS-1/8-5/16-I-U-M | QS-1/4-3/8-I-U-M |
|                                                                                    |                                                      | 1/11 on left   | Push-in fitting | QS-1/8-5/16-I-U-M | QS-1/4-3/8-I-U-M  | QS-3/8-3/8-I     |

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Key features – Pneumatic components
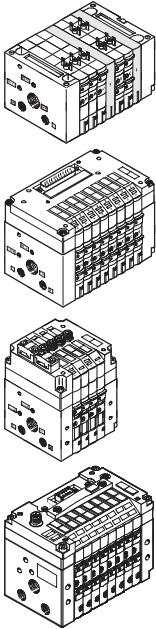
| Pneumatic connection: Fitting set for compressed air supply                        |                                                      |                        |                 |                   |                   |                  |
|------------------------------------------------------------------------------------|------------------------------------------------------|------------------------|-----------------|-------------------|-------------------|------------------|
|                                                                                    | Code<br>Compressed<br>air supply                     | Port                   | Designation     | Size 10<br>Type   | Size 14<br>Type   | Size 18<br>Type  |
|  | Without pneumatic multiple connector plate           |                        |                 |                   |                   |                  |
|                                                                                    | A, B                                                 | 82/84                  | Blanking plug   | B-M5              | B-1/8             | B-1/4            |
|                                                                                    |                                                      | 3/5                    | Blanking plug   | B-3/8             | B-1/2             | B-1/2            |
|                                                                                    |                                                      | 1                      | Push-in fitting | QS-1/8-5/16-I-U-M | QS-1/4-3/8-I-U-M  | QS-3/8-3/8-I     |
|                                                                                    | C, D                                                 | 82/84                  | Blanking plug   | B-M5              | B-1/8             | B-1/4            |
|                                                                                    |                                                      | 3/5                    | Blanking plug   | B-3/8             | B-1/2             | B-1/2            |
|                                                                                    |                                                      | 1                      | Push-in fitting | QS-1/8-5/16-I-U-M | QS-1/4-3/8-I-U-M  | QS-3/8-3/8-I     |
|                                                                                    |                                                      | 12/14                  | Push-in fitting | QSM-M5-1/4-I-U-M  | QS-1/8-5/16-I-U-M | QS-1/4-3/8-I-U-M |
|                                                                                    | With pneumatic multiple connector plate; code M      |                        |                 |                   |                   |                  |
|                                                                                    | E, F, H                                              | 82/84                  | Blanking plug   | B-M7              | B-1/8             | B-1/4            |
|                                                                                    |                                                      | 3/5                    | Blanking plug   | B-1/4             | B-3/8             | B-1/2            |
|                                                                                    |                                                      | 1/11                   | Push-in fitting | QS-1/8-5/16-I-U-M | QS-1/4-3/8-I-U-M  | QS-3/8-3/8-I     |
|                                                                                    |                                                      | 12/14                  | Push-in fitting | QSM-M7-1/4-I-U-M  | QS-1/8-5/16-I-U-M | QS-1/4-3/8-I-U-M |
|                                                                                    | G, J, K                                              | 82/84                  | Blanking plug   | B-M7              | B-1/8             | B-1/4            |
|                                                                                    |                                                      | 3/5                    | Blanking plug   | B-1/4             | B-3/8             | B-1/2            |
|                                                                                    |                                                      | on right in 1,<br>left | Push-in fitting | QS-1/8-5/16-I-U-M | QS-1/4-3/8-I-U-M  | QS-3/8-3/8-I     |
|                                                                                    |                                                      | on right in 11         | Blanking plug   | B-1/8             | B-1/4             | B-3/8            |
|                                                                                    |                                                      | 12/14                  | Blanking plug   | B-M7              | B-1/8             | B-1/4            |
|                                                                                    | With pneumatic multiple connector plate; code P, GQC |                        |                 |                   |                   |                  |
|                                                                                    | E, F, H                                              | 82/84                  | Blanking plug   | B-M5              | B-1/8             | B-1/4            |
|                                                                                    |                                                      | 3/5                    | Blanking plug   | B-1/4             | B-3/8             | B-1/2            |
|                                                                                    |                                                      | 1/11                   | Push-in fitting | QS-1/8-5/16-I-U-M | QS-1/4-3/8-I-U-M  | QS-3/8-3/8-I     |
|                                                                                    |                                                      | 12/14                  | Push-in fitting | QSM-M5-1/4-I-U-M  | QS-1/8-5/16-I-U-M | QS-1/4-3/8-I-U-M |
|                                                                                    | G, J, K                                              | 82/84                  | Blanking plug   | B-M5              | B-1/8             | B-1/4            |
|                                                                                    |                                                      | 3/5                    | Blanking plug   | B-1/4             | B-3/8             | B-1/2            |
|                                                                                    |                                                      | on right in 1,<br>left | Push-in fitting | QS-1/8-5/16-I-U-M | QS-1/4-3/8-I-U-M  | QS-3/8-3/8-I     |
|                                                                                    |                                                      | on right in 11         | Blanking plug   | B-1/8             | B-1/4             | B-3/8            |
|                                                                                    |                                                      | 12/14                  | Blanking plug   | B-M5              | B-1/8             | B-1/4            |


# Valve terminals type 10 CPV, Compact Performance, NPT

Key features – Pneumatic components

**FESTO**

## CPV valve terminal size 10 and 14 with valve extensions

### Function blocks

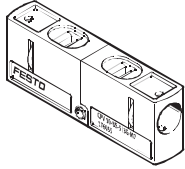

CPV10-BS-5/3G-M7  
CPV14-BS-5/3G-1/8

Valve kit 5/3G for creating a 5/3-way function, mid-position closed, for size 10 and 14:


The valve function “mid-position closed” is created using a valve slice with 2x 3/2-way valve, normally closed (valve function code C).

The valve kit CPV10-BS-5/3G-M7 or CPV14-BS-5/3G-1/8 (incorporating

a double piloted non-return valve function) is used for this.

This valve kit is intended for applications with one working pressure level per valve slice, i.e. it must not be used in dual-pressure applications (where the pressure levels at port 1 and 11 are different).

### Additional functions for valve positions

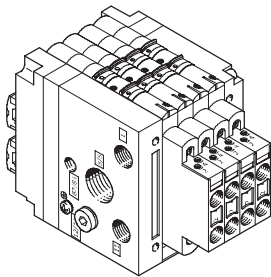


These valve extensions (vertical stacking) can be used to add further pneumatic functions to CPV valve terminals size 10 and 14:

- Two one-way flow control valves for flow regulation directly at the valve terminal for
  - supply air flow control
  - exhaust air flow control
- The vacuum flow control module must be used with the vacuum generator with or without ejector pulse and provides a non-return function and adjustable ejector pulse


#### Note

The additional functions cannot be used in the first or last valve position in combination with the pneumatic connector plate M, P and cannot be used in combination with the pneumatic multiple connector plate GQC, GQD.

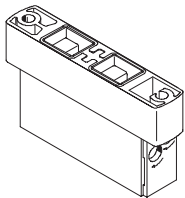


CPV10-BS-2xGRZZ-M7  
CPV14-BS-2xGRZZ-1/8

- 2x one-way flow control valve for supply air flow control
- Additional function code P

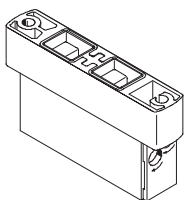

CPV10-BS-2xGRAZ-M7  
CPV14-BS-2xGRAZ-1/8

- 2x one-way flow control valve for exhaust air flow control
- Additional function code Q

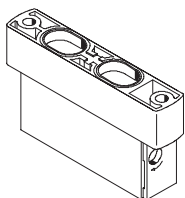

CPV10-BS-GRZ-V-M7  
CPV14-BS-GRZ-V-1/8

- Vacuum flow control module
- Additional function code V

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Key features – Assembly

## Mounting options

The valve terminals have holes for four mounting screws. In this case the mounting side is the side with the pneumatic threaded connectors. These holes are also used to mount the valve terminal on a pneumatic multiple connector plate.


There are other mounting options in addition to this method:

- H-rail mounting
- Wall mounting
- Wall mounting via flanged multiple connector plate


- On rear side via wall mounting
- On front side (CPV10/14 with IC connection only)
- Mounting via through-hole in wall

The attachments are mounted with a screw and fixing bolt on the left-hand and right-hand end plates.

## Mounting for H-rail

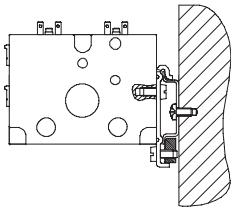


for valve terminal CPV10/14:  
CPV10/14-VI-BG-NRH-35  
(mounting code H)




for valve terminal CPV18:  
CPV18-VI-BG-NRH-35  
(mounting code H)



H-rail to EN 60715, not for accessories M, P, V (pneumatic multiple connector plate)




## Attachment for wall mounting

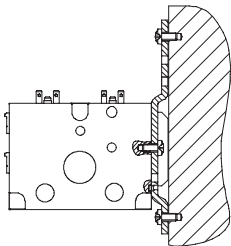


for valve terminal CPV10/14:  
CPV10/14-VI-BG-RWL-B  
(mounting code U)




for valve terminal CPV18:  
CPV18-VI-BG-RW  
(mounting code W)




## Attachment for individual connection and ET200X/ET200pro (included in the scope of delivery)

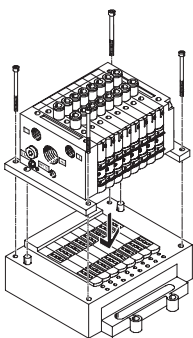


for valve terminal CPV10/14:  
CPV...-VI-BG-ET200X  
(mounting code X)

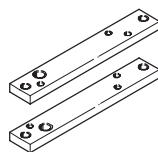

## Through-hole in wall, for example on the machine

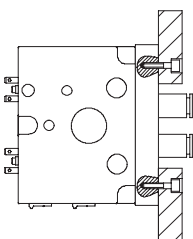

## Wall mounting via pneumatic multiple connector plate

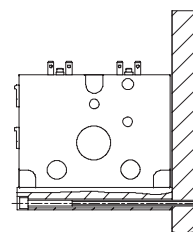


# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Key features – Assembly

## Pneumatic multiple connector plate for wall/machine mounting


With flange, code P

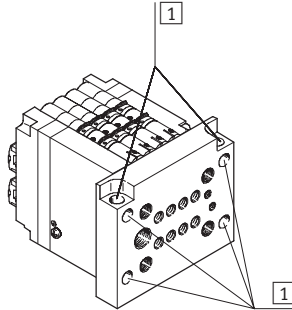

1 Mounting holes

- Multiple connector plate projects past the end plates
- Through mounting holes (without thread) in the flange
- Two additional holes running laterally through the pneumatic multiple connector plate also enable rear mounting of the CPV valve terminal

Without flange, code M

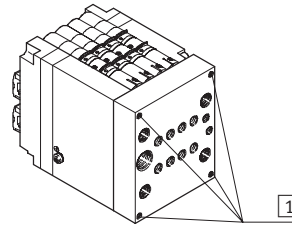


1 Mounting holes

- Multiple connector plate fits flush with the end plates
- Mounting holes (with thread) for wall or foot mounting are on the connection side of the pneumatic multiple connector plate

## Pneumatic multiple connector plate for control cabinet assembly


With supply ports, code GQC

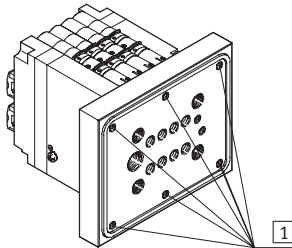

1 Mounting holes

- For 10 mm and 14 mm
- Multiple connector plate projects past the end plates
- Mounting holes (with thread) in the flange
- Multiple connector plate with seal


Without supply ports, code GQD

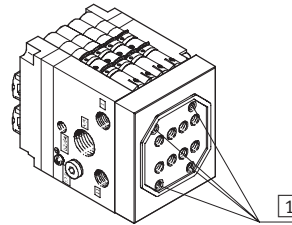

1 Mounting holes

- For 10 mm and 14 mm
- Multiple connector plate fits flush with the end plates
- The mounting holes (with thread) are on the connection side of the pneumatic multiple connector plate
- Multiple connector plate with seal

With supply ports, code GQE

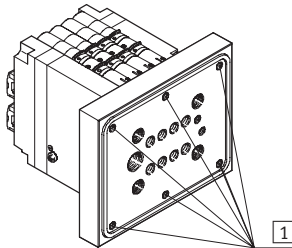

1 Mounting holes

- For 10 mm
- Multiple connector plate projects past the end plates
- Mounting holes (with thread) in the flange
- Multiple connector plate with seal

### Note

The outer valve slices cannot be equipped with valve extensions (e.g. one-way flow control valve) when using the pneumatic multiple connector plate M or P.

CPV valve terminals with flat plate silencers are only suitable for wall mounting.

If the pneumatic multiple connector plate GQC, GQD or GQE is used, the following limitations apply:

- Generally no attachment of valve extensions
- Not in combination with H-rail mounting
- Not in combination with wall mounting
- Only with 10 mm and 14 mm

## Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Key features – Display and operation

### Manual override

Three types of manual override are available:




- Non-detenting
- Detenting
- Blocked

A subsequent conversion of the manual override (MO) from non-detenting to detenting or blocked is possible at any time.

The locking clip on the valve must be removed to this end. This is only possible after the individual valve has been removed or the tie rod of the valve terminal has been released.

#### Note

See the manual for instructions.
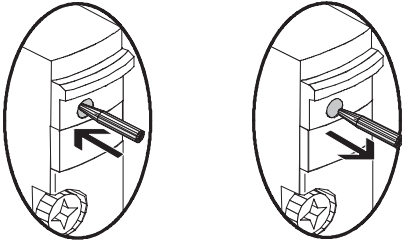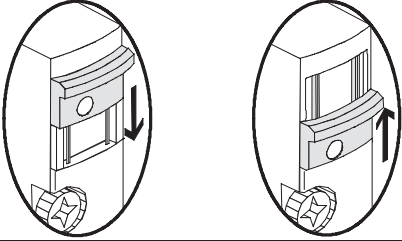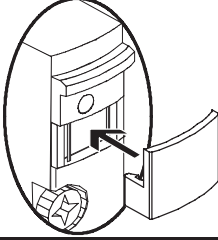
| Code | Graphical symbol                                                                                                    | Size |    |    | Note                                                                                                                                                                                                                   |
|------|---------------------------------------------------------------------------------------------------------------------|------|----|----|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|      |                                                                                                                     | 10   | 14 | 18 |                                                                                                                                                                                                                        |
| N    | Manual override, non-detenting<br> | ■    | ■  | ■  | In the “non-detenting” version, the blue slide is held via a locking clip. A pointed object (e.g. pen, etc.) can be used to activate the MO through the opening.                                                       |
| R    | Manual override, detenting<br>    | ■    | ■  | ■  | In the “detenting” version, the locking clip is removed and the manual override is activated by pushing the slide down. The non-detenting function can be re-established by re-installing the locking clip.            |
| V    | Manual override, blocked<br>     | ■    | ■  | ■  | In the “blocked” version, non-detenting and detenting activation of the MO is prevented by means of a cover. Like the non-detenting locking clip, this cover can be added subsequently, but then remains on the valve. |

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Key features – Display and operation

## Display and operation

You will find the following LEDs for displaying the switching status on the electrical connections of the CPV valve terminal:

- Display of the switching status of the pilot solenoid coil 12 for output 2
- Display of the switching status of the pilot solenoid coil 14 for output 4


- Readable from the “top” as well as from the “front”

The individual connection has an LED in the connector plug to display the switching status.

Inscription labels


- Clip with inscription field on cable socket (with individual connection)
- Inscription clips on connection node (multi-pin plug, AS-interface, CP installation system, Fieldbus Direct)

## CPV valve terminal with individual connection

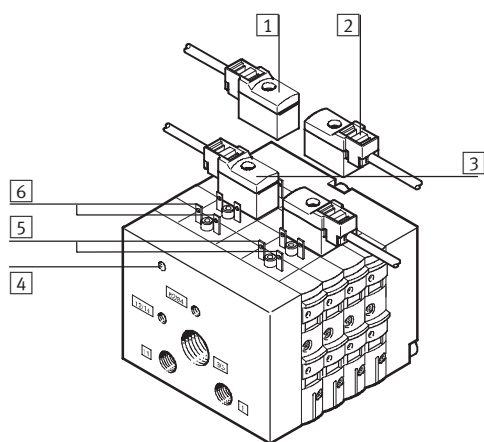

- 1 Pre-assembled connection socket for each pilot solenoid coil
- 2 Slot for inscription label (for each connection socket)
- 3 Yellow LED, signal status display for pilot solenoid coils (for each connection socket)
- 4 Earth terminal

## CPV valve terminal with multi-pin plug connection

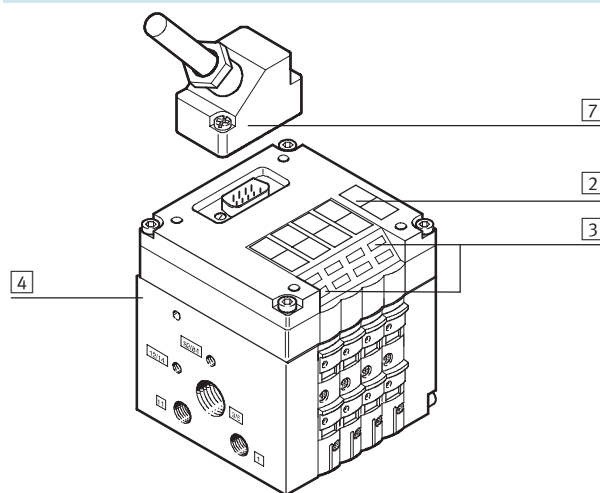

- 5 Terminal lug for solenoid coil 14
- 6 Terminal lug for solenoid coil 12
- 7 Sub-D multi-pin plug (9-pin for valve terminals with 4 valves, 25-pin for valve terminals with 6 or 8 valves)

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Key features – Display and operation

## Inscription system

Inscription labels can be affixed as follows:

- On the top of the electrical base unit
- On the inscription label holder

The inscription label holder permits the addition of inscription labels, protects the manual overrides and prevents them from being accidentally activated. The inscription labels are used to record additional information regarding the valves.

The inscription label holders can be ordered together with the valve terminal using the order code. The relevant inscription labels are supplied in a frame and are ordered separately.


### Transparent inscription label holder



The transparent inscription label holder CPV...-VI-ST-... offers a further labelling option, for example for large paper labels that can be read from both sides.

The inscription label holder cannot be used together with the relay plate.

### Note

The Word templates for CPV label holders can be found at:  
[www.festo.com](http://www.festo.com)

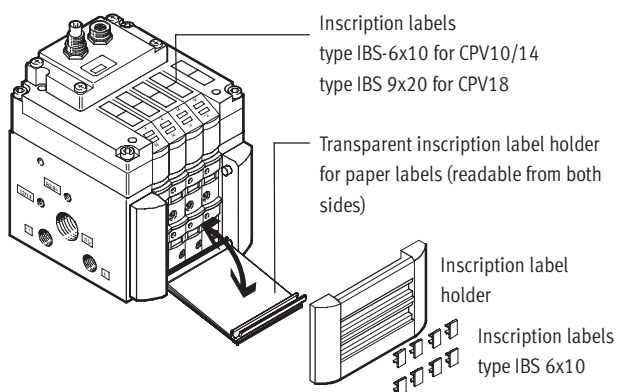

| Ordering data                                                                       |      |                                            |                    |                                                    |
|-------------------------------------------------------------------------------------|------|--------------------------------------------|--------------------|----------------------------------------------------|
|                                                                                     | Code | Designation                                | Type               | Part No.                                           |
| Inscription label holder                                                            |      |                                            |                    |                                                    |
|  | Z    | Holder for inscription labels              | CPV...-VI-BZ-T-... | Dependent on the number of valve positions<br>➔ 64 |
|  | T    | Holder for inscription labels, transparent | CPV...-VI-ST-T-... |                                                    |
| Inscription labels                                                                  |      |                                            |                    |                                                    |
|  | –    | 6x10 mm, 64 pieces in frames               | IBS-6x10           | 18576                                              |
|                                                                                     | –    | 9x20 mm, 20 pieces in frames               | IBS-9x20           | 18182                                              |

# Valve terminals type 10 CPV, Compact Performance, NPT

Key features – Electrical components


**FESTO**

## Electrical connection

Contacts which are fitted on the top of the valve slice form the interface for various electrical connection options. The electrical connection is attached from above using four screws.

This means that the valve terminal can be adapted to different electrical requirements or fieldbus protocols using the same pneumatic part.


## Electrical power

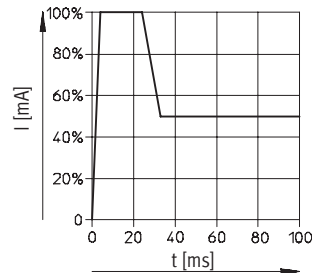

CPV10/14 valves are actuated by means of an integrated current reduction circuit, which reduces power consumption and heat build-up. This current reduction circuit is integrated in the electrical base unit (multi-pin plug or fieldbus connection) or in the individual connecting cable.

During switch-off, the voltage peaks are limited to 38 V DC.

## Individual connection

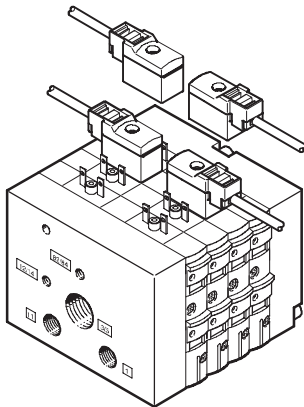

With individual connections, integration is only carried out in the pneumatic part whereby the solenoid valves are connected with individual cables.

| Ordering data                                                              |      |                        |       |                       |          |
|----------------------------------------------------------------------------|------|------------------------|-------|-----------------------|----------|
|                                                                            | Code | Designation            |       | Type                  | Part No. |
| Plug socket with cable for individual connection, electrical, for CPV10/14 |      |                        |       |                       |          |
|                                                                            | D    | Plug socket with cable | 2.5 m | KMYZ-7-24-2,5-LED-PUR | 193683   |
|                                                                            | E    | Plug socket with cable | 5 m   | KMYZ-7-24-5-LED-PUR   | 193685   |
|                                                                            | F    | Plug socket with cable | 10 m  | KMYZ-7-24-10-LED-PUR  | 196070   |
| Plug socket with cable for individual connection, electrical, for CPV18    |      |                        |       |                       |          |
|                                                                            | D    | Plug socket with cable | 2.5 m | KMEB-2-24-2,5-LED     | 174844   |
|                                                                            | E    |                        | 5 m   | KMEB-2-24-5-LED       | 174845   |

## Note

Connecting cables are pre-assembled. They include a protective circuit and an LED indicating the operating status.

# Valve terminals type 10 CPV, Compact Performance, NPT


FESTO

Key features – Electrical components

## Dimensions – Connecting cable for individual connection


Download CAD Data → [www.festo.com/us/cad](http://www.festo.com/us/cad)

KMYZ-7-24-...

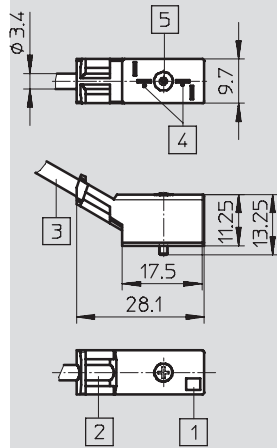

- 1 LED illuminated area
- 2 Location for inscription label
- 3 2-wire cable 2.5 m, 5 m or 10 m (2x 0.25 mm<sup>2</sup>)
- 4 Connection pattern for MZC
- 5 Type of mounting: self-tapping screw, captive, max. tightening torque 0.25 Nm

KMEB-2-24-...-LED

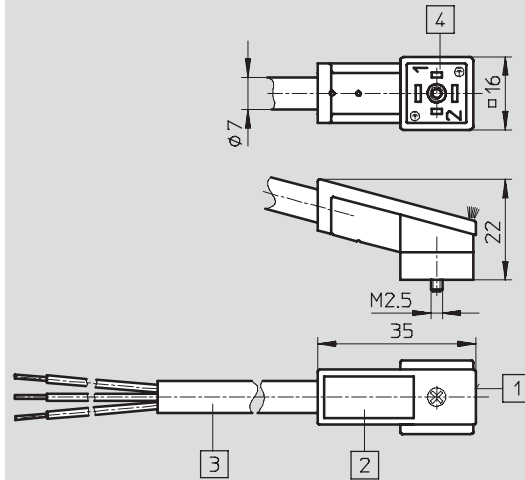


- 1 LED illuminated area
- 2 Inscription label IBS-9x20 Part No. 18 182
- 3 3-wire cable 2.5 or 5 m (3x 0.75 mm<sup>2</sup>)
- 4 Connection pattern to DIN 43650 type C

## Dimensions – Connecting cable for relay plate

Download CAD Data → [www.festo.com/us/cad](http://www.festo.com/us/cad)

KRP-1-24-...

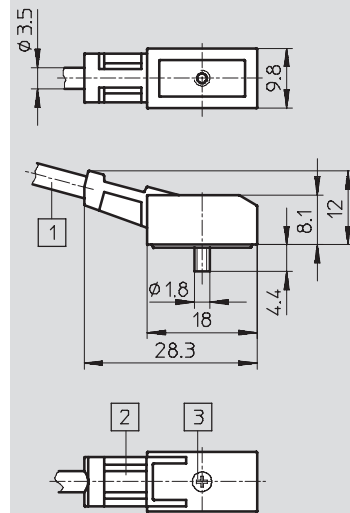


- 1 Cable 2x 0.25 mm<sup>2</sup>
- 2 Location for inscription labels (order code IBS 6x10, Part No. 18 576)
- 3 Mounting screw (self-tapping KB 1.8x9)

# Valve terminals type 10 CPV, Compact Performance, NPT

Key features – Electrical components

**FESTO**

## Multi-pin plug connection

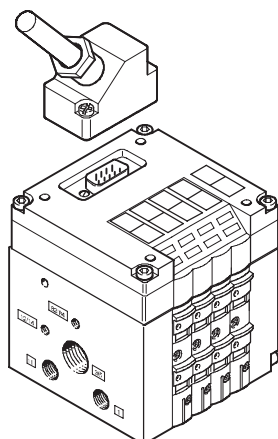

In addition to pneumatic integration, multi-pin plug connection also provides integration of the electrical side, and facilitates connection to the control cabinet and the valve terminal via a single cable.




Sub-D 9-pin and 25-pin plugs are used for connection. The plug housing of the KMP-... cable provides the Sub-D connectors with IP65 protection.

The following sizes of plug connector are used:

- 4-valve valve terminal: 9-pin
- 6-valve valve terminal: 25-pin
- 8-valve valve terminal: 25-pin

The cable KMP6-... can alternatively be used for applications with IP40 protection.



Pre-assembled connecting cables are available for easy connection. Standard lengths of 5 m and 10 m can be supplied. The pre-assembled connecting cables are also available in a design suitable for use with energy chains.

| Ordering data                                                                       |      |                                                                            |        |       |                 |          |
|-------------------------------------------------------------------------------------|------|----------------------------------------------------------------------------|--------|-------|-----------------|----------|
|                                                                                     | Code | Designation                                                                |        |       | Type            | Part No. |
| Multi-pin plug cable                                                                |      |                                                                            |        |       |                 |          |
|   | Y    | Plug socket (Sub-D plug can be crimped),<br>for self-assembly              | 9-pin  |       | SD-SUB-D-BU9    | 18708    |
|                                                                                     |      |                                                                            | 25-pin |       | SD-SUB-D-BU25   | 18709    |
|  | R    | Connecting cable, IP65, polyvinyl chloride                                 | 9-pin  | 5 m   | KMP3-9P-08-5    | 18698    |
|                                                                                     |      |                                                                            | 25-pin |       | KMP3-25P-16-5   | 18624    |
|                                                                                     |      |                                                                            | 9-pin  | 10 m  | KMP3-9P-08-10   | 18579    |
|                                                                                     |      |                                                                            | 25-pin |       | KMP3-25P-16-10  | 18625    |
|                                                                                     | –    | Connecting cable, IP65, polyurethane<br>(suitable for energy chains)       | 9-pin  | 5 m   | KMP4-9P-5-PUR   | 193014   |
|                                                                                     |      |                                                                            | 25-pin |       | KMP4-25P-5-PUR  | 193018   |
|                                                                                     |      |                                                                            | 9-pin  | 10 m  | KMP4-9P-10-PUR  | 193015   |
|                                                                                     |      |                                                                            | 25-pin |       | KMP4-25P-10-PUR | 193019   |
|                                                                                     | –    | Connecting cable, IP65, polyvinyl chloride<br>(suitable for energy chains) | 9-pin  | 5 m   | KMP4-9P-5-PVC   | 193012   |
|                                                                                     |      |                                                                            | 25-pin |       | KMP4-25P-5-PVC  | 193016   |
|                                                                                     |      |                                                                            | 9-pin  | 10 m  | KMP4-9P-10-PVC  | 193013   |
|                                                                                     |      |                                                                            | 25-pin |       | KMP4-25P-10-PVC | 193017   |
|  | –    | Connecting cable, IP40, polyvinyl chloride<br>only for CPV10/14            | 9-pin  | 2.5 m | KMP6-09P-8-2,5  | 531184   |
|                                                                                     |      |                                                                            | 25-pin |       | KMP6-25P-20-2,5 | 530046   |
|                                                                                     |      |                                                                            | 9-pin  | 5 m   | KMP6-09P-8-5    | 531185   |
|                                                                                     |      |                                                                            | 25-pin |       | KMP6-25P-20-5   | 530047   |
|                                                                                     |      |                                                                            | 9-pin  | 10 m  | KMP6-09P-8-10   | 531186   |
|                                                                                     |      |                                                                            | 25-pin |       | KMP6-25P-20-10  | 530048   |

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Key features – Electrical components

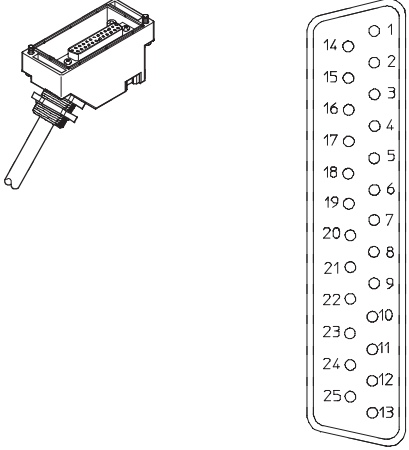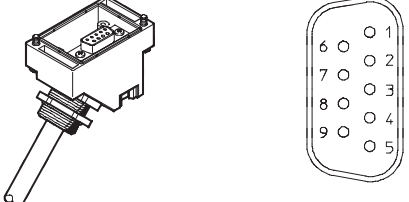
| Pin allocation – Pre-assembled multi-pin cable (viewed from plug-in direction)                    |     |                         |                     |
|---------------------------------------------------------------------------------------------------|-----|-------------------------|---------------------|
| Plug view                                                                                         | Pin | Wire colour             | Valve 24 V DC       |
| Cable KMP3-25P-16... or KMP4-25P... with 25-pin Sub-D plug for 6-valve and 8-valve valve terminal |     |                         |                     |
|                  | 1   | White                   | 1                   |
|                                                                                                   | 2   | Green                   | 12                  |
|                                                                                                   | 3   | Yellow                  | 2                   |
|                                                                                                   | 4   | Grey                    | 14                  |
|                                                                                                   | 5   | Pink                    | 12                  |
|                                                                                                   | 6   | Blue                    | 3                   |
|                                                                                                   | 7   | Red                     | 14                  |
|                                                                                                   | 8   | Purple                  | 12                  |
|                                                                                                   | 9   | Grey-pink               | 4                   |
|                                                                                                   | 10  | Red-blue                | 5                   |
|                                                                                                   | 11  | White-green             | 6                   |
|                                                                                                   | 12  | Brown-green             | 7                   |
|                                                                                                   | 13  | White-yellow            | 8                   |
|                                                                                                   | 14  | Yellow-brown            | 14                  |
|                                                                                                   | 15  | White-grey              | 12                  |
|                                                                                                   | 16  | Grey-brown              | 14                  |
|                                                                                                   | 17  | White-pink (KMP4 only)  | 12                  |
|                                                                                                   | 18  | Pink-brown (KMP4 only)  |                     |
|                                                                                                   | 19  | White-blue (KMP4 only)  |                     |
|                                                                                                   | 20  | Brown-blue (KMP4 only)  |                     |
|                                                                                                   | 21  | White-red (KMP4 only)   |                     |
|                                                                                                   | 22  | Brown-red (KMP4 only)   |                     |
|                                                                                                   | 23  | White-black (KMP4 only) |                     |
|                                                                                                   | 24  | Brown                   | (0 V) <sup>1)</sup> |
|                                                                                                   | 25  | Black                   | (0 V) <sup>1)</sup> |
| Cable KMP3-9P... or KMP4-9P... with 9-pin Sub-D plug for 4-valve valve terminal                   |     |                         |                     |
|                | 1   | White                   | 1                   |
|                                                                                                   | 2   | Green                   | 12                  |
|                                                                                                   | 3   | Yellow                  | 2                   |
|                                                                                                   | 4   | Grey                    | 14                  |
|                                                                                                   | 5   | Pink                    | 12                  |
|                                                                                                   | 6   | Blue                    | 3                   |
|                                                                                                   | 7   | Red                     | 4                   |
|                                                                                                   | 8   | Purple                  | 14                  |
|                                                                                                   | 9   | Black                   | 12                  |
|                                                                                                   |     |                         | Common              |

1) 0 V for positive switching control signals; connect 24 V for negative switching control signals; mixed operation is not permitted.

# Valve terminals type 10 CPV, Compact Performance, NPT

Key features – Electrical components

**FESTO**
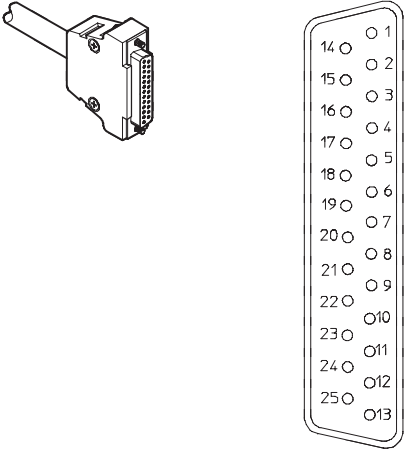
| Pin allocation – Pre-assembled multi-pin cable (viewed from plug-in direction)      |     |                           |                     |    |
|-------------------------------------------------------------------------------------|-----|---------------------------|---------------------|----|
| Plug view                                                                           | Pin | Wire colour               | Valve 24 V DC       |    |
| Cable KMP6-25P-20... with 25-pin Sub-D plug for 6-valve and 8-valve valve terminals |     |                           |                     |    |
|    | 1   | White                     | 1                   | 14 |
|                                                                                     | 2   | Brown                     |                     | 12 |
|                                                                                     | 3   | Green                     | 2                   | 14 |
|                                                                                     | 4   | Yellow                    |                     | 12 |
|                                                                                     | 5   | Grey                      | 3                   | 14 |
|                                                                                     | 6   | Pink                      |                     | 12 |
|                                                                                     | 7   | Blue                      | 4                   | 14 |
|                                                                                     | 8   | Red                       |                     | 12 |
|                                                                                     | 9   | Black                     | 5                   | 14 |
|                                                                                     | 10  | Purple                    |                     | 12 |
|                                                                                     | 11  | Grey-pink                 | 6                   | 14 |
|                                                                                     | 12  | Red-blue                  |                     | 12 |
|                                                                                     | 13  | White-green               | 7                   | 14 |
|                                                                                     | 14  | Brown-green               |                     | 12 |
|                                                                                     | 15  | White-yellow              | 8                   | 14 |
|                                                                                     | 16  | Yellow-brown              |                     | 12 |
|                                                                                     | 17  | White-grey                |                     |    |
|                                                                                     | 18  | Grey-brown                |                     |    |
|                                                                                     | 19  | White-pink                |                     |    |
|                                                                                     | 20  | Pink-brown                |                     |    |
|                                                                                     | 21  | White-blue <sup>1)</sup>  |                     |    |
|                                                                                     | 22  | Brown-blue <sup>1)</sup>  |                     |    |
|                                                                                     | 23  | White-red <sup>1)</sup>   |                     |    |
|                                                                                     | 24  | Brown-red <sup>1)</sup>   | (0 V) <sup>2)</sup> |    |
|                                                                                     | 25  | White-black <sup>1)</sup> | (0 V) <sup>2)</sup> |    |
| Cable KMP6-9P-20... with 9-pin Sub-D plug for 4-valve valve terminals               |     |                           |                     |    |
|  | 1   | White                     | 1                   | 14 |
|                                                                                     | 2   | Brown                     |                     | 12 |
|                                                                                     | 3   | Green                     | 2                   | 14 |
|                                                                                     | 4   | Yellow                    |                     | 12 |
|                                                                                     | 5   | Grey                      | 3                   | 14 |
|                                                                                     | 6   | Pink                      |                     | 12 |
|                                                                                     | 7   | Blue                      | 4                   | 14 |
|                                                                                     | 8   | Red                       |                     | 12 |
|                                                                                     | 9   | Black                     | Common              |    |

1) Wire cross section 0.34 mm<sup>2</sup>.

2) 0 V for positive switching control signals; connect 24 V for negative switching control signals; mixed operation is not permitted.

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Key features – Electrical components

## Valve terminal type 10 – AS-interface valve terminal

The AS-interface facilitates the spatial distribution of individual components or small component groups.

The AS-interface connection of valve terminal type 10 can be used to control 2, 4, 8 solenoid coils.

The valve terminal cover contains the LEDs which indicate the operating status and the protective circuit for the valves.

The standard AS-interface protocol permits a maximum of 4 inputs and 4 outputs in one unit. The use of 2 AS-interface slaves in one valve terminal means that 8 inputs and 8 outputs can be controlled in an 8-valve valve terminal (8 solenoid coils).

All CPV valve terminals can be operated using additional functions, e.g. relay plates or vacuum generators.

Valve terminals CPV with inputs are also available for A/B operation to SPEC 2.1 and 3.0.

### AS-interface control

- For 2, 4 or 8 valves
- Great variety thanks to the wide range of modules in the system


### AS-interface with A/B operation

- For 3 or 4 and/or 6 or 8 valves depending on the specification
- All the benefits of the simple installation system are retained


- 100% more inputs/master
- 50% more outputs/master
- Improved peripheral error diagnostics
- More AS-interface functions in Specifications 2.1 and 3.0

→ Internet: as-interface


## AS-interface valve terminal with auxiliary power supply

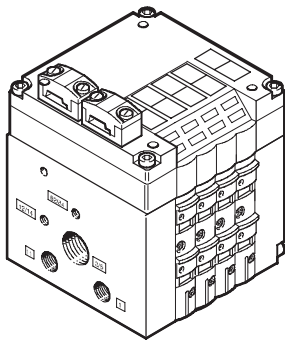

## AS-interface valve terminal with auxiliary power supply and inputs

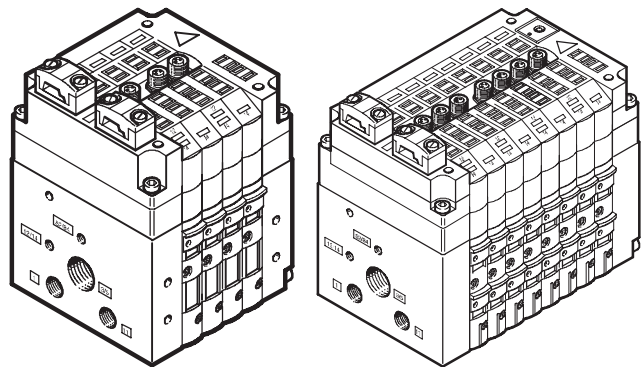

## CP/CPI installation system, valve terminal

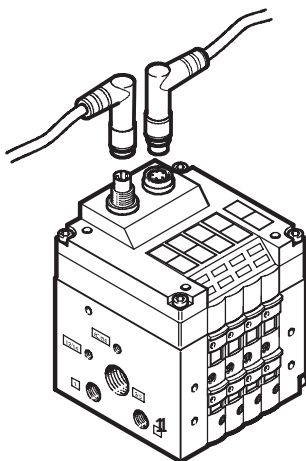

The integration of valve terminal type 10 into a fieldbus system or independent control system is accomplished by connecting the terminal to the corresponding fieldbus node or control block with simple, pre-assembled terminal connectors.

The installation system integrates the valve terminal CPV and various I/O modules, etc. into a single installation concept.

The 5-pin connecting cables carry the supply power and control signals. The valve terminal cover contains the LEDs which indicate the operating status and the protective circuits for the valves.

- Max. 8 valve slices for up to 16 CPV valves

The CP string is used to exchange the input and output states of the connected modules with the CP fieldbus node.


→ Internet: ctec

# Valve terminals type 10 CPV, Compact Performance, NPT

Key features – Electrical components

**FESTO**

## Fieldbus Direct valve terminal

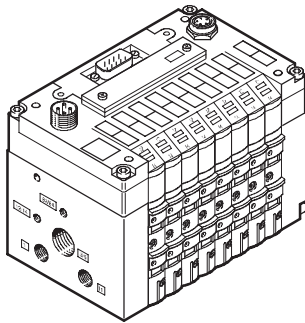

Fieldbus Direct is a system for connecting one valve terminal to nine different fieldbus standards. The most important systems, including Profibus, Interbus, DeviceNet and CANopen, are supported.

The CP string extension option

enables the functions and components of the CPI installation system to be used.

The optional string extension permits additional valve terminals and I/O modules with CP/CPI function to be connected to the Fieldbus Direct fieldbus node.

Depending on the version, the valve terminals are available in all three sizes, 10, 14 and 18 mm, each with 8 valve slices.

## ET200X/ET200pro pneumatic interface for CPV10 and CPV14




Adaptation of the CPV valve terminal to the input/output module ET200X/ET200pro from Siemens. The combination of the functional module of the ET200X/ET200pro and the pneumatic functions of the CPV valve terminal provides a highly integrateable automation solution for systems using electrical and

pneumatic drives with:

- 8 valve slices for up to 16 CPV valves
- Faster and more reliable contacting
- CPV 10 and CPV 14 valve terminals
- High degree of protection IP65/IP67
- Modular design

- Large number of I/O modules
  - digital I/O
  - analogue I/O
  - supply branching for activation of AC motors
- PROFIBUS DP interface

Mounting kit for ET200X  
CPV-...-VI-BG-ET200X  
(included in the scope of delivery)

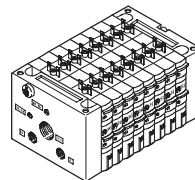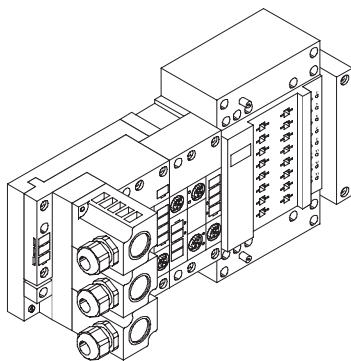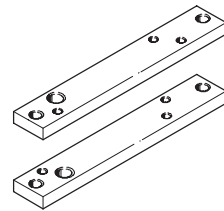

Specific data on the ET200X/ET200pro pneumatic interface can be found in Siemens product catalogues.

### Note

A moulded seal is required for the valve terminal CPV10-ET200pro in order to achieve the IP protection class.

The moulded seal CPV10-...-GE-8 or CPV14-...-GE-8 must be ordered separately.

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Instructions for use

## Equipment

Operate system equipment with unlubricated compressed air if possible. Festo valves and cylinders are designed so that, if used as designated, they will not require additional lubrication and will still achieve a long service life. The quality of compressed air downstream of the compressor must correspond to that of unlubricated compressed air. If possible, do not operate all your system equipment with lubricated compressed air. The lubricators should, where possible, always be installed directly upstream of the actuator used.

Incorrect additional oil and too high an oil content in the compressed air reduce the service life of the valve terminal.  
Use Festo special oil OFSW-32 or the alternatives listed in the Festo catalogue (as specified in DIN 51524 HLP32; basic oil viscosity 32 CST at 40 °C).

### Bio-oils

When using bio-oils (oils which are based on synthetic or native ester, e.g. rapeseed oil methyl ester), the maximum residual oil content of 0.1 mg/m<sup>3</sup> must not be exceeded (see ISO 8573-1 Class 2).

### Mineral oils

When using mineral oils (e.g. HLP oils to DIN 51524, parts 1 to 3) or similar oils based on poly-alpha-olefins (PAO), the maximum residual oil content of 5 mg/m<sup>3</sup> must not be exceeded (see ISO 8573-1 Class 4). A higher residual oil content irrespective of the compressor oil cannot be permitted, as the basic lubricant would be flushed out over time.

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Technical data

Flow rate

CPV10: 400 l/min

CPV14: 800 l/min

CPV18: 11,600 l/min

-  -

Valve width

CPV10: 10 mm

CPV14: 14 mm

CPV18: 18 mm

Voltage

24 V DC



| General technical data              |         |                                                                              |             |       |
|-------------------------------------|---------|------------------------------------------------------------------------------|-------------|-------|
|                                     |         | CPV10                                                                        | CPV14       | CPV18 |
| Design                              |         | Electromagnetically actuated piston spool valve                              |             |       |
| Lubrication                         |         | Lubricated for life, PWIS-free (free of paint-wetting impairment substances) |             |       |
| Type of mounting                    |         | Via pneumatic multiple connector plate                                       |             |       |
|                                     |         | Via backwall                                                                 |             |       |
|                                     |         | On H-rail                                                                    |             |       |
| Mounting position                   |         | Any                                                                          |             |       |
| Manual override                     |         | Non-detenting/detenting/blocked                                              |             |       |
| Width                               | [mm]    | 10                                                                           | 14          | 18    |
| Nominal size                        | [mm]    | 4                                                                            | 6           | 8     |
| Nominal flow rate without fitting   | [l/min] | 400                                                                          | 800         | 1,600 |
| Pneumatic connections <sup>1)</sup> |         |                                                                              |             |       |
| Pneumatic connection                |         | Via end plate or pneumatic multiple connector plate                          |             |       |
| Supply port                         | 1/11    | G1/8                                                                         | G1/4        | G3/8  |
| Exhaust port                        | 3/5     | G3/8 (G1/4)                                                                  | G1/2 (G3/8) | G1/2  |
| Working ports                       | 2/4     | M7                                                                           | G1/8        | G1/4  |
| Pilot air supply port               | 12/14   | M5 (M7)                                                                      | G1/4        | G1/4  |
| Pilot exhaust air port              | 82/84   | M5 (M7)                                                                      | G1/8        | G1/4  |

1) Connection dimensions in brackets for pneumatic multiple connector plate.

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Technical data

| Operating and environmental conditions                               |                                                                       |                                           |       |       |       |    |              |              |       |       |   |   |
|----------------------------------------------------------------------|-----------------------------------------------------------------------|-------------------------------------------|-------|-------|-------|----|--------------|--------------|-------|-------|---|---|
| Valve function order code                                            | M, MK                                                                 | F                                         | J, JK | N, NK | C, CK | CY | H, HK        | G            | D, DK | I, IK | A | E |
| Operating medium                                                     | Filtered compressed air, lubricated or unlubricated, inert gases → 36 |                                           |       |       |       |    |              |              |       |       |   |   |
| Grade of filtration                                                  | [μm]                                                                  | 40 (average pore size)                    |       |       |       |    |              |              |       |       |   |   |
| Operating pressure                                                   | [bar]                                                                 | −0.9 ... +10                              |       |       |       |    | +0.1 ... +10 | −0.9 ... +10 |       |       |   |   |
| Operating pressure for valve terminal with internal pilot air supply | [bar]                                                                 | 3 ... 8                                   |       |       |       |    |              |              |       |       |   |   |
| Pilot pressure                                                       | [bar]                                                                 | 3 ... 8                                   |       |       |       |    |              |              |       |       |   |   |
| Ambient temperature                                                  | [°C]                                                                  | −5 ... +50 (vacuum generators: 0 ... +50) |       |       |       |    |              |              |       |       |   |   |
| Temperature of medium                                                | [°C]                                                                  | −5 ... +50 (vacuum generators: 0 ... +50) |       |       |       |    |              |              |       |       |   |   |
| Storage temperature                                                  | [°C]                                                                  | −20 ... +40                               |       |       |       |    |              |              |       |       |   |   |
| Relative air humidity at 25 °C                                       | [%]                                                                   | 95 with no condensation                   |       |       |       |    |              |              |       |       |   |   |
| Corrosion resistance class CRC <sup>1)</sup>                         |                                                                       | 2                                         |       |       |       |    |              |              |       |       |   | 1 |

1) Corrosion resistance class 1 according to Festo standard 940 070

Components subject to low corrosion stress. Transport and storage protection. Parts that do not have primarily decorative surface requirements, e.g. in internal areas that are not visible or behind covers.

Corrosion resistance class 2 according to Festo standard 940 070

Components subject to moderate corrosion stress. Externally visible parts with primarily decorative surface requirements which are in direct contact with a normal industrial environment or media such as coolants or lubricating agents.

| Certifications                                                                             |                                                             |
|--------------------------------------------------------------------------------------------|-------------------------------------------------------------|
| This product is approved for use in the ATEX zone in accordance with the EU ATEX directive |                                                             |
| ATEX category for gas                                                                      | II 3G                                                       |
| Ex ignition protection type for gas                                                        | Ex nA II T4 X                                               |
| ATEX category for dust                                                                     | II 3D                                                       |
| Ex ignition protection type for dust                                                       | Ex tD A22 IP54 T110° C X                                    |
| ATEX ambient temperature [°C]                                                              | -5 ≤ Ta ≤ +50                                               |
| Certification                                                                              | c UL us Recognized (OL)                                     |
| CE mark (see declaration of conformity)                                                    | In accordance with EU low voltage directive                 |
|                                                                                            | In accordance with EU explosion protection directive (ATEX) |

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Technical data

| Electrical data                                                                                                |        |                                                                     |                                       |
|----------------------------------------------------------------------------------------------------------------|--------|---------------------------------------------------------------------|---------------------------------------|
|                                                                                                                |        | CPV10                                                               | CPV14 CPV18                           |
| Operating voltage                                                                                              | [V DC] | 24 (+10/-15%)                                                       |                                       |
| Edge steepness<br>(IC and MP only)                                                                             | [V/ms] | > 0.4 minimum voltage increase time to reach the high-current phase |                                       |
| Limitation of the voltage peaks<br>when switching off                                                          | [V DC] | 38                                                                  |                                       |
| Residual ripple                                                                                                | [Vss]  | 4                                                                   |                                       |
| Electrical power consumption                                                                                   | [W]    | 0.6 (0.45 at 21 V);<br>(with CPV10-M11H-... 0.65)                   | 0.9 (0.65 at 21 V) 1.5 (0.95 at 21 V) |
| Duty cycle                                                                                                     | [%]    | 100                                                                 |                                       |
| With pilot air supply                                                                                          | [bar]  | -0.9 ... +10                                                        |                                       |
| Protection against electric shock<br>(protection against direct and indirect<br>contact to EN 60204-1/IEC 204) |        | By means of PELV power supply unit                                  |                                       |
| Protection class to EN 60529                                                                                   | [IP]   | 65 (for all types of signal transmission in assembled state)        |                                       |

| Relay plate                  |        |                                      |             |
|------------------------------|--------|--------------------------------------|-------------|
|                              |        | CPV10                                | CPV14 CPV18 |
| Operating voltage            | [V DC] | 20.4 ... 26.4                        | -           |
| Electrical power consumption | [W]    | 1.2                                  | -           |
| No. of relays                |        | 2 with galvanically isolated outputs | -           |
| Load current circuit         |        | Each 1 A/24 V DC +10%                | -           |
| Relay response times         | on     | [ms]                                 | 5           |
|                              | off    | [ms]                                 | 2           |

| Valve switching times [ms] |                    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |   |    |
|----------------------------|--------------------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|---|----|
| Valve function order code  |                    | M  | MK | F  | J  | JK | N  | NK | C  | CK | CY | H  | HK | G  | D  | DK | I  | IK | A | E  |
| CPV10                      |                    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |   |    |
| Switching times            | on                 | 17 | 17 | 12 | –  | –  | 17 | 17 | 17 | 17 | 17 | 17 | 17 | 20 | 15 | 15 | 15 | 15 | – | 15 |
|                            | off                | 27 | 27 | 17 | –  | –  | 25 | 25 | 25 | 25 | 25 | 25 | 25 | 30 | 17 | 17 | 17 | 17 | – | 17 |
|                            | chan<br>geov<br>er | –  | –  | –  | 10 | 10 | –  | –  | –  | –  | –  | –  | –  | –  | –  | –  | –  | –  | – | –  |
|                            |                    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |   |    |
| CPV14                      |                    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |   |    |
| Switching times            | on                 | 25 | 25 | –  | –  | –  | 24 | 24 | 24 | 24 | –  | 24 | 24 | 22 | 13 | 13 | 13 | 13 | – | 13 |
|                            | off                | 35 | 35 | –  | –  | –  | 30 | 30 | 30 | 30 | –  | 30 | 30 | 30 | 16 | 16 | 16 | 16 | – | 16 |
|                            | chan<br>geov<br>er | –  | –  | –  | 12 | 12 | –  | –  | –  | –  | –  | –  | –  | –  | –  | –  | –  | –  | – | –  |
|                            |                    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |   |    |
| CPV18                      |                    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |   |    |
| Switching times            | on                 | 18 | –  | –  | –  | –  | 18 | –  | 18 | –  | –  | –  | –  | 14 | 14 | –  | 14 | –  | – | 14 |
|                            | off                | 26 | –  | –  | –  | –  | 24 | –  | 24 | –  | –  | –  | –  | 32 | 20 | –  | 20 | –  | – | 20 |
|                            | chan<br>geov<br>er | –  | –  | –  | 12 | –  | –  | –  | –  | –  | –  | –  | –  | –  | –  | –  | –  | –  | – | –  |

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO

Technical data

| Materials                          |                                               |       |       |
|------------------------------------|-----------------------------------------------|-------|-------|
|                                    | CPV10                                         | CPV14 | CPV18 |
| Basic electrical unit              | Die-cast aluminium, polyamide, nitrile rubber |       |       |
| Valve slices                       | Die-cast aluminium                            |       |       |
| Valve module 5/3G                  | Cast aluminium, polyacetal                    |       |       |
| Relay plate                        | Polyamide, brass                              |       |       |
| Blanking plate/separator plate     | Polyamide                                     |       |       |
| End plates                         | Die-cast aluminium                            |       |       |
| Flat plate silencer                | Die-cast aluminium, polyethylene              |       |       |
| Pneumatic multiple connector plate | Wrought aluminium alloy                       |       |       |
| Inscription label holder           | Polyacetal, polyvinyl chloride                |       |       |
| Seal                               | Nitrile rubber, hydrogenated nitrile rubber   |       |       |

| Product weight                                    |  |     |       |       |       |
|---------------------------------------------------|--|-----|-------|-------|-------|
| Approx. weight                                    |  | [g] | CPV10 | CPV14 | CPV18 |
| Electrical connection plates with AS-i connection |  |     |       |       |       |
| • on CP valve terminals with 2 valve positions    |  | 85  | 130   | 275   |       |
| • on CP valve terminals with 4 valve positions    |  | 110 | 175   | 355   |       |
| • on CP valve terminals with 8 valve positions    |  | 400 | 460   | –     |       |
| Electrical connection plates with CP connection   |  |     |       |       |       |
| • on CP valve terminals with 4 valve positions    |  | 145 | 230   | 375   |       |
| • on CP valve terminals with 6 valve positions    |  | 180 | 250   | 450   |       |
| • on CP valve terminals with 8 valve positions    |  | 200 | 300   | 540   |       |
| Electrical connection plates with MP connection   |  |     |       |       |       |
| • on CP valve terminals with 4 valve positions    |  | 110 | 170   | 400   |       |
| • on CP valve terminals with 6 valve positions    |  | 140 | 230   | 425   |       |
| • on CP valve terminals with 8 valve positions    |  | 165 | 275   | 515   |       |
| End plates (2 pieces)                             |  | 160 | 280   | 740   |       |
| Pneumatic multiple connector plate                |  |     |       |       |       |
| • on CP valve terminals with 2 valve positions    |  | 120 | 270   | 520   |       |
| • on CP valve terminals with 4 valve positions    |  | 165 | 390   | 750   |       |
| • on CP valve terminals with 6 valve positions    |  | 225 | 510   | 870   |       |
| • on CP valve terminals with 8 valve positions    |  | 270 | 630   | 1300  |       |
| Flat plate silencer                               |  | 147 | 234   | –     |       |
| Relay plate                                       |  | 35  | 55    | –     |       |
| Blanking plate                                    |  | 25  | 45    | 90    |       |
| Separator plate                                   |  | 25  | 45    | 90    |       |
| Valve sub-bases, vacuum generators                |  | 70  | 110   | 260   |       |
| Function block: 5/3G function                     |  | 46  | 105   | –     |       |
| Function block: One-way flow control valves       |  | 25  | 54    | 125   |       |




# Valve terminals type 10 CPV, Compact Performance, NPT

Technical data


FESTO

## Vacuum generators


Vacuum as a function of operating pressure

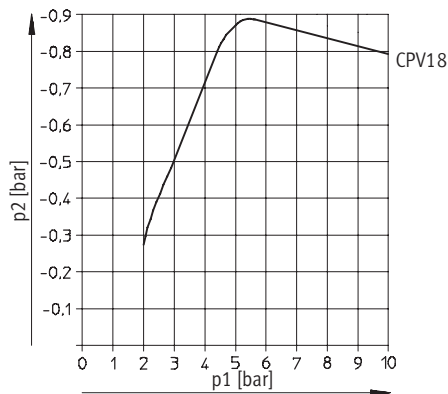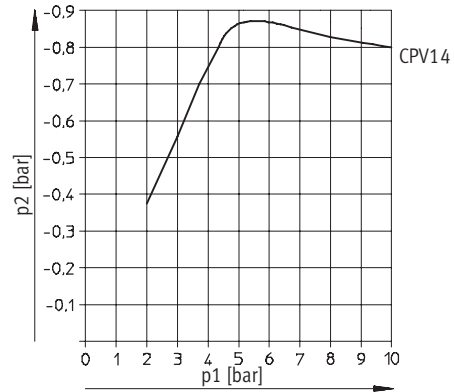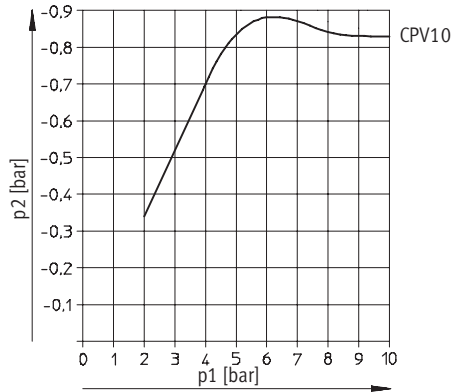


## Air consumption as a function of operating pressure

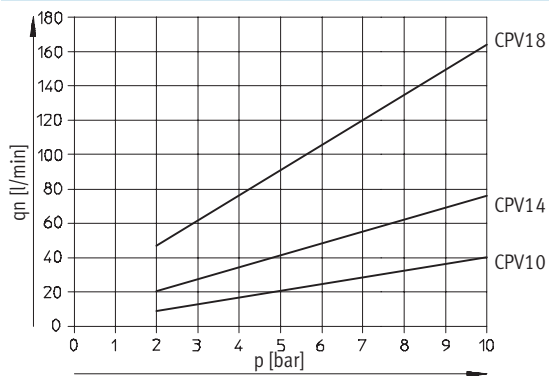

## Evacuation time for a volume of 1 litre at $P_{nominal}$

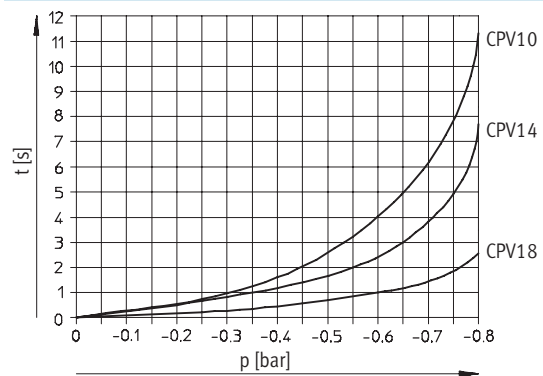

## Suction capacity as a function of partial vacuum at $P_{nominal}$

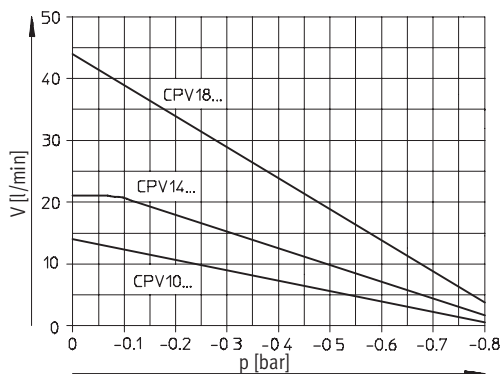

# Valve terminals type 10 CPV, Compact Performance, NPT


FESTO

Technical data

## Dimensions

Download CAD Data → [www.festo.com/us/cad](http://www.festo.com/us/cad)

Valve terminal with individual connections – CPV10/14/18

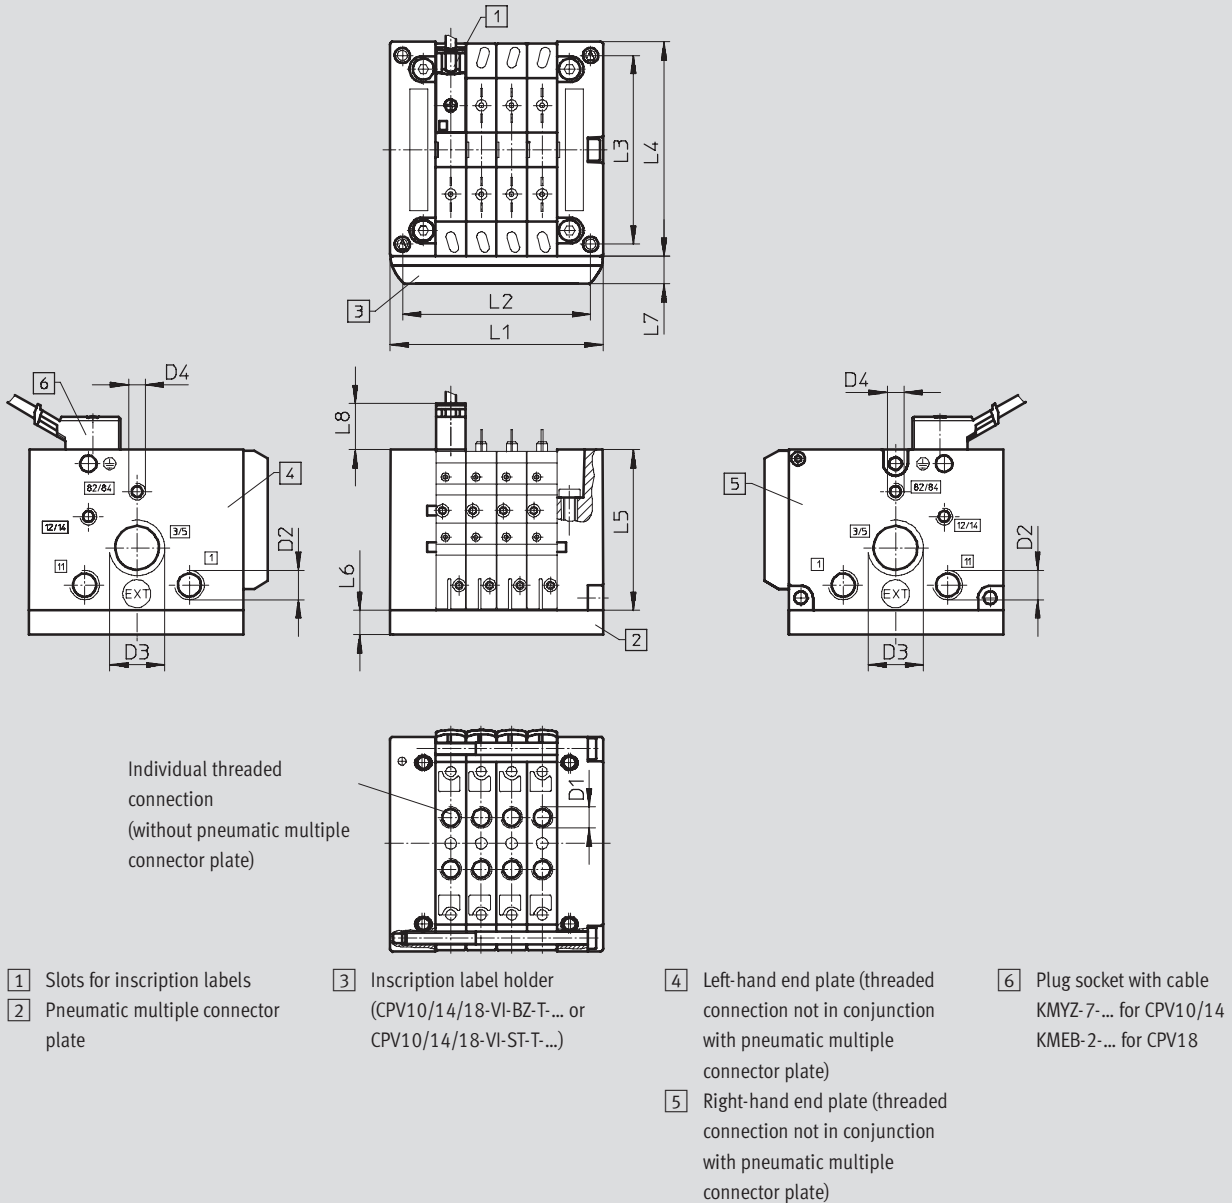

## Valve terminals type 10 CPV, Compact Performance, NPT

**FESTO**

Technical data

|       |         | L1  | L2    | L3    | L4  | L5   | L6 | L7  | L8   | D1              | D2              | D3              | D4              |
|-------|---------|-----|-------|-------|-----|------|----|-----|------|-----------------|-----------------|-----------------|-----------------|
| CPV10 | 2-valve | 50  | 41.8  | 62    | 71  | 52.8 | 15 | 9.5 | 11.8 | M7              | G $\frac{1}{8}$ | G $\frac{3}{8}$ | M5              |
|       | 3-valve | 60  | 51.8  |       |     |      |    |     |      |                 |                 |                 |                 |
|       | 4-valve | 70  | 61.8  |       |     |      |    |     |      |                 |                 |                 |                 |
|       | 5-valve | 80  | 71.8  |       |     |      |    |     |      |                 |                 |                 |                 |
|       | 6-valve | 90  | 81.8  |       |     |      |    |     |      |                 |                 |                 |                 |
|       | 7-valve | 100 | 91.8  |       |     |      |    |     |      |                 |                 |                 |                 |
|       | 8-valve | 110 | 101.8 |       |     |      |    |     |      |                 |                 |                 |                 |
| CPV14 | 2-valve | 68  | 58    | 78    | 89  | 58.8 | 20 | 9.5 | 11.8 | G $\frac{1}{8}$ | G $\frac{1}{4}$ | G $\frac{1}{2}$ | G $\frac{1}{8}$ |
|       | 3-valve | 82  | 72    |       |     |      |    |     |      |                 |                 |                 |                 |
|       | 4-valve | 96  | 86    |       |     |      |    |     |      |                 |                 |                 |                 |
|       | 5-valve | 110 | 100   |       |     |      |    |     |      |                 |                 |                 |                 |
|       | 6-valve | 124 | 114   |       |     |      |    |     |      |                 |                 |                 |                 |
|       | 7-valve | 138 | 128   |       |     |      |    |     |      |                 |                 |                 |                 |
|       | 8-valve | 152 | 142   |       |     |      |    |     |      |                 |                 |                 |                 |
| CPV18 | 2-valve | 96  | 85.5  | 106.5 | 118 | 73   | 20 | 9.5 | 21.6 | G $\frac{1}{4}$ | G $\frac{3}{8}$ | G $\frac{1}{2}$ | G $\frac{1}{4}$ |
|       | 3-valve | 114 | 103.5 |       |     |      |    |     |      |                 |                 |                 |                 |
|       | 4-valve | 132 | 121.5 |       |     |      |    |     |      |                 |                 |                 |                 |
|       | 5-valve | 150 | 139.5 |       |     |      |    |     |      |                 |                 |                 |                 |
|       | 6-valve | 168 | 157.5 |       |     |      |    |     |      |                 |                 |                 |                 |
|       | 7-valve | 186 | 175.5 |       |     |      |    |     |      |                 |                 |                 |                 |
|       | 8-valve | 204 | 193.5 |       |     |      |    |     |      |                 |                 |                 |                 |

# Valve terminals type 10 CPV, Compact Performance, NPT


FESTO

Technical data

## Dimensions

Download CAD Data → [www.festo.com/us/cad](http://www.festo.com/us/cad)

Valve terminal with individual connections and flat plate silencers – CPV10/14/18

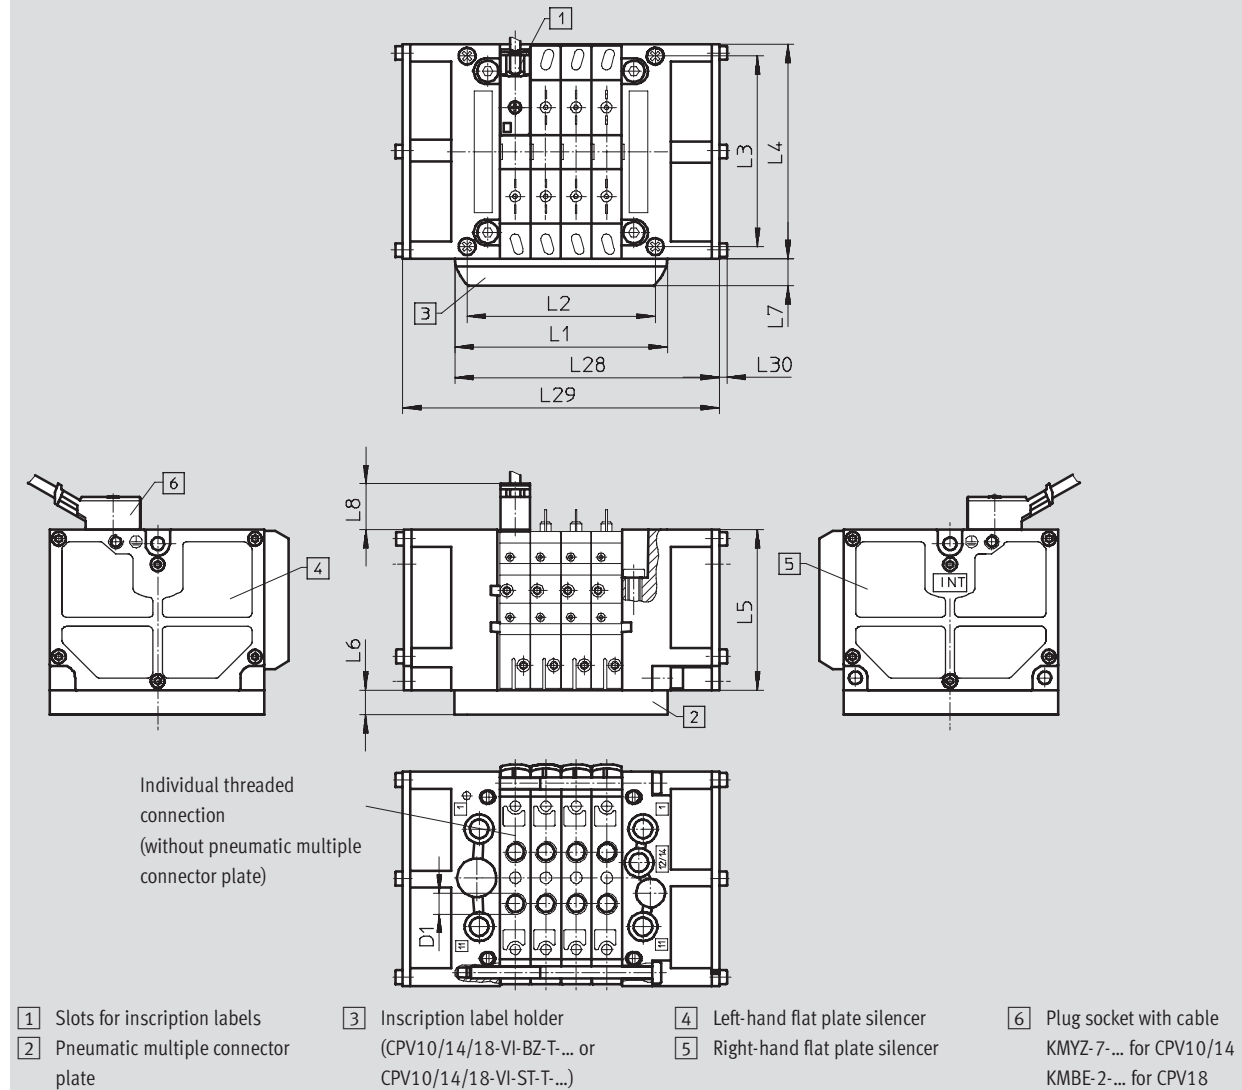

## Valve terminals type 10 CPV, Compact Performance, NPT

**FESTO**

Technical data

|       |         | L1  | L2    | L3    | L4  | L5   | L6 | L7  | L8   | L28 | L29 | L30  | D1              |
|-------|---------|-----|-------|-------|-----|------|----|-----|------|-----|-----|------|-----------------|
| CPV10 | 2-valve | 50  | 41.8  | 62    | 71  | 52.8 | 15 | 9.5 | 11.8 | 67  | 84  | 2.5  | M7              |
|       | 3-valve | 60  | 51.8  |       |     |      |    |     |      | 77  | 94  |      |                 |
|       | 4-valve | 70  | 61.8  |       |     |      |    |     |      | 87  | 104 |      |                 |
|       | 5-valve | 80  | 71.8  |       |     |      |    |     |      | 97  | 114 |      |                 |
|       | 6-valve | 90  | 81.8  |       |     |      |    |     |      | 107 | 124 |      |                 |
|       | 7-valve | 100 | 91.8  |       |     |      |    |     |      | 117 | 134 |      |                 |
|       | 8-valve | 110 | 101.8 |       |     |      |    |     |      | 127 | 144 |      |                 |
| CPV14 | 2-valve | 68  | 58    | 78    | 89  | 58.8 | 20 | 9.5 | 11.8 | 85  | 102 | 3    | G $\frac{1}{8}$ |
|       | 3-valve | 82  | 72    |       |     |      |    |     |      | 99  | 116 |      |                 |
|       | 4-valve | 96  | 86    |       |     |      |    |     |      | 113 | 130 |      |                 |
|       | 5-valve | 110 | 100   |       |     |      |    |     |      | 127 | 144 |      |                 |
|       | 6-valve | 124 | 114   |       |     |      |    |     |      | 141 | 158 |      |                 |
|       | 7-valve | 138 | 128   |       |     |      |    |     |      | 155 | 172 |      |                 |
|       | 8-valve | 152 | 142   |       |     |      |    |     |      | 169 | 186 |      |                 |
| CPV18 | 2-valve | 96  | 85.5  | 106.5 | 118 | 73   | 20 | 9.5 | 21.6 | 127 | 158 | 4.55 | G $\frac{1}{4}$ |
|       | 3-valve | 114 | 105.5 |       |     |      |    |     |      | 145 | 176 |      |                 |
|       | 4-valve | 132 | 121.5 |       |     |      |    |     |      | 163 | 194 |      |                 |
|       | 5-valve | 150 | 139.5 |       |     |      |    |     |      | 181 | 212 |      |                 |
|       | 6-valve | 168 | 157.5 |       |     |      |    |     |      | 199 | 230 |      |                 |
|       | 7-valve | 186 | 175.5 |       |     |      |    |     |      | 217 | 248 |      |                 |
|       | 8-valve | 204 | 193.5 |       |     |      |    |     |      | 235 | 266 |      |                 |

# Valve terminals type 10 CPV, Compact Performance, NPT


FESTO

Technical data

## Dimensions

Download CAD Data → [www.festo.com/us/cad](http://www.festo.com/us/cad)

Valve terminal with multi-pin plug connection – CPV10/14/18

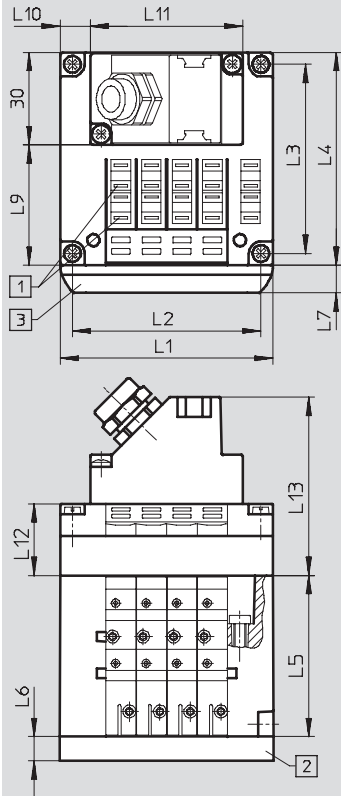

1 Slots for inscription labels

2 Pneumatic multiple connector plate

3 Inscription label holder  
(CPV10/14/18-VI-BZ-T... or  
CPV10/14/18-VI-ST-T...)

|       |         | L1  | L2    | L3    | L4  | L5   | L6 | L7  | L9   | L10 | L11 | L12  | L13  |
|-------|---------|-----|-------|-------|-----|------|----|-----|------|-----|-----|------|------|
| CPV10 | 4-valve | 70  | 61.8  | 62    | 71  | 52.8 | 15 | 9.5 | 39.5 | 10  | 50  | 23.5 | 58.8 |
|       | 6-valve | 90  | 81.8  |       |     |      |    |     |      | 10  | 70  |      |      |
|       | 8-valve | 110 | 101.8 |       |     |      |    |     |      | 20  | 70  |      |      |
| CPV14 | 4-valve | 96  | 86    | 78    | 89  | 58.8 | 20 | 9.5 | 61.8 | 23  | 50  | 23.5 | 58.8 |
|       | 6-valve | 124 | 114   |       |     |      |    |     |      | 27  | 70  |      |      |
|       | 8-valve | 152 | 142   |       |     |      |    |     |      | 41  | 70  |      |      |
| CPV18 | 4-valve | 132 | 121.5 | 106.5 | 118 | 73   | 20 | 9.5 | 88.4 | 41  | 50  | 28   | 63   |
|       | 6-valve | 168 | 157.5 |       |     |      |    |     |      | 49  | 70  |      |      |
|       | 8-valve | 204 | 193.5 |       |     |      |    |     |      | 67  | 70  |      |      |

# Valve terminals type 10 CPV, Compact Performance, NPT


FESTO

Technical data

## Dimensions

Download CAD Data → [www.festo.com/us/cad](http://www.festo.com/us/cad)

Valve terminal with AS-interface connection – CPV10/14/18

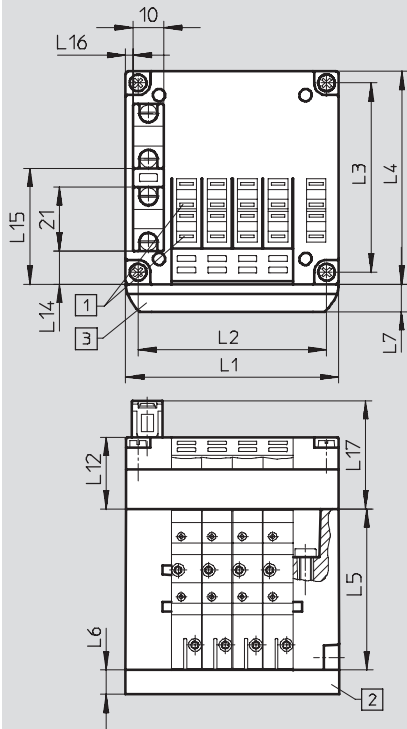

1 Slots for inscription labels

2 Pneumatic multiple connector plate

3 Inscription label holder  
(CPV10/14/18-VI-BZ-T... or  
CPV10/14/18-VI-ST-T...)

|       |         | L1  | L2    | L3    | L4  | L5   | L6 | L7  | L12  | L14  | L15  | L16  | L17  |
|-------|---------|-----|-------|-------|-----|------|----|-----|------|------|------|------|------|
| CPV10 | 2-valve | 50  | 41.8  | 62    | 71  | 52.8 | 15 | 9.5 | –    | 10.9 | 38.1 | 2.5  | 35.5 |
|       | 4-valve | 70  | 61.8  |       |     |      |    |     | 23.5 |      |      |      |      |
|       | 8-valve | 110 | 101.8 |       |     |      |    |     | –    |      |      |      |      |
| CPV14 | 2-valve | 68  | 58    | 78    | 89  | 58.8 | 20 | 9.5 | –    | 14   | 52   | 5    | 35.5 |
|       | 4-valve | 96  | 86    |       |     |      |    |     | 23.5 |      |      |      |      |
|       | 8-valve | 152 | 142   |       |     |      |    |     | –    |      |      |      |      |
| CPV18 | 2-valve | 96  | 85.5  | 106.5 | 118 | 73   | 20 | 9.5 | –    | 27.4 | 68.2 | 10.4 | 40   |
|       | 4-valve | 132 | 121.5 |       |     |      |    |     | 28   |      |      |      |      |
|       | 8-valve | 204 | 193.5 |       |     |      |    |     | –    |      |      |      |      |

# Valve terminals type 10 CPV, Compact Performance, NPT


Technical data

FESTO

## Dimensions


Download CAD Data → [www.festo.com/us/cad](http://www.festo.com/us/cad)

Valve terminal with AS-interface connection and additional inputs – CPV10/14

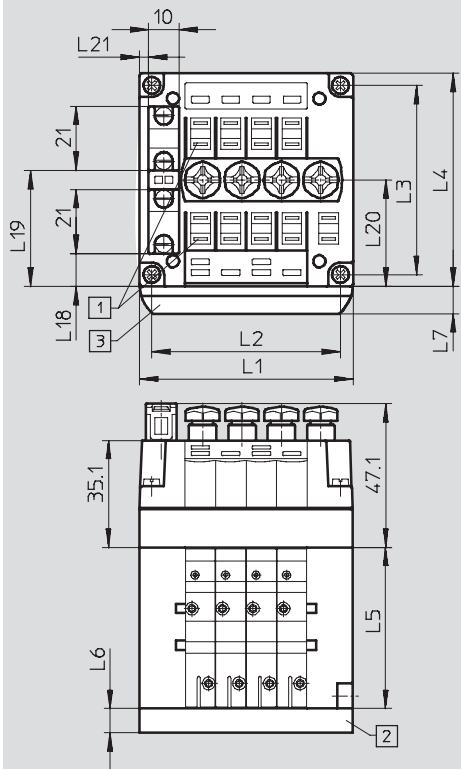

- 1 Slots for inscription labels
- 2 Pneumatic multiple connector plate
- 3 Inscription label holder (CPV10/14/18-VI-BZ-T... or CPV10/14/18-VI-ST-T...)

Valve terminal with AS-interface connection and additional inputs – CPV10

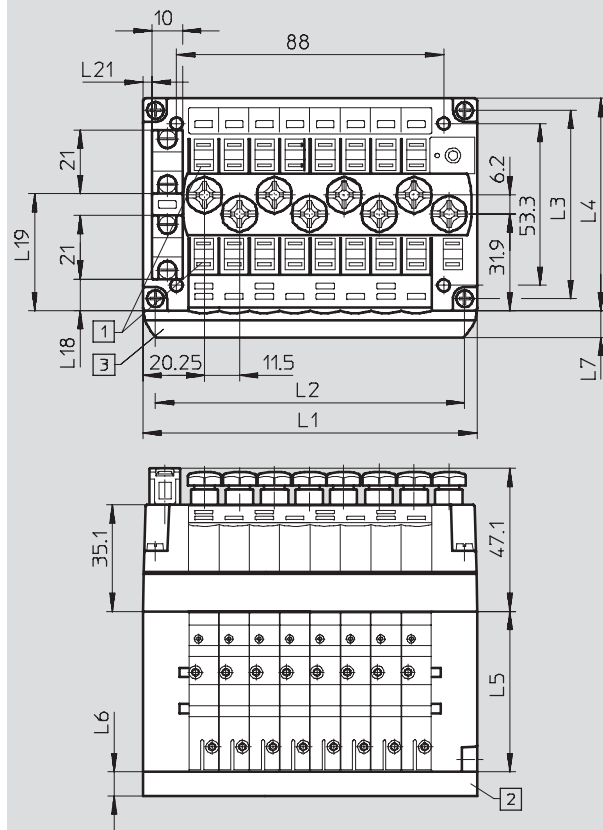

- 1 Slots for inscription labels
- 2 Pneumatic multiple connector plate
- 3 Inscription label holder (CPV10/14/18-VI-BZ-T... or CPV10/14/18-VI-ST-T...)

|       |         | L1  | L2    | L3 | L4 | L5   | L6 | L7  | L18  | L19  | L20  | L21 |
|-------|---------|-----|-------|----|----|------|----|-----|------|------|------|-----|
| CPV10 | 4-valve | 70  | 61.8  | 62 | 71 | 52.8 | 15 | 9.5 | 10.9 | 38.1 | 35   | 3   |
|       | 8-valve | 110 | 101.8 |    |    |      |    |     | 10.4 | 38.6 | 31.9 |     |
| CPV14 | 4-valve | 96  | 86    | 78 | 89 | 58.8 | 20 |     | 18.8 | 46.8 | 43.3 | 5   |


# Valve terminals type 10 CPV, Compact Performance, NPT

Technical data



Dimensions
Download CAD Data → [www.festo.com/us/cad](http://www.festo.com/us/cad)

Valve terminal with AS-interface connection and additional inputs – CPV14

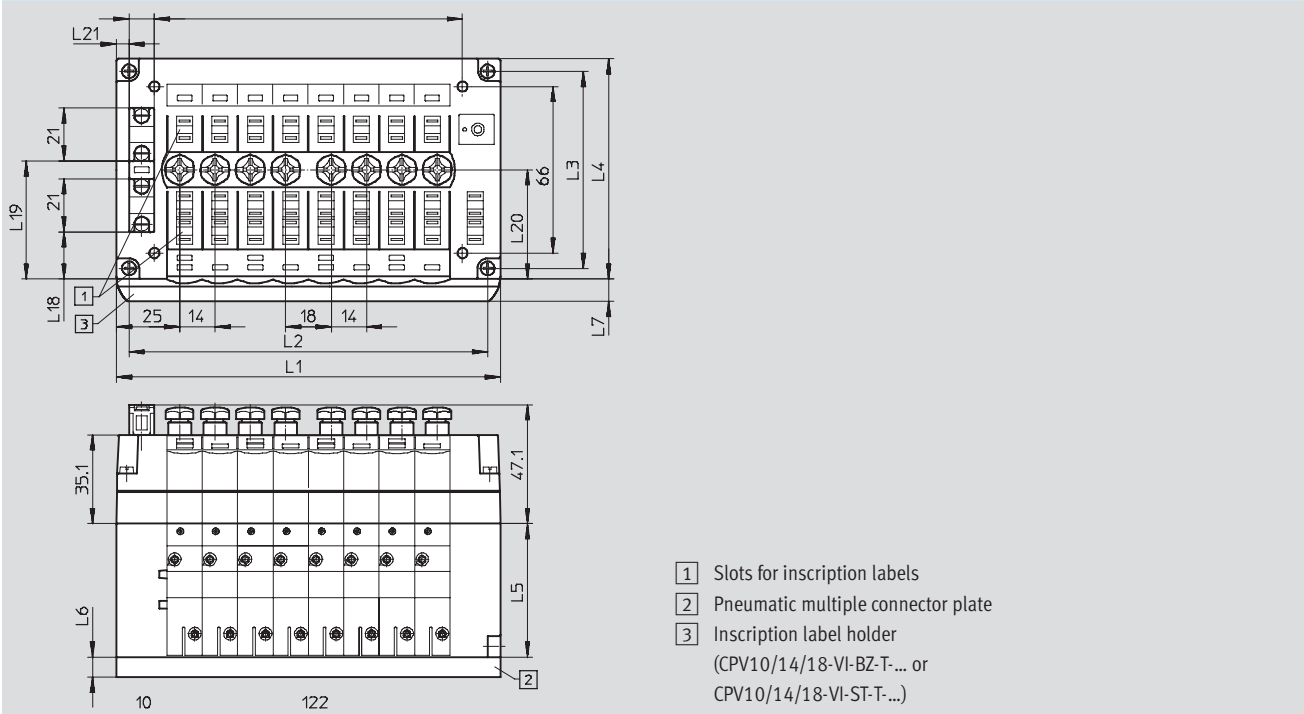

|       |         | L1  | L2  | L3 | L4 | L5   | L6 | L7  | L18  | L19  | L20  | L21 |
|-------|---------|-----|-----|----|----|------|----|-----|------|------|------|-----|
| CPV14 | 8-valve | 152 | 142 | 78 | 89 | 58.8 | 20 | 9.5 | 18.8 | 46.8 | 46.3 | 5   |

# Valve terminals type 10 CPV, Compact Performance, NPT


FESTO

Technical data

## Dimensions

Download CAD Data → [www.festo.com/us/cad](http://www.festo.com/us/cad)

Valve terminal with CPI installation system – CPV10/14/18

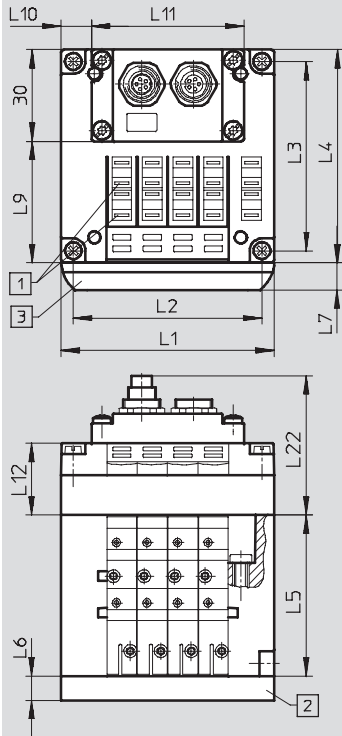

1 Slots for inscription labels

2 Pneumatic multiple connector plate

3 Inscription label holder  
(CPV10/14/18-VI-BZ-T-... or  
CPV10/14/18-VI-ST-T-...)

|       |         | L1  | L2    | L3    | L4  | L5   | L6 | L7  | L9   | L10 | L11 | L12  | L22  |
|-------|---------|-----|-------|-------|-----|------|----|-----|------|-----|-----|------|------|
| CPV10 | 4-valve | 70  | 61.8  | 62    | 71  | 52.8 | 15 | 9.5 | 39.5 | 10  | 50  | 23.5 | 46   |
|       | 6-valve | 90  | 81.8  |       |     |      |    |     |      | 10  | 70  |      |      |
|       | 8-valve | 110 | 101.8 |       |     |      |    |     |      | 20  | 70  |      |      |
| CPV14 | 4-valve | 96  | 86    | 78    | 89  | 58.8 | 20 | 9.5 | 61.8 | 23  | 50  | 23.5 | 46   |
|       | 6-valve | 124 | 114   |       |     |      |    |     |      | 27  | 70  |      |      |
|       | 8-valve | 152 | 142   |       |     |      |    |     |      | 41  | 70  |      |      |
| CPV18 | 4-valve | 132 | 121.5 | 106.5 | 118 | 73   | 20 | 9.5 | 88.4 | 41  | 50  | 28   | 50.5 |
|       | 6-valve | 168 | 157.5 |       |     |      |    |     |      | 49  | 70  |      |      |
|       | 8-valve | 204 | 193.5 |       |     |      |    |     |      | 67  | 70  |      |      |

# Valve terminals type 10 CPV, Compact Performance, NPT


Technical data

**FESTO**

## Dimensions


Download CAD Data → [www.festo.com/us/cad](http://www.festo.com/us/cad)

Valve terminal with Fieldbus Direct – CPV10/14/18  
Interbus

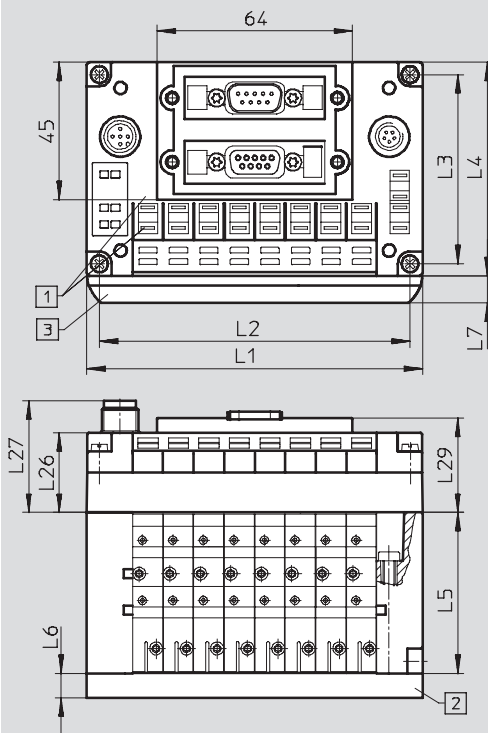

- 1 Slots for inscription labels
- 2 Pneumatic multiple connector plate
- 3 Inscription label holder (type CPV10/14/18-VI-BZ-T... or CPV10/14/18-VI-ST-T...)

Valve terminal with Fieldbus Direct – CPV10/14/18  
DeviceNet, CANopen, CC-Link

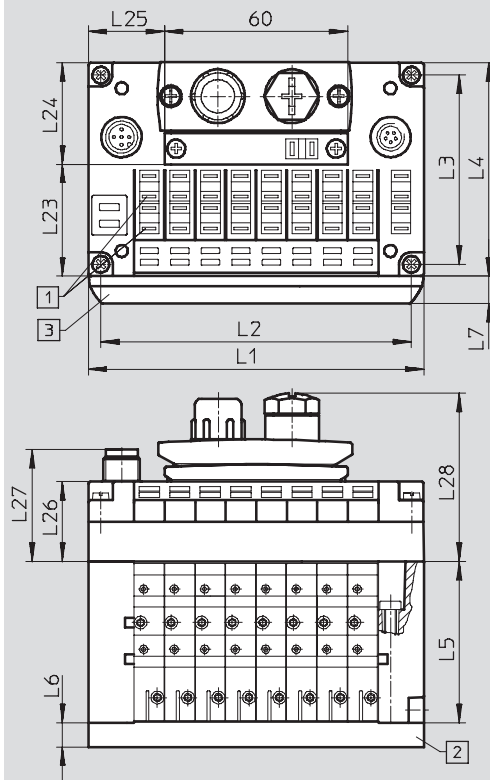

- 1 Slots for inscription labels
- 2 Pneumatic multiple connector plate
- 3 Inscription label holder (type CPV10/14/18-VI-BZ-T... or CPV10/14/18-VI-ST-T...)

|       |         | L1  | L2    | L3    | L4  | L5   | L6 | L7  | L23  | L24  | L25 | L26  | L27  | L28  | L29  |
|-------|---------|-----|-------|-------|-----|------|----|-----|------|------|-----|------|------|------|------|
| CPV10 | 8-valve | 110 | 101.8 | 62    | 71  | 52.8 | 15 | 9.5 | 35.8 | 34.6 | 25  | 26.2 | 36.7 | 55.1 | 30.9 |
| CPV14 | 8-valve | 152 | 142   | 78    | 89  | 58.8 | 20 | 9.5 | 52.8 | 34.6 | 46  | 26.2 | 36.7 | 55.1 | 30.9 |
| CPV18 | 8-valve | 204 | 193.5 | 106.5 | 118 | 73   | 20 | 9.5 | 79.8 | 36.6 | 72  | 31.2 | 41.7 | 59.6 | 35.9 |

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO


Technical data

## Dimensions

Download CAD Data → [www.festo.com/us/cad](http://www.festo.com/us/cad)

Valve terminal with Fieldbus Direct – CPV10/14/18

Profibus DP including Festo fieldbus, ABB CS31, Moeller Suconet K

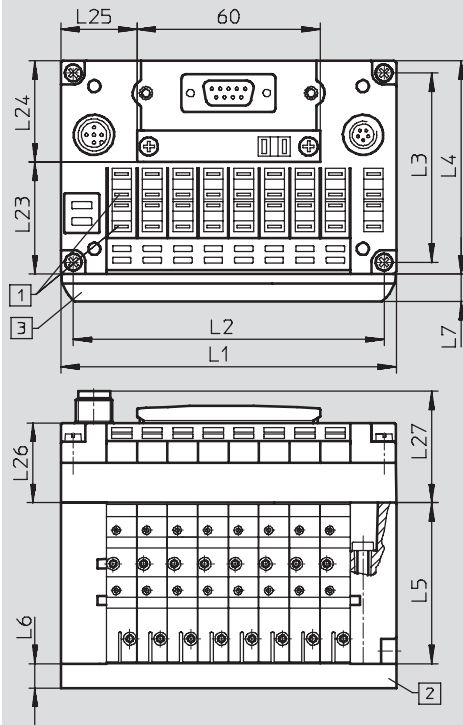

1 Slots for inscription labels

2 Pneumatic multiple connector plate

3 Inscription label holder  
(CPV10/14/18-VI-BZ-T-... or  
CPV10/14/18-VI-ST-T-...)


|       |         | L1  | L2    | L3    | L4  | L5   | L6 | L7  | L23  | L24  | L25 | L26  | L27  |
|-------|---------|-----|-------|-------|-----|------|----|-----|------|------|-----|------|------|
| CPV10 | 8-valve | 110 | 101.8 | 62    | 71  | 52.8 | 15 | 9.5 | 35.5 | 34.6 | 25  | 26.2 | 36.7 |
| CPV14 | 8-valve | 152 | 142   | 78    | 89  | 58.8 | 20 | 9.5 | 52.8 | 34.6 | 46  | 26.2 | 36.7 |
| CPV18 | 8-valve | 204 | 193.5 | 106.5 | 118 | 73   | 20 | 9.5 | 79.8 | 36.6 | 72  | 31.2 | 41.7 |

# Valve terminals type 10 CPV, Compact Performance, NPT


Technical data



Dimensions Download CAD Data → [www.festo.com/us/cad](http://www.festo.com/us/cad)  
Wall mounting CPV10/14-VI-BG-RWL-B for CPV10/14

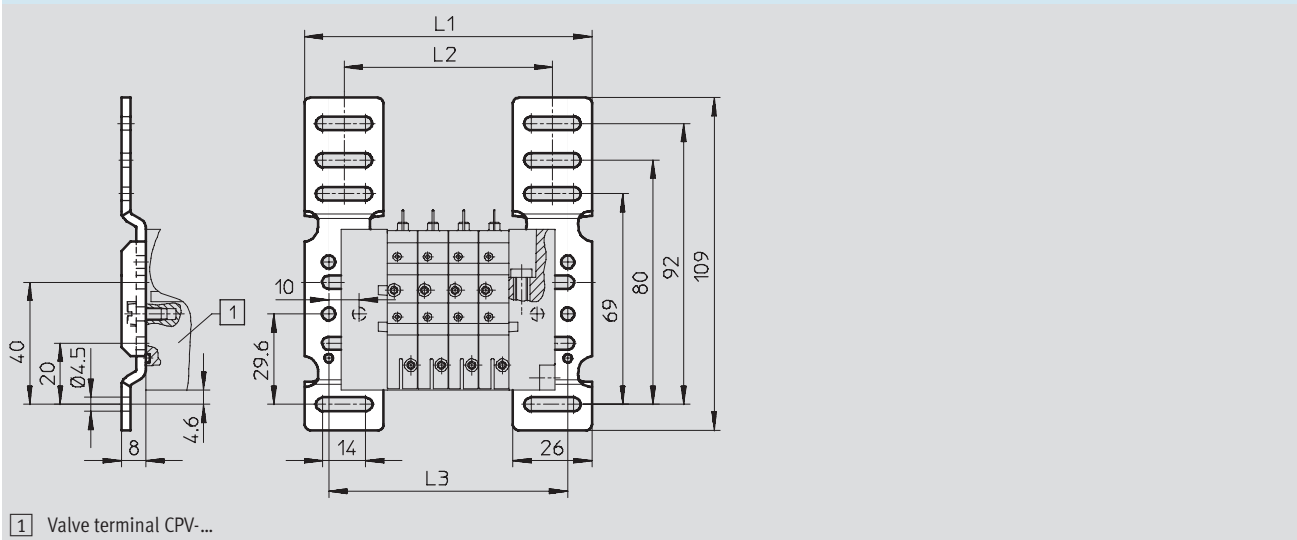

|    | CPV10   |         |         |         |         |         |         | CPV14   |         |         |         |         |         |         |
|----|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|
|    | 2-valve | 3-valve | 4-valve | 5-valve | 6-valve | 7-valve | 8-valve | 2-valve | 3-valve | 4-valve | 5-valve | 6-valve | 7-valve | 8-valve |
| L1 | 74      | 84      | 94      | 104     | 114     | 124     | 134     | 90      | 104     | 118     | 132     | 146     | 160     | 174     |
| L2 | 48      | 58      | 68      | 78      | 88      | 98      | 108     | 64      | 78      | 92      | 106     | 120     | 134     | 148     |
| L3 | 58      | 68      | 78      | 88      | 98      | 108     | 118     | 74      | 88      | 102     | 116     | 130     | 144     | 158     |

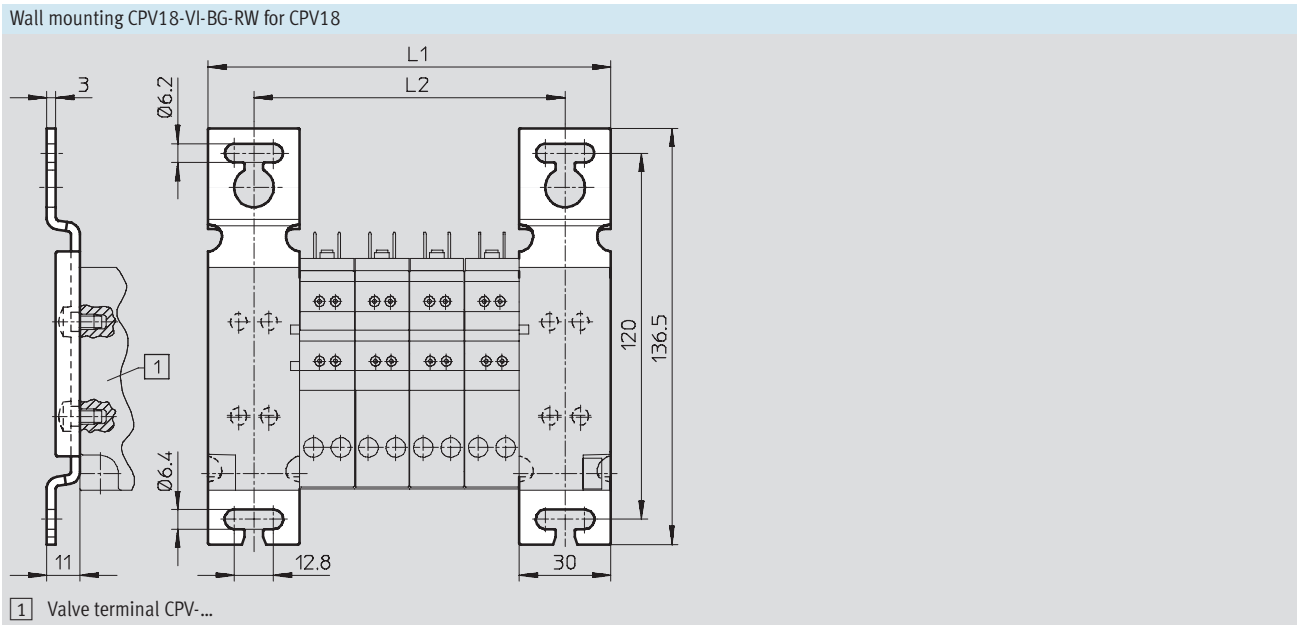

|    | CPV18   |         |         |         |         |         |         |
|----|---------|---------|---------|---------|---------|---------|---------|
|    | 2-valve | 3-valve | 4-valve | 5-valve | 6-valve | 7-valve | 8-valve |
| L1 | 96      | 114     | 132     | 150     | 168     | 186     | 204     |
| L2 | 66      | 84      | 102     | 120     | 138     | 156     | 174     |

# Valve terminals type 10 CPV, Compact Performance, NPT


Technical data

FESTO


## Dimensions

Download CAD Data → [www.festo.com/us/cad](http://www.festo.com/us/cad)

Attachment CPV10-VI-BG-ET200X for individual connection and ET200X

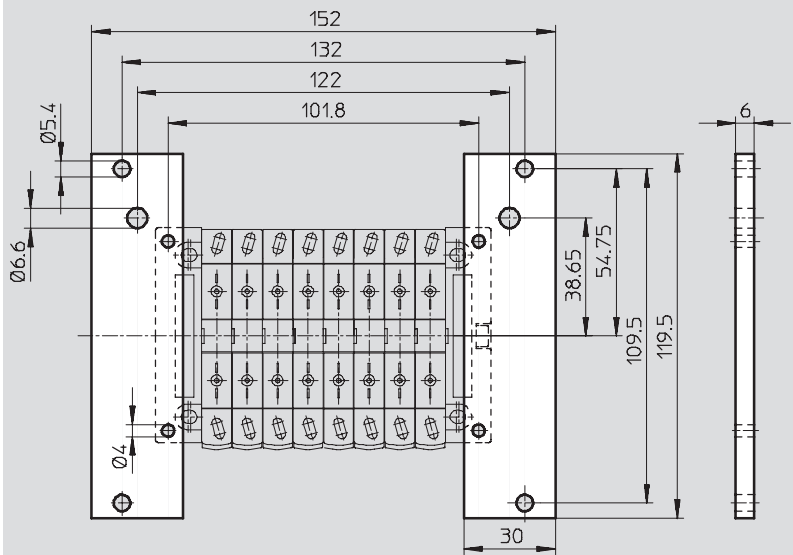

Attachment CPV14-VI-BG-ET200X for individual connection and ET200X

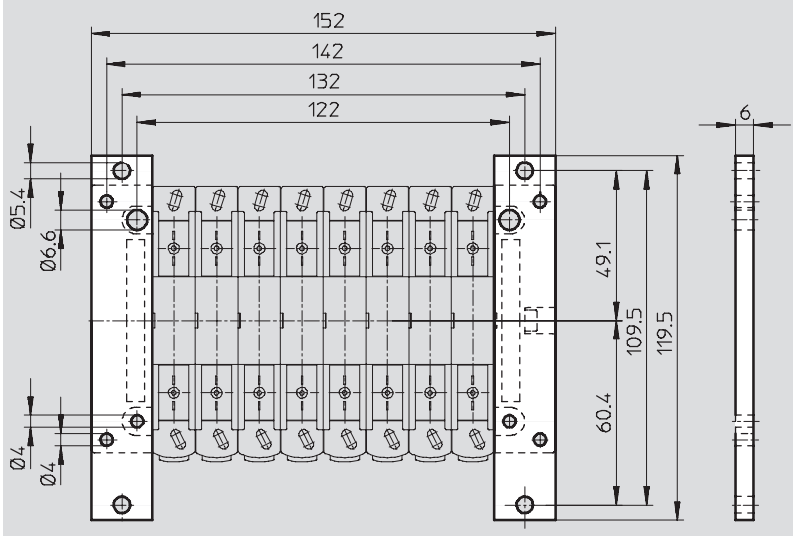

# Valve terminals type 10 CPV, Compact Performance, NPT


Technical data

**FESTO**

## Dimensions

Download CAD Data → [www.festo.com/us/cad](http://www.festo.com/us/cad)


Attachment for H-rail mounting CPV10/14-VI-BG-NRH-35

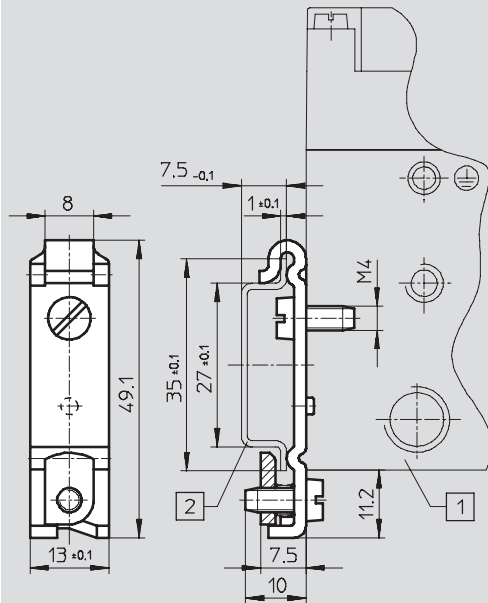

1 Valve terminal CPV10/14

2 H-rail to EN 60715

Attachment for H-rail mounting CPV18-VI-BG-NRH-35

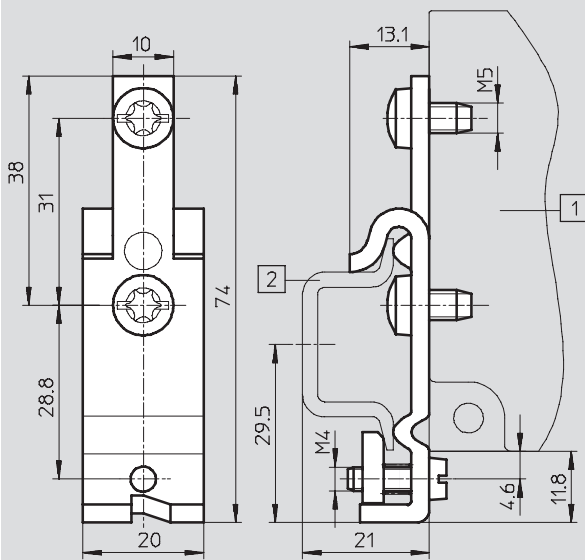

1 Valve terminal CPV18

2 H-rail to EN 60715

# Valve terminals type 10 CPV, Compact Performance, NPT


FESTO

Technical data

## Dimensions

Download CAD Data → [www.festo.com/us/cad](http://www.festo.com/us/cad)

Pneumatic multiple connector plate – CPV10/14/18

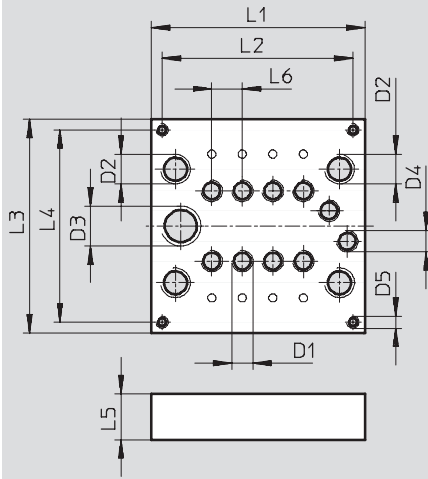

|       |         | L1    | L2    | L3    | L4   | L5 | L6 | D1              | D2              | D3              | D4              | D5 |
|-------|---------|-------|-------|-------|------|----|----|-----------------|-----------------|-----------------|-----------------|----|
| CPV10 | 2-valve | 49.5  | 42.5  | 70    | 63   | 15 | 10 | M7              | G $\frac{1}{8}$ | G $\frac{1}{4}$ | M7              | M4 |
|       | 4-valve | 69.5  | 62.5  |       |      |    |    |                 |                 |                 |                 |    |
|       | 6-valve | 89.5  | 82.5  |       |      |    |    |                 |                 |                 |                 |    |
|       | 8-valve | 109.5 | 102.5 |       |      |    |    |                 |                 |                 |                 |    |
| CPV14 | 2-valve | 67.5  | 53.5  | 86.6  | 76.6 | 20 | 14 | G $\frac{1}{8}$ | G $\frac{1}{4}$ | G $\frac{3}{8}$ | G $\frac{1}{8}$ | M4 |
|       | 4-valve | 95.5  | 81.5  |       |      |    |    |                 |                 |                 |                 |    |
|       | 6-valve | 123.5 | 109.5 |       |      |    |    |                 |                 |                 |                 |    |
|       | 8-valve | 151.5 | 137.5 |       |      |    |    |                 |                 |                 |                 |    |
| CPV18 | 2-valve | 95.5  | 87.5  | 119.6 | 108  | 20 | 18 | G $\frac{1}{4}$ | G $\frac{3}{8}$ | G $\frac{1}{2}$ | G $\frac{1}{4}$ | M5 |
|       | 4-valve | 131   | 123   |       |      |    |    |                 |                 |                 |                 |    |
|       | 6-valve | 167   | 159   |       |      |    |    |                 |                 |                 |                 |    |
|       | 8-valve | 203   | 195   |       |      |    |    |                 |                 |                 |                 |    |

# Valve terminals type 10 CPV, Compact Performance, NPT


Technical data

**FESTO**

## Dimensions

Download CAD Data → [www.festo.com/us/cad](http://www.festo.com/us/cad)

Pneumatic multiple connector plate with flange – CPV10/14/18

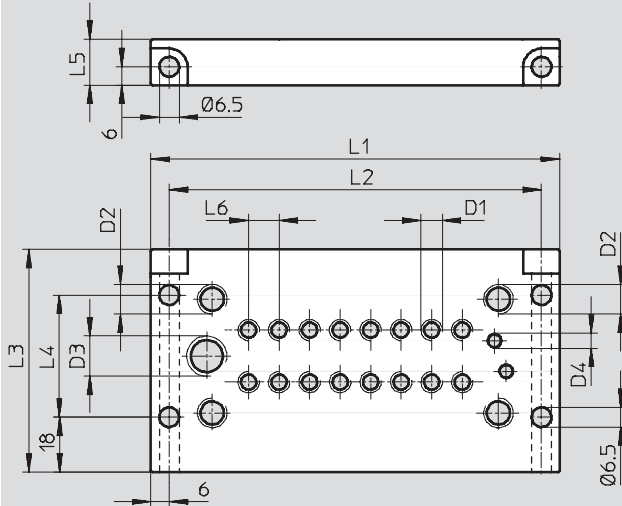

|       |         | L1  | L2  | L3  | L4 | L5 | L6 | D1              | D2              | D3              | D4              |
|-------|---------|-----|-----|-----|----|----|----|-----------------|-----------------|-----------------|-----------------|
| CPV10 | 2-valve | 74  | 62  | 73  | 40 | 15 | 10 | M7              | G $\frac{1}{8}$ | G $\frac{1}{4}$ | M5              |
|       | 4-valve | 94  | 82  |     |    |    |    |                 |                 |                 |                 |
|       | 6-valve | 114 | 102 |     |    |    |    |                 |                 |                 |                 |
|       | 8-valve | 134 | 122 |     |    |    |    |                 |                 |                 |                 |
| CPV14 | 2-valve | 92  | 80  | 89  | 59 | 20 | 14 | G $\frac{1}{8}$ | G $\frac{1}{4}$ | G $\frac{3}{8}$ | G $\frac{1}{8}$ |
|       | 4-valve | 120 | 108 |     |    |    |    |                 |                 |                 |                 |
|       | 6-valve | 148 | 136 |     |    |    |    |                 |                 |                 |                 |
|       | 8-valve | 176 | 164 |     |    |    |    |                 |                 |                 |                 |
| CPV18 | 2-valve | 119 | 107 | 118 | 88 | 20 | 18 | G $\frac{1}{4}$ | G $\frac{3}{8}$ | G $\frac{1}{2}$ | G $\frac{1}{4}$ |
|       | 4-valve | 155 | 143 |     |    |    |    |                 |                 |                 |                 |
|       | 6-valve | 191 | 179 |     |    |    |    |                 |                 |                 |                 |
|       | 8-valve | 227 | 215 |     |    |    |    |                 |                 |                 |                 |

# Valve terminals type 10 CPV, Compact Performance, NPT


FESTO

Technical data

## Dimensions

Download CAD Data → [www.festo.com/us/cad](http://www.festo.com/us/cad)


Pneumatic multiple connector plate for control cabinet installation, without supply connections – CPV10/14

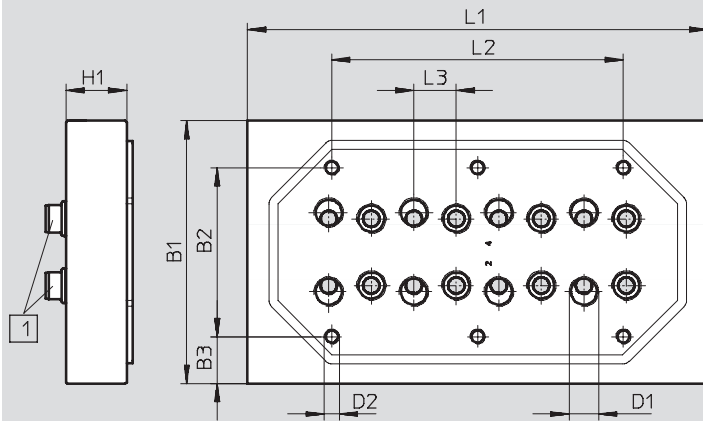

1 Seal

|       |         | L1    | L2 | L3 | B1   | B2   | B3   | D1              | D2 | H1 |
|-------|---------|-------|----|----|------|------|------|-----------------|----|----|
| CPV10 | 2-valve | 49.5  | –  | 10 | 70   | 40   | 15   | M7              | M5 | 10 |
|       | 4-valve | 69.5  | 28 |    |      |      |      |                 |    |    |
|       | 6-valve | 89.5  | 49 |    |      |      |      |                 |    |    |
|       | 8-valve | 109.5 | 68 |    |      |      |      |                 |    |    |
| CPV14 | 2-valve | 67.5  | 13 | 14 | 86.6 | 55.6 | 15.5 | G $\frac{1}{8}$ | M5 | 14 |
|       | 4-valve | 95.5  | 40 |    |      |      |      |                 |    |    |
|       | 6-valve | 123.5 | 68 |    |      |      |      |                 |    |    |
|       | 8-valve | 151.5 | 96 |    |      |      |      |                 |    |    |

Pneumatic multiple connector plate for control cabinet installation, without supply connections – CPV10/14

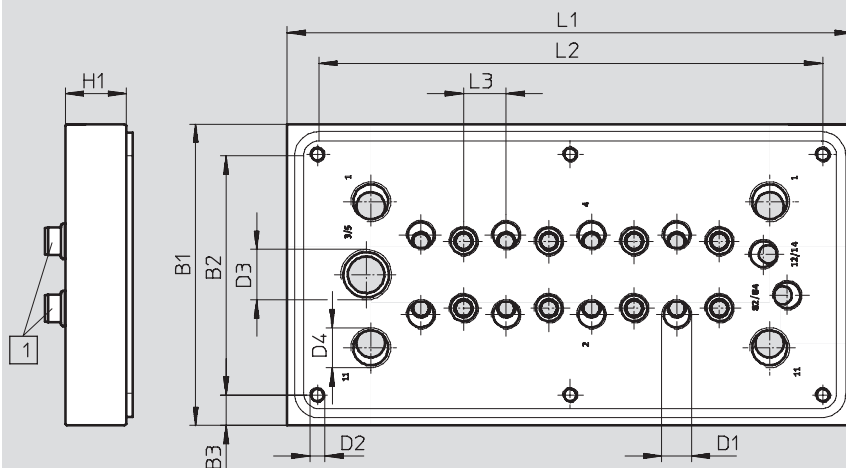

1 Seal

|       |         | L1  | L2  | L3 | B1 | B2 | B3 | D1              | D2 | D3              | D4              | H1 |
|-------|---------|-----|-----|----|----|----|----|-----------------|----|-----------------|-----------------|----|
| CPV10 | 2-valve | 82  | 62  | 10 | 84 | 64 | 10 | M7              | M5 | G $\frac{1}{4}$ | G $\frac{1}{8}$ | 15 |
|       | 4-valve | 102 | 82  |    |    |    |    |                 |    |                 |                 |    |
|       | 6-valve | 122 | 102 |    |    |    |    |                 |    |                 |                 |    |
|       | 8-valve | 142 | 122 |    |    |    |    |                 |    |                 |                 |    |
| CPV14 | 2-valve | 102 | 82  | 14 | 99 | 79 | 10 | G $\frac{1}{8}$ | M5 | G $\frac{3}{8}$ | G $\frac{1}{4}$ | 20 |
|       | 4-valve | 130 | 110 |    |    |    |    |                 |    |                 |                 |    |
|       | 6-valve | 158 | 138 |    |    |    |    |                 |    |                 |                 |    |
|       | 8-valve | 186 | 166 |    |    |    |    |                 |    |                 |                 |    |

# Valve terminals type 10 CPV, Compact Performance, NPT


Technical data

**FESTO**

## Dimensions

Download CAD Data → [www.festo.com/us/cad](http://www.festo.com/us/cad)

Valve kit for 5/3 function – CPV10/14

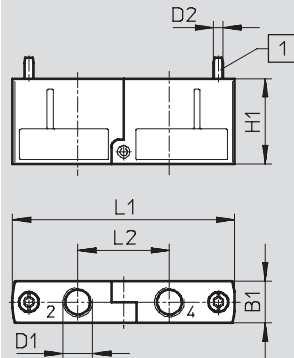


1 Mounting screw separately enclosed

| Type              | B1   | D1   | D2   | H1 | L1   | L2 |
|-------------------|------|------|------|----|------|----|
| CPV10-BS-5/3G-M7  | 9.9  | M7   | M2.5 | 22 | 55.8 | 23 |
| CPV14-BS-5/3G-1/8 | 13.8 | G1/8 | M3   | 28 | 72.8 | 30 |

## Additional one-way flow control valve function – CPV10/14


CPV10/14-...-BS-2xGR-...

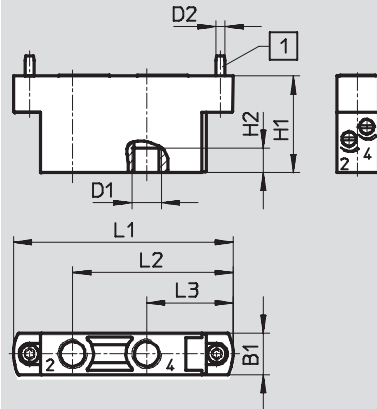

1 Mounting screw separately enclosed

## Additional one-way flow control valve function for vacuum – CPV10/14

CPV-...-BS-2xGRZ-V-...

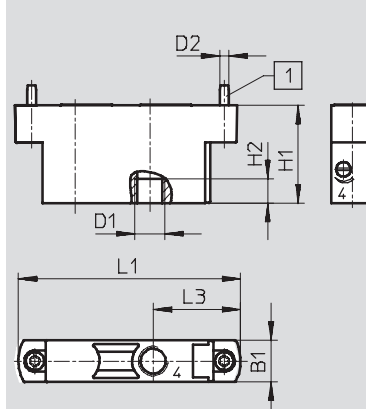

| Type                     | B1   | D1   | D2   | H1 | H2 | L1   | L2    | L3    |
|--------------------------|------|------|------|----|----|------|-------|-------|
| CPV10-BS-2xGR-...-M7     | 9.9  | M7   | M2.5 | 26 | 6  | 55.8 | 41.4  | 22.9  |
| CPV10-BS-2xGRZ-V-...-M7  |      |      |      |    |    |      | –     |       |
| CPV14-BS-2xGR-...-1/8    | 13.8 | G1/8 | M3   | 32 | 8  | 72.8 | 53.15 | 28.65 |
| CPV14-BS-2xGRZ-V-...-1/8 |      |      |      |    |    |      | –     |       |

# Valve terminals type 10 CPV, Compact Performance, NPT

Technical data



Dimensions

Download CAD Data → [www.festo.com/us/cad](http://www.festo.com/us/cad)

Fieldbus connection FBS-SUB-9-BU-2x4POL

1 Valve terminal with Fieldbus Direct CPV10/14/18 and fieldbus node for DeviceNet and CANopen

2 Sub-D socket, 9-pin

Fieldbus connection FBSD-KL-2x5POL

1 Valve terminal with Fieldbus Direct CPV10/14/18 and fieldbus node for DeviceNet and CANopen

2 Sub-D socket, 9-pin

3 Fieldbus connection FBSD-KL-2x5pol



|    | CPV10<br>8-valve | CPV14<br>8-valve | CPV18<br>8-valve |
|----|------------------|------------------|------------------|
| L1 | 24.5             | 45.5             | 71.5             |

|    | CPV10<br>8-valve | CPV14<br>8-valve | CPV18<br>8-valve |
|----|------------------|------------------|------------------|
| L1 | 24               | 45               | 71               |

# Valve terminals type 10 CPV, Compact Performance, NPT

Accessories








**FESTO**

| Ordering data                                                                       |      |                                                                                                |                           |          |
|-------------------------------------------------------------------------------------|------|------------------------------------------------------------------------------------------------|---------------------------|----------|
|                                                                                     | Code | Valve function                                                                                 | Type                      | Part No. |
| Individual sub-base valve sizes 10/14/18                                            |      |                                                                                                |                           |          |
|    | M    | 5/2-way valve, single solenoid, piston spool valve                                             | CPV10-M1H-5LS-M7          | 161414   |
|                                                                                     |      |                                                                                                | CPV14-M1H-5LS-1/8         | 161360   |
|                                                                                     |      |                                                                                                | CPV18-M1H-5LS-1/4         | 163190   |
|                                                                                     | F    | 5/2-way valve, single solenoid, fast switching, piston spool valve                             | CPV10-M11H-5LS-M7         | 187439   |
|                                                                                     | J    | 5/2-way valve, double solenoid, piston spool valve                                             | CPV10-M1H-5JS-M7          | 161415   |
|                                                                                     |      |                                                                                                | CPV14-M1H-5JS-1/8         | 161361   |
|                                                                                     |      |                                                                                                | CPV18-M1H-5JS-1/4         | 163191   |
|                                                                                     | N    | 2x 3/2-way valve, normally open, piston spool valve                                            | CPV10-M1H-2x3-OLS-M7      | 161417   |
|                                                                                     |      |                                                                                                | CPV14-M1H-2x3-OLS-1/8     | 161363   |
|                                                                                     |      |                                                                                                | CPV18-M1H-2x3-OLS-1/4     | 163188   |
|                                                                                     | C    | 2 x 3/2-way valve, normally closed, piston spool valve                                         | CPV10-M1H-2x3-GLS-M7      | 161416   |
|                                                                                     |      |                                                                                                | CPV14-M1H-2x3-GLS-1/8     | 161362   |
|                                                                                     |      |                                                                                                | CPV18-M1H-2x3-GLS-1/4     | 163189   |
|                                                                                     | CY   | 2x 3/2-way valve, normally closed, integrated back pressure protection, piston spool valve     | CPV10-M1H-2x3-GLS-Y-M7    | 553260   |
|                                                                                     | H    | 2x 3/2-way valve, 1x normally open, 1x closed, piston spool valve                              | CPV10-M1H-30LS-3GLS-M7    | 176064   |
|                                                                                     |      |                                                                                                | CPV14-M1H-30LS-3GLS-1/8   | 176067   |
|                                                                                     |      |                                                                                                | CPV18-M1H-30LS-3GLS-1/4   | 176070   |
|                                                                                     | G    | 5/3-way valve, mid-position closed, piston spool valve                                         | CPV18-M1H-5/3GS-1/4       | 176061   |
|                                                                                     | D    | 2x 2/2-way valve, normally closed, piston spool valve                                          | CPV10-M1H-2x2-GLS-M7      | 185880   |
|                                                                                     |      |                                                                                                | CPV14-M1H-2x2-GLS-1/8     | 185883   |
|                                                                                     |      |                                                                                                | CPV18-M1H-2x2-GLS-1/4     | 185886   |
|                                                                                     | I    | 2x 2/2-way valve, 1x normally open, 1x closed, piston spool valve                              | CPV10-M1H-20LS-2GLS-M7    | 187843   |
|                                                                                     |      |                                                                                                | CPV14-M1H-20LS-2GLS-1/8   | 187846   |
|                                                                                     |      |                                                                                                | CPV18-M1H-20LS-2GLS-1/4   | 187849   |
| Individual sub-base valve with duct separation 1, 11 sizes 10/14                    |      |                                                                                                |                           |          |
|  | MK   | 5/2-way valve (with duct separation 1, 11), single solenoid, piston spool valve                | CPV10-M1H-5LS-K-M7        | 553256   |
|                                                                                     |      |                                                                                                | CPV14-M1H-5LS-K-1/8       | 553258   |
|                                                                                     | JK   | 5/2-way valve (with duct separation 1, 11), double-solenoid, piston spool valve                | CPV10-M1H-5JS-K-M7        | 559644   |
|                                                                                     |      |                                                                                                | CPV14-M1H-5JS-K-1/8       | 559651   |
|                                                                                     | NK   | 2x 3/2-way valve (with duct separation 1, 11), normally open, piston spool valve               | CPV10-M1H-2x3-OLS-K-M7    | 559641   |
|                                                                                     |      |                                                                                                | CPV14-M1H-2x3-OLS-K-1/8   | 559648   |
|                                                                                     | CK   | 2 x 3/2-way valve (with duct separation 1, 11), normally closed, piston spool valve            | CPV10-M1H-2x3-GLS-K-M7    | 553257   |
|                                                                                     |      |                                                                                                | CPV14-M1H-2x3-GLS-K-1/8   | 553259   |
|                                                                                     | HK   | 2x 3/2-way valve (with duct separation 1, 11), 1x normally open, 1x closed, piston spool valve | CPV10-M1H-30LS-3GLS-K-M7  | 559642   |
|                                                                                     |      |                                                                                                | CPV14-M1H-30LS-3GLS-K-1/8 | 559649   |
|                                                                                     | DK   | 2x 2/2-way valve (with duct separation 1, 11), normally closed, piston spool valve             | CPV10-M1H-2x2-GLS-K-M7    | 559645   |
|                                                                                     |      |                                                                                                | CPV14-M1H-2x2-GLS-K-1/8   | 559652   |
|                                                                                     | IK   | 2x 2/2-way valve (with duct separation 1, 11), 1x normally open, 1x closed, piston spool valve | CPV10-M1H-20LS-2GLS-K-M7  | 559646   |
|                                                                                     |      |                                                                                                | CPV14-M1H-20LS-2GLS-K-1/8 | 559653   |

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO


Accessories

| Ordering data                                                                       |      |                                                                                                     |                          |          |
|-------------------------------------------------------------------------------------|------|-----------------------------------------------------------------------------------------------------|--------------------------|----------|
|                                                                                     | Code | Designation                                                                                         | Type                     | Part No. |
| Vacuum generator                                                                    |      |                                                                                                     |                          |          |
|    | A    | Vacuum generator                                                                                    | CPV10-M1H-V70-M7         | 185862   |
|                                                                                     |      |                                                                                                     | CPV14-M1H-V95-1/8        | 185868   |
|                                                                                     |      |                                                                                                     | CPV18-M1H-V140-1/4       | 185874   |
|                                                                                     | E    | Vacuum generator with ejector pulse                                                                 | CPV10-M1H-VI70-2GLS-M7   | 185865   |
|                                                                                     |      |                                                                                                     | CPV14-M1H-VI95-2GLS-1/8  | 185871   |
|                                                                                     |      |                                                                                                     | CPV18-M1H-VI140-2GLS-1/4 | 185877   |
| Function block                                                                      |      |                                                                                                     |                          |          |
|    | G    | Valve kit for 5/3-way valve function, closed (in combination with valve slice C) for size 10 and 14 | CPV10-BS-5/3G-M7         | 176055   |
|                                                                                     |      |                                                                                                     | CPV14-BS-5/3G-1/8        | 176057   |
| Separator plate                                                                     |      |                                                                                                     |                          |          |
|   | T    | Separator plate, duct 1/11 closed                                                                   | CPV10-DZP                | 161369   |
|                                                                                     |      |                                                                                                     | CPV14-DZP                | 162551   |
|                                                                                     |      |                                                                                                     | CPV18-DZP                | 163282   |
|                                                                                     | S    | Separator plate, duct 1/11, 3/5 closed                                                              | CPV10-DZPR               | 178678   |
|                                                                                     |      |                                                                                                     | CPV14-DZPR               | 178680   |
|                                                                                     |      |                                                                                                     | CPV18-DZPR               | 184543   |
| Relay plate                                                                         |      |                                                                                                     |                          |          |
|  | R    | Relay plate                                                                                         | CPV10-RP2                | 174478   |
|                                                                                     |      |                                                                                                     | CPV14-RP2                | 174480   |
| Blanking plate                                                                      |      |                                                                                                     |                          |          |
|  | L    | Blanking plate                                                                                      | CPV10-RZP                | 161368   |
|                                                                                     |      |                                                                                                     | CPV14-RZP                | 162550   |
|                                                                                     |      |                                                                                                     | CPV18-RZP                | 163283   |
| Additional functions for valve positions                                            |      |                                                                                                     |                          |          |
|  | P    | One-way flow control valve, 2x supply air                                                           | CPV-10-BS-2xGRZZ-M7      | 184140   |
|                                                                                     |      |                                                                                                     | CPV-14-BS-2xGRZZ-1/8     | 184142   |
|                                                                                     | Q    | One-way flow control valve, 2x exhaust air                                                          | CPV-10-BS-2xGRAZ-M7      | 184141   |
|                                                                                     |      |                                                                                                     | CPV-14-BS-2xGRAZ-1/8     | 184143   |
|  | V    | One-way flow control valve for vacuum                                                               | CPV-10-BS-2xGRZ-V-M7     | 185889   |
|                                                                                     |      |                                                                                                     | CPV-14-BS-2xGRZ-V-1/8    | 185891   |

# Valve terminals type 10 CPV, Compact Performance, NPT

Accessories



**FESTO**
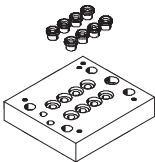
| Ordering data                                                                     |     |                                                                                                                |         |                   |          |
|-----------------------------------------------------------------------------------|-----|----------------------------------------------------------------------------------------------------------------|---------|-------------------|----------|
| Designation                                                                       |     |                                                                                                                |         | Type              | Part No. |
| Pneumatic multiple connector plate                                                |     |                                                                                                                |         |                   |          |
|  | M   | Pneumatic multiple connector plate, for wall/machine mounting, without side flange                             | 2-valve | CPV10-VI-P2-M7    | 161969   |
|                                                                                   |     |                                                                                                                | 4-valve | CPV10-VI-P4-M7    | 161970   |
|                                                                                   |     |                                                                                                                | 6-valve | CPV10-VI-P6-M7    | 161971   |
|                                                                                   |     |                                                                                                                | 8-valve | CPV10-VI-P8-M7    | 163893   |
|                                                                                   |     |                                                                                                                | 2-valve | CPV14-VI-P2-1/8   | 163894   |
|                                                                                   |     |                                                                                                                | 4-valve | CPV14-VI-P4-1/8   | 163895   |
|                                                                                   |     |                                                                                                                | 6-valve | CPV14-VI-P6-1/8   | 163896   |
|                                                                                   |     |                                                                                                                | 8-valve | CPV14-VI-P8-1/8   | 163897   |
|                                                                                   |     |                                                                                                                | 2-valve | CPV18-VI-P2-1/4   | 165292   |
|                                                                                   |     |                                                                                                                | 4-valve | CPV18-VI-P4-1/4   | 165293   |
|                                                                                   |     |                                                                                                                | 6-valve | CPV18-VI-P6-1/4   | 165294   |
|                                                                                   |     |                                                                                                                | 8-valve | CPV18-VI-P8-1/4   | 165295   |
|                                                                                   | P   | Pneumatic multiple connector plate, for wall/machine mounting, with side flange                                | 2-valve | CPV10-VI-P2-M7-B  | 152420   |
|                                                                                   |     |                                                                                                                | 4-valve | CPV10-VI-P4-M7-B  | 152421   |
|                                                                                   |     |                                                                                                                | 6-valve | CPV10-VI-P6-M7-B  | 152422   |
|                                                                                   |     |                                                                                                                | 8-valve | CPV10-VI-P8-M7-B  | 152423   |
|                                                                                   |     |                                                                                                                | 2-valve | CPV14-VI-P2-1/8-B | 152424   |
|                                                                                   |     |                                                                                                                | 4-valve | CPV14-VI-P4-1/8-B | 152425   |
|                                                                                   |     |                                                                                                                | 6-valve | CPV14-VI-P6-1/8-B | 152426   |
|                                                                                   |     |                                                                                                                | 8-valve | CPV14-VI-P8-1/8-B | 152427   |
|                                                                                   |     |                                                                                                                | 2-valve | CPV18-VI-P2-1/4-B | 175632   |
|                                                                                   |     |                                                                                                                | 4-valve | CPV18-VI-P4-1/4-B | 175634   |
|                                                                                   |     |                                                                                                                | 6-valve | CPV18-VI-P6-1/4-B | 175636   |
|                                                                                   |     |                                                                                                                | 8-valve | CPV18-VI-P8-1/4-B | 175638   |
|                                                                                   | GQC | Pneumatic multiple connector plate with sealing ring, for control cabinet assembly, with supply connections    | 2-valve | CPV10-VI-P2-M7-C  | 538807   |
|                                                                                   |     |                                                                                                                | 4-valve | CPV10-VI-P4-M7-C  | 538808   |
|                                                                                   |     |                                                                                                                | 6-valve | CPV10-VI-P6-M7-C  | 538809   |
|                                                                                   |     |                                                                                                                | 8-valve | CPV10-VI-P8-M7-C  | 538810   |
|                                                                                   |     |                                                                                                                | 2-valve | CPV14-VI-P2-1/8-C | 539498   |
|                                                                                   |     |                                                                                                                | 4-valve | CPV14-VI-P4-1/8-C | 539499   |
|                                                                                   |     |                                                                                                                | 6-valve | CPV14-VI-P6-1/8-C | 539500   |
|                                                                                   |     |                                                                                                                | 8-valve | CPV14-VI-P8-1/8-C | 539501   |
|                                                                                   | GQD | Pneumatic multiple connector plate with sealing ring, for control cabinet assembly, without supply connections | 2-valve | CPV10-VI-P2-M7-D  | 538811   |
|                                                                                   |     |                                                                                                                | 4-valve | CPV10-VI-P4-M7-D  | 538812   |
|                                                                                   |     |                                                                                                                | 6-valve | CPV10-VI-P6-M7-D  | 538813   |
|                                                                                   |     |                                                                                                                | 8-valve | CPV10-VI-P8-M7-D  | 538814   |
|                                                                                   |     |                                                                                                                | 2-valve | CPV14-VI-P2-1/8-D | 539502   |
|                                                                                   |     |                                                                                                                | 4-valve | CPV14-VI-P4-1/8-D | 539503   |
|                                                                                   |     |                                                                                                                | 6-valve | CPV14-VI-P6-1/8-D | 539504   |
|                                                                                   |     |                                                                                                                | 8-valve | CPV14-VI-P8-1/8-D | 539505   |

# Valve terminals type 10 CPV, Compact Performance, NPT

FESTO



Accessories

| Ordering data                                                                       |      |                                            |                 |          |
|-------------------------------------------------------------------------------------|------|--------------------------------------------|-----------------|----------|
|                                                                                     | Code | Designation                                | Type            | Part No. |
| Inscription label holder                                                            |      |                                            |                 |          |
|    | Z    | Holder for inscription labels              | CPV10-VI-BZ-T-2 | 162560   |
|                                                                                     |      |                                            | CPV10-VI-BZ-T-3 | 162561   |
|                                                                                     |      |                                            | CPV10-VI-BZ-T-4 | 162562   |
|                                                                                     |      |                                            | CPV10-VI-BZ-T-5 | 162563   |
|                                                                                     |      |                                            | CPV10-VI-BZ-T-6 | 162564   |
|                                                                                     |      |                                            | CPV10-VI-BZ-T-7 | 162565   |
|                                                                                     |      |                                            | CPV10-VI-BZ-T-8 | 162566   |
|                                                                                     |      |                                            | CPV14-VI-BZ-T-2 | 162567   |
|                                                                                     |      |                                            | CPV14-VI-BZ-T-3 | 162568   |
|                                                                                     |      |                                            | CPV14-VI-BZ-T-4 | 162569   |
|                                                                                     |      |                                            | CPV14-VI-BZ-T-5 | 162570   |
|                                                                                     |      |                                            | CPV14-VI-BZ-T-6 | 162571   |
|                                                                                     |      |                                            | CPV14-VI-BZ-T-7 | 162572   |
|                                                                                     |      |                                            | CPV14-VI-BZ-T-8 | 162573   |
|                                                                                     |      |                                            | CPV18-VI-BZ-T-2 | 163293   |
|                                                                                     |      |                                            | CPV18-VI-BZ-T-3 | 163294   |
|                                                                                     |      |                                            | CPV18-VI-BZ-T-4 | 163295   |
|                                                                                     |      |                                            | CPV18-VI-BZ-T-5 | 163296   |
|                                                                                     |      |                                            | CPV18-VI-BZ-T-6 | 163297   |
|                                                                                     |      |                                            | CPV18-VI-BZ-T-7 | 163298   |
|                                                                                     |      |                                            | CPV18-VI-BZ-T-8 | 163299   |
|  | T    | Holder for inscription labels, transparent | CPV10-VI-ST-T-2 | 194066   |
|                                                                                     |      |                                            | CPV10-VI-ST-T-3 | 194067   |
|                                                                                     |      |                                            | CPV10-VI-ST-T-4 | 194068   |
|                                                                                     |      |                                            | CPV10-VI-ST-T-5 | 194069   |
|                                                                                     |      |                                            | CPV10-VI-ST-T-6 | 194070   |
|                                                                                     |      |                                            | CPV10-VI-ST-T-7 | 194071   |
|                                                                                     |      |                                            | CPV10-VI-ST-T-8 | 194072   |
|                                                                                     |      |                                            | CPV14-VI-ST-T-2 | 194073   |
|                                                                                     |      |                                            | CPV14-VI-ST-T-3 | 194074   |
|                                                                                     |      |                                            | CPV14-VI-ST-T-4 | 194075   |
|                                                                                     |      |                                            | CPV14-VI-ST-T-5 | 194076   |
|                                                                                     |      |                                            | CPV14-VI-ST-T-6 | 194077   |
|                                                                                     |      |                                            | CPV14-VI-ST-T-7 | 194078   |
|                                                                                     |      |                                            | CPV14-VI-ST-T-8 | 194079   |
|                                                                                     |      |                                            | CPV18-VI-ST-T-2 | 194080   |
|                                                                                     |      |                                            | CPV18-VI-ST-T-3 | 194081   |
|                                                                                     |      |                                            | CPV18-VI-ST-T-4 | 194082   |
|                                                                                     |      |                                            | CPV18-VI-ST-T-5 | 194083   |
|                                                                                     |      |                                            | CPV18-VI-ST-T-6 | 194084   |
|                                                                                     |      |                                            | CPV18-VI-ST-T-7 | 194085   |
|                                                                                     |      |                                            | CPV18-VI-ST-T-8 | 194086   |
| Inscription labels                                                                  |      |                                            |                 |          |
|  | –    | 6x10 mm in frames, 64 pieces               | IBS 6x10        | 18576    |
|                                                                                     |      | 9x20 mm in frames, 20 pieces (CPV18 only)  | IBS 9x20        | 18182    |

# Valve terminals type 10 CPV, Compact Performance, NPT

Accessories









**FESTO**

| Ordering data                                                                       |      |                                                                                        |                       |                       |          |
|-------------------------------------------------------------------------------------|------|----------------------------------------------------------------------------------------|-----------------------|-----------------------|----------|
|                                                                                     | Code | Designation                                                                            | Type                  |                       | Part No. |
| Mounting                                                                            |      |                                                                                        |                       |                       |          |
|    | H    | Mounting for H-rail                                                                    | CPV10/14-VI-BG-NRH-35 |                       | 162556   |
|                                                                                     |      |                                                                                        | CPV18-VI-BG-NRH-35    |                       | 163291   |
|    | W    | Attachment for wall mounting                                                           | CPV18-VI-BG-RW        |                       | 163292   |
|                                                                                     | U    |                                                                                        | CPV10/14-VI-BG-RWL-B  |                       | 189541   |
|    | X    | Attachment for individual connection and ET200X<br>(included in the scope of delivery) | CPV10-VI-BG-ET200X    |                       | 165801   |
|                                                                                     |      |                                                                                        | CPV14-VI-BG-ET200X    |                       | 165803   |
| Manual override                                                                     |      |                                                                                        |                       |                       |          |
|    | –    | Locking clip (for manual override), non-detachable                                     | CPV10/14-HS           |                       | 526203   |
|                                                                                     |      |                                                                                        | CPV18-HS              |                       | 526204   |
|    | V    | Locking clip (cover for manual override), non-detachable                               | CPV10/14-HV           |                       | 530055   |
|                                                                                     |      |                                                                                        | CPV18-HV              |                       | 530056   |
| Relay plate                                                                         |      |                                                                                        |                       |                       |          |
|  | K    | Connecting cable for relay plate                                                       | 2.5 m                 | KRP-1-24-2,5          | 165612   |
|                                                                                     | L    |                                                                                        | 5 m                   | KRP-1-24-5            | 165613   |
| Cable for individual connection, electrical                                         |      |                                                                                        |                       |                       |          |
|  | D    | Plug socket with cable for CPV10/14                                                    | 2.5 m                 | KMYZ-7-24-2,5-LED-PUR | 193683   |
|                                                                                     | E    |                                                                                        | 5 m                   | KMYZ-7-24-5-LED-PUR   | 193685   |
|                                                                                     | F    |                                                                                        | 10 m                  | KMYZ-7-24-10-LED-PUR  | 196070   |
|  | D    | Plug socket with cable for CPV18                                                       | 2.5 m                 | KMEB-2-24-2,5-LED     | 174844   |
|                                                                                     | E    |                                                                                        | 5 m                   | KMEB-2-24-5-LED       | 174845   |

# Valve terminals type 10 CPV, Compact Performance, NPT

**FESTO**


Accessories
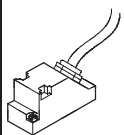
| Ordering data                                                                       |      |                                                                                              |          |                        |
|-------------------------------------------------------------------------------------|------|----------------------------------------------------------------------------------------------|----------|------------------------|
|                                                                                     | Code | Designation                                                                                  | Part No. | Type                   |
| Multi-pin plug connection, electrical                                               |      |                                                                                              |          |                        |
|    | Y    | Plug socket, 9-pin                                                                           | 18708    | SD-SUB-D-BU9           |
|                                                                                     |      | Plug socket, 25-pin                                                                          | 18709    | SD-SUB-D-BU25          |
|    | R    | Connecting cable, 9-pin, polyvinyl chloride                                                  | 5 m      | 18698 KMP3-9P-08-5     |
|                                                                                     |      | Connecting cable, 25-pin, polyvinyl chloride                                                 |          | 18624 KMP3-25P-16-5    |
|                                                                                     | S    | Connecting cable, 9-pin, polyvinyl chloride                                                  | 10 m     | 18579 KMP3-9P-08-10    |
|                                                                                     |      | Connecting cable, 25-pin, polyvinyl chloride                                                 |          | 18625 KMP3-25P-16-10   |
|                                                                                     | –    | Connecting cable, 9-pin, polyurethane                                                        | 5 m      | 193014 KMP4-9P-5-PUR   |
|                                                                                     |      | Connecting cable, 25-pin, polyurethane                                                       |          | 193018 KMP4-25P-5-PUR  |
|                                                                                     | –    | Connecting cable, 9-pin, polyurethane                                                        | 10 m     | 193015 KMP4-9P-10-PUR  |
|                                                                                     |      | Connecting cable, 25-pin, polyurethane                                                       |          | 193019 KMP4-25P-10-PUR |
|                                                                                     | –    | Connecting cable, with 9-pin Sub-D plug, IP40, polyvinyl chloride cable                      | 2.5 m    | 531184 KMP6-09P-8-2,5  |
|                                                                                     |      |                                                                                              | 5 m      | 531185 KMP6-09P-8-5    |
|                                                                                     |      |                                                                                              | 10 m     | 531186 KMP6-09P-8-10   |
|                                                                                     | –    | Connecting cable, with 25-pin Sub-D plug, IP40, polyvinyl chloride cable                     | 2.5 m    | 530046 KMP6-25P-20-2,5 |
|                                                                                     |      |                                                                                              | 5 m      | 530047 KMP6-25P-20-5   |
|                                                                                     |      |                                                                                              | 10 m     | 530048 KMP6-25P-20-10  |
| Fieldbus connection for Fieldbus Direct                                             |      |                                                                                              |          |                        |
|  | GA   | Straight socket, Sub-D 9-pin for DeviceNet/CANopen, plug/socket M12 5-pin, IP65              | 525632   | FBA-2-M12-5POL         |
|  | GB   | Straight socket, Sub-D 9-pin for DeviceNet/CANopen, plug 5-pin, IP40                         | 525634   | FBA-1-SL-5POL          |
|  |      | Angled socket 5-pin for DeviceNet/CANopen, screw terminal 5-pin, IP20                        | 525635   | FBSD-KL-2x5POL         |
|  | GD   | Plug 9-pin, Sub-D for DeviceNet/CANopen, IP65                                                | 197960   | FBS-SUB-9-BU-2x4POL    |
|                                                                                     | GE   | Plug Sub-D, IP65, 9-pin for Profibus DP                                                      | 532216   | FBS-SUB-9-GS-DP-B      |
|                                                                                     | GI   | Socket 9-pin, Sub-D for Interbus nodes CPX and CPV                                           | 532218   | FBS-SUB-9-BU-IB-B      |
|                                                                                     |      | Plug 9-pin, Sub-D for Interbus nodes CPX and CPV                                             | 532217   | FBS-SUB-9-GS-IB-B      |
|  | GM   | Plug 9-pin, Sub-D, for CC-Link CPX and CPV, IP65                                             | 532220   | FBS-SUB-9-GS-2x4POL-B  |
|                                                                                     | GF   | Bus connection 2x M12 adapter plug (B-coded, ReverseKey) for Profibus DP                     | 533118   | FBA-2-M12-5POL-RK      |
|  | –    | Socket M12x1, 5-pin, straight, for self-assembly of a connecting cable for FBA-2-M12-5POL-RK | 1067905  | NECU-M-B12G5-C2-PB     |
|  | –    | Plug M12x1, 5-pin, straight, for self-assembly of a connecting cable for FBA-2-M12-5POL-RK   | 1066354  | NECU-M-S-B12G5-C2-PB   |
|  | GL   | Straight plug, Sub-D 9-pin, screw terminal 5-pin, IP20                                       | 197962   | FBA-1-KL-5POL          |

# Valve terminals type 10 CPV, Compact Performance, NPT

Accessories

**FESTO**

| Ordering data                                                                       |                       |                       |          |                   |
|-------------------------------------------------------------------------------------|-----------------------|-----------------------|----------|-------------------|
| Designation                                                                         |                       |                       | Part No. | Type              |
| Operating voltage connection for Fieldbus Direct                                    |                       |                       |          |                   |
|    | Straight socket       | M12, 4-pin, PG7, IP65 | 18497    | FBSD-GD-7         |
|                                                                                     |                       | M12, 4-pin, PG9, IP65 | 18495    | FBSD-GD-9         |
|    | Angled socket         | M12, 4-pin, PG7, IP65 | 18524    | FBSD-WD-7         |
|                                                                                     |                       | M12, 4-pin, PG9, IP65 | 18525    | FBSD-WD-9         |
| Blanking plug                                                                       |                       |                       |          |                   |
|    | Blanking plug         |                       | 3843     | B-M5              |
|                                                                                     |                       |                       | 174309   | B-M7              |
|                                                                                     |                       |                       | 3568     | B-1/8             |
|                                                                                     |                       |                       | 3569     | B-1/4             |
|                                                                                     |                       |                       | 3570     | B-3/8             |
|                                                                                     |                       |                       | 3571     | B-1/2             |
| Push-in fitting                                                                     |                       |                       |          |                   |
|   | Push-in fitting       |                       | 183742   | QS-1/8-5/16-I-U-M |
|                                                                                     |                       |                       | 183744   | QS-1/4-3/8-I-U-M  |
|                                                                                     |                       |                       | 183746   | QS-3/8-3/8-I-U-M  |
|                                                                                     |                       |                       | 130591   | QSM-M5-1/4-I-U-M  |
|                                                                                     |                       |                       | 183740   | QSM-M7-1/4-I-U-M  |
| Silencer                                                                            |                       |                       |          |                   |
|  | Silencer              |                       | 4645     | U-M5              |
|                                                                                     |                       |                       | 6841     | U-1/8-B           |
|                                                                                     |                       |                       | 6842     | U-1/4-B           |
|                                                                                     |                       |                       | 6843     | U-3/8-B           |
|                                                                                     |                       |                       | 6844     | U-1/2-B           |
|                                                                                     |                       |                       | 161418   | UC-M7             |
| Manual                                                                              |                       |                       |          |                   |
|  | CPV Pneumatics Manual | German                | 165100   | P.BE-CPV-DE       |
|                                                                                     |                       | English               | 165200   | P.BE-CPV-EN       |
|                                                                                     |                       | French                | 165130   | P.BE-CPV-FR       |
|                                                                                     |                       | Italian               | 165160   | P.BE-CPV-IT       |
|                                                                                     |                       | Spanish               | 165230   | P.BE-CPV-ES       |
|                                                                                     |                       | Swedish               | 165260   | P.BE-CPV-SV       |

## Product Range and Company Overview

### A Complete Suite of Automation Services

Our experienced engineers provide complete support at every stage of your development process, including: conceptualization, analysis, engineering, design, assembly, documentation, validation, and production.



**Custom Automation Components**  
Complete custom engineered solutions



**Custom Control Cabinets**  
Comprehensive engineering support and on-site services



**Complete Systems**  
Shipment, stocking and storage services

### The Broadest Range of Automation Components

With a comprehensive line of more than 30,000 automation components, Festo is capable of solving the most complex automation requirements.



**Electromechanical**  
Electromechanical actuators, motors, controllers & drives



**Pneumatics**  
Pneumatic linear and rotary actuators, valves, and air supply



**PLCs and I/O Devices**  
PLC's, operator interfaces, sensors and I/O devices

### Supporting Advanced Automation... As No One Else Can!

Festo is a leading global manufacturer of pneumatic and electromechanical systems, components and controls for industrial automation, with more than 12,000 employees in 56 national headquarters serving more than 180 countries. For more than 80 years, Festo has continuously elevated the state of manufacturing with innovations and optimized motion control solutions that deliver higher performing, more profitable automated manufacturing and processing equipment. Our dedication to the advancement of automation extends beyond technology to the education and development of current and future automation and robotics designers with simulation tools, teaching programs, and on-site services.

### Quality Assurance, ISO 9001 and ISO 14001 Certifications

Festo Corporation is committed to supply all Festo products and services that will meet or exceed our customers' requirements in product quality, delivery, customer service and satisfaction.

To meet this commitment, we strive to ensure a consistent, integrated, and systematic approach to management that will meet or exceed the requirements of the ISO 9001 standard for Quality Management and the ISO 14001 standard for Environmental Management.



© Copyright 2008, Festo Corporation. While every effort is made to ensure that all dimensions and specifications are correct, Festo cannot guarantee that publications are completely free of any error, in particular typing or printing errors. Accordingly, Festo cannot be held responsible for the same. For Liability and Warranty conditions, refer to our "Terms and Conditions of Sale", available from your local Festo office. All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, electronic, mechanical, photocopying or otherwise, without the prior written permission of Festo. All technical data subject to change according to technical update.



Printed on recycled paper at New Horizon Graphic, Inc., FSC certified as an environmentally friendly printing plant.

# Festo North America

## Festo Regional Contact Center

5300 Explorer Drive  
Mississauga, Ontario L4W 5G4  
Canada

### USA Customers:

For ordering assistance,

**Call:** 1.800.99.FESTO (1.800.993.3786)

**Fax:** 1.800.96.FESTO (1.800.963.3786)

**Email:** [customer.service@us.festo.com](mailto:customer.service@us.festo.com)

For technical support,

**Call:** 1.866.GO.FESTO (1.866.463.3786)

**Fax:** 1.800.96.FESTO (1.800.963.3786)

**Email:** [product.support@us.festo.com](mailto:product.support@us.festo.com)

### Canadian Customers:

**Call:** 1.877.GO.FESTO (1.877.463.3786)

**Fax:** 1.877.FX.FESTO (1.877.393.3786)

**Email:** [festo.canada@ca.festo.com](mailto:festo.canada@ca.festo.com)

## USA Headquarters

Festo Corporation  
395 Moreland Road  
P.O. Box 18023  
Hauppauge, NY 11788, USA  
[www.festo.com/us](http://www.festo.com/us)

## USA Sales Offices

### Appleton

North 922 Tower View Drive, Suite N  
Greenville, WI 54942, USA

### Boston

120 Presidential Way, Suite 330  
Woburn, MA 01801, USA

### Chicago

1441 East Business Center Drive  
Mt. Prospect, IL 60056, USA

### Dallas

1825 Lakeway Drive, Suite 600  
Lewisville, TX 75057, USA

### Detroit – Automotive Engineering Center

2601 Cambridge Court, Suite 320  
Auburn Hills, MI 48326, USA

### New York

395 Moreland Road  
Hauppauge, NY 11788, USA

### Silicon Valley

4935 Southfront Road, Suite F  
Livermore, CA 94550, USA

## United States



**USA Headquarters, East:** Festo Corp., 395 Moreland Road, Hauppauge, NY 11788

Phone: 1.631.435.0800; Fax: 1.631.435.8026;

Email: [info@festo-usa.com](mailto:info@festo-usa.com)

[www.festo.com/us](http://www.festo.com/us)

## Canada



**Headquarters:** Festo Inc., 5300 Explorer Drive, Mississauga, Ontario L4W 5G4

Phone: 1.905.624.9000; Fax: 1.905.624.9001;

Email: [festo.canada@ca.festo.com](mailto:festo.canada@ca.festo.com)

[www.festo.ca](http://www.festo.ca)

## Mexico



**Headquarters:** Festo Pneumatic, S.A., Av. Ceylán 3, Col. Tequesquahuac,  
54020 Tlalneapantla, Edo. de México

Phone: 011 52 [55] 53 21 66 00; Fax: 011 52 [55] 53 21 66 65;

Email: [festo.mexico@mx.festo.com](mailto:festo.mexico@mx.festo.com)

[www.festo.com/mx](http://www.festo.com/mx)

## Central USA

Festo Corporation  
1441 East Business  
Center Drive  
Mt. Prospect, IL 60056, USA  
Phone: 1.847.759.2600  
Fax: 1.847.768.9480



## Western USA

Festo Corporation  
4935 Southfront Road,  
Suite F  
Livermore, CA 94550, USA  
Phone: 1.925.371.1099  
Fax: 1.925.245.1286



## Festo Worldwide

Argentina Australia Austria Belarus Belgium Brazil Bulgaria Canada Chile China Colombia Croatia Czech Republic Denmark  
Estonia Finland France Germany Great Britain Greece Hong Kong Hungary India Indonesia Iran Ireland Israel Italy Japan Latvia  
Lithuania Malaysia Mexico Netherlands New Zealand Norway Peru Philippines Poland Romania Russia Serbia Singapore  
Slovakia Slovenia South Africa South Korea Spain Sweden Switzerland Taiwan Thailand Turkey Ukraine United States Venezuela

[www.festo.com](http://www.festo.com)