




Solenoid valves VUVG-EX/valve terminals VTUG-EX

FESTO

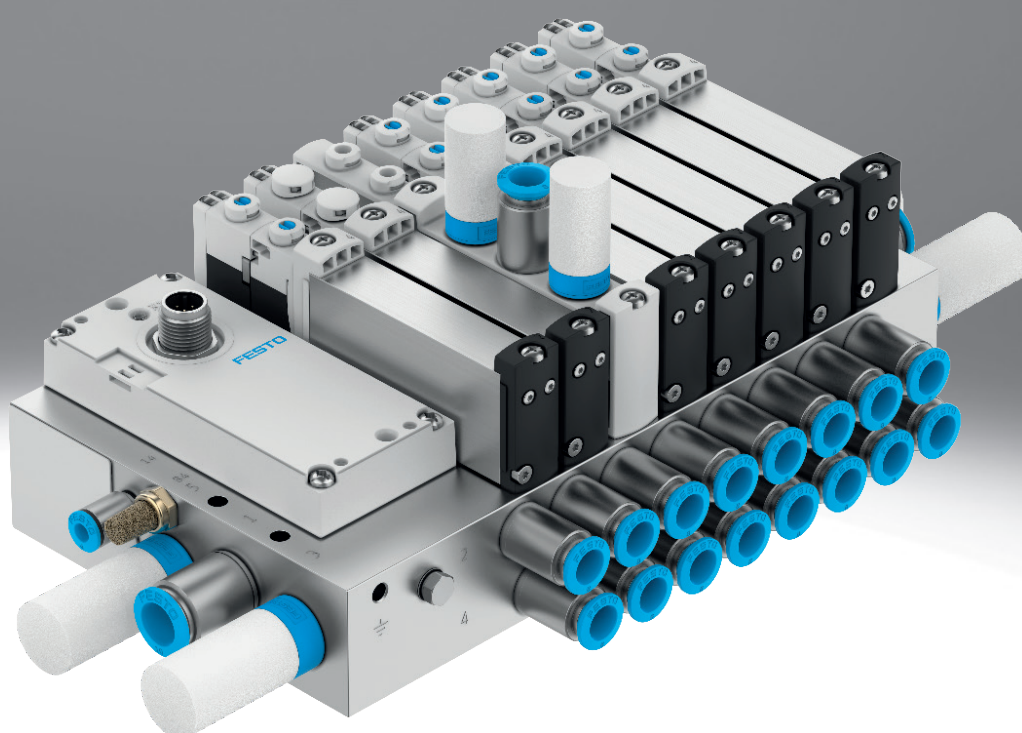


Key features

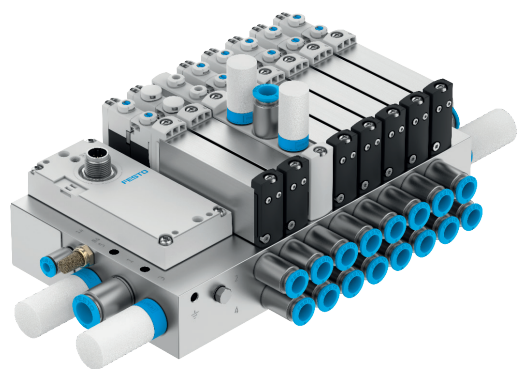

Innovative	Versatile	Reliable	Easy to install	
• Festo-specific I-Port interface for bus nodes (CTEU) • IO-Link® mode for direct connection to a higher-level IO-Link master • Flexible multi-pin plug connection using Sub-D or ribbon cable • Reversible piston spool valves, up to 24 valve positions • Reduced power consumption • Excellent price/performance ratio	• Choice of quick push-in connectors • Multiple pressure zones possible • Sub-D variant and fieldbus interface with protection to IP67 • Internal or external pilot air with the same manifold rail possible by using blanking plugs • Sub-base valves with working ports underneath for installation in control cabinets	• Sturdy and durable metal components – Valves – Manifold rails • Fast troubleshooting thanks to LED indicator • Manual override: choose from non-detenting, de-tenting or covered	• Easy to mount thanks to captive screws and seal • Easy-to-change connection technology • Label holder for labelling	
Ordering data – Product options				
	Configurable product This product and all its product options can be ordered using the configurator.	The configurator can be found at → www.festo.com/catalogue/... Enter the part number or the type.	Part no. 8060699	Type VTUG-EX

Key features – Pneumatic components

Overview – Valve terminal with multi-pin plug connection and fieldbus interface

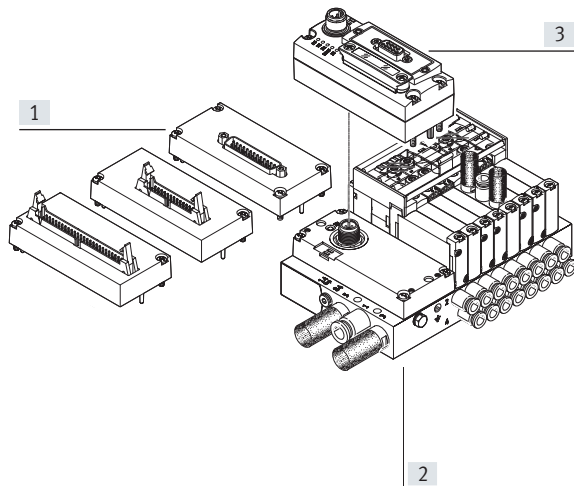

Different electrical connections:

- [1] Ribbon cable or Sub-D
- [2] I-Port interface
- [3] Bus node CTEU


Key features – Pneumatic components

Equipment options			
Valve functions		Electrical connection options	
• 2x 3/2-way, 3/2-way, 5/2-way, 5/3-way valves		• IO-Link® mode for direct connection to a higher-level IO-Link master • Festo-specific I-Port interface for bus nodes (CTEU)	
• Reversible piston spool valves, up to 24 valve positions		• Flexible multi-pin plug connection using Sub-D or ribbon cable	

Basic valves VUVG-EX	
Size	Design
• 10 • 14	• Sub-base valve


Valve functions			
3/2-way valve	2x 3/2-way valve	5/2-way valve	5/3-way valve
• Single solenoid • Normally open • Normally closed	• Single solenoid • Normally open • Normally closed • 1x normally closed, 1x normally open • Mechanical spring • Pneumatic spring	• Single solenoid • Pneumatic/mechanical spring • Mechanical spring • Pneumatic spring • Double solenoid valve	• Mid-position pressurised • Mid-position exhausted • Mid-position closed

Cover caps for manual override

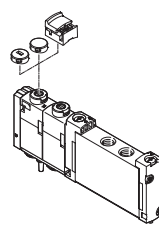


- Closed cover cap, covered manual override
- Slotted cover cap, non-detenting manual override
- Cover cap for detenting actuation without tools

Inscription label holder

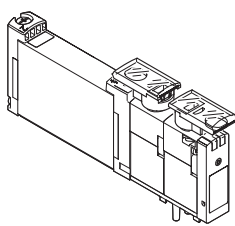

Inscription label holders ASLR-D-L1 for identifying the valves and as a covering for the manual override.

Inscription label holder

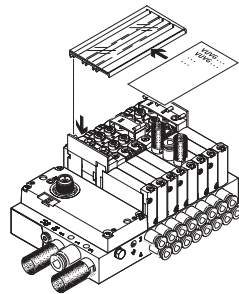


Label holders ASCF-H-L1-... for identifying the valves on the valve terminal VTUG

Key features – Pneumatic components

Manifold rail

For sub-base valves

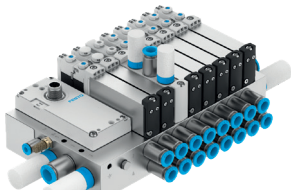


The sub-base valves are supplied with external pilot air. The pilot air is set via the manifold rail. The scope of delivery of the manifold rail includes a short and a long blanking plug for setting the pilot air.

- For sub-base valves M5/M7 (size 10), G1/8 (size 14)


- For 2x 3/2-way, 3/2-way, 5/2-way and 5/3-way valves
- 4 to 24 valve positions with electrical links

For control cabinet installation, outlet direction underneath (U)

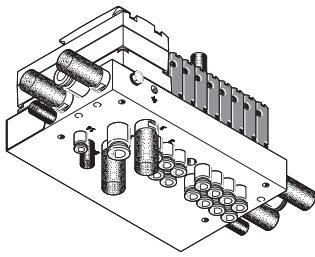


For sub-base valves M7 (size 10), G1/8 (size 14)

For control cabinet installation, outlet direction at the front (FD)

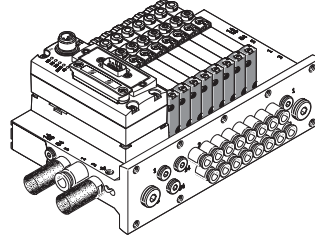


For sub-base valves M7 (size 10) and G1/8 (size 14).

For control cabinet installation, with shut-off function (hot swap)

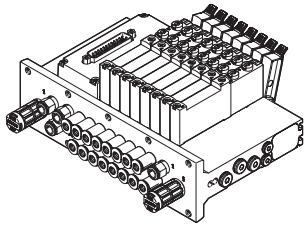

Shut-off function for duct 1, for sub-base valves M7 (size 10) and G1/8 (size 14):

- Internal pilot air supply only
- Vacuum operation not possible

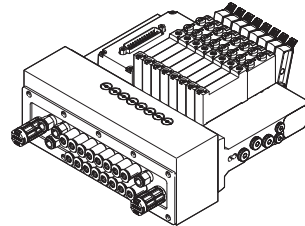

Shut-off function for ducts 1, 2 and 4, for sub-base valves M7 (size 10) and G1/8 (size 14):

- Internal pilot air supply only
- Vacuum operation not possible




Note

Pressurisation and exhaust on both sides is recommended for an optimised flow rate in cases where multiple valves switch simultaneously.

Key features

Electrical connection

Multi-pin plug connection

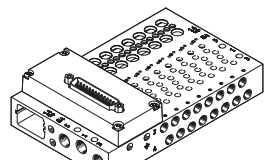


The signals are transmitted from the controller to the valve terminal via a pre-assembled or self-assembled multi-core cable to the multi-pin plug connection.

This substantially reduces installation time compared to individually connected valves. The valve terminal can be equipped with max. 48 solenoid coils.

- Versions:
- Sub-D connection
 - Ribbon cable

I-Port interface

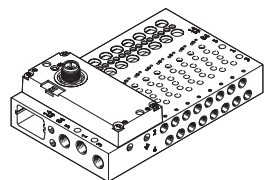


Festo-specific interface as a basis for bus nodes (CTEU) or in IO-Link® mode for direct connection to a higher-order IO-Link master.

Communication and power supply take place via a common M12 interface.

- Connection options:
- As I-Port interface for bus nodes (CTEU)
 - In IO-Link® mode for direct connection to an IO-Link master

Supply plate

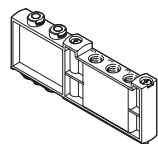


For additional air supply and exhaust via a valve position (ports for duct 1, 3 and 5).

 **Note**

The supply plate VABF-L1-14-P3A4-G18-T1 can only be used with G fittings. R fittings are not permissible.

Cover plate for vacant position

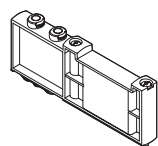

Vacant position cover

Separator for pressure zones



For creating multiple pressure zones in a valve terminal

Key features – Pneumatic components

Creating pressure zones and separating exhaust air

Compressed air is supplied and exhausted via the manifold rail and via supply plates.

The position of the supply plates and duct separations can be freely selected with the VTUG.

A pressure zone is created by separating the internal supply ducts using a separator.

Pressure zone separation can be used for the following ducts:

- Duct 1
- Duct 3
- Duct 5




Note

- Use a separator if the exhaust air pressures are high
- Use at least one supply plate/air supply for each pressure zone
- Pressure zone separation is not possible in duct 12/14 (pilot air supply)

Duct separation	Description
	The pressure zones can be freely configured with the VTUG. The following duct separations are possible:
	Duct 1 closed
	Duct 1, 3, 5 closed
	Duct 3, 5 closed
	The number of pressure zones with the VTUG is limited by the number of valve positions on the manifold rail. Note that each supply plate occupies one valve position.

Separator VABD

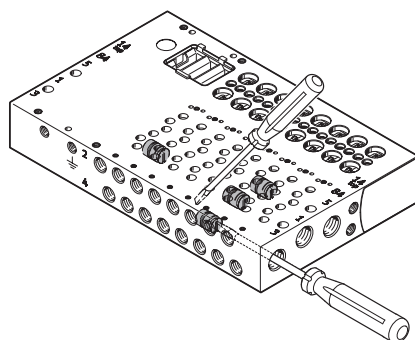

[1] Separator VABD




Note

On the VTUG, several pressure zones can be created by mounting separators (VABD). The separators are inserted in the manifold rail using a slotted screwdriver.

Key features – Pneumatic components

Shut-off function (hot swap)
For duct 1

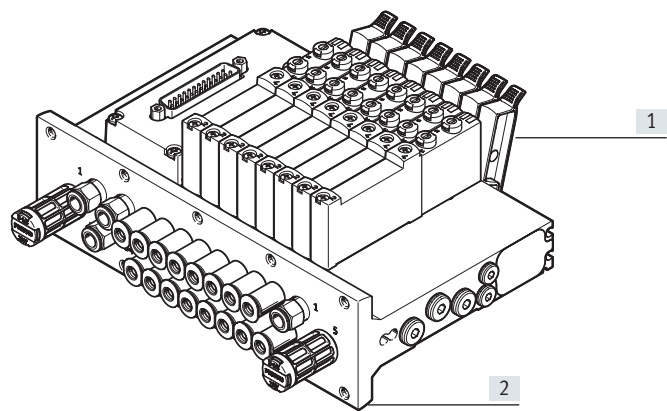


- [1] Actuating lever
- [2] Manifold rail with shut-off plate

The shut-off plate is located below the manifold block. Actuating the lever:

- Disconnects the valve position from the compressed air supply (duct 1)
- Exhausts the pilot air supply on the valve side (duct 12 and 14)
- Note the user instructions for use in combination with a supply plate

The actuating levers can be individually locked in place, securing them against unwanted actuation.

For duct 1, 2 and 4

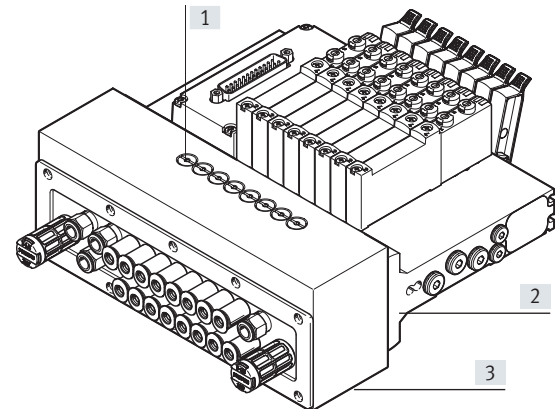

- [1] Plunger
- [2] Manifold rail
- [3] Manifold block

To actuate, press in the plunger with a pointed object or screwdriver and then turn clockwise 90° until the stop is reached:

- Connection from the valve position to ports 2 and 4 is blocked
- The components connected at ports 2 and 4 are not exhausted

Pilot air supply

Internal pilot air supply

Internal pilot air supply can be chosen with an operating pressure between 1.5 ... 8 bar, 2.5 ... 8 bar, or 3 ... 8 bar (depending on the valve used).

The pilot air supply is branched from duct 1 (compressed air supply) using an internal connection.


External pilot air supply

External pilot air supply is required for vacuum operation or operating pressures above 8 bar. The port for external pilot air supply (port 12/14) is located on the manifold rail.

Pilot exhaust air

The pilot air is exhausted via duct 82/84 of the manifold rail.

Pilot air supply

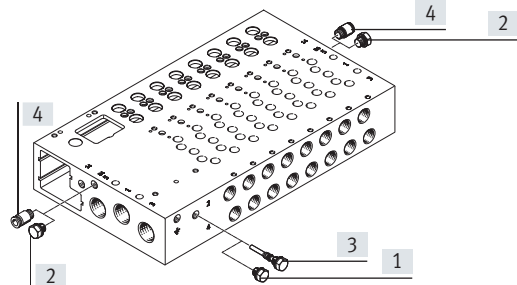


- [1] Blanking plug, short, for internal pilot air
- [2] Blanking plug for duct 12/14 with internal pilot air
- [3] Blanking plug, long, for external pilot air
- [4] Push-in fitting for duct 12/14 with external pilot air

The manifold rails have an internal connection between duct 12/14 and duct 1. By inserting a blanking plug into this connection, it is possible to switch between internal and external pilot air.

Key features – Pneumatic components

Exhaust functions

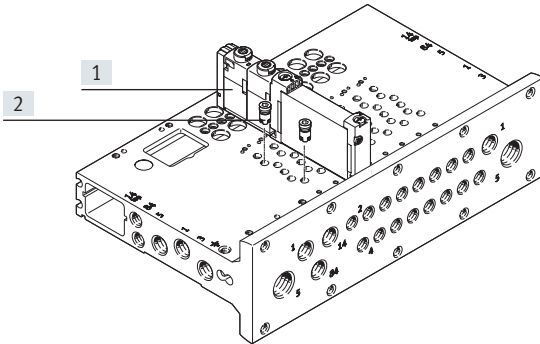

- [1] Valves VUVG
- [2] Fixed flow restrictor, self-tapping/check valve

Fixed flow restrictor, self-tapping

The fixed flow restrictor can be used to permanently set the exhaust flow rate in ducts 3 and 5.

The fixed flow restrictors are screwed into ducts 3 and 5 in the manifold rail.

Please see the relevant assembly instructions:
www.festo.com/catalogue/... a Support/Downloads

Check valve

Check valves block the flow towards the valves, thus preventing actuators from switching unexpectedly if back pressure develops in ducts 3 and 5 in the case of a high exhaust capacity. The check valves are screwed into ducts 3 and 5 in the manifold rail.

Please see the relevant assembly instructions:
www.festo.com/catalogue/... a Support/Downloads



Note

- It is not possible to use a check valve and a fixed flow restrictor (in the same duct) at the same time.
- When screwing in again, use the threads already present.

Key features – Pneumatic components

Operation with different pressures

Vacuum operation

Points to note with 3/2-way valves with pneumatic spring return:


The 3/2-way valves are available in a design with two valves in one valve body and with pneumatic spring return. With these valves, the force for the return movement is obtained from port 1.

Vacuum operation is only possible at port 3 and 5, not at port 1.
With external pilot air supply, vacuum can be connected at port 1, 3, 5 of the 5/2-way and 5/3-way valves.

Vacuum operation is not possible when using the shut-off function (hot swap).

Reverse operation


The 3/2-way valves with pneumatic spring are not suitable for reverse operation, since at least the minimum pilot pressure must be present in duct 1.



Note

Pressure must be present at port 1.


Pressure divider (internal pilot air)

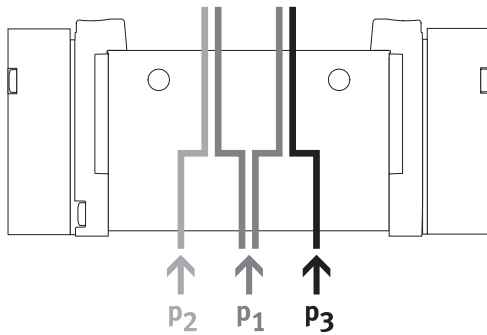

- Two different pressures are required
- Different pressures can be connected at duct 1, 3 and 5

Advantages


Any pressure or vacuum can be connected at duct 3 and 5 both with external and internal pilot air



Note

- With internal pilot air, keep the pilot pressure in duct 1 to the minimum
- With 2x 3/2-way valves without spring return, keep the pilot pressure in duct 1 to the minimum

Vacuum, ejector pulse and normal position

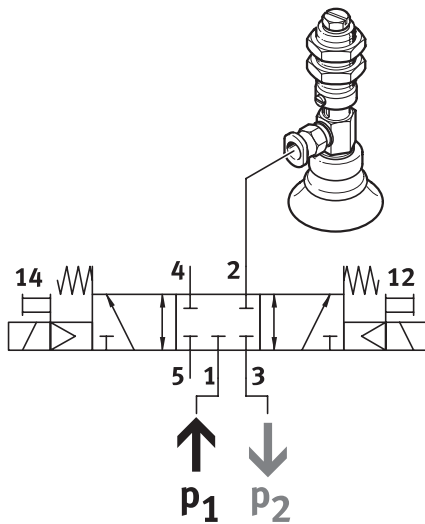


Vacuum, ejector pulse and normal position with internal pilot air can be achieved by connecting vacuum at duct 3 and pressure for the ejector pulse at duct 1.


Key features – Pneumatic components

Standard nominal flow rate q_{nN} as a function of the number of switched valves n

Size 10 mm, 5/2-way valves

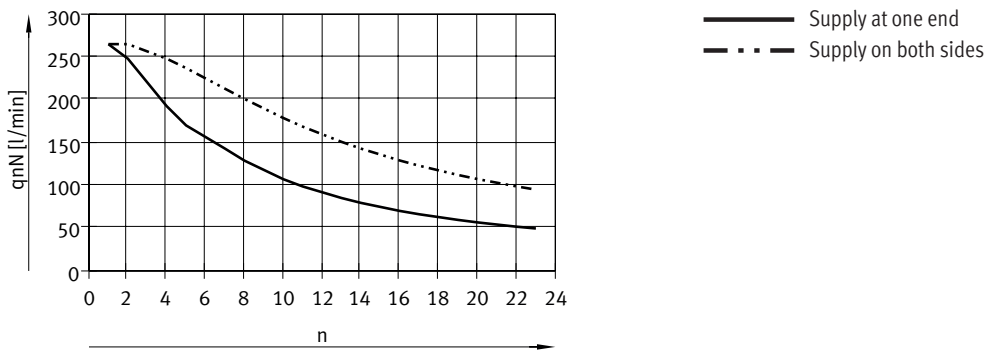


Size 14 mm

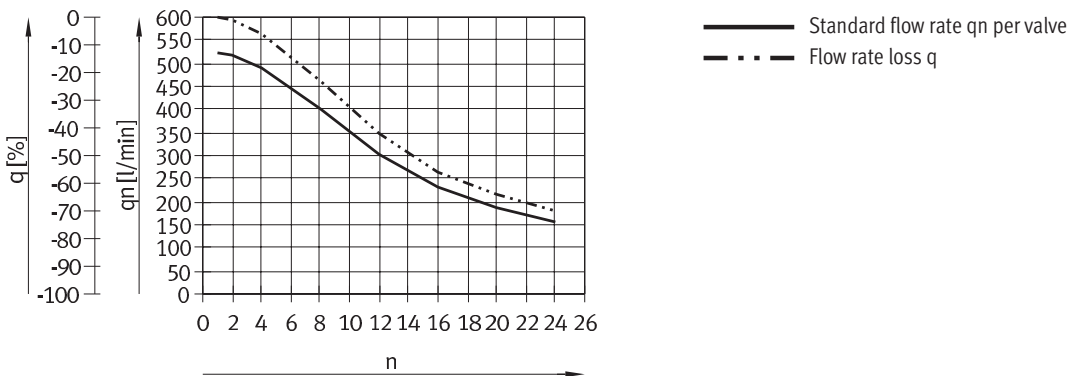


Pilot pressure p_2 as a function of operating pressure p_1


2x 3/2-way valve, mechanical spring return

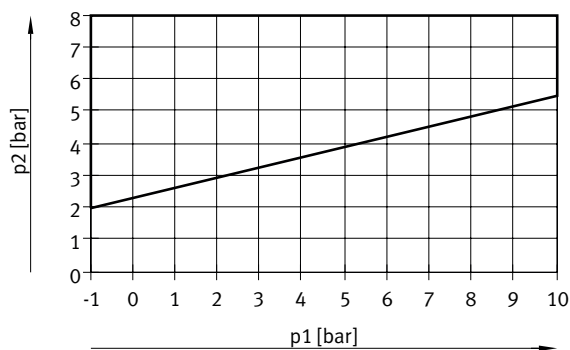

2x 3/2-way valve, pneumatic spring return

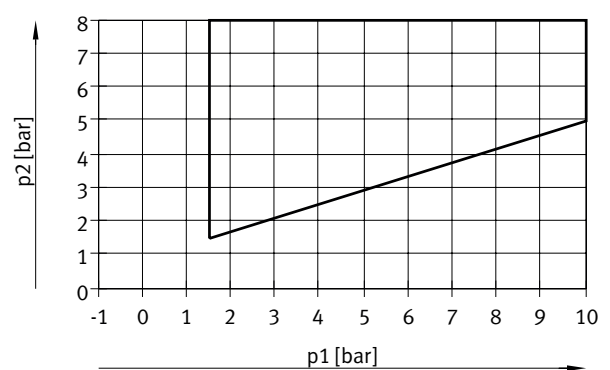

3/2-way single solenoid valve and 5/2-way single solenoid valve

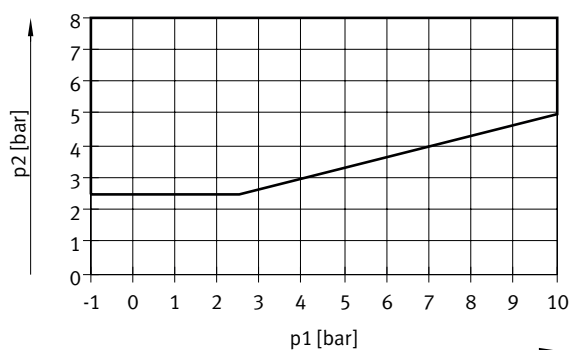

Key features – Mounting

Valve terminal mounting

Sturdy terminal mounting via:


- Four through-holes for wall mounting
- DIN rail mounting
- Mounting bracket



Note

Use the M5 thread provided on the manifold block for earthing the valve terminal.


Wall mounting

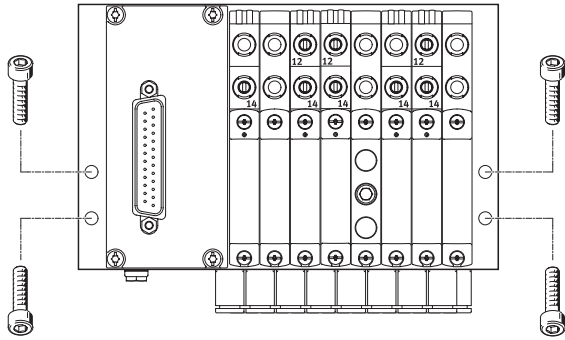

Screw the valve terminal VTUG onto the mounting surface using four M4 screws.

The mounting holes are on the left and right side of the manifold rail.

DIN rail mounting

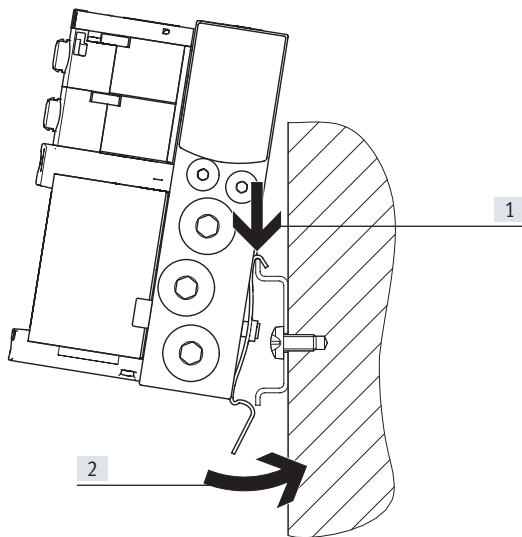

Clip the valve terminal VTUG onto the DIN rail (see arrow [1]).

Swivel the valve terminal onto the DIN rail and secure in place with the clamping piece (see arrow [2]).

Attach the manifold rails to a rail to EN 60715-TH35 using the DIN rail mounting VAME-T-M4.

Use the following screws for mounting (to DIN 912):

- Size 10: M4x30
- Size 14: M4x40



Note

Use of the DIN rail is allowed:

- Manifold rail with outlet on the side or on top.
- DIN rail exclusively for horizontal mounting.
- Vibration/shock loads are not permissible for this type of mounting.

Size 14:


- Use DIN rail type TH35-7.5 for valve terminals with a maximum of 8 valve positions.
- Use DIN rail type TH35-15 for mounting in accordance with the standard and for more than 8 valve positions.

Key features – Mounting

Hood for VTUG-VI-EX2

Description

a page 24

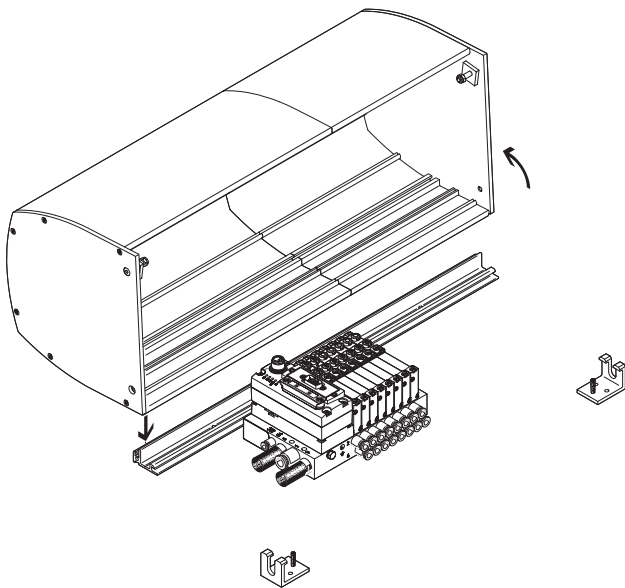

The VTUG-VI-EX2 hood CAFC is a space- and cost-saving alternative to a control cabinet.

It is designed as an extruded aluminium profile and is installed on a mounting plate.

The valve terminal has a well-protected design and is quick to install without the need for complex cabinet through-feed for connecting cables and tubing.

The rail and the two mounting brackets are mounted on a base plate. The hood is attached to the retaining rail and secured with two screws. There is also a stand-by position (detent of the hood in the open position).

The hood is locked using two side screws (which meet the requirements for a special fastener in compliance with ATEX).


The VTUG-VI-EX2 hood can be ordered online using the valve terminal configurator.

Advantages of the VTUG-VI-EX2 hood

- Impact protection (min. 7 J) for the modules underneath in combination with a suitable mounting plate provided by the user
- Protection against electrostatic discharge by using electrically conductive materials and the option of connecting an earth wire
- Protection against disconnection of live plugs by securing the hood with at least one special fastener to EN 60079-0
- UV protection for the VTUG modules underneath

Points to note when using the VTUG-VI-EX2 hood

- VTUG-VI-EX2 power supply via angled plugs, no T plugs, no push-pull
- Electrical supply plate/additional supply only possible with angled plug
- Larger push-in fittings (for tubing O.D. larger than 12 mm) can only be used with the angled version
- Ducted exhaust air only with elbow connector
- The permissible ambient temperature range of the valve terminal is reduced by 5 °C.



Note

The VTUG-VI-EX2 hood has no influence on the ATEX classification of the valve terminal or of the VTUG-VI-EX2 terminal.


The VTUG-VI-EX2 hood has no influence on the IP degree of protection of the valve terminal or of the VTUG-VI-EX2 terminal.

The VTUG-VI-EX2 hood does not protect against the effects of the weather in installations that are not in enclosed spaces.

Key features – Mounting

Hood for VTUG-VI-EX2

Assembly

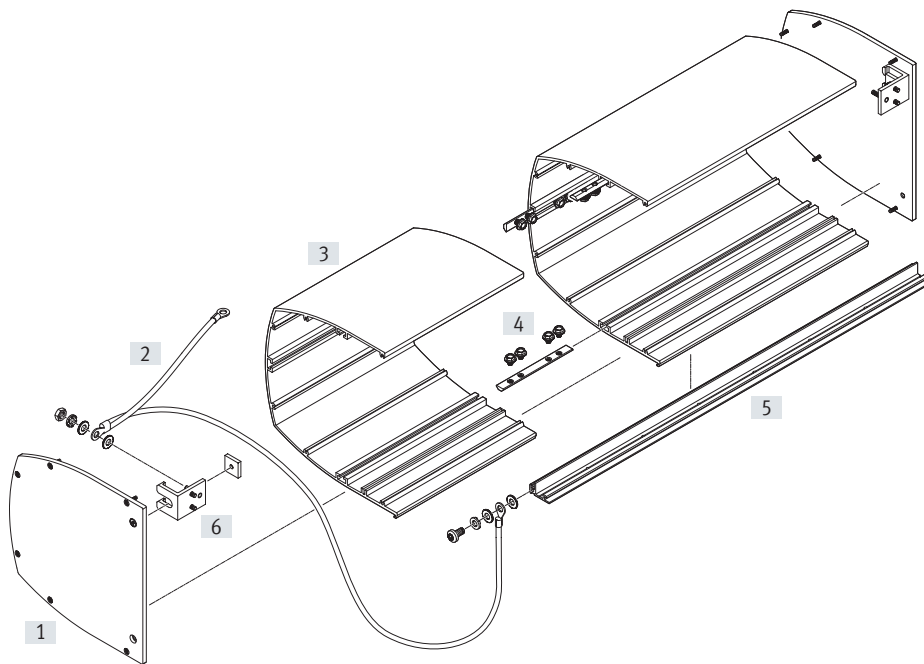

Procedure:

- Assemble the rail and mounting bracket included in the mounting kit
- Attach the earthing cable
- Assemble the hood (if applicable, screw together several hood sections and attach the side covers)
- Attach and secure the hood

- [1] Side cover
- [2] Earthing cable
- [3] Hood section
- [4] Slot nut with screws, for joining the hood sections
- [5] Rail
- [6] Mounting bracket

Technical data

Weight:

- Hood: approx. 500 g per 100 mm of length
- Mounting rail: approx. 550 g per 1000 mm of length
- Side pieces: approx. 500 g per side


- Ambient temperature $-5 \dots +50 \text{ }^{\circ}\text{C}$

- RoHS-compliant

Key features – Mounting


Manual override (MO)

MO with automatic return (non-detenting)

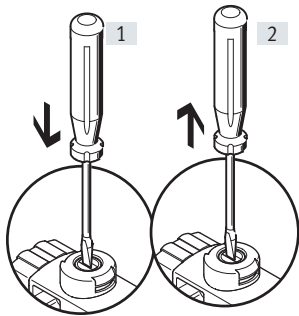


- [1] Press in the plunger of the MO with a pointed object or screwdriver.
The pilot valve switches and actuates the main valve.
- [2] Remove the pointed object or screwdriver.
The spring force pushes the plunger of the manual override back. The pilot valve returns to its normal position as does the main single solenoid valve (not the case with double solenoid valve code J).

MO with locking (detenting)

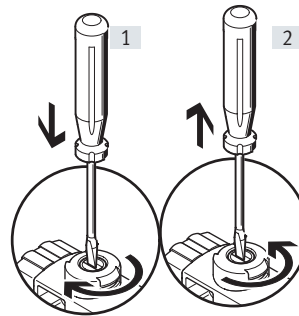


- [1] Press in the plunger of the MO with a pointed object or screwdriver until the valve switches and then turn the plunger 90° clockwise until the stop is reached. The valve remains in the switching position
- [2] Turn the plunger 90° anticlockwise until the stop is reached and then remove the pointed object or screwdriver. The spring force pushes the plunger of the manual override back. The valve returns to its normal position (not with double solenoid valve code J).

MO non-detenting – with coded cover cap

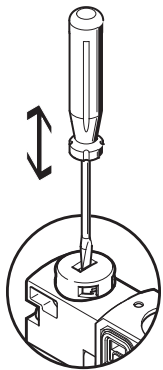


MO is actuated by pushing it with a pointed object or screwdriver and reset by spring force (detenting position prevented by coded cover cap).

MO detenting without tools – mounting

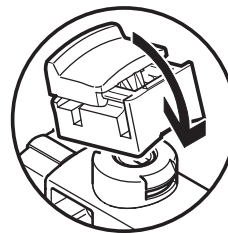

Turn MO to clip it onto the pilot valve. The cap for the MO can then be operated (detenting) without tools.


MO detenting without tools – actuation

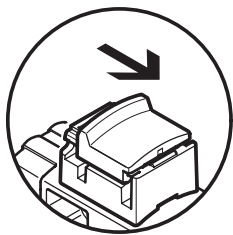

Sliding the cap for the MO with latch in the direction of the arrow results in:

- Cap locks into the end position
- The pilot valve switches and actuates the main valve.

MO detenting without tools – actuation

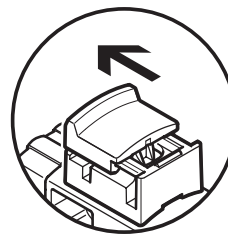


Sliding the cap for the MO with latch in the direction of the arrow results in:

- Cap locks into the end position
- The spring force pushes the plunger of the manual override back.
- The pilot valve returns to its normal position as does the main single solenoid valve (not the case with double solenoid valve code J).

Key features – Mounting

Inscription system

Inscription label holder

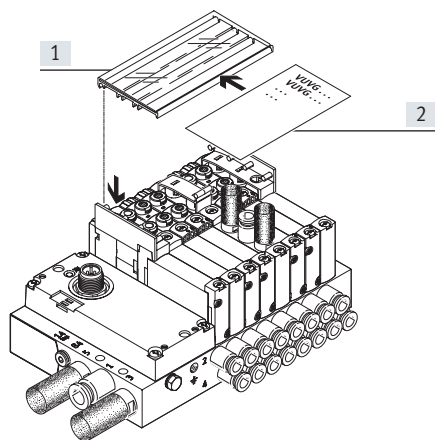

- [1] Label holders ASCF-H-L1 (code TT)
- [2] Inscription field


Mount the label holders to label the valves. Open the label holder to insert the inscription label and actuate the manual override.

The label holders are available in different sizes depending on the number of valve positions.

Note

Do not engage the manual override before mounting the label holder. When mounted, the retaining bracket for the label holder covers the manual override of the valves beneath it. The manual override for the two valves under the retainers of the label holder can then only be operated as non-detenting.

Inscription label holder

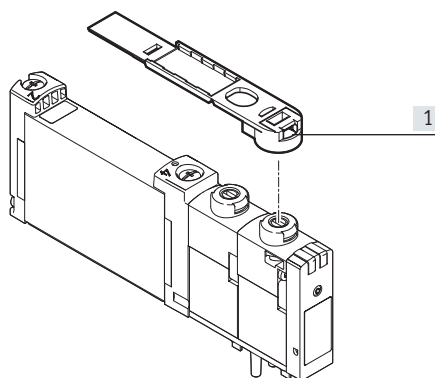

- [1] Inscription label holders ASLR-D-L1 (code TV)

Use inscription label holders ASLR-D-L1 (code TV) to label individual valves.











The inscription label holder is placed directly on the manual override.

Note








Do not engage the manual override before mounting the inscription label holder.

After the retaining brackets are fitted, the manual override can only be operated as non-detenting.

Overview of valve functions

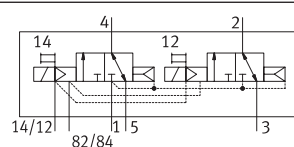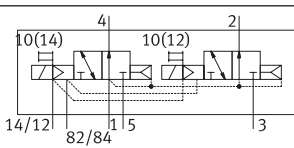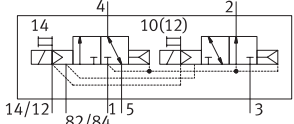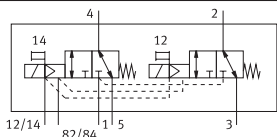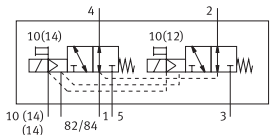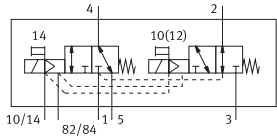Valve	Valve code	Description	Size	
			M5/M7	G1/8
3/2-way valve, pneumatic/mechanical spring				
	M32C-R	Normally closed	■	–
	M32U-R	Normally open	■	–
3/2-way valve, pneumatic spring				
	M32C-A	Normally closed	–	■
	M32U-A	Normally open	–	■
2x 3/2-way valve, pneumatic spring				
	T32C-A	Normally closed	■	■
	T32U-A	Normally open	■	■
	T32H-A	1x normally open, 1x normally closed	■	■
2x 3/2-way valve, mechanical spring				
	T32C-M	Normally closed	■	■
	T32U-M	Normally open	■	■
	T32H-M	1x normally open, 1x normally closed	■	■

Overview of valve functions

Valve	Valve code	Description	Size	
			M5/M7	G1/8
5/2-way valve, double solenoid				
	B52	External pilot air supply	■	■
5/2-way valve, single solenoid				
	M52-A	Pneumatic spring	—	■
	M52-M	Mechanical spring	■	■
	M52-R	Pneumatic/mechanical spring	■	—
5/3-way valve				
	P53C	Mid-position closed	■	■
	P53U	Mid-position pressurised	■	■
	P53E	Mid-position exhausted	■	■

Type codes -EX

001	Series	
VTUG	Valve terminal	
002	Size	
10	Size 10	
14	Size 14	
003	Valve control	
M	Multi-pin	
V	Interface for fieldbus module	
004	Multi-pin plug connection type	
	None	
SD	Sub-D plug	
005	Circuitry	
	None	
R	Holding current reduction with integrated protective circuit	
006	Bus protocol/activation	
	None	
LK	IO-Link®	
PT	I-Port interface	
007	Degree of protection, electrical system	
	Standard	
S8	IP67	
008	Valve type	
B	Sub-base valve	
009	Nominal operating voltage	
1	24 V DC	
010	Manual override	
H	Non-detenting	
S	Covered	
Y	Detenting	
T	Non-detenting, detenting with accessories	
011	Pilot air	
	Internal	
Z	External	
012	Number of pins	
	None	
25	25-pin	
26	26-pin	
44	44-pin	
50	50-pin	

013	Pin allocation	
	Standard	
V20	For 12 double solenoid/bistable or 24 single solenoid/monostable valves	
V21	For 18 double solenoid/bistable and 6 single solenoid/monostable valves	
V22	For 10 double solenoid/bistable valves	
V23	For 8 double solenoid/bistable and 4 single solenoid/monostable valves	
V24	For 4 double solenoid/bistable and 12 single solenoid/monostable valves	
V25	For 20 single solenoid/monostable valves	
V26	For 24 double solenoid/bistable valves	
014	Material of fittings	
	Standard	
B2	Brass, nickel-plated	
V1	Stainless steel	
015	Compressed air supply connection	
Q6	Push-in connector 6 mm	
Q8	Push-in connector 8 mm	
Q10	Push-in connector 10 mm	
G18	G1/8	
G14	G1/4	
016	Compressed air supply connection position	
	Both sides	
B	Underneath	
L	Left	
R	Right	
FD	Front, both sides, for control cabinet	
FDL	Front, left, for control cabinet	
FDR	Front, right, for control cabinet	
017	Compressed air supply connection type	
	Straight	
A	Elbow fitting	
018	Exhaust connection	
DQ	Push-in fitting	
DT	Thread	
U	Silencer	
019	Exhaust connection position	
	Both sides	
B	Underneath	
L	Left	
R	Right	
FD	Front, both sides, for control cabinet	
FDL	Front, left, for control cabinet	
FDR	Front, right, for control cabinet	

Type codes -EX

020	Valve connection	
G18	G1/8	
G14	G1/4	
M5	M5	
M7	M7	
Q3	Push-in connector 3 mm	
Q4	Push-in connector 4 mm	
QH4	Push-in connector 4 mm, with connecting thread M7	
Q6	Push-in connector 6 mm	
QH6	Push-in connector 6 mm, with connecting thread M7	
Q8	Push-in connector 8 mm	
TH14	Push-in connector 1/4", M7	
TH316	Push-in connector 3/16", M7	

021	Push-in connection type	
S	Screwed	

022	Valve connection position	
	Front, straight outlet	
FD	Front, straight outlet, for control cabinet	
U	Underneath, straight outlet	

023	Flow control function, connections 3 and 5	
	None	
FE	Fixed flow restrictor nominal size 0.5 mm	
FF	Fixed flow restrictor nominal size 0.6 mm	
FG	Fixed flow restrictor nominal size 0.7 mm	
FH	Fixed flow restrictor nominal size 0.85 mm	
FJ	Fixed flow restrictor nominal size 1 mm	
FK	Fixed flow restrictor nominal size 1.05 mm	
FL	Fixed flow restrictor, nominal size 1.15 mm	
FM	Fixed flow restrictor nominal size 1.2 mm	
FN	Fixed flow restrictor nominal size 1.4 mm	
FP	Fixed flow restrictor nominal size 1.55 mm	
FQ	Fixed flow restrictor, nominal size 1.6 mm	
FR	Fixed flow restrictor nominal size 1.8 mm	
ZS	Exhaust air	

024	Shut-off function	
	None	
SH	With hot swap for supply air ports	
WH	With hot swap for supply air ports and working ports	

025	Position function	
P	5/2-way valve, single solenoid/monostable, pneumatic/mechanical spring	
M	4/2 or 5/2-way valve, single solenoid/monostable, pneumatic spring	
A	5/2 or 4/2-way valve, single solenoid/monostable, mechanical spring	
J	4/2 or 5/2-way double pilot valve	
N	1x3/2 or 2x3/2-way valve, normally open, pneumatic spring	
VN	2x3/2-way valve, normally open, mechanical spring	
K	1x3/2 or 2x3/2-way valve, normally closed, pneumatic spring	
VK	2x3/2-way valve, normally closed, mechanical spring	
H	2x3/2-way valve, 1x normally closed, 1x normally open, pneumatic spring	
VH	2x3/2-way valve, 1x normally closed, 1x normally open, mechanical spring	
B	5/3- or 4/3-way valve, mid-position pressurised	
G	5/3 or 4/3-way valve, mid-position closed	
E	5/3 or 4/3-way valve, mid-position exhausted	
L	Vacant position	
S	Additional power supply	
SD	Additional supply, exhaust, blanking plug	
SW	Additional supply, exhaust, push-in fitting	
VW	1x3/2-way valve, normally open, external compressed air supply	
VX	1x3/2-way valve, normally closed, external compressed air supply	
VZ	Without valve	


026	Working port, duct 2	
	As selected	
CC	Blanking plug	
QG18	G1/8	
QM5	M5	
QM7	M7	
Q4	Push-in connector, 4 mm	
QH4	Push-in connector 4 mm, with connecting thread M7	
Q6	Push-in connector 6 mm	
QH6	Push-in connector 6 mm, with connecting thread M7	
Q8	Push-in connector 8 mm	
Q3	Push-in connector, 3 mm	
TH14	Push-in connector 1/4", M7	
TH316	Push-in connector 3/16", M7	

027	Working port, duct 4	
	As selected	
XCC	Blanking plug	
XQG18	G1/8	
XQM5	M5	
XQM7	M7	
XQ3	Push-in connector 3 mm	
XQ4	Push-in connector 4 mm	
XQH4	Push-in connector 4 mm, with connecting thread M7	
XQ6	Push-in connector 6 mm	
XQH6	Push-in connector 6 mm, with connecting thread M7	
XQ8	Push-in connector 8 mm	
XTH14	Push-in connector 1/4", M7	
XTH316	Push-in connector 3/16", M7	

Datasheet Valve terminal VTUG-...-EX2, VTUG...-EX2E

Variants
 VTUG-...-EX2
 VTUG-...-EX2E (for installation in
 the housing)

Modular system part no.
 8060699

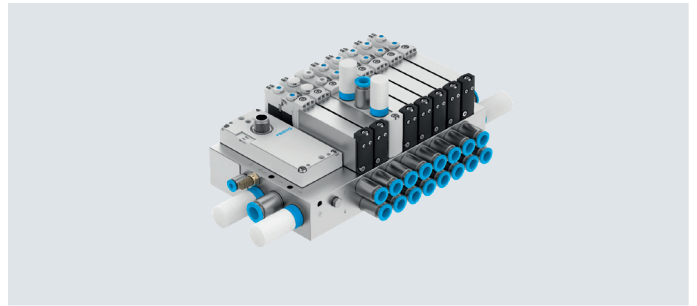

General technical data		
Design		Piston spool
Valve terminal design		Fixed grid
Maximum number of valve positions		24
Maximum number of pressure zones		13
Valve functions		2x3/2-way, single solenoid, open 2x3/2-way, single solenoid, open/closed 3/2-way, closed, single solenoid, closed 5/2-way, double solenoid 5/2-way, single solenoid 5/3-way, pressurised 5/3-way, exhausted 5/3-way, closed
Pilot air port 12/14		G1/8
Signal status indication		LED
Sealing principle		Soft
Type of control		Piloted
Valve size	[mm]	10 14
Actuation type		Electrical
Pilot air supply		External Internal
Suitable for vacuum		Yes
Exhaust air function		Can be throttled
Maximum standard nominal flow rate	[l/min]	330 at 10 mm 630 at 14 mm
Standard nominal flow rate	[l/min]	130 ... 1150
Certification		c UL us - Recognized (OL) RCM

Operating and environmental conditions		
Operating medium		Compressed air to ISO 8573-1:2010 [7:4:4]
Pilot medium		Compressed air to ISO 8573-1:2010 [7:4:4]
Note on the operating/pilot medium		Lubricated operation possible (in which case lubricated operation will always be required)
Operating pressure	[MPa] [bar]	-0.09 ... +1 -0.9 ... +10
Pilot pressure	[MPa] [bar]	0.15 ... +0.8 1.5 ... 8
Ambient temperature	[°C]	-5 ... +60
Temperature of medium	[°C]	-5 ... +60
Storage temperature	[°C]	-10 ... +60
Corrosion resistance class CRC 1)		2

1) More information www.festo.com/x/topic/crc

Datasheet VTUG-...-EX2, VTUG...-EX2E

Electrical data		
Electrical control		Fieldbus
		I-Port
		IO-Link®
		Multi-pin plug
Operating voltage	[V DC]	24
Permissible voltage fluctuations	[%]	± 10
		± 25
Nominal pick-up current per solenoid coil	[mA]	47 up to 20 ms
Nominal current with current reduction	[mA]	15.5 after 20 ms
Degree of protection		IP20
		IP65





Safety data	
Shock resistance	Shock test with severity level 2 to FN 942017-5 and EN 60068-2-27
Vibration resistant	Transport application test with severity level 2 to FN 942017-4 and EN 60068-2-6

Explosion protection	VTUG-VI-EX2	VTUG-VI-EX2E
ATEX category for gas	II 3G	
ATEX category for dust	II 3D	
Type of (ignition) protection for gas	–	C. I, Z. 2, AEx ec IIC Gc (US)
	–	Ex ec IIC Gc (CA)
	Ex ec IIC T4 Gc	
Type of ignition protection for dust	–	C.II, Z.22,AExtcIICT135Dc(US)
	–	Ex tc IIIC T135 Dc (CA)
	Ex tc IIIC T135°C Dc	
Explosion protection certification outside the EU	–	Class I, Div. 2 (CA)
	–	Class I, Div. 2 (US)
	–	Class II, Div. 2 (CA)
	–	Class II, Div. 2 (US)
	–	Class III (CA)
	–	Class III (US)
	–	EPL Dc (CA)
	–	EPL Dc (CN)
	EPL Dc (IECEX)	
	–	EPL Dc (US)
	–	EPL Gc (CA)
	–	EPL Gc (CN)
	EPL Gc (IECEX)	
	–	EPL Gc (US)
Explosion-proof ambient temperature	[°C]	–5°C ≤ Ta ≤ +50 (I-Port/IO-Link®)
		–5°C ≤ Ta ≤ +60 (multi-pin plug)
CE marking (see declaration of conformity) 1)	To EU EMC Directive	
	To EU Explosion Protection Directive (ATEX)	
	To EU RoHS Directive	
UKCA marking (see declaration of conformity) 1)	To UK EMC regulations	
	To UK explosion regulations	
	To UK RoHS regulations	
Certificate-issuing authority	–	GVJ19.1188X
	–	IBExU16ATEXB021 X
	–	IECEX IBE 17.0003 X
	IECEX IBE 19.0018 X	–
	–	UL E198674
	UL MH19482	

1) More information www.festo.com/catalogue/... → Support/Downloads.



Information on materials	
Seals	HNBR
	NBR
Note on materials	RoHS-compliant
LABS (PWIS) conformity	VDMA24364-B2-L

EX2 accessories – Valve terminal

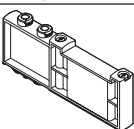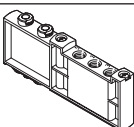Ordering data		Description	Part no.	Type	PU ¹⁾
Cover cap					
	—	540897	VMPA-HBT-B	1	
		540898	VMPA-HBV-B	1	
		8002234	VAMC-L-1CD	1	
Inscription labels					
	—	565306	ASLR-C-E4	40	
Separator					
	—	569994	VABD-6-B	1	
		569996	VABD-10-B	1	
Inscription label holder					
	—	570818	ASLR-D-L1	1	
Cover plate					
	—	573422	VABB-L1-10-T	1	
		573488	VABB-L1-14-T	1	
Inscription label holder					
	—	573453	ASCF-H-L1-10-4V	1	
		573457	ASCF-H-L1-10-8V	1	
		573460	ASCF-H-L1-10-12V	1	
		573461	ASCF-H-L1-10-16V	1	
		573463	ASCF-H-L1-10-24V	1	
		573511	ASCF-H-L1-14-4V	1	
		573515	ASCF-H-L1-14-8V	1	
		573519	ASCF-H-L1-14-12V	1	
		573520	ASCF-H-L1-14-16V	1	
		573522	ASCF-H-L1-14-24V	1	
Supply plate					
	—	573924	VABF-L1-10-P3A4-M7-T1	1	
		573925	VABF-L1-14-P3A4-G18-T1	1	




1) Packaging unit.

EX2 accessories – Valve terminal









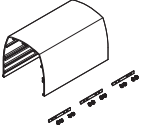
Ordering data		Description	Part no.	Type	PU ¹⁾	
Fixed flow restrictor						
	—		8047346	VFFG-T-F4-5	1	
			8047347	VFFG-T-F4-6	1	
			8047348	VFFG-T-F4-7	1	
			8047349	VFFG-T-F4-8	1	
			8047350	VFFG-T-F4-10	1	
			8047351	VFFG-T-F4-12	1	
			8047352	VFFG-T-F4-15	1	
			8047353	VFFG-T-F6-7	1	
			8047354	VFFG-T-F6-11	1	
			8047355	VFFG-T-F6-18	1	
			8047356	VFFG-T-F6-16	1	
			8047357	VFFG-T-F6-10	1	
			8047358	VFFG-T-F6-8	1	
			8047359	VFFG-T-F6-14	1	
Check valve						
	—		8047364	VABF-L1-10H-H2	1	
			8047365	VABF-L1-14-H2	1	
Hood						
	Mounting rail for attaching the hood		196 mm	3307385	CAFM-X1-R-200	1
			296 mm	3307386	CAFM-X1-R-300	1
			396 mm	3307387	CAFM-X1-R-400	1
			496 mm	3307388	CAFM-X1-R-500	1
			596 mm	3307389	CAFM-X1-R-600	1
	Mounting kit for VTUG hood		572257	CAFC-X1-BE	1	
	Hood section for VTUG terminal including mounting attachments for connecting several hood sections in series	VTUG-10-4 sections	200 mm	8127858	CAFC-X1-GAL-200-Z	1
		VTUG-10-8/12-14-4 sections	300 mm	8127859	CAFC-X1-GAL-300-Z	1
		VTUG-10-16/24-14-8/12-sections	400 mm	8127860	CAFC-X1-GAL-400-Z	1
		VTUG-14-16 sections	600 mm	8127861	CAFC-X1-GAL-600-Z	1
		VTUG-14-24 sections		8127862	CAFC-X1-GAL-600-Z	1
Kit for any hood section for terminal VTUG			—	CAFC-... → Internet: cafc	1	

1) Packaging unit.





EX2E accessories – Valve terminal

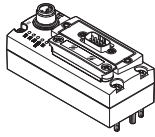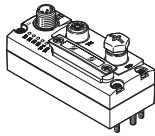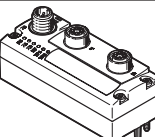Ordering data – Bus node CTEU			Part no.	Type
Description				
Bus node				
	Profibus DP bus node	only for use with VTUG-EX2E (in the Ex control cabinet)	8107588	CTEU-PB-EX1C
	EtherNet/IP bus node		8107591	CTEU-EP-EX1C
	PROFINET RT bus node		8107589	CTEU-PN-EX1C





EX2E accessories – Valve terminal

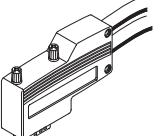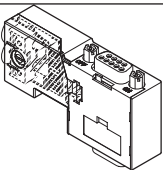Ordering data – Accessories for CTEU-PB-EX1C			
	Description	Part no.	Type
Plug socket			
	Socket for micro style connection, A-coded	8162291	NECB-M12G5-C2
	For bypassing the interlock function	1589339	NEFF-S1G44LB
Plug			
	Sub-D plug, straight	532216	FBS-SUB-9-GS-DP-B
	Sub-D plug, angled	533780	FBS-SUB-9-WS-PB-K
	Straight plug, M12x1, 5-pin, for assembling a connecting cable compatible with FBA-2-M12-5POL-RK	1066354	NECU-M-S-B12G5-C2-PB
	Sub-D plug, straight, with terminating resistor and programming interface	574589	NECU-S1W9-C2-APB
Terminating resistor			
	Terminating resistor, M12, B-coded for PROFIBUS	1072128	CACR-S-B12G5-220-PB
Bus connection			
	Bus connection M12 adapter, B-coded	533118	FBA-2-M12-5POL-RK
Fitting			
	Straight socket, M12x1, 5-pin, for assembling a connecting cable compatible with FBA-2-M12-5POL-RK	1067905	NECU-M-B12G5-C2-PB
	Threaded sleeve for Sub-D	533000	UNC4-40/M3X8

EX2E accessories – Valve terminal

Ordering data – Accessories for CTEU-PN-EX1C and CTEU-EP-EX1C					
	Description	Part no.	Type		
Plug socket					
	Socket for micro style connection, A-coded	8162291	NECB-M12G5-C2		
	For bypassing the interlock function	1589339	NEFF-S1G44LB		
Plug					
	Plug M12x1, 4-pin, D-coded	543109	NECU-M-S-D12G4-C2-ET		
Connecting cable					
	Straight plug, M12x1, 4-pin, D-coded	Straight plug, M12x1, 4-pin, D-coded	0.5 m	8040446	NEBC-D12G4-ES-0.5-S-D12G4-ET
			1 m	8040447	NEBC-D12G4-ES-1-S-D12G4-ET
			3 m	8040448	NEBC-D12G4-ES-3-S-D12G4-ET
			5 m	8040449	NEBC-D12G4-ES-5-S-D12G4-ET
			10 m	8040450	NEBC-D12G4-ES-10-S-D12G4-ET
		Straight plug, RJ45, 8-pin	1 m	8040451	NEBC-D12G4-ES-1-S-R3G4-ET
			3 m	8040452	NEBC-D12G4-ES-3-S-R3G4-ET
			5 m	8040453	NEBC-D12G4-ES-5-S-R3G4-ET
			10 m	8040454	NEBC-D12G4-ES-10-S-R3G4-ET
		Open end, 4-core	5 m	8040456	NEBC-LE4-ES-5-D12G4-ET
	Straight – angled	Suitable for energy chains	5 m	574321	NEBU-M12G5-E-5-Q8N-M12G5
			7.5 m	574322	NEBU-M12G5-E-7.5-Q8N-M12G5
			10 m	574323	NEBU-M12G5-E-10-Q8N-M12G5
	Angled – angled	Standard	0.5 m	570733	NEBU-M12W5-K-0.5-M12W5
	Straight – angled			8003617	NEBU-M12G5-K-0.5-M12W5
	Angled – angled		2 m	570734	NEBU-M12W5-K-2-M12W5
	Straight – angled			8003618	NEBU-M12G5-K-2-M12W5

EX2E accessories – Valve terminal

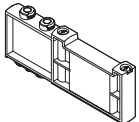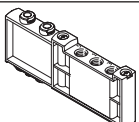Ordering data		Part no.	Type	PU ¹⁾
Description				
Cover cap				
	—	540897	VMPA-HBT-B	1
		540898	VMPA-HBV-B	1
		8002234	VAMC-L-1CD	1
Inscription labels				
	—	565306	ASLR-C-E4	40
Separator				
	—	569994	VABD-6-B	1
		569996	VABD-10-B	1
Inscription label holder				
	—	570818	ASLR-D-L1	1
Cover plate				
	—	573422	VABB-L1-10-T	1
		573488	VABB-L1-14-T	1
Inscription label holder				
	—	573453	ASCF-H-L1-10-4V	1
		573457	ASCF-H-L1-10-8V	1
		573460	ASCF-H-L1-10-12V	1
		573461	ASCF-H-L1-10-16V	1
		573463	ASCF-H-L1-10-24V	1
		573511	ASCF-H-L1-14-4V	1
		573515	ASCF-H-L1-14-8V	1
		573519	ASCF-H-L1-14-12V	1
		573520	ASCF-H-L1-14-16V	1
		573522	ASCF-H-L1-14-24V	1
Supply plate				
	—	573924	VABF-L1-10-P3A4-M7-T1	1
		573925	VABF-L1-14-P3A4-G18-T1	1

1) Packaging unit.

EX2E accessories – Valve terminal


Ordering data		Part no.	Type	PU ¹⁾
Description				
Fixed flow restrictor				
	—	8047346	VFFG-T-F4-5	1
		8047347	VFFG-T-F4-6	1
		8047348	VFFG-T-F4-7	1
		8047349	VFFG-T-F4-8	1
		8047350	VFFG-T-F4-10	1
		8047351	VFFG-T-F4-12	1
		8047352	VFFG-T-F4-15	1
		8047353	VFFG-T-F6-7	1
		8047354	VFFG-T-F6-11	1
		8047355	VFFG-T-F6-18	1
		8047356	VFFG-T-F6-16	1
		8047357	VFFG-T-F6-10	1
		8047358	VFFG-T-F6-8	1
		8047359	VFFG-T-F6-14	1
Check valve				
	—	8047364	VABF-L1-10H-H2	1
		8047365	VABF-L1-14-H2	1
Screw set				
	—	8092501	VAME-S-M5-16-R1-P10	1
Datasheets → Internet: vamer				

1) Packaging unit.

Datasheet – Sub-base valve M5/M7

Function
 3/2C, 3/2U
 2x 3/2C, 2x 3/2U, 2x 3/2H
 5/2-way, single solenoid
 5/2-way, double solenoid
 5/3C, 5/3U, 5/3E

-  - Size 10 mm
-  - Flow rate
130 ... 300 l/min
-  - Voltage
24 V DC

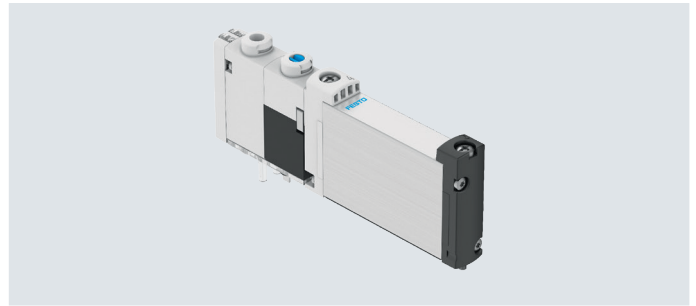

Circuit diagrams a Page 17

General technical data														
Valve function	T32-A			T32-M			M32-R		M52-R	B52	M52-M	P53		
Normal position	C ¹⁾	U ²⁾	H ⁴⁾	C ¹⁾	U ²⁾	H ⁴⁾	C ¹⁾	U ²⁾	–	–	–	C ¹⁾	U ²⁾	E ³⁾
Stable position	Monostable									Bistable		Monostable		
Pneumatic spring return	Yes			No			No		Yes ⁵⁾	–	No	–		
Mechanical spring return	No			Yes			Yes		Yes ⁵⁾	–	Yes	Yes		
Vacuum operation at port 1	No			With external pilot air										
Design	Piston spool													
Sealing principle	Soft													
Actuation type	Electrical													
Type of control	Piloted													
Pilot air supply	External													
Exhaust air function	Can be throttled													
Manual override	Choice of non-detenting, covered, non-detenting/detenting or detenting													
Type of mounting	On manifold rail													
Mounting position	Any													
Overlap	Positive overlap											Indeterminate overlap		
Signal status indication	LED													
Standard nominal flow rate M5/M7	[l/min]	160			140			140		300		260		260
Flow rate on manifold rail M5, front	[l/min]	150			130			130		220		220		200
Flow rate on manifold rail M7, front	[l/min]	160			140			140		270		240		250
Flow rate on manifold rail M7, underneath	[l/min]	160			140			140		300		260		260
Size	[mm]	10												
Connection	1, 3, 5, 12/14, 82/84			On manifold rail										
	2, 4			On manifold rail										
Product weight	[g]	59					53				60	53	58	
Certification	c UL us - Recognized (OL)													
	RCM													
CE marking (see declaration of conformity) ⁶⁾	To EU EMC Directive													
Corrosion resistance class CRC7)	2													

1) C=Normally closed/mid-position closed

2) U=Normally open/mid-position pressurised

3) E=Mid-position exhausted

4) H=2x 3/2-way valve in one housing with 1x normally closed and 1x normally open

5) Combined reset method

6) For information about the area of use, see the declaration of conformity at: www.festo.com/catalogue/...d/Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

7) More information www.festo.com/x/topic/crc

Datasheet – Sub-base valve M5/M7

Operating and environmental conditions									
Valve function			T32-A ¹⁾	T32-M ²⁾	M32-R ³⁾	M52-R ³⁾	B52	M52-M ²⁾	P53
Operating medium			Compressed air to ISO 8573-1:2010 [7:4:4]						
Operating pressure	Internal pilot air supply	[MPa]	0.15 ... 0.8	0.2 ... 0.8	0.15 ... 0.8			0.3 ... 0.8	
		[bar]	1.5 ... 8	2 ... 8	1.5 ... 8			3 ... 8	
	External pilot air supply	[MPa]	0.15 ... 1	−0.09 ... 1			−0.09 ... 0.8		−0.09 ... 1
		[bar]	1.5 ... 10	−0.9 ... 10			−0.9 ... 8		−0.9 ... 10
Pilot pressure ⁴⁾		[MPa]	0.15 ... 0.8	0.2 ... 0.8	0.15 ... 0.8			0.3 ... 0.8	
		[bar]	1.5 ... 8	2 ... 8	1.5 ... 8			3 ... 8	
Ambient temperature		[°C]	−5 ... +60						
Temperature of medium		[°C]	−5 ... +60						
LABS (PWIS) conformity		Valve terminal VTUG-...	VDMA24364-B1/B2-L						

- 1) Pneumatic spring
2) Mechanical spring
3) Mixed, pneumatic/mechanical spring
4) See graphs on page 11

Electrical data		
Electrical connection		Via E-box
Operating voltage	[V DC]	24 ±10%
Power consumption per valve solenoid	[W]	1/0.4 (after 25 ms)
Duty cycle	[%]	100
Max. switching frequency	[Hz]	3
Degree of protection to EN 60529)	Valve terminal VTUG (for control cabinet installation)	IP69K
	Valve terminal VTUG-VI-EX2	IP20, IP65

- 1) Depending on the configuration selected

Safety data		
Max. positive test pulse with logic 0	[µs]	1600
Max. negative test pulse with logic 1	[µs]	3000
Shock resistance		Shock test with severity level 2 to FN 942017-5 and EN 60068-2-27
Vibration resistant		Transport application test with severity level 2 to FN 942017-4 and EN 60068-2-6

Information on materials	
Housing	Wrought aluminium alloy
Seals	HNBR, NBR
Note on materials	RoHs-compliant

Valve switching times								
Valve function		T32-A ¹⁾	T32-M ²⁾	M32-R ³⁾	M52-R ³⁾	B52	M52-M ²⁾	P53
Switching time on	[ms]	8	10	9	9	–	12	12
Switching time off	[ms]	20	20	17	21	–	30	38
Switching time changeover	[ms]	–	–	–	–	9	–	16


- 1) Pneumatic spring
2) Mechanical spring
3) Mixed, pneumatic/mechanical spring

Datasheet – Sub-base valve M5/M7

Dimensions

Download CAD data → www.festo.com

Sub-base valve M5/M7

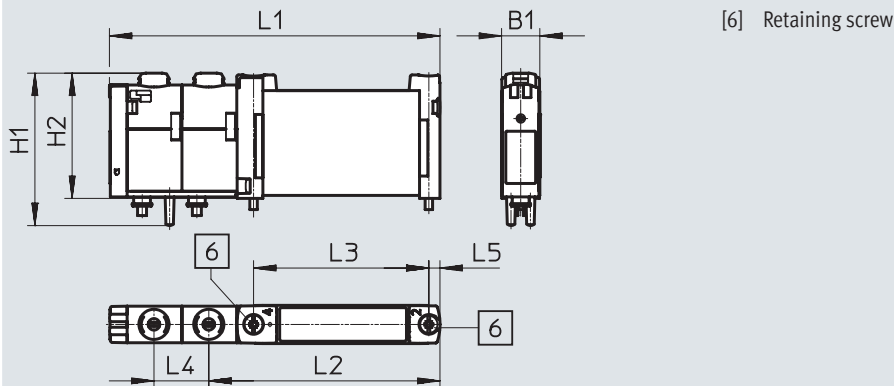

Type	B1	H1	H2	L1	L2	L3	L4	L5
VUVG-B10-...-F-1T1L-EX2C	10.3	40.7	33	88.6	62	47	14.7	3

Ordering data

Description	Part no.	Type
Sub-base valve M5/M7		
3/2-way valve		
External pilot air supply	Normally closed, pneumatic/mechanical spring return	8041900 VUVG-B10Z-M32C-RZT-F-1T1L-EX2C
	Normally open, pneumatic/mechanical spring return	8041901 VUVG-B10Z-M32U-RZT-F-1T1L-EX2C
2x 3/2-way valve		
External pilot air supply	Normally closed, pneumatic spring return	8041895 VUVG-B10-T32C-AZT-F-1T1L-EX2C
	Normally open, pneumatic spring return	8041896 VUVG-B10-T32U-AZT-F-1T1L-EX2C
	1x normally open, 1x normally closed, pneumatic spring return	8041897 VUVG-B10-T32H-AZT-F-1T1L-EX2C
	Normally closed, mechanical spring return	8041891 VUVG-B10-T32C-MZT-F-1T1L-EX2C
	Normally open, mechanical spring return	8041898 VUVG-B10-T32U-MZT-F-1T1L-EX2C
	1x normally open, 1x normally closed, mechanical spring return	8041899 VUVG-B10-T32H-MZT-F-1T1L-EX2C
5/2-way valve, single solenoid		
External pilot air supply	Mechanical spring return	8041892 VUVG-B10-M52-MZT-F-1T1L-EX2C
	Pneumatic/mechanical spring return	8041889 VUVG-B10-M52-RZT-F-1T1L-EX2C
5/2-way valve, double solenoid		
External pilot air supply		8041888 VUVG-B10-B52-ZT-F-1T1L-EX2C
5/3-way valve		
External pilot air supply	Mid-position closed, mechanical spring return	8041890 VUVG-B10-P53C-ZT-F-1T1L-EX2C
	Mid-position pressurised, mechanical spring return	8041893 VUVG-B10-P53U-ZT-F-1T1L-EX2C
	Mid-position exhausted, mechanical spring return	8041894 VUVG-B10-P53E-ZT-F-1T1L-EX2C

Datasheet – Sub-base valve G1/8

Function

3/2C, 3/2U

2x 3/2C, 2x 3/2U, 2x 3/2H


5/2-way, single solenoid

5/2-way, double solenoid

5/3C, 5/3U, 5/3E

-  - Size 14 mm-  - Flow rate
350 ... 560 l/min-  - Voltage
24 V DC

Circuit diagrams a Page 17

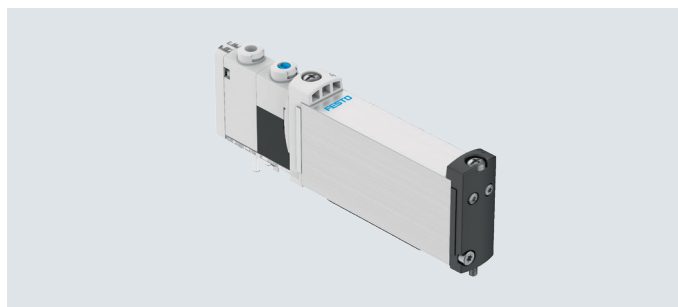

General technical data														
Valve function	T32-A			T32-M			M32-A		M52-A	B52	M52-M	P53		
Normal position	C ¹⁾	U ²⁾	H ⁴⁾	C ¹⁾	U ²⁾	H ⁴⁾	C ¹⁾	U ²⁾	–	–	–	C ¹⁾	U ²⁾	E ³⁾
Stable position	Monostable									Bistable		Monostable		
Pneumatic spring return	Yes			No			Yes		Yes	–	No	–		
Mechanical spring return	No			Yes			No		No	–	Yes	Yes		
Vacuum operation at port 1	No			With external pilot air										
Design	Piston spool													
Sealing principle	Soft													
Actuation type	Electrical													
Type of control	Piloted													
Pilot air supply	External													
Exhaust air function	Can be throttled													
Manual override	Choice of non-detenting, covered, non-detenting/detenting or detenting													
Type of mounting	On manifold rail													
Overlap	Positive overlap													
Mounting position	Any													
Signal status indication	LED													
Standard nominal flow rate G1/8	[l/min]	530			470			350		550	560	550	510	
Flow rate on manifold rail G1/8, front	[l/min]	490			440			320		500	510	500	470	
Flow rate on manifold rail G1/8, underneath	[l/min]	530			470			350		550	560	550	510	
Size	[mm]	14												
Connection	1, 3, 5, 12/14, 82/84		On manifold rail											
	2, 4		On manifold rail											
Product weight	[g]	102			100			91		98		89	95	
Certification	c UL us - Recognized (OL)													
	RCM													
CE marking (see declaration of conformity) ⁵⁾	To EU EMC Directive													
Corrosion resistance class CRC6)	2													

1) C=Normally closed/mid-position closed

2) U=Normally open/mid-position pressurised

3) E=Mid-position exhausted

4) H=2x 3/2-way valve in one housing with 1x normally closed and 1x normally open

5) For information about the area of use, see the declaration of conformity at: www.festo.com/catalogue/...d/Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

6) More information www.festo.com/x/topic/crc

Datasheet – Sub-base valve G1/8

Operating and environmental conditions									
Valve function			T32-A ¹⁾	T32-M ²⁾	M32-A ¹⁾	M52-A ¹⁾	B52	M52-M ²⁾	P53
Operating medium			Compressed air to ISO 8573-1:2010 [7:4:4]						
Operating pressure	Internal pilot air supply	[MPa]	0.15 ... 0.8	0.2 ... 0.8	0.15 ... 0.8		0.3 ... 0.8		
		[bar]	1.5 ... 8	2 ... 8	1.5 ... 8		3 ... 8		
	External pilot air supply	[MPa]	0.15 ... 1	−0.09 ... 1			−0.09 ... 0.8	−0.09 ... 1	
		[bar]	1.5 ... 10	−0.9 ... 10			−0.9 ... 8	−0.9 ... 10	
Pilot pressure ³⁾			[MPa]	0.15 ... 0.8	0.2 ... 0.8	0.15 ... 0.8		0.3 ... 0.8	
			[bar]	1.5 ... 8	2 ... 8	1.5 ... 8		3 ... 8	
Ambient temperature		[°C]	−5 ... +60						
Temperature of medium		[°C]	−5 ... +60						
LABS (PWIS) conformity	Valve terminal VTUG-...		VDMA24364-B1/B2-L						

- 1) Pneumatic spring
 2) Mechanical spring
 3) See graphs on page 11

Electrical data		
Electrical connection		Via E-box
Operating voltage	[V DC]	24 ±10%
Power	[W]	1/0.4 (after 25 ms)
Duty cycle	[%]	100
Max. switching frequency	[Hz]	3
Degree of protection to EN 60529 ¹⁾	Valve terminal VTUG (for control cabinet installation)	IP69K
	Valve terminal VTUG-VI-EX2	IP20, IP65

- 1) Depending on the configuration selected

Safety data		
Max. positive test pulse with logic 0	[µs]	1600
Max. negative test pulse with logic 1	[µs]	3000
Shock resistance	Shock test with severity level 2 to FN 942017-5 and EN 60068-2-27	
Vibration resistant	Transport application test with severity level 2 to FN 942017-4 and EN 60068-2-6	

Information on materials	
Housing	Wrought aluminium alloy
Seals	HNBR, NBR
Note on materials	RoHS-compliant

Valve switching times								
Valve function			T32-A ¹⁾	T32-M ²⁾	M32-A ¹⁾	M52-A ¹⁾	B52	M52-M ²⁾ P53
Switching time on			[ms]	10	13	13	13	– 10 15
Switching time off			[ms]	29	21	20	26	– 38 42
Switching time changeover			[ms]	–	–	–	9	– 25


- 1) Pneumatic spring
 2) Mechanical spring

Datasheet – Sub-base valve G1/8

Dimensions

Download CAD data → www.festo.com

Sub-base valve G1/8

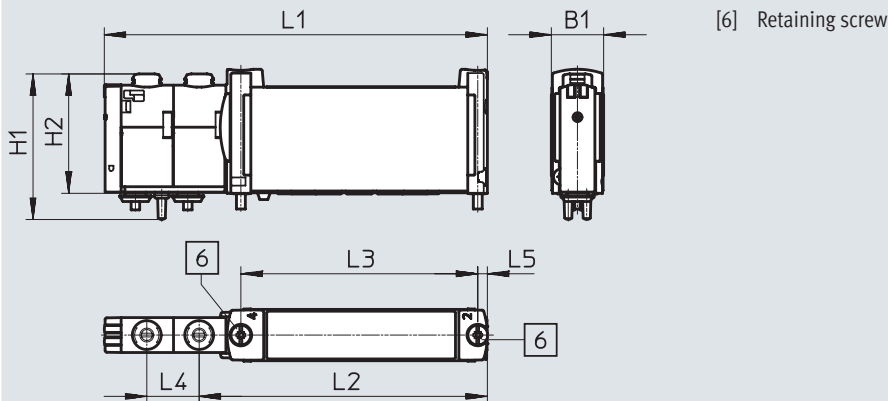

Type	B1	H1	H2	L1	L2	L3	L4	L5
VUVG-B14-...-F-1T1L-EX2C	14.7	40.9	33.5	107.6	81	66.5	15.1	2.8

Ordering data

Description	Part no.	Type
Sub-base valve G1/8		
3/2-way valve		
External pilot air supply	Normally closed, pneumatic spring return	8041970 VUVG-B14Z-M32C-AZT-F-1T1L-EX2C
	Normally open, pneumatic spring return	8041971 VUVG-B14Z-M32U-AZT-F-1T1L-EX2C
2x 3/2-way valve		
External pilot air supply	Normally closed, pneumatic spring return	8041958 VUVG-B14-T32C-AZT-F-1T1L-EX2C
	Normally open, pneumatic spring return	8041959 VUVG-B14-T32U-AZT-F-1T1L-EX2C
	1x normally open, 1x normally closed, pneumatic spring return	8041960 VUVG-B14-T32H-AZT-F-1T1L-EX2C
	Normally closed, mechanical spring return	8041961 VUVG-B14-T32C-MZT-F-1T1L-EX2C
	Normally open, mechanical spring return	8041962 VUVG-B14-T32U-MZT-F-1T1L-EX2C
	1x normally open, 1x normally closed, mechanical spring return	8041963 VUVG-B14-T32H-MZT-F-1T1L-EX2C
5/2-way valve, single solenoid		
External pilot air supply	Pneumatic spring return	8041964 VUVG-B14-M52-AZT-F-1T1L-EX2C
	Mechanical spring return	8041965 VUVG-B14-M52-MZT-F-1T1L-EX2C
5/2-way valve, double solenoid		
External pilot air supply		8041966 VUVG-B14-B52-ZT-F-1T1L-EX2C
5/3-way valve		
External pilot air supply	Mid-position closed, mechanical spring return	8041967 VUVG-B14-P53C-ZT-F-1T1L-EX2C
	Mid-position pressurised, mechanical spring return	8041969 VUVG-B14-P53U-ZT-F-1T1L-EX2C
	Mid-position exhausted, mechanical spring return	8041968 VUVG-B14-P53E-ZT-F-1T1L-EX2C

Datasheet – Manifold rail VABM

General technical data			
Manifold rail		Size 10	Size 14
Short type code		VABM	
Grid dimension [mm]		10.5	16
Mounting position		Any	
Connection type		Semi in-line/sub-base	
Max. no. of valve positions		24	
Connection	12/14	M5	M5
	82/84	M5	M5
	2, 4	M5 (VABM-L1-10W-...-GR)	G1/8
		M7 (VABM-L1-10HW-...-GR)	
	1, 3, 5	G1/8	–
Storage temperature [°C]		–20 ... 60	
Certification		c UL us - Recognized (OL)	
CE marking (see declaration of conformity) ¹⁾		To EU EMC Directive	
Corrosion resistance class CRC2)		2	
LABS (PWIS) conformity		VDMA24364-B1/B2-L	

1) For information about the area of use, see the declaration of conformity at: www.festo.com/catalogue/...d/Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.

2) More information www.festo.com/x/topic/crc

Weight [g]											
Valve positions	4	5	6	7	8	9	10	12	16	20	24
VABM-L1-10G-G18-...	329	363	397	431	465	499	533	601	737	873	1009
VABM-L1-10HW-G18-...	388	426	464	502	540	578	616	692	844	996	1148

Materials	
Manifold rail	Wrought aluminium alloy
Note on materials	RoHS-compliant

Datasheet – Manifold rail VABM


Type	Number Valve positions	Size 10			Size 14		
		L1	L2	L3	L1	L2	L3
VABM	4	103	94	31.5	128	118	48
	5	113.5	104.5	42	144	134	64
	6	124	115	52.5	160	150	80
	7	134.5	125.5	63	176	166	96
	8	145	136	73.5	192	182	112
	9	155.5	146.5	84	208	198	128
	10	166	157	94.5	224	214	144
	12	187	178	115.5	256	246	176
	16	229	220	157.5	320	310	240
	20	271	262	199.5	384	374	304
	24	313	304	241.5	448	438	368

Datasheet – Manifold rail VABM

Dimensions – Example of valve terminal with I-Port interface

Download CAD data → www.festo.com

Outlet direction of electrical components to the left

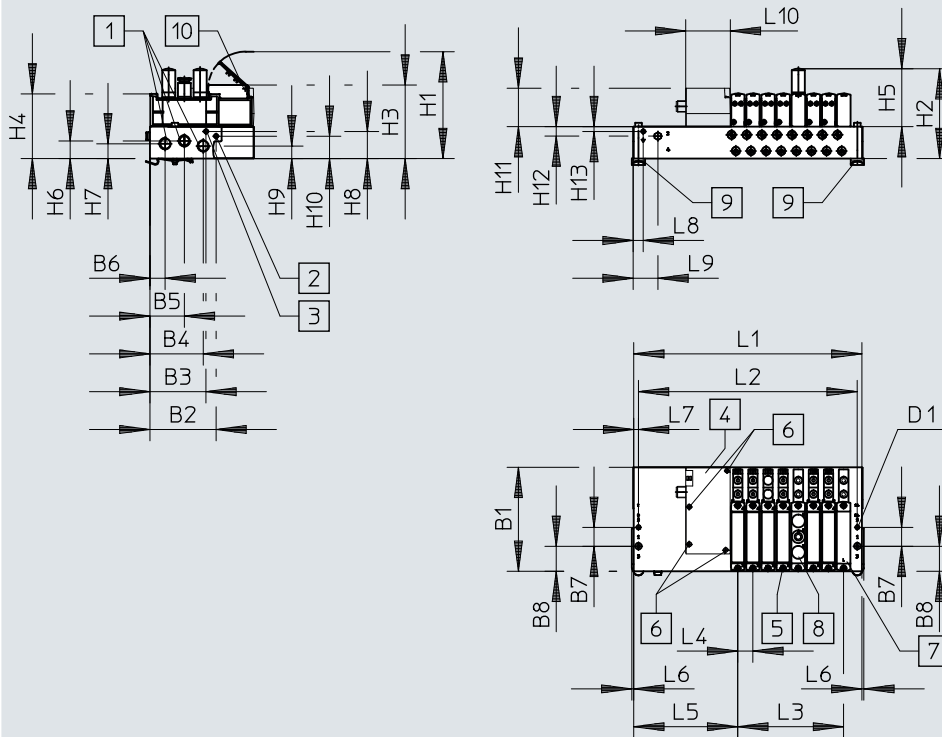

- | | | | |
|--|---|---|--|
| [1] Ports 1, 3 and 5: G1/4 (at both ends) | [3] Port 82/84: size 14 : M5 (at both ends) | [5] Valves/cover plates/supply plates – mounting on manifold block: size 14: M2.5 | [7] Blanking plate |
| [2] Port 12/14: size 14 : M5 (at both ends), | [4] Electrical connection I-Port interface/IO-Link® | [6] Electrical interface – mounting on manifold block: M3 | [8] Supply plate, port 1, 3 and 5: size 14: G1/8 |
| | | | [9] DIN rail mounting |
| | | | [10] Label holder |

Type	Number Valve positions	Size 14																
		B1	B2	B3	B4	B5	B6	B7	B8	D1 Ø	H1	H2	H3	H4	H5	H6	H7	H8
VABM	4-24	110	70	59.3	56.5	36.5	16	20	26.5	4.5	113.1	95.1	77.7	68.6	61.3	18.7	15.7	28.7

Type	Number Valve positions	Size 14											
		H9	H10	H11	H12	H13	L4	L5	L6	L7	L8	L9	L10
VABM	4-24	13.2	23.7	40.8	10.1	5.1	16	110.1	2	5	10	75	47.1

Datasheet – Manifold rail VABM


Type	Number Valve positions	Size 14		
		L1	L2	L3
VABM	4	177.5	167.5	48
	5	193.5	183.5	64
	6	209.5	199.5	80
	7	225.5	215.5	96
	8	241.5	231.5	112
	9	257.5	247.5	128
	10	273.5	263.5	144
	12	305.5	295.5	176
	16	369.5	359.5	240
	20	433.5	423.5	304
	24	497.5	487.5	368

Datasheet – Manifold rail VABM

Dimensions – Example of control cabinet installation for valve terminal

Download CAD data → www.festo.com

Outlet direction of electrical components on top

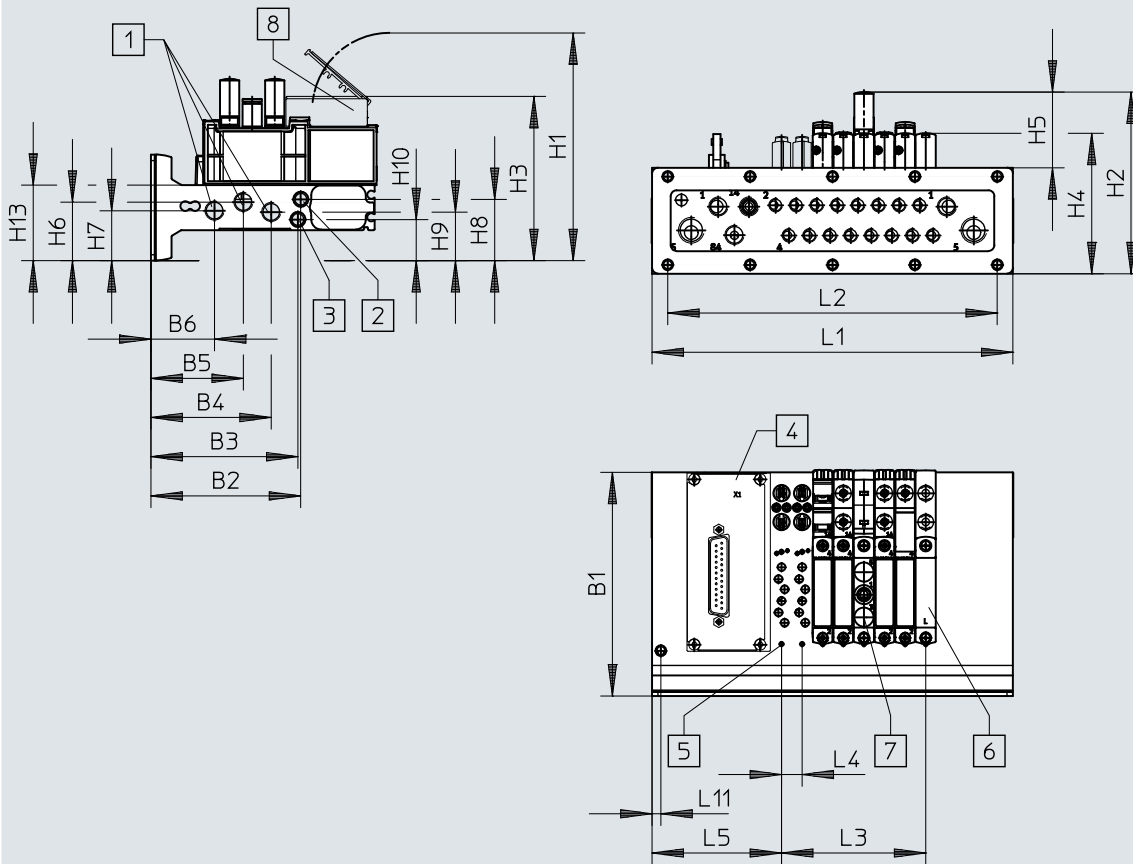

- | | | | |
|---|---|--|--|
| [1] Ports 1, 3 and 5: size 10: G1/8, G1/4, size 14: G3/8, G1/4 | [3] Ports 82/84: size 10: M5 (at both ends), size 14: M7 (at both ends) | [5] Valves/cover plates/supply plates – mounting on manifold block: M2 | [7] Supply plate, ports 1, 3 and 5: M7 |
| [2] Ports 12/14: size 10: M5 (at both ends), size 14: M7 (at both ends) | [4] Electrical connection | [6] Cover plate | [8] Label holder |

Type	Number Valve positions	Size 10									
		B1	B2	B3	B4	B5	B6	H1	H2	H3	H4
VABM	4-24	114	76.5	75.1	62.5	47.3	32.4	116	92.6	84	71.6

Type	Number Valve positions	Size 10									
		H5	H6	H7	H8	H9	H10	H13	L4	L5	L11
VABM	4-24	38.6	29.8	25.4	31.2	24.7	20.9	38.5	10.5	66	4.5

Type	Number Valve positions	Size 14									
		B1	B2	B3	B4	B5	B6	H1	H2	H3	H4
VABM	4-24	132	93	80.8	76.5	55.5	36.1	111.3	101.7	77.6	85.1

Type	Number Valve positions	Size 14									
		H5	H6	H7	H8	H9	H10	H13	L4	L5	L11
VABM	4-24	34.9	35.2	30.3	39.3	30.3	45	50.3	16	72.6	4.5

Datasheet – Manifold rail VABM


Number of valve positions	L1	L2	L3
VABM-L1-10HWS1-G18-4-GR	116.2	84	31.5
VABM-L1-10HWS1-G18-8-GR	158.2	126	73.5
VABM-L1-10HWS2-G18-8-GR	184	168	73.5
VABM-L1-10HWS2-G18-12-GR	226	210	115.5
VABM-L1-10HWS2-G18-16-GR	268	252	157.5
VABM-L1-10HWS2-G18-24-GR	352	336	241.5
VABM-L1-10HWS2-H-G18-8-GR	184	168	73.5
VABM-L1-10HWS2-H-G18-12-GR	226	210	115.5
VABM-L1-10HWS2-H-G18-16-GR	268	252	157.5
VABM-L1-10HWS2-H-G18-24-GR	352	336	241.5
VABM-L1-14HWS1-G14-4-GR	135	64	48
VABM-L1-14HWS1-G14-8-GR	199	128	112
VABM-L1-14HWS2-G14-8-GR	234	192	112
VABM-L1-14HWS2-G14-12-GR	298	256	176
VABM-L1-14HWS2-G14-16-GR	362	320	240
VABM-L1-14HWS2-G14-24-GR	490	448	368
VABM-L1-14HWS2-H-G14-8-GR	234	192	112
VABM-L1-14HWS2-H-G14-12-GR	298	256	176
VABM-L1-14HWS2-H-G14-16-GR	362	320	240
VABM-L1-14HWS2-H-G14-24-GR	490	448	368

Datasheet – Manifold rail VABM

Dimensions – Example of control cabinet installation for valve terminal

Download CAD data → www.festo.com

Outlet direction of electrical components on top, with shut-off function (hot swap)

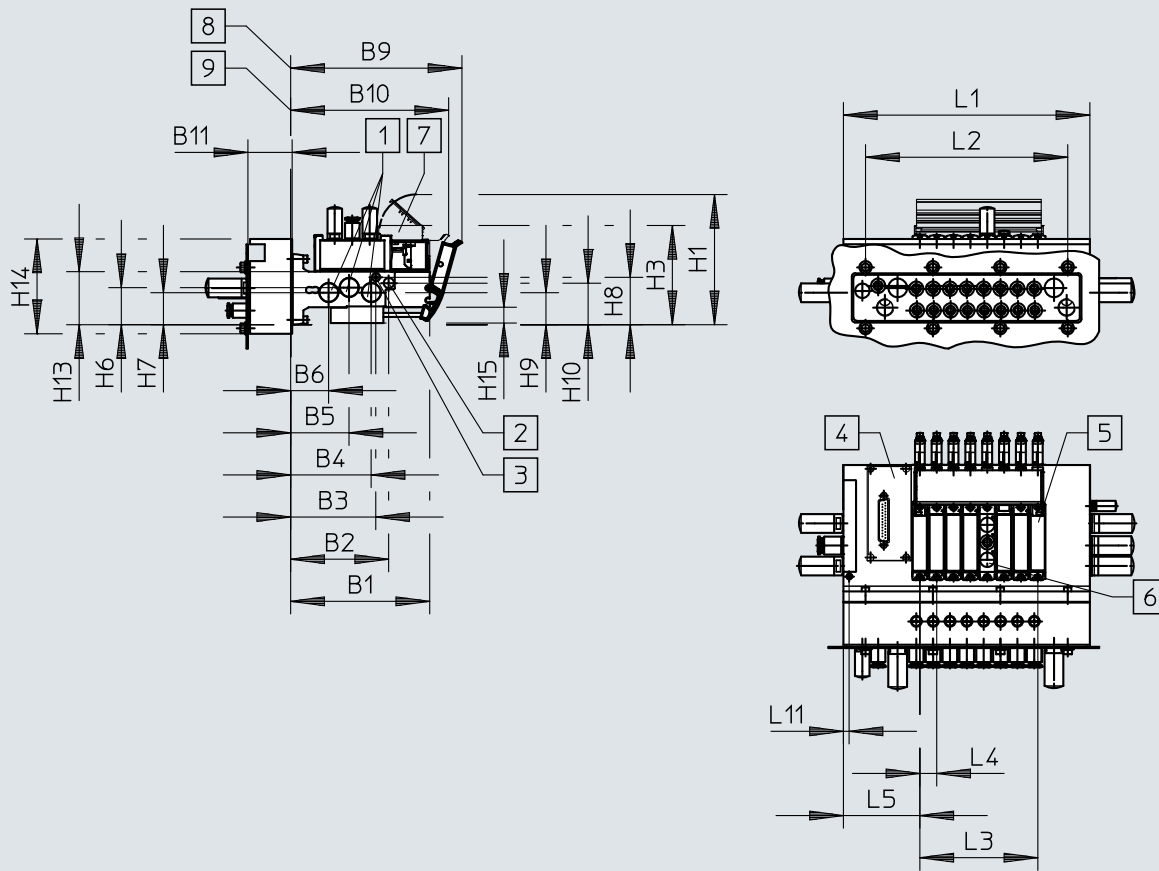

- | | | | |
|---|---|--|--|
| [1] Ports 1, 3 and 5: size 10: G1/8, G1/4, size 14: G3/8, G1/4 | [3] Ports 82/84: size 10: M5 (at both ends), size 14: M7 (at both ends) | [5] Cover plate | [8] VTUG 10: with seal and stainless-steel plate |
| [2] Ports 12/14: size 10: M5 (at both ends), size 14: M7 (at both ends) | [4] Electrical connection | [6] Supply plate, ports 1, 3 and 5: M7 | VTUG 14: with seal and stainless-steel plate, hot swap 1 and 2/4 |
| | | [7] Label holder | [9] With seal and stainless-steel plate |

Type	Number Valve positions	Size 10										
		B1	B2	B3	B4	B5	B6	B9	B10	B11	H1	H3
VABM	4-24	114	76.5	75.1	62.5	47.3	32.4	142	132	–	114	82

Type	Number Valve positions	Size 10										
		H6	H7	H8	H9	H10	H13	H14	H15	L4	L5	L11
VABM	4-24	29.8	25.4	21	24.7	31.3	38.5	–	15	10.5	66	5.5

Type	Number Valve positions	Size 14										
		B1	B2	B3	B4	B5	B6	B9	B10	B11	H1	H3
VABM	4-24	132	93	80.8	76.5	55.5	36.1	163	151	42	123.5	93.9

Type	Number Valve positions	Size 14										
		H6	H7	H8	H9	H10	H13	H14	H15	L4	L5	L11
VABM	4-24	35.2	30.3	45	30.3	39.3	50.3	90	15	16	72.6	5.5

Datasheet – Manifold rail VABM



Number of valve positions	L1	L2	L3
VABM-L1-10HWS1-G18-4-GR	116.2	84	31.5
VABM-L1-10HWS1-G18-8-GR	158.2	126	73.5
VABM-L1-10HWS2-G18-8-GR	184	168	73.5
VABM-L1-10HWS2-G18-12-GR	226	210	115.5
VABM-L1-10HWS2-G18-16-GR	268	252	157.5
VABM-L1-10HWS2-G18-24-GR	352	336	241.5
VABM-L1-10HWS2-H-G18-8-GR	184	168	73.5
VABM-L1-10HWS2-H-G18-12-GR	226	210	115.5
VABM-L1-10HWS2-H-G18-16-GR	268	252	157.5
VABM-L1-10HWS2-H-G18-24-GR	352	336	241.5
VABM-L1-14HWS1-G14-4-GR	135	64	48
VABM-L1-14HWS1-G14-8-GR	199	128	112
VABM-L1-14HWS2-G14-8-GR	234	192	112
VABM-L1-14HWS2-G14-12-GR	298	256	176
VABM-L1-14HWS2-G14-16-GR	362	320	240
VABM-L1-14HWS2-G14-24-GR	490	448	368
VABM-L1-14HWS2-H-G14-8-GR	234	192	112
VABM-L1-14HWS2-H-G14-12-GR	298	256	176
VABM-L1-14HWS2-H-G14-16-GR	362	320	240
VABM-L1-14HWS2-H-G14-24-GR	490	448	368

Datasheet – Manifold rail VABM

Dimensions – Manifold rail outlet direction at the front


Download CAD data → www.festo.com

Size 10, I-Port interface on top

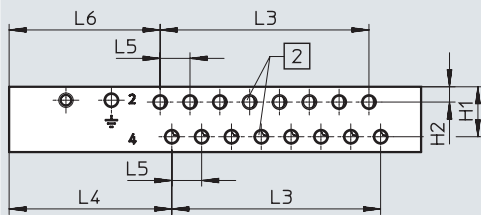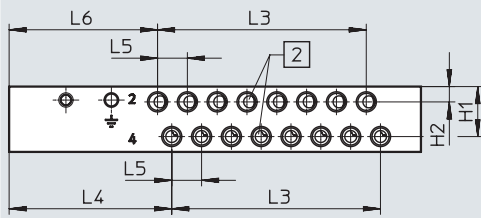


[2] Port 2 and 4

Size 14, I-Port interface on top

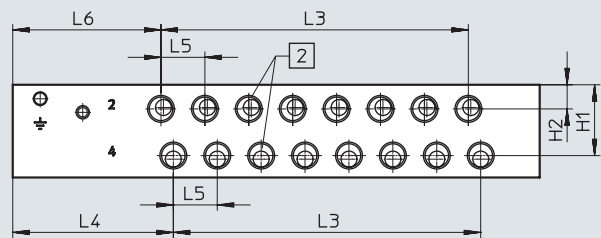

[2] Port 2 and 4

Sizes 10, 14, I-Port interface on the side

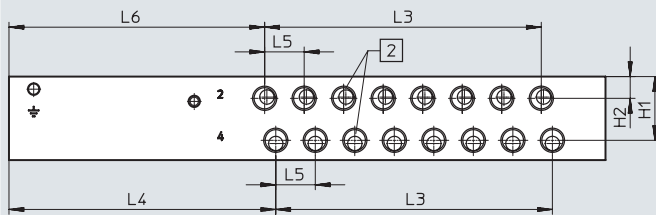

[2] Port 2 and 4

Size	Port 2 and 4	Manifold rail with I-Port interface on top				
		H1	H2	L4	L5	L6
10	M7 thread	17.6	5.4	57.3	10.5	52.3
	M5 thread					53.2
14	Thread G1/8	25.8	8.8	58.5	16	54

Size	Port 2 and 4	Manifold rail with I-Port interface on the side				
		H1	H2	L4	L5	L6
10	M7 thread	17.6	5.4	106.8	10.5	101.8
	M5 thread					102.7
14	Thread G1/8	25.8	8.8	108	16	103.5


Datasheet – Manifold rail VABM

Type	Number of valve positions	Size 10	Size 14
		L3	L3
VABM	4	31.5	48
	5	42	64
	6	52.5	80
	7	63	96
	8	73.5	112
	9	84	128
	10	94.5	144
	12	115.5	176
	16	157.5	240
	20	199.5	304
	24	241.5	368

Datasheet – Manifold rail VABM

Dimensions – Manifold rail outlet direction underneath

Control cabinet installation

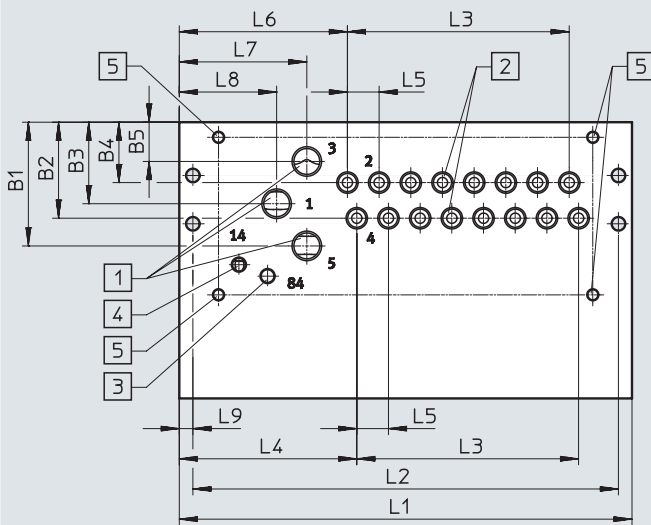Download CAD data → www.festo.com

-  - **Note**

Dimensions of the manifold rail I-Port interface on the side for control cabinet installation
a Page 48

- [1] Ports 1, 3 and 5: size 10: G1/8 / G1/4 (at both ends) [3] Port 82/84: size 10 and 14: M5 [4] Port 12/14: size 10 and 14: M5 [5] Mounting holes, outlet direction underneath: M4x8
- [2] Port 2 and 4: size 10: M5/M7, size 14: G1/8

Type	Manifold rail with I-Port interface on top, size 10										
	B1	B2	B3	B4	B5	L4	L5	L6	L7	L8	L9
VABM	41	31.8	27	20	13	58.8	10.5	55.7	42.3	32.3	4.5

Type	Manifold rail with I-Port interface on top, size 14										
	B1	B2	B3	B4	B5	L4	L5	L6	L7	L8	L9
VABM	53.5	45.1	35.2	27.8	17	58.5	16	58.5	43	33	5

Type	Number Valve positions	Size 10			Size 14		
		L1 +5	L2 +5	L3	L1	L2	L3
VABM	4	103	94	31.5	128	118	48
	5	113.5	104.5	42	144	134	64
	6	124	115	52.5	160	150	80
	7	134.5	125.5	63	176	166	96
	8	145	136	73.5	192	182	112
	9	155.5	146.5	84	208	198	128
	10	166	157	94.5	224	214	144
	12	187	178	115.5	256	246	176
	16	229	220	157.5	320	310	240
	20	271	262	199.5	384	374	304
	24	313	304	241.5	448	438	368

Datasheet – Manifold rail VABM

Type	Manifold rail with I-Port interface, size 10										
	B1	B2	B3	B4	B5	L4	L5	L6	L7	L8	L9
VABM	41	31.8	27	20	13	108.3	10.5	105.2	91.8	81.8	4.5

Type	Manifold rail with I-Port interface, size 14										
	B1	B2	B3	B4	B5	L4	L5	L6	L7	L8	L9
VABM	53.5	45.1	35.2	27.8	17	108	16	108	92.5	82.5	5


Type	Number Valve positions	Manifold rail with I-Port interface Size 10			Manifold rail with I-Port interface Size 14		
		L1 +5	L2 +5	L3	L1	L2	L3
VABM	4	152.5	143.5	31.5	177.5	167.5	48
	5	163	154	42	193.5	183.5	64
	6	173.5	164.5	52.5	209.5	199.5	80
	7	184	175	63	225.5	215.5	96
	8	194.5	185.5	73.5	241.5	231.5	112
	9	205	196	84	257.5	247.5	128
	10	215.5	206.5	94.5	273.5	263.5	144
	12	236.5	227.5	115.5	305.5	295.5	176
	16	278.5	269.5	157.5	369.5	359.5	240
	20	320.5	311.5	199.5	433.5	423.5	304
	24	362.5	353.5	241.5	497.5	487.5	368

Datasheet – Manifold rail VABM

Dimensions – Manifold rail outlet direction at the front

Download CAD data → www.festo.com

Control cabinet installation/control cabinet installation with shut-off function (hot swap)

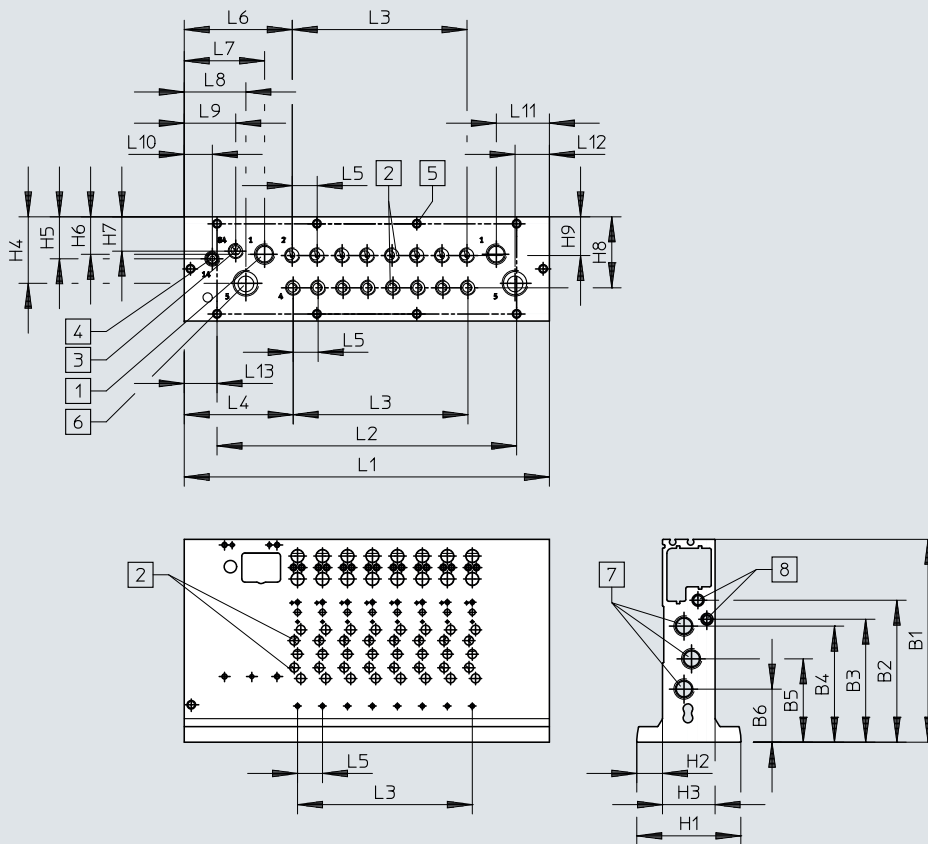[1] Ports 1, 3 and 5: size 10: G1/8,
size 14: G1/4[2] Ports 2 and 4: size 10: M7, size
14: G1/8[3] Port 82/84:
sizes 10 and 14: G1/8[4] Port 12/14:
sizes 10 and 14: G1/8[5] Mounting holes, outlet direction
underneath: M5[6] Port 3/5:
size 10: G1/4,
size 14: G3/8[7] Ports 1, 3 and 5 on the side:
size 10: G1/8,
size 14: G1/4

[8] Port 82/84 and 12/14: M7

Type	Size 10															
	B1	B2	B3	B4	B5	B6	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13
VABM-L1-10HWS1	111.5	74	72.6	60	44.8	29.9	69.8	10.5	63	33.8	20	42	49.4	33.8	20	16.1
VABM-L1-10HWS2																8

Type	Size 10								
	H1	H2	H3	H4	H5	H6	H7	H8	H9
VABM-L1-10HWS1	54	15.5	23	31.9	19.8	19.8	34.3	34.5	19.1
VABM-L1-10HWS2									


Type	Size 14															
	B1	B2	B3	B4	B5	B6	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13
VABM-L1-14HWS1	130	91	78.8	74.5	53.5	34.1	69.8	16	96.2	51.5	39.5	33	18	34	22	35.5
VABM-L1-14HWS2																21

Type	Size 14								
	H1	H2	H3	H4	H5	H6	H7	H8	H9
VABM-L1-14HWS1	66.8	16.5	33.8	42.6	26.9	24	22	45.5	24.8
VABM-L1-14HWS2									

Datasheet – Manifold rail VABM


Dimensions – Recess for control cabinet installation, outlet direction underneath, size 10

Up to 8 valves

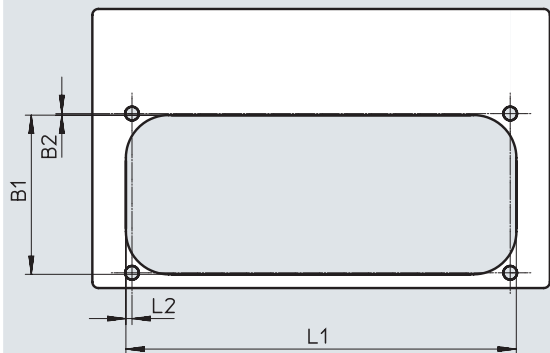

Type	B1	B2	L1	L2
VABM-L1-10...G18-4	52.7	0.5	86	2
VABM-L1-10...G18-5			96.5	
VABM-L1-10...G18-6			107	
VABM-L1-10...G18-7			117.5	
VABM-L1-10...G18-8			128	


9 or more valves

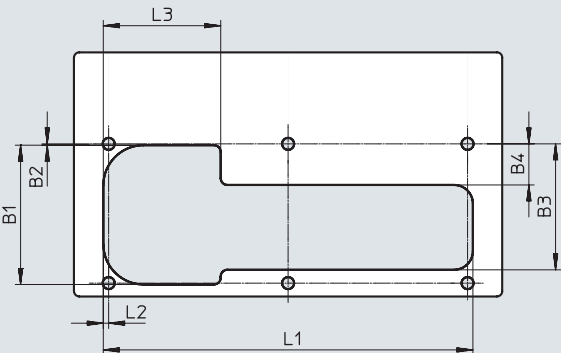

Type	B1	B2	B3	B4	L1	L2	L3
VABM-L1-10...G18-9	52.7	0.5	47.2	15.4	138.5	2	44
VABM-L1-10...G18-10					149		
VABM-L1-10...G18-12					170		
VABM-L1-10...G18-16					212		
VABM-L1-10...G18-20					254		
VABM-L1-10...G18-24					296		


Dimensions – Recess for control cabinet installation, outlet direction underneath, size 14

Up to 7 valves

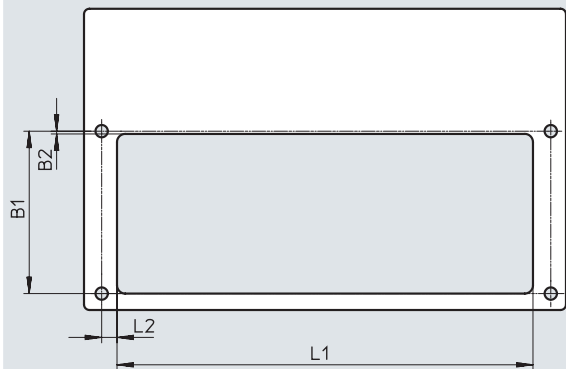

Type	B1	B2	L1	L2
VABM-L1-14...G14-4	59.3	1	103.9	5.6
VABM-L1-14...G14-5			119.9	
VABM-L1-14...G14-6			135.9	
VABM-L1-14...G14-7			151.9	

8 or more valves

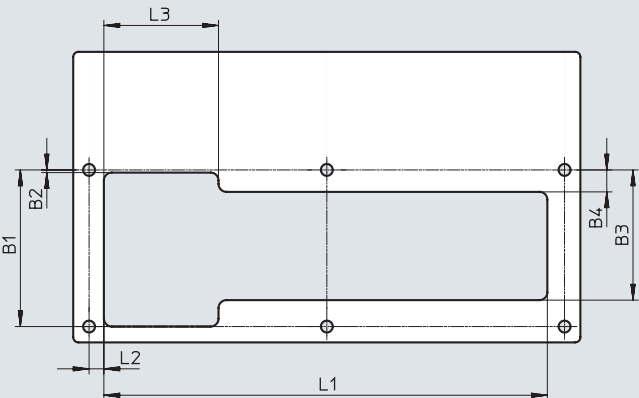


Type	B1	B2	B3	B4	L1	L2	L3
VABM-L1-14...G14-8	59.3	1	49.3	8.3	167.9	5.6	43.4
VABM-L1-14...G14-9					183.9		
VABM-L1-14...G14-10					199.9		
VABM-L1-14...G14-12					231.9		
VABM-L1-14...G14-16					295.9		
VABM-L1-14...G14-20					359.9		
VABM-L1-14...G14-24					423.9		

Datasheet – Manifold rail VABM


Dimensions – Recess for control cabinet installation, outlet direction at the front, size 10

Single supply, up to 8 valves

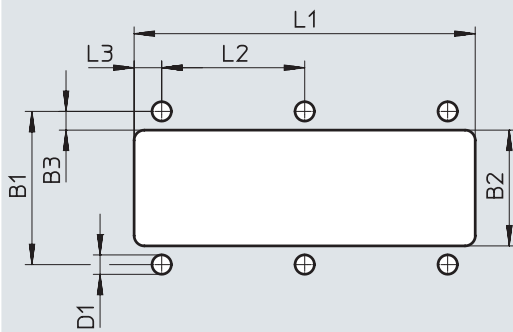

Type	B1	B2	B3	D1	L1	L2	L3
VABM-L1-10HWS1-G18-4-GR	45	34	5.5	5.7	100.2	42	8.1
VABM-L1-10HWS1-G18-8-GR					143.2		


Double supply, 8 or more valves

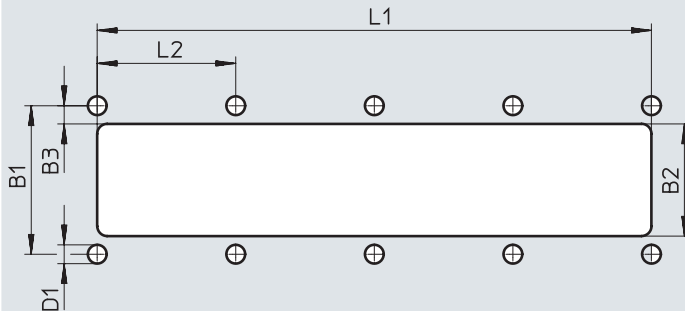

Type	B1	B2	B3	D1	L1	L2
VABM-L1-10HWS2-...G18-8-GR	45	34	5.5	5.7	168	42
VABM-L1-10HWS2-...G18-12-GR					210	
VABM-L1-10HWS2-...G18-16-GR					252	
VABM-L1-10HWS2-...G18-24-GR					336	

Dimensions – Recess for control cabinet installation, outlet direction at the front, size 14

Single supply, up to 8 valves

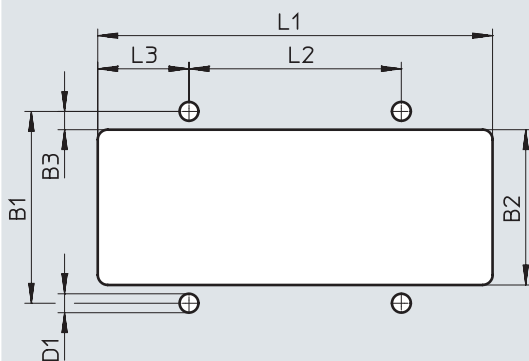


Type	B1	B2	B3	D1	L1	L2	L3
VABM-L1-14HWS1-G14-4-GR	57.8	46.8	5.5	5.7	119	64	27.5
VABM-L1-14HWS1-G14-8-GR					183		

Datasheet – Manifold rail VABM

Dimensions – Recess for control cabinet installation, outlet direction at the front, size 14

Double supply, 8 or more valves

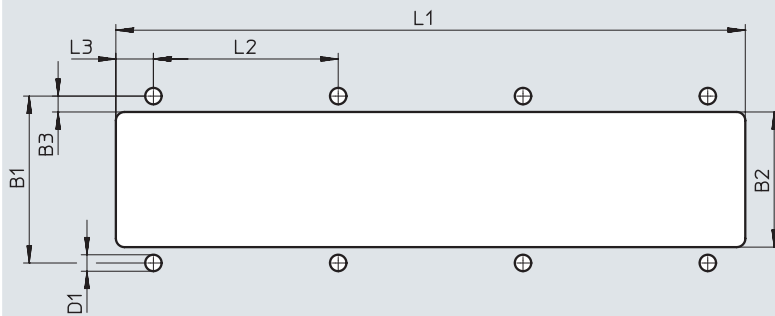


Type	B1	B2	B3	D1	L1	L2	L3
VABM-L1-14HWS2-G14-...-8-GR	57.8	46.8	5.5	5.7	218	64	13
VABM-L1-14HWS2-G14-...-12-GR					282		
VABM-L1-14HWS2-G14-...-16-GR					346		
VABM-L1-14HWS2-G14-...-24-GR					474		

Dimensions – Mounting holes for control cabinet installation, size 10

Download CAD data → www.festo.com

Outlet direction underneath

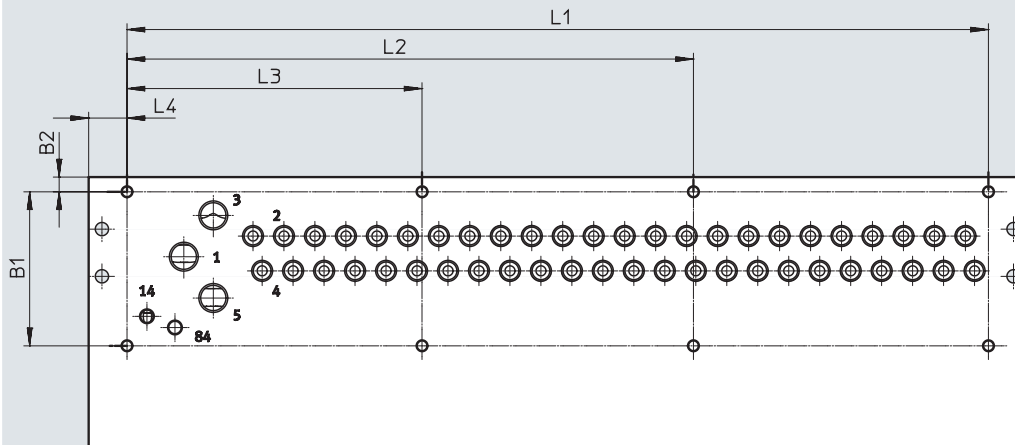


Type		Outlet direction of electrical components on top						I-Port interface on the side
		B1	B2	L1	L2	L3	L4	L4
VABM-L1-10...-G18-4	Up to 8 valves	52.2	5	82	–	–	13	62.5
VABM-L1-10...-G18-5				92.5	–	–		
VABM-L1-10...-G18-6				103	–	–		
VABM-L1-10...-G18-7				113.5	–	–		
VABM-L1-10...-G18-8				124	–	–		
VABM-L1-10...-G18-9	Up to 20 valves	52.2	5	134.5	–	67.25	13	62.5
VABM-L1-10...-G18-10				145	–	72.5		
VABM-L1-10...-G18-12				166	–	83		
VABM-L1-10...-G18-16				208	–	104		
VABM-L1-10...-G18-20				250	–	125		
VABM-L1-10...-G18-24	24 valves	52.2	5	292	192	100	13	62.5

Datasheet – Manifold rail VABM

Dimensions – Mounting holes for control cabinet installation, size 10

Download CAD data → www.festo.com

Outlet direction at the front

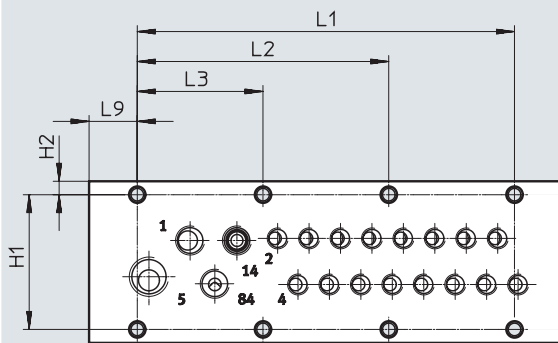


Type	H1	H2	L1	L2	L3	L9
VABM-L1-10HWS1-G18-4-GR	45	4.5	84	–	42	16.1
VABM-L1-10HWS1-G18-8-GR	45	4.5	126	84	42	16.1

Type	No. of valve positions	No. of mounting holes
VABM-L1-10HWS1-G18-4-GR	4	3
VABM-L1-10HWS1-G18-8-GR	8	4

Dimensions – Mounting holes for control cabinet installation, size 10

Download CAD data → www.festo.com

Outlet direction at the front

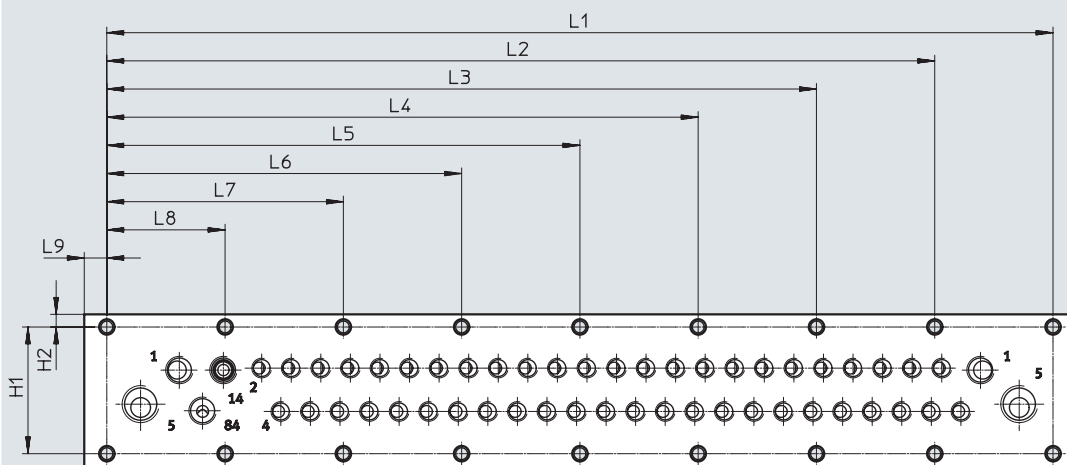


Type	H1	H2	L1	L2	L3	L4	L5	L6	L7	L8	L9
VABM-L1-10HWS2-...-8-GR	45	4.5	168	–	–	–	–	126	84	42	8
VABM-L1-10HWS2-...-12-GR	45	4.5	210	–	–	–	168	126	84	42	8
VABM-L1-10HWS2-...-16-GR	45	4.5	252	–	–	210	168	126	84	42	8
VABM-L1-10HWS2-...-24-GR	45	4.5	336	294	252	210	168	126	84	42	8

Type	No. of valve positions	No. of mounting holes
VABM-L1-10HWS2-...-8-GR	8	5
VABM-L1-10HWS2-...-12-GR	12	6
VABM-L1-10HWS2-...-16-GR	16	7
VABM-L1-10HWS2-...-24-GR	24	9

Datasheet – Manifold rail VABM

Dimensions – Mounting holes for control cabinet installation, size 14 Download CAD data → www.festo.com

Outlet direction under-
neath

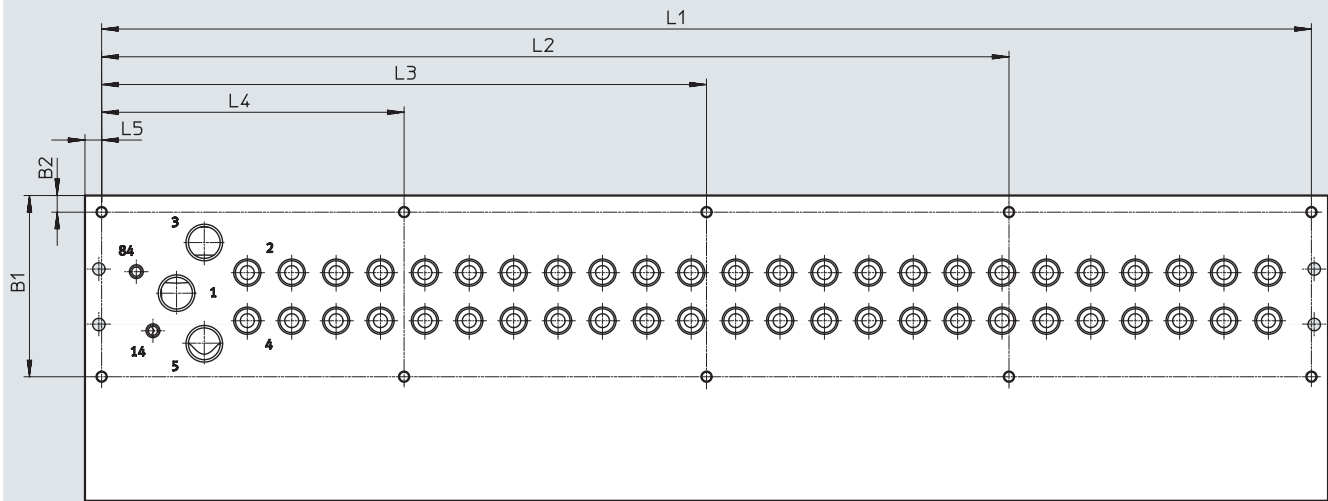


Type		Outlet direction of electrical components on top							I-Port interface on the side
		B1	B2	L1	L2	L3	L4	L5	L4
VABM-L1-14...-G14-4	Up to 8 valves	59.3	6	116	–	–	–	6	55.5
VABM-L1-14...-G14-5				132	–	–	–		
VABM-L1-14...-G14-6				148	–	–	–		
VABM-L1-14...-G14-7				164	–	–	–		
VABM-L1-14...-G14-8	8 to 10 valves	59.3	6	180	–	–	90	6	55.5
VABM-L1-14...-G14-9				196	–	–	98		
VABM-L1-14...-G14-10				212	–	–	106		
VABM-L1-14...-G14-12	12 valves and 16 valves	59.3	6	244	–	162	82	6	55.5
VABM-L1-14...-G14-16				308	–	204	104		
VABM-L1-14...-G14-20	20 valves and 24 valves	59.3	6	372	279	186	93	6	55.5
VABM-L1-14...-G14-24				436	327	218	109		

Datasheet – Manifold rail VABM

Dimensions – Mounting holes for control cabinet installation, size 14

Download CAD data → www.festo.com

Outlet direction at the front

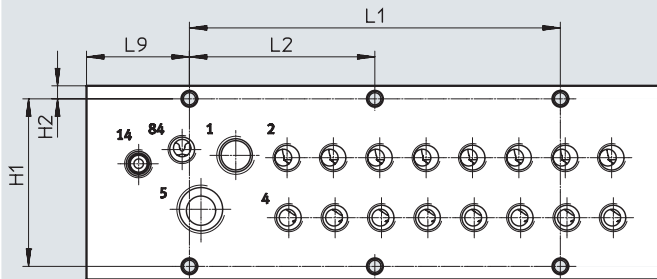


Type	H1	H2	L1	L2	L9
VABM-L1-14HWS1-G14-4-GR	57.8	4.5	64	–	35.5
VABM-L1-14HWS1-G14-8-GR	57.8	4.5	128	64	35.5

Type	No. of valve positions	No. of mounting holes
VABM-L1-14HWS1-G14-4-GR	4	2
VABM-L1-14HWS1-G14-8-GR	8	3

Dimensions – Mounting holes for control cabinet installation, size 14

Download CAD data → www.festo.com


Outlet direction at the front

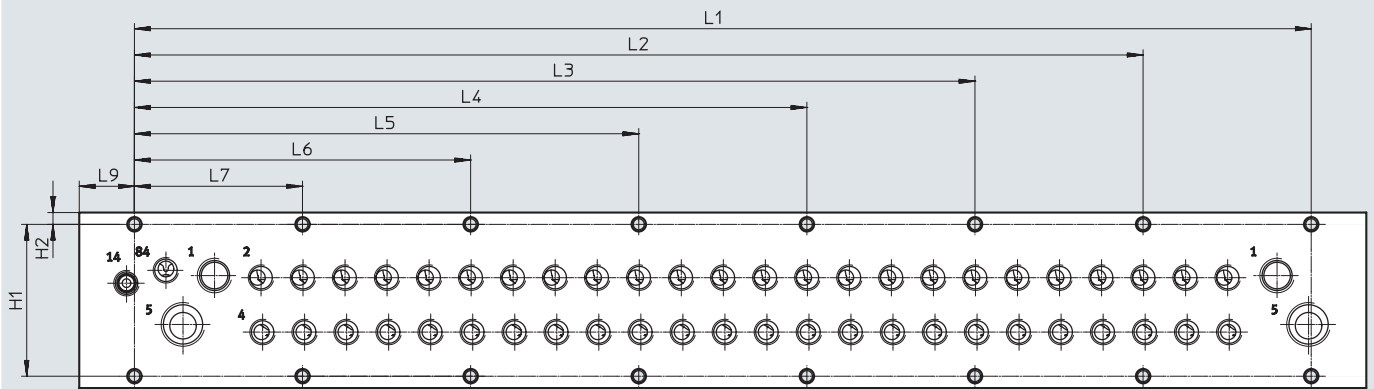


Type	H1	H2	L1	L2	L3	L4	L5	L6	L7	L9
VABM-L1-14HWS2-...-8-GR	57.8	4.5	192	–	–	–	–	128	64	21
VABM-L1-14HWS2-...-12-GR	57.8	4.5	256	–	–	–	192	128	64	21
VABM-L1-14HWS2-...-16-GR	57.8	4.5	320	–	–	256	192	128	64	21
VABM-L1-14HWS2-...-24-GR	57.8	4.5	448	384	320	256	192	128	64	21

Type	No. of valve positions	No. of mounting holes
VABM-L1-14HWS2-...-8-GR	8	4
VABM-L1-14HWS2-...-12-GR	12	5
VABM-L1-14HWS2-...-16-GR	16	6
VABM-L1-14HWS2-...-24-GR	24	8

Ordering data

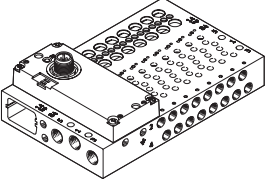
Ordering data	Description	Part no.	Type
Manifold rail for sub-base valve			
	Size 10 mm		
	Ports 2, 4 at the front	4 valve positions	573434 VABM-L1-10HW-G18-4-GR
		8 valve positions	573438 VABM-L1-10HW-G18-8-GR
		12 valve positions	573441 VABM-L1-10HW-G18-12-GR
		16 valve positions	573442 VABM-L1-10HW-G18-16-GR
		24 valve positions	573444 VABM-L1-10HW-G18-24-GR
	Size 14 mm		
	Ports 2, 4 at the front	4 valve positions	573500 VABM-L1-14W-G14-4-GR
		8 valve positions	573504 VABM-L1-14W-G14-8-GR
		12 valve positions	573507 VABM-L1-14W-G14-12-GR
		16 valve positions	573508 VABM-L1-14W-G14-16-GR
		24 valve positions	573510 VABM-L1-14W-G14-24-GR

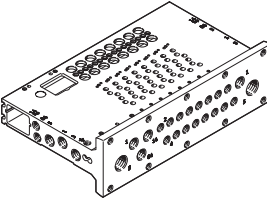Ordering data	Description	Part no.	Type
Manifold rail for sub-base valve, for control cabinet installation, outlet direction at the front			
	Size 10 mm		
	Ports 2, 4 at the front, single supply	4 valve positions	8058335 VABM-L1-10HWS1-G18-4-GR
		8 valve positions	8058336 VABM-L1-10HWS1-G18-8-GR
	Ports 2, 4 at the front, double supply	8 valve positions	8058338 VABM-L1-10HWS2-G18-8-GR
		12 valve positions	8058339 VABM-L1-10HWS2-G18-12-GR
		16 valve positions	8058340 VABM-L1-10HWS2-G18-16-GR
		24 valve positions	8058341 VABM-L1-10HWS2-G18-24-GR
	Size 14 mm		
	Ports 2, 4 at the front, single supply	4 valve positions	8058342 VABM-L1-14HWS1-G14-4-GR
		8 valve positions	8058343 VABM-L1-14HWS1-G14-8-GR
	Ports 2, 4 at the front, double supply	8 valve positions	8058344 VABM-L1-14HWS2-G14-8-GR
		12 valve positions	8058345 VABM-L1-14HWS2-G14-12-GR
		16 valve positions	8058346 VABM-L1-14HWS2-G14-16-GR
		24 valve positions	8058347 VABM-L1-14HWS2-G14-24-GR

Datasheet – Multi-pin plug connection

The following multi-pin plug connections are available for the valve terminal VTUG:

- Sub-D (25-pin)
- Sub-D (44-pin)
- Ribbon cable (26-pin)
- Ribbon cable (50-pin)

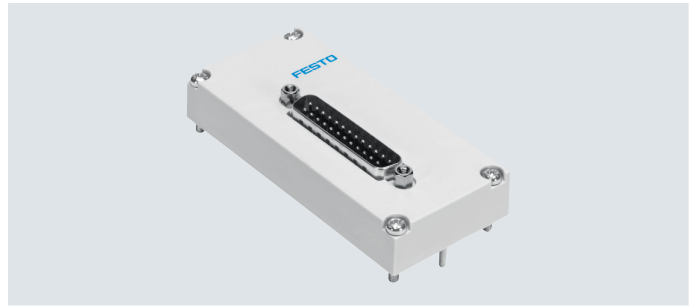

Electrical multi-pin

Each pin on the multi-pin plug can actuate exactly one solenoid coil.

If the maximum configurable number of valve positions is 24, this means that 48 valve functions can be addressed.

The valves can be switched using positive or negative logic (positive switching or negative switching).

Mixed operation is generally not possible; however, an exception is made for the V22 ... V25 variants with 25-pin Sub-D. With these variants, a specific range of valve positions (e.g. Com 16...19) is supplied with common voltage.

This allows these ranges to be switched with positive or negative logic and valve groups to be switched off independently of the other ranges. Mixed operation within a range is not permitted.

Note

A double solenoid valve occupies one valve position and two pins on the multi-pin plug. This means that the number of double solenoid valves per manifold rail is limited.


General technical data				
Type	VAEM-L1-S-M1-25	VAEM-L1-S-M1-44	VAEM-L1-S-M3-26	VAEM-L1-S-M3-50
Number of pins	25-pin	44-pin	26-pin	50-pin
Electrical connection	Sub-D plug		Ribbon cable plug	
Max. no. of valve positions	24		24	
Degree of protection to EN 60529	IP67		IP40	
Material	PA		PA	
Note on materials	RoHs-compliant		RoHs-compliant	
Certification	c UL us - Recognized (OL)			
CE marking (see declaration of conformity) ¹⁾	To EU EMC Directive			
Corrosion resistance class CRC2)	2			
LABS (PWIS) conformity	VDMA24364-B1/B2-L			
Weight [g]	53		45	48

1) For information about the area of use, see the EC declaration of conformity at: www.festo.com/catalogue/...d Support/Downloads.

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.


2) More information www.festo.com/x/topic/crc

Datasheet – Multi-pin plug connection

Pin allocation – Sub-D plug, 25-pin												
	Pin	Wire colour ¹⁾	M1-25 (V20)								M1-25V1 (V22)	
			12x double solenoid		8x double solenoid 8x single solenoid		4x double solenoid 16x single solenoid		24x single solenoid			
	1	WH	VP0	14	VP0	14	VP0	14	VP0	14	VP0	14
	2	BN	VP0	12	VP0	12	VP0	12	VP23	14	VP0	12
	3	GN	VP1	14	VP1	14	VP1	14	VP1	14	VP1	14
	4	YE	VP1	12	VP1	12	VP1	12	VP22	14	VP1	12
	5	GY	VP2	14	VP2	14	VP2	14	VP2	14	VP2	14
	6	PK	VP2	12	VP2	12	VP2	12	VP21	14	VP2	12
	7	BU	VP3	14	VP3	14	VP3	14	VP3	14	VP3	14
	8	RD	VP3	12	VP3	12	VP3	12	VP20	14	VP3	12
	9	BK	VP4	14	VP4	14	VP4	14	VP4	14	VP4	14
	10	VT	VP4	12	VP4	12	VP19	14	VP19	14	VP4	12
	11	GY PK	VP5	14	VP5	14	VP5	14	VP5	14	VP5	14
	12	RD BU	VP5	12	VP5	12	VP18	14	VP18	14	VP5	12
	13	GN WH	VP6	14	VP6	14	VP6	14	VP6	14	VP6	14
	14	BN GN	VP6	12	VP6	12	VP17	14	VP17	14	VP6	12
	15	YE WH	VP7	14	VP7	14	VP7	14	VP7	14	VP7	14
	16	BN YE	VP7	12	VP7	12	VP16	14	VP16	14	VP7	12
	17	GY WH	VP8	14	VP8	14	VP8	14	VP8	14	VP8	14
	18	BN GY	VP8	12	VP15	14	VP15	14	VP15	14	VP8	12
	19	WH PK	VP9	14	VP9	14	VP9	14	VP9	14	VP9	14
	20	BN PK	VP9	12	VP14	14	VP14	14	VP14	14	VP9	12
	21	BU WH	VP10	14	VP10	14	VP10	14	VP10	14	Com 16...19	
	22	BN BU	VP10	12	VP13	14	VP13	14	VP13	14	Com 12...15	
	23	RD WH	VP11	14	VP11	14	VP11	14	VP11	14	Com 8...11	
	24	BN RD	VP11	12	VP12	14	VP12	14	VP12	14	Com 4...7	
	25	BK WH	Com		Com		Com	Com	Com		Com 0...3	

1) According to IEC 60757



VP Valve position



Note


A grey field means that a double solenoid valve can be used. Only single solenoid valves can be used for fields with a white background.

Datasheet – Multi-pin plug connection

Pin allocation – Sub-D plug, 25-pin								Pin assignment – Sub-D plug, 44-pin					
	Pin	Wire colour ¹⁾	M1-25V2 (V23)		M1-25V3 (V24)		M1-25V4 (V25)			Pin	Wire colour ¹⁾	M1-44 (V21)	
												18x double solenoid, 6x single solenoid	
	1	WH	VP0	14	VP0	14	VP0	14		1	WH	VP0	14
	2	BN	VP0	12	VP0	12	VP1	14		2	BN	VP0	12
	3	GN	VP1	14	VP1	14	VP2	14		3	GN	VP1	14
	4	YE	VP1	12	VP1	12	VP3	14		4	YE	VP1	12
	5	GY	VP2	14	VP2	14	VP4	14		5	GY	VP2	14
	6	PK	VP2	12	VP2	12	VP5	14		6	PK	VP2	12
	7	BU	VP3	14	VP3	14	VP6	14		7	BU	VP3	14
	8	RD	VP3	12	VP3	12	VP7	14		8	RD	VP3	12
	9	BK	VP4	14	VP4	14	VP8	14		9	BK	VP4	14
	10	VT	VP4	12	VP5	14	VP9	14		10	VT	VP4	12
	11	GY PK	VP5	14	VP6	14	VP10	14		11	GY PK	VP5	14
	12	RD BU	VP5	12	VP7	14	VP11	14		12	RD BU	VP5	12
	13	GN WH	VP6	14	VP8	14	VP12	14		13	GN WH	VP6	14
	14	BN GN	VP6	12	VP9	14	VP13	14		14	BN GN	VP6	12
	15	YE WH	VP7	14	VP10	14	VP14	14		15	YE WH	VP7	14
	16	BN YE	VP7	12	VP11	14	VP15	14		16	BN YE	VP7	12
	17	GY WH	VP8	14	VP12	14	VP16	14		17	GY WH	VP8	14
	18	BN GY	VP9	14	VP13	14	VP17	14		18	BN GY	VP8	12
	19	WH PK	VP10	14	VP14	14	VP18	14		19	WH PK	VP9	14
	20	BN PK	VP11	14	VP15	14	VP19	14		20	BN PK	VP9	12
	21	BU WH	Com 16...19		Com 16...19		Com 16...19			21	BU WH	VP10	14
	22	BN BU	Com 12...15		Com 12...15		Com 12...15			22	BN BU	VP10	12
	23	RD WH	Com 8...11		Com 8...11		Com 8...11			23	RD WH	VP11	14
	24	BN RD	Com 4...7		Com 4...7		Com 4...7			24	BN RD	VP11	12
	25	BK WH	Com 0...3		Com 0...3		Com 0...3			25	BK WH	VP12	14
–								26		BK BN	VP12	12	
–								27		GN GY	VP13	14	
–								28		YE GY	VP13	12	
–								29		GN PK	VP14	14	
–								30		YE PK	VP14	12	
–								31		GN BU	VP15	14	
–								32		YE BU	VP15	12	
–								33		RD GN	VP16	14	
–								34		RD YE	VP16	12	
–								35		BK GN	VP17	14	
–								36		BK YE	VP17	12	
–								37		BU GY	VP18	14	
–								38		BU PK	VP19	14	
–								39		RD GY	VP20	14	
–								40		RD PK	VP21	14	
–								41		BK GY	VP22	14	
–								42		BK PK	VP23	14	
–								43		BK BU	com		
–								44		BK RD			

1) According to IEC 60757



VP Valve position



Note

A grey field means that a double solenoid valve can be used. Only single solenoid valves can be used for fields with a white background.

Datasheet – Multi-pin plug connection

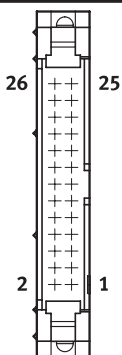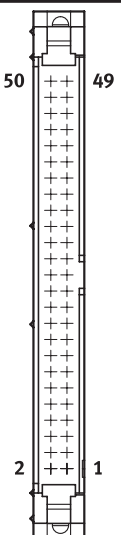Pin assignment – Ribbon cable, 26-pin										Pin assignment – Ribbon cable, 50-pin									
		Pin	M3-26 (V20)										Pin	M3-50 (V26)					
			12x double solenoid		8x double solenoid 8x single solenoid		4x double solenoid 16x single solenoid		24x single solenoid										
	1	VP0	14	VP0	14	VP0	14	VP0	14		1	VP0	14						
	2	VP0	12	VP0	12	VP0	12	VP23	14		2	VP0	12						
	3	VP1	14	VP1	14	VP1	14	VP1	14		3	VP1	14						
	4	VP1	12	VP1	12	VP1	12	VP22	14		4	VP1	12						
	5	VP2	14	VP2	14	VP2	14	VP2	14		5	VP2	14						
	6	VP2	12	VP2	12	VP2	12	VP21	14		6	VP2	12						
	7	VP3	14	VP3	14	VP3	14	VP3	14		7	VP3	14						
	8	VP3	12	VP3	12	VP3	12	VP20	14		8	VP3	12						
	9	VP4	14	VP4	14	VP4	14	VP4	14		9	VP4	14						
	10	VP4	12	VP4	12	VP19	14	VP19	14		10	VP4	12						
	11	VP5	14	VP5	14	VP5	14	VP5	14		11	VP5	14						
	12	VP5	12	VP5	12	VP18	14	VP18	14		12	VP5	12						
	13	VP6	14	VP6	14	VP6	14	VP6	14		13	VP6	14						
	14	VP6	12	VP6	12	VP17	14	VP17	14		14	VP6	12						
	15	VP7	14	VP7	14	VP7	14	VP7	14		15	VP7	14						
	16	VP7	12	VP7	12	VP16	14	VP16	14		16	VP7	12						
	17	VP8	14	VP8	14	VP8	14	VP8	14		17	VP8	14						
	18	VP8	12	VP15	14	VP15	14	VP15	14		18	VP8	12						
	19	VP9	14	VP9	14	VP9	14	VP9	14		19	VP9	14						
	20	VP9	12	VP14	14	VP14	14	VP14	14		20	VP9	12						
	21	VP10	14	VP10	14	VP10	14	VP10	14		21	VP10	14						
	22	VP10	12	VP13	14	VP13	14	VP13	14		22	VP10	12						
	23	VP11	14	VP11	14	VP11	14	VP11	14		23	VP11	14						
	24	VP11	12	VP12	14	VP12	14	VP12	14		24	VP11	12						
	25	Com		Com		Com	Com	Com			25	VP12	14						
	26	Com		Com		Com		Com			26	VP12	12						
–									27	VP13	14								
–									28	VP13	12								
–									29	VP14	14								
–									30	VP14	12								
–									31	VP15	14								
–									32	VP15	12								
–									33	VP16	14								
–									34	VP16	12								
–									35	VP17	14								
–									36	VP17	12								
–									37	VP18	14								
–									38	VP18	12								
–									39	VP19	14								
–									40	VP19	12								
–									41	VP20	14								
–									42	VP20	12								
–									43	VP21	14								
–									44	VP21	12								
–									45	VP22	14								
–									46	VP22	12								
–									47	VP23	14								
–									48	VP23	12								
–									49	Com									
–									50										



Note

A grey field means that a double solenoid valve can be used.
Only single solenoid valves can be used for fields with a white background.


VP Valve position

Datasheet – Multi-pin plug connection

Dimensions

Download CAD data → www.festo.com

Multi-pin plug connection, Sub-D

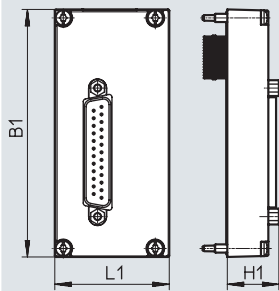-  - **Note**


Dimensions of the manifold rail with electrical connection
(a Page 63)

Type	B1	L1	H1
VAEM-L1-S-M1-...	90.5	41.9	18.9

Dimensions

Download CAD data → www.festo.com






Multi-pin plug connection, ribbon cable

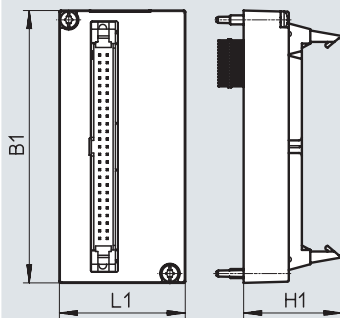-  - **Note**

Dimensions of the manifold rail with electrical connection
(a Page 63)


Type	B1	L1	H1
VAEM-L1-S-M3-...	90.5	41.9	32.7

Accessories – Multi-pin plug connection

Ordering data		Description		Part no.	Type
Electrical interface, Sub-D					
	25-pin	For variant M1-25 (V20)	573445	VAEM-L1-S-M1-25	
		For variant M1-25V1 (V22)	573447	VAEM-L1-S-M1-25V1	
		For variant M1-25V2 (V23)	573448	VAEM-L1-S-M1-25V2	
		For variant M1-25V3 (V24)	573449	VAEM-L1-S-M1-25V3	
		For variant M1-25V4 (V25)	573450	VAEM-L1-S-M1-25V4	
	44-pin	For variant M1-44 (V21)	573446	VAEM-L1-S-M1-44	
Electrical interface, ribbon cable plug					
	26-pin	For variant M3-26 (V20)	573452	VAEM-L1-S-M3-26	
	50-pin	For variant M3-50 (V26)	573451	VAEM-L1-S-M3-50	
Connecting cable for multi-pin, for the EX2 variant					
	Sub-D socket, angled	25-pin, up to 24 coils, IP65 - Open cable end, 25-core	2.5 m	575423	NEBV-S1WA25-K-2.5-N-LE25-S9
			5 m	575424	NEBV-S1WA25-K-5-N-LE25-S9
			10 m	575425	NEBV-S1WA25-K-10-N-LE25-S9
		44-pin, up to 42 coils, IP65 - Open cable end, 44-core	2.5 m	575420	NEBV-S1WA44-K-2.5-N-LE44-S9
			5 m	575421	NEBV-S1WA44-K-5-N-LE44-S9
			10 m	575422	NEBV-S1WA44-K-10-N-LE44-S9
Connecting cable for multi-pin, for the EX2E variant					
	Sub-D socket, straight	25-pin, up to 24 coils, IP40 - Open cable end, 25-core	2.5 m	575417	NEBV-S1G25-K-2.5-N-LE25-S6
			5 m	575418	NEBV-S1G25-K-5-N-LE25-S6
			10 m	575419	NEBV-S1G25-K-10-N-LE25-S6
		44-pin, up to 42 coils, IP40 - Open cable end, 44-core	2.5 m	575113	NEBV-S1G44-K-2.5-N-LE44-S6
			5 m	575114	NEBV-S1G44-K-5-N-LE44-S6
			10 m	575115	NEBV-S1G44-K-10-N-LE44-S6
	Sub-D socket, angled	25-pin, up to 24 coils, IP65 - Open cable end, 25-core	2.5 m	575423	NEBV-S1WA25-K-2.5-N-LE25-S9
			5 m	575424	NEBV-S1WA25-K-5-N-LE25-S9
			10 m	575425	NEBV-S1WA25-K-10-N-LE25-S9
		44-pin, up to 42 coils, IP65 - Open cable end, 44-core	2.5 m	575420	NEBV-S1WA44-K-2.5-N-LE44-S9
			5 m	575421	NEBV-S1WA44-K-5-N-LE44-S9
			10 m	575422	NEBV-S1WA44-K-10-N-LE44-S9

Datasheet I-Port interface/IO-Link®

Festo-specific, standardised interface for direct connection to the fieldbus by mounting the bus node CTEU or to an IO-Link master via a cable (in IO-Link® mode).

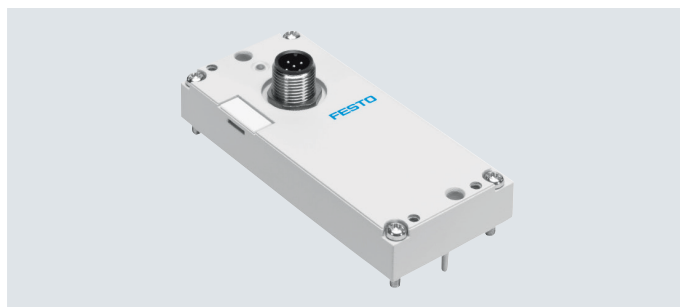

Approved protocols for the I-Port interface/IO-Link®

Versions:

- I-Port interface for bus nodes (CTEU)
- IO-Link® mode for direct connection to a higher-level IO-Link master

The following protocols are supported in connection with the associated CTEU bus node:

- CTEU-EP-EX1C (only with EX2E)
- CTEU-PB-EX1C (only with EX2E)
- CTEU-PN-EX1C (only with EX2E)

The electrical supply/transmission of communication takes place via an M12 plug.

The valve terminal can be equipped with 4 ... 24 (double solenoid) valves.

General technical data

Types of communication		IO-Link®	
Electrical connection		• Plug M12, 5-pin • A-coded • Metal thread for shielding	
Baud rates	COM3	[kbps]	230.4
	COM2	[kbps]	38.4
Intrinsic current consumption, logic supply PS		[mA]	30
Intrinsic current consumption, valve supply PL		[mA]	30
Max. number of solenoid coils	VAEM-L1-S-8-PT		16
	VAEM-L1-S-16-PT		32
	VAEM-L1-S-24-PT		48
Max. no. of valve positions	VAEM-L1-S-8-PT		8
	VAEM-L1-S-16-PT		16
	VAEM-L1-S-24-PT		24
Ambient temperature		[°C]	−5 ... +50
Product weight	Outlet on top	[g]	49
	Outlet on the side	[g]	100
Degree of protection to EN 60529		IP67	
Certification		c UL us - Recognized (OL)	
CE marking (see declaration of conformity) ¹⁾		To EU EMC Directive	
Corrosion resistance class CRC2)		2	
LABS (PWIS) conformity		VDMA24364-B1/B2-L	


1) For information about the area of use, see the EC declaration of conformity at: [www.festo.com/catalogue/... d Support/Downloads](http://www.festo.com/catalogue/...d%20Support/Downloads).

If the devices are subject to usage restrictions in residential, commercial or light-industrial environments, further measures for the reduction of the emitted interference may be necessary.


2) More information www.festo.com/x/topic/crc

Datasheet – I-Port interface/IO-Link®

Status LED X1		
	Meaning (up to Rev. 07)	Meaning (from Rev. 08)
Illuminated green	Normal operating status	Data communication faulty
Flashes green	Data communication faulty	Normal operating status
Flashes alternately between red/ green	24 V load voltage supply faulty	-
Flashes red	Device error	
Illuminated red	24 V load voltage supply and data communication faulty	24 V load voltage supply faulty. Data communication may be faulty
Off	No 24 V operating voltage supply or undervoltage	

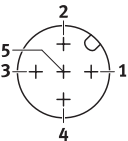Pin assignment – I-Port interface/IO-Link®			
	Pin	Assignment	Description
	1	24VEL/SEN	Operating voltage supply (electronics, sensors/inputs)
	2	24VVAL/OUT	Load voltage supply (valves/outputs)
	3	0VEL/SEN	Operating voltage supply (electronics, sensors/inputs)
	4	C/Q	Data communication
	5	0VVAL/OUT	Load voltage supply (valves/outputs)

System overview – IO-Link®

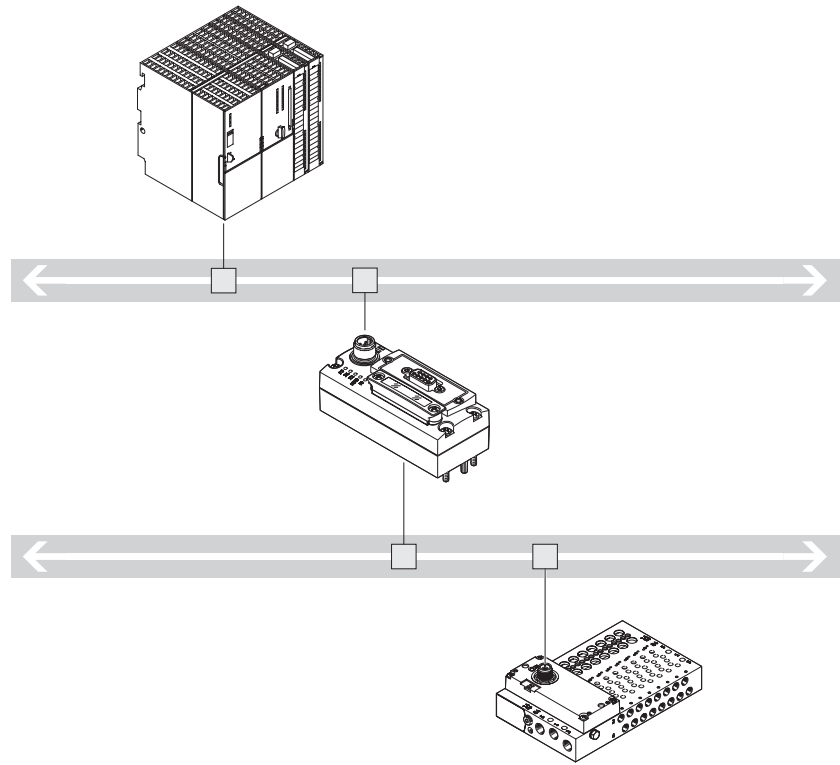


- Communication with the higher-order controller via fieldbus
- Use a fieldbus node CTEU compatible with the fieldbus protocol
- Up to 64 inputs/outputs (solenoid coils), depending on the valve terminal
- No preprocessing

Datasheet – I-Port interface/IO-Link®

Dimensions


Download CAD data → www.festo.com

I-Port interface, outlet on top

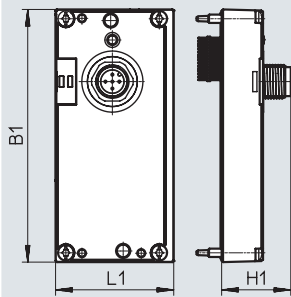-  - **Note**

Dimensions of the manifold
rail with electrical
connection a page 67



I-Port interface, outlet on side

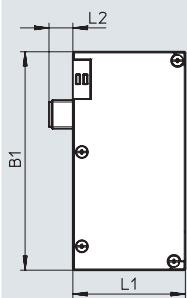-  - **Note**

Dimensions of the manifold
rail with electrical
connection a page 67

Type	Outlet on top			Outlet on the side		
	B1	L1	H1	B1	L1	L2
VAEM-L1-S-...	91	42.5	25	91.5	47.1	10

Datasheet – I-Port interface/IO-Link®

Ordering data		Description	Part no.	Type
Electrical interface for I-Port interface/IO-Link®, outlet on top				
	Actuation of up to 8 double solenoid valve positions		573384	VAEM-L1-S-8-PT
	Actuation of up to 16 double solenoid valve positions		573939	VAEM-L1-S-16-PT
	Actuation of up to 24 double solenoid valve positions		573940	VAEM-L1-S-24-PT
Connection technology for IO-Link®				
	T-adapter M12, 5-pin, for T-adapter FB-TA		171175	FB-TA-M12-5POL
	Straight plug, M12, 5-pin, for IO-Link® and load supply		8162296	NECB-S-M12G5-C2
	Y-distributor with cable on controller side, M12x1 A-coded, for IO-Link®	Cable length 1 m	8091516	NEDU-L1R2-M12G5-M12LE-1R
	M12x1 A-coded, for IO-Link®, straight cable outlet	Cable length 0.5 m	8000208	NEBU-M12G5-K-0.5-M12G4
	M12x1 A-coded, for IO-Link®, straight cable outlet	Cable length 5 m	574321	NEBU-M12G5-E-5-Q8N-M12G5
	M12x1 A-coded, for IO-Link®, straight cable outlet	Cable length 7.5 m	574322	NEBU-M12G5-E-7.5-Q8N-M12G5
	M12x1 A-coded, for IO-Link®, straight cable outlet	Cable length 0.5 m	8003617	NEBU-M12G5-K-0.5-M12W5
	M12x1 A-coded, for IO-Link®, straight cable outlet	Cable length 2 m	8003618	NEBU-M12G5-K-2-M12W5
	M12x1 A-coded, for IO-Link®, angled cable outlet	Cable length 0.5 m	570733	NEBU-M12W5-K-0.5-M12W5
	M12x1 A-coded, for IO-Link®, angled cable outlet	Cable length 2 m	570734	NEBU-M12W5-K-2-M12W5
Inscription label for I-Port interface/IO-Link®				
	Frame with 40 labels		565306	ASLR-C-E4