

Sub-bases VABP

FESTO



Sub-bases VABP

Key features

FESTO

At a glance

The sub-base VABP can be used to help realise specific switch-off behaviour when switching off the valve load voltage. It is a single-channel solution for uncoupling the drive from the power valve. 4 switch-off functions are possible.


The sub-base is not a safety device, nor is it a complete safety solution. However, it can form part of a safety solution.

Features:

- Compact design
- Simple installation
- Suitable for servopneumatic drives
- Can be attached directly to the proportional directional control valve VPWP
- Connecting cable for direct connection to the proportional directional control valve VPWP
- Suitable for cylinders that are controlled by 5/2- or 5/3-way valves
- For ISO valves with spring return and external auxiliary pilot air
- Extended accessories: ISO solenoid valves with switching position sensing for producing a diagnostic rate > 60%


The technology in detail

- 1 Sub-base VABP (example with valves mounted)
- 2 Pilot air port
- 3 Function port B
- 4 Function port A
- 5 Solenoid valve VSVA, MN1H
- 6 Proportional directional control valve VPWP
- 7 Mounting screws

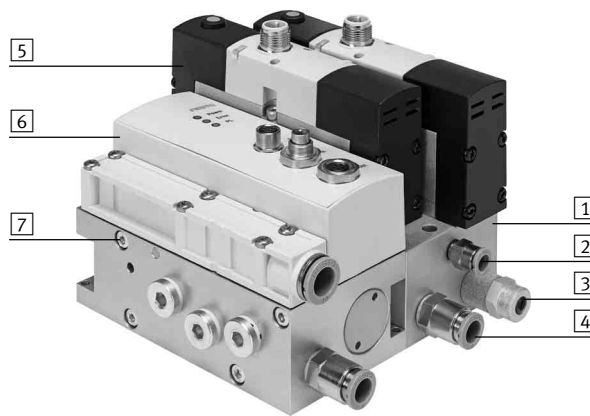

The 4 different single-channel switch-off functions can be configured using function ports 32 (A) and 34 (B):

- Stopping a movement: blocking
- De-energising: exhausting
- Reversing with reduced speed
- Switching off power: short-circuit

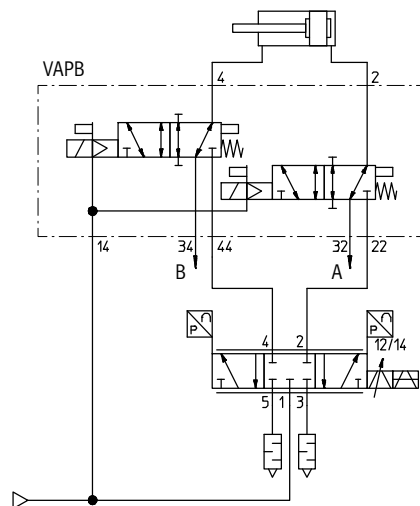

-  Note

An application document "Demonstrating VABP protective measures" is available from the Support Portal.

Sub-bases VABP

Type codes

FESTO


		VABP	-	S3	-	26V1G	-	G18	-	2M	-	R3
Series												
VABP	Sub-base											
Allocation												
S3	ISO 15407											
S1	ISO 5599											
Size												
26	Size 26											
1	Size 1											
2	Size 2											
Version												
V1	Switching variant emergency stop functions											
Connection type												
G	Supply air/exhaust air/pilot air supply/pilot exhaust air											
Pneumatic port												
G18	G1/8											
G14	G1/4											
G38	G3/8											
Valve positions												
2	2 valve positions											
Equipment												
-	Without valves											
M	With valves											
Electrical connection												
-	Without											
R3	Individual plug M12											
A1	Individual plug type A											

Sub-bases VABP


Peripherals overview

FESTO

VABP-S3-26V1G / VABP-S1-1V1G

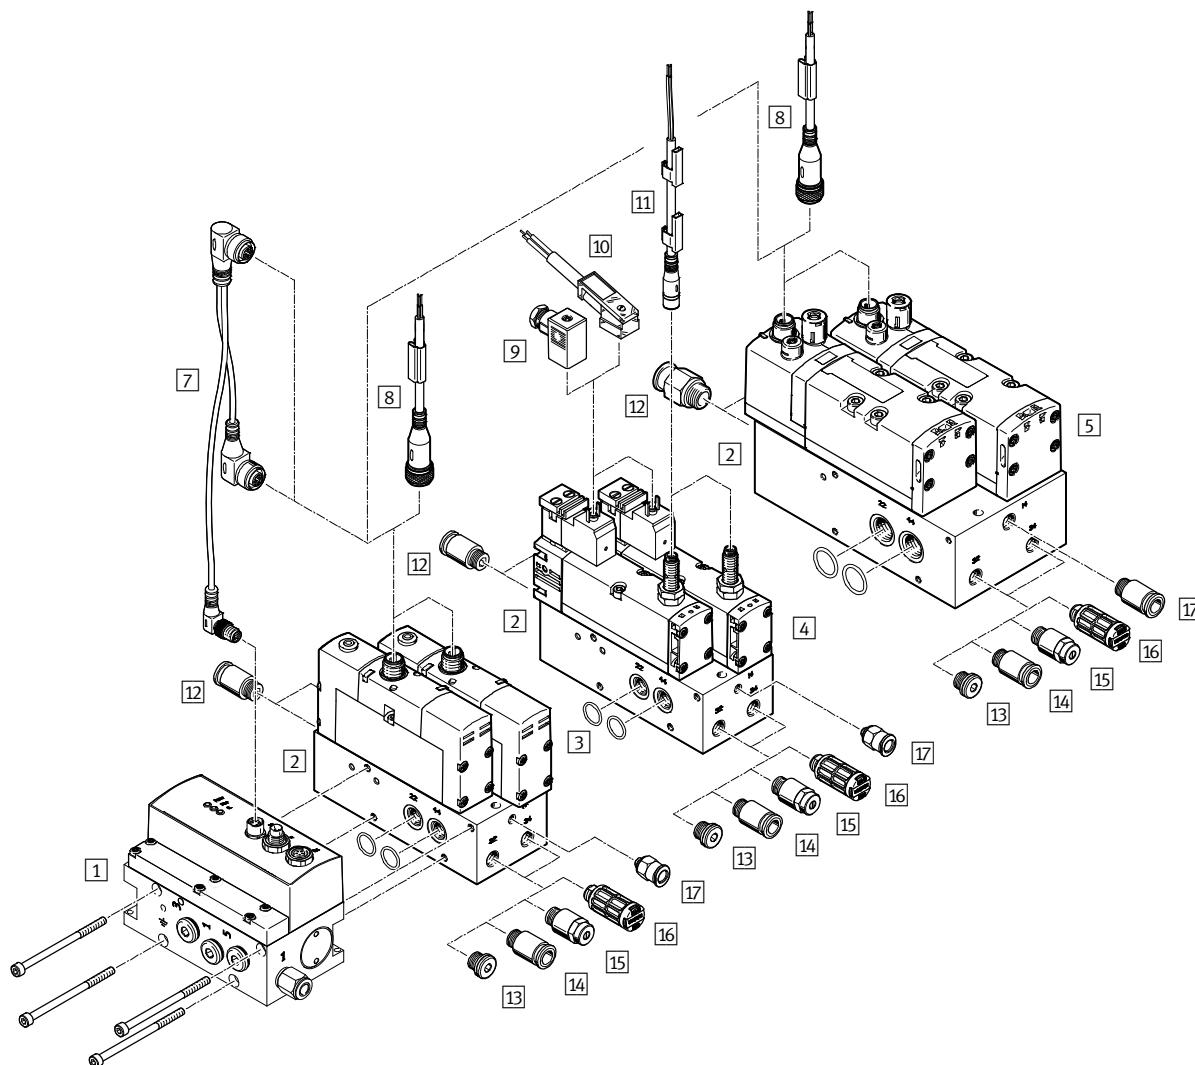

VABP-S1-2V1G

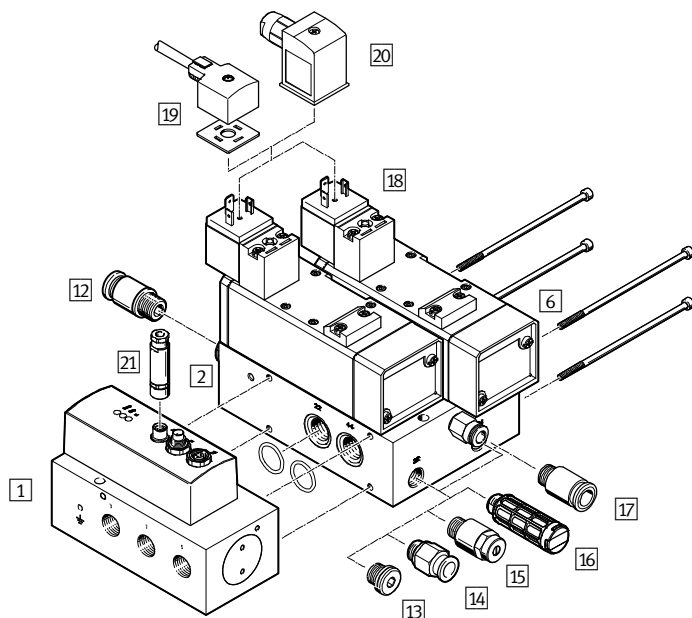

Sub-bases VABP

Peripherals overview

FESTO

Accessories						
		See allocation table below				Description
		3	4	5	6	
1	Proportional directional control valve VPWP	■	■	■	■	5/3-way proportional directional control valve for applications with Soft Stop and for pneumatic positioning
2	Sub-base VABP	■	■	■	■	For realising specific switch-off functions
7	Connecting cable NEDV	■	–	■	–	Connection of solenoid valve to proportional directional control valve VPWP
8	Connecting cable NEBU-M12	■	–	■	–	Connection of solenoid valve to controller. Alternative to 7
9	Plug socket MSSD-EB	–	■	–	–	Connection of solenoid valve to controller. Alternative to 10
10	Plug socket with cable KMEB	–	■	–	–	Connection of solenoid valve to controller
11	Connecting cable NEBU-M8	–	■	–	–	Connection of switching position sensing system to controller
12	Push-in fitting QS	■	■	■	■	For working ports 2 and 4
13	Blanking plug B	■	■	■	■	- For function ports 32 and 34 - For realising a switch-off function
14	Push-in fitting QS	■	■	■	■	- For function ports 32 and 34 - For realising a switch-off function
15	Exhaust air flow control valve GRE	■	■	■	■	- For function ports 32 and 34 - For realising a switch-off function
16	Silencer UC	■	■	■	■	- For function ports 32 and 34 - For realising a switch-off function
17	Push-in fitting QS	■	■	■	■	For pilot air port 14
18	Solenoid coil MSN1G	–	–	–	■	For actuating the solenoid valve
19	Connecting cable KMC	–	–	–	■	Connection of solenoid valve to controller
20	Plug socket MSSD-C	–	–	–	■	Connection of solenoid valve to controller. Alternative to 19
21	Plug NECU	–	–	–	■	For connecting the solenoid valves to the proportional directional control valve VPWP

Allocation table			
Sub-base		Solenoid valve (→ 14)	Proportional directional control valve
3	VABP-S3-26V1G	VSVA-B-M52-MZH-A1-1R5L	VPWP-4/-6
4	VABP-S3-26V1G	VSVA-B-M52-MZ-A1-1C1-APP ¹⁾	VPWP-4/-6
5	VABP-S1-1V1G	VSVA-B-M52-MZD-D1-1R5L	VPWP-8
6	VABP-S1-2V1G	MN1H-5/2-D-2-FR-S-C	VPWP-10


1) Solenoid valve with switching position sensing

Sub-bases VABP

Technical data

FESTO

-  Flow rate
800 ... 2000 l/min
-  Pressure
0 ... 16 bar

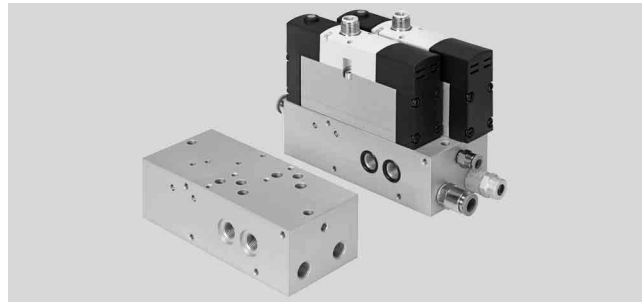

General technical data				
Type		VABP-S3-26V1G	VABP-S1-1V1G	VABP-S1-2V1G
For proportional directional control valve		VPWP-4/-6	VPWP-8	VPWP-10
Width	[mm]	26	42	54
Pneumatic port				
Working ports: 2, 4, 22, 44		G1⁄8	G1⁄4	G3⁄8
Pilot air supply: 14		M5	G1⁄8	G1⁄8
Function ports: 32, 34		G1⁄8	G1⁄8	G1⁄4
Nominal flow rate	[l/min]	800	1400	2000
Mounting position		Any		
Product weight				
Without valves	[g]	668	1623	1950
With valves	[g]	1200	2480	3400
With solenoid valve		1	2	3
Valve function		5/2		
Reset method		Mechanical spring		
Type of control		Piloted		
Pilot air supply		External		
Direction of flow		Reversible		
Switching position sensing		–	Yes	–
Switching element function		–	N/C contact	–
Switching output		–	PNP	–
Nominal width		9	11	11
Actuation type		Electrical		
Manual override		Without or covered		
Nominal operating voltage	[V]	24		
Perm. voltage fluctuations	[%]	±10	±10	–15/±10

Allocation table, solenoid valve	
1	VSVA-B-M52-MZH-A1-1R5L
2	VSVA-B-M52-MZ-A1-1C1-APP
3	VSVA-B-M52-MZD-D1-1R5L
4	MN1H-5/2-D-2-FR-S-C

Sub-bases VABP

Technical data

FESTO

Operating and environmental conditions				
Type		VABP-S3-26V1G	VABP-S1-1V1G	VABP-S1-2V1G
Operating medium ¹⁾		Compressed air to ISO 8573-1:2010 [6:4:4]		
Operating pressure ¹⁾	[bar]	0 ... 16		
Pilot pressure with valves	[bar]	3 ... 8		
Ambient temperature	[°C]	0 ... +50		
Temperature of medium	[°C]	0 ... +50		

1) Note operating range of connected components.

Materials	
Manifold rail	Wrought aluminium alloy
O-ring	NBR
Screws	Steel
Note on materials	RoHS-compliant

Configuring the switch-off functions

The sub-base is not a safety device, nor is it a complete safety solution. However, it can form part of a safety solution.

Suitable accessories must be mounted at the function ports [32] and [34] in order to configure the different switch-off functions.

Sub-base	Silencer	Blanking plug	Exhaust air flow control valve	Push-in fitting
VABP-S3-26V1G	U-1/8	B-1/8	GRE-1/8	QS-G1/8-4, 6 or 8
VABP-S1-1V1G	U-1/8	B-1/8	GRE-1/8	QS-G1/8-4, 6 or 8
VABP-S1-2V1G	U-1/4	B-1/4	GRE-1/4	QS-G1/4-6, 8 or 10


Switch-off variants

Circuit 1: Stopping a movement – blocking


When the valves are switched off, the movement of the drive will be stopped.

Note:

- Following actuation of the switch-off function, the drive will be under pressure
- In the case of a vertical mounting position, it is possible that the payload will slowly drop

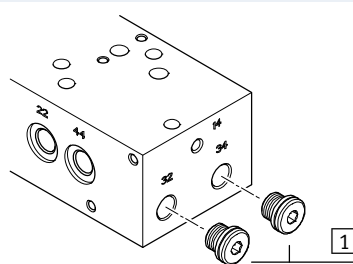

1 Blanking plug

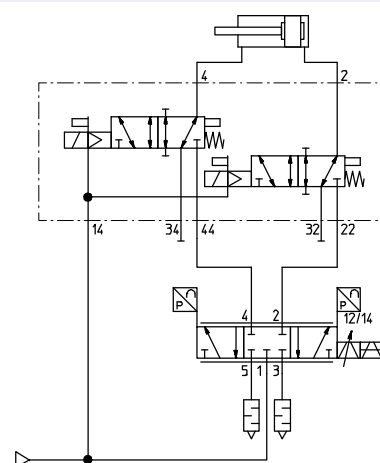

Sub-bases VABP

Technical data

FESTO



Switch-off variants

Circuit 2: De-energising – exhausting

When the valves are switched off, the drive will be exhausted.

Note:

- Not suitable for a vertical mounting position without additional safety functions
- If the exhaust air flow control valves are closed, the drive will not be exhausted
- Exhausting is also possible via the silencer

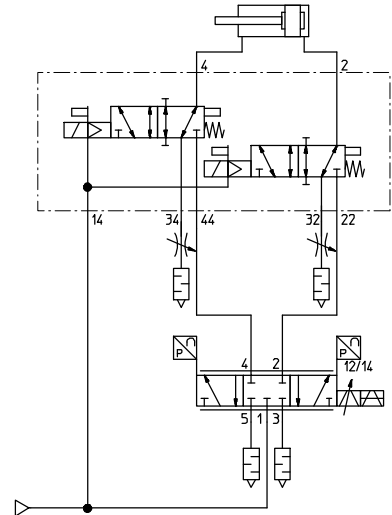
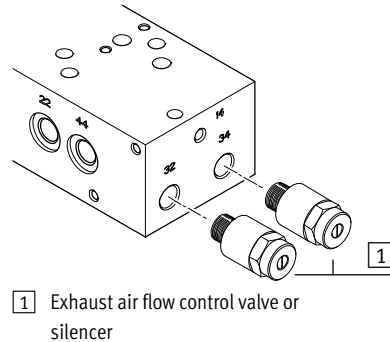


Circuit 3: Reversing (advancing) and reducing speed

When the solenoid valves are switched off, the movement of a retracting drive is reversed with simultaneous reduction of speed. The drive travels into the end position.

Note:

- The holding function is time-limited
- To generate the reversing movement even in the event of compressed air failure, an air reservoir with non-return function can be inserted at port [32] for compressed air supply.

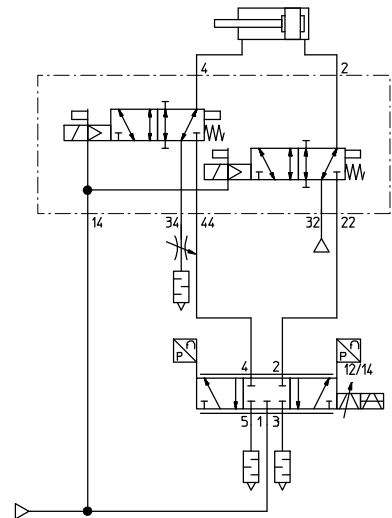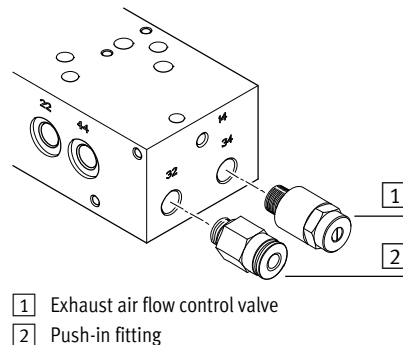

Sub-bases VABP

Technical data

FESTO



Switch-off variants

Circuit 4: Reversing (retracting) and reducing speed

When the solenoid valves are switched off, the movement of an extending drive is reversed with simultaneous reduction of speed. The drive travels into the end position.

Note:

- The holding function is time-limited
- To generate the reversing movement even in the event of compressed air failure, an air reservoir with non-return function can be inserted at port [34] for compressed air supply.

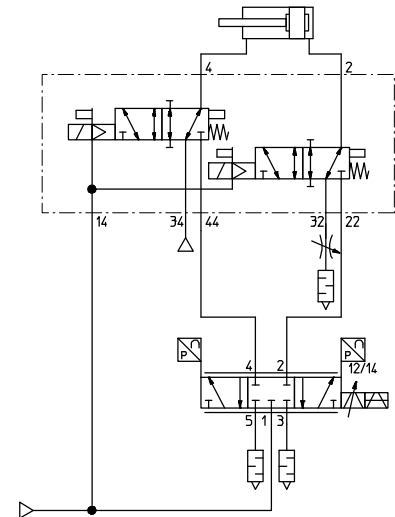
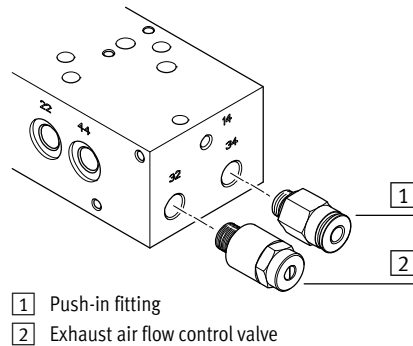


Circuit 5: Switching off power – short-circuit

When the valves are switched off, the two chambers are interconnected. The drive comes to a stop.

Note:

- Following actuation of the switch-off function, the drive will be under pressure
- Not suitable for a vertical mounting position without additional safety functions
- To restrict the run-out movement, it is recommended that a thin tube (4 or 6 mm) or a flow control valve (e.g. GRO...) is used for connecting the ports [32] and [34].

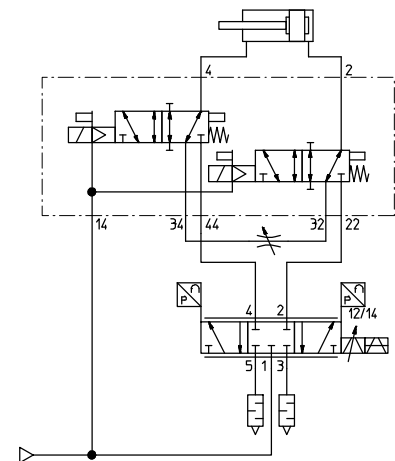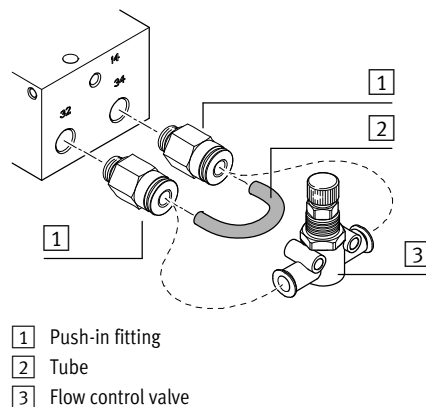

Sub-bases VABP


Technical data

FESTO

Dimensions

Download CAD data → www.festo.com

VABP-S3-26V1G

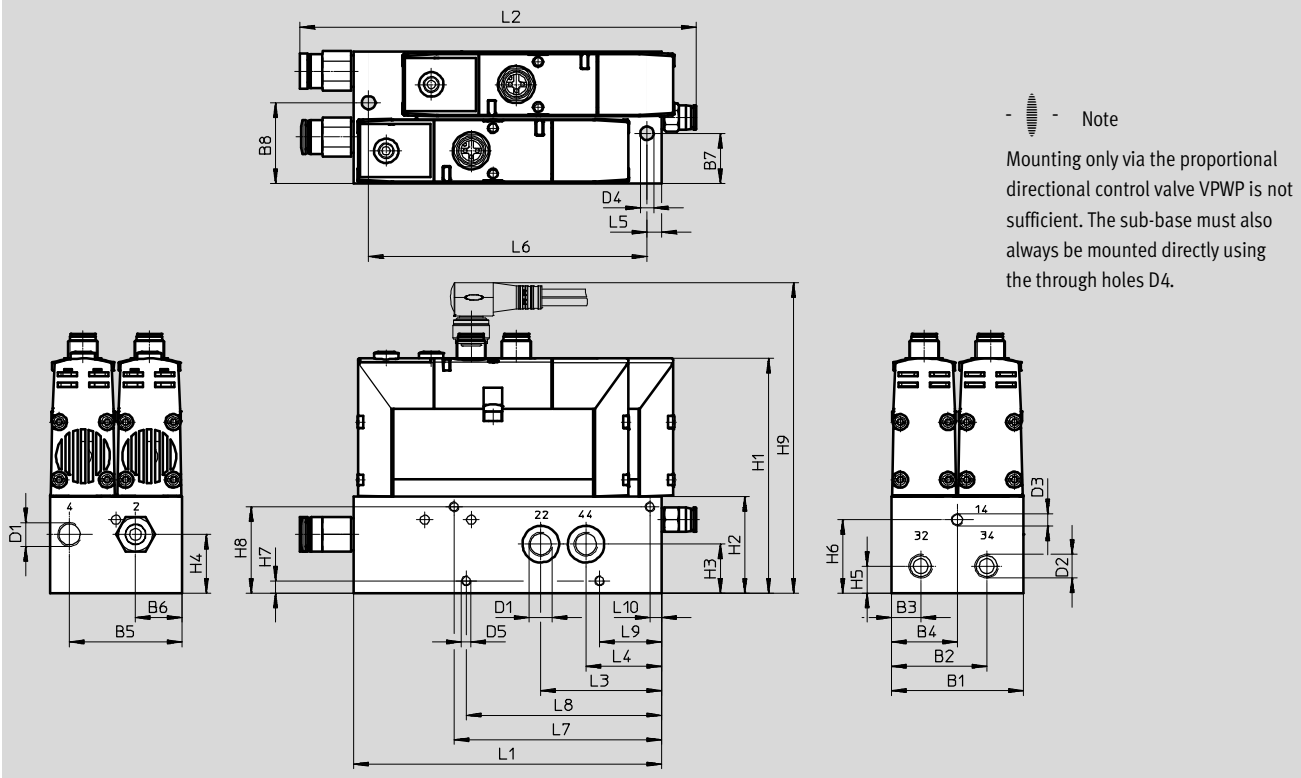

	B1	B2	B3	B4	B5	B6	B7	B8
Without valves	54	39	12	27	46	19	20.5	33
With valves								

	D1	D2	D3	D4	D5	H1	H2	H3
Without valves	G1/8	G1/8	M5	5.5	M4	–	39.5	20
With valves						96		

	H4	H5	H6	H7	H8	H9	L1	L2
Without valves	24	11	30	5	35.3	–	126	–
With valves						124.5		162

	L3	L4	L5	L6	L7	L8	L9	L10
Without valves	49.5	31	6	120	±0.1	±0.1	±0.1	±0.1
With valves					85	80	25.4	4.75

Sub-bases VABP


Technical data

FESTO

Dimensions

VABP-S1-1V1G

Download CAD data → www.festo.com

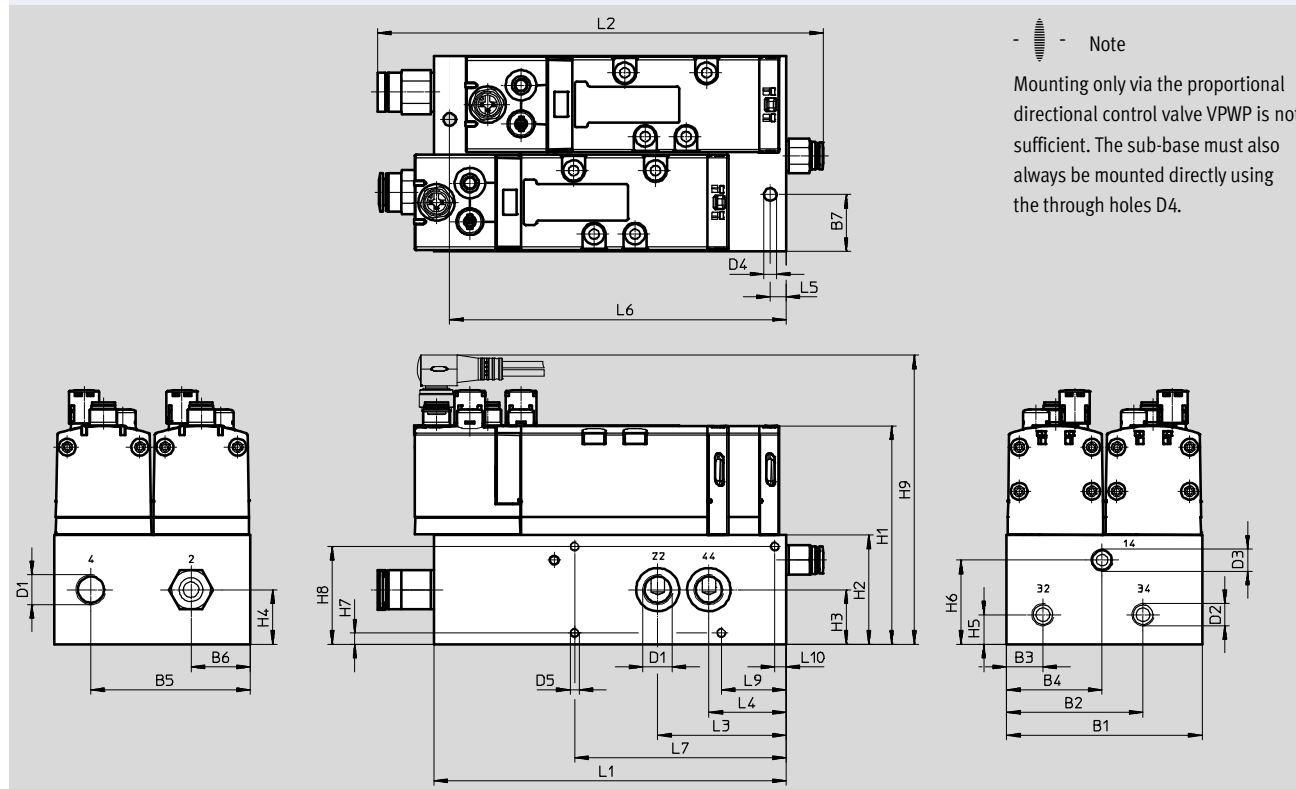

	B1	B2	B3	B4	B5	B6	B7	B8
Without valves	86	60	16	42	70	26	25	58
With valves								

	D1	D2	D3	D4	D5	H1	H2	H3
Without valves	G $\frac{1}{4}$	G $\frac{1}{8}$	G $\frac{1}{8}$	5.5	M4	–	48	24
With valves						96		

	H4	H5	H6	H7	H8	H9	L1	L2
Without valves	24	13	37	±0.1	±0.1	–	155	–
With valves						132		196

	L3	L4	L5	L6	L7	L9	L10
Without valves	56.5	34	7	148	±0.1	±0.1	±0.1
With valves							

Sub-bases VABP


Technical data

FESTO

Dimensions

VABP-S1-2V1G

Download CAD data → www.festo.com

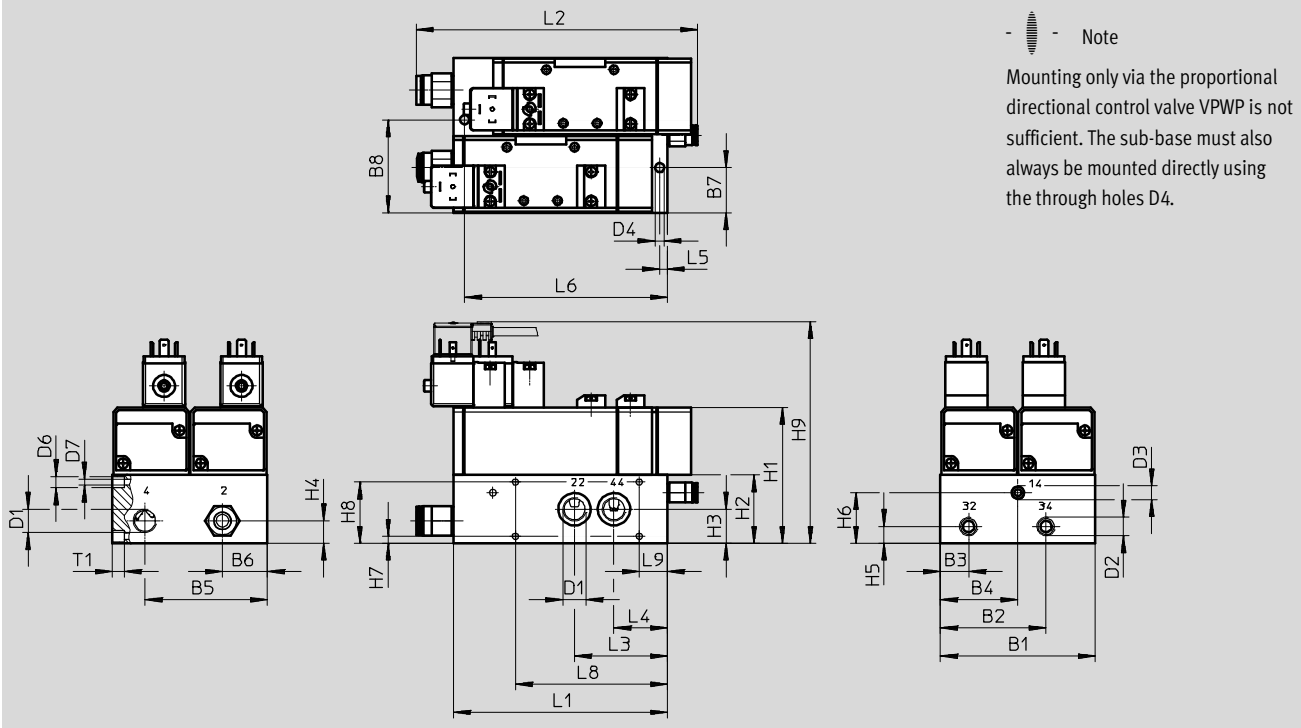

	B1	B2	B3	B4	B5	B6	B7	B8
Without valves	110	75	20	55	87	32	32	66
With valves								

	D1	D2	D3	D4 Ø	D6 Ø H13	D7 Ø H13	H1	H2
Without valves	G3/8	G1/4	G1/8	6.6	4.5	8	–	48.5
With valves							96.5	



	H3	H4	H5	H6	H7 ±0.1	H8 ±0.1	H9	L1
Without valves	24.3	16	12	36	5	43.5	–	152
With valves							157	

	L2	L3	L4	L5	L6	L8 ±0.1	L9 ±0.1	T1
Without valves	–	66	38	5.5	144	108	20	8.4
With valves	200							

Sub-bases VABP

Technical data

FESTO

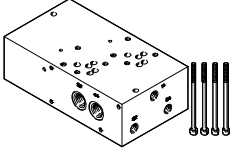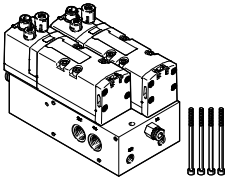Ordering data			
	Nominal flow rate	Part No.	Type
Without valves			
	800	2605074	VABP-S3-26V1G-G18-2
	1400	2614860	VABP-S1-1V1G-G14-2
	2000	2738671	VABP-S1-2V1G-G38-2
With valves			
	800	2605075	VABP-S3-26V1G-G18-2M-R3
	1400	2614863	VABP-S1-1V1G-G14-2M-R3
	2000	2738672	VABP-S1-2V1G-G38-2M-A1





-  - Note

The solenoid valve VSVA with switching position sensing must be ordered separately → 14

Sub-bases VABP

Accessories

FESTO



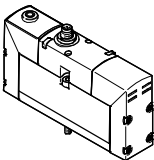
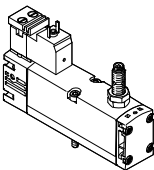
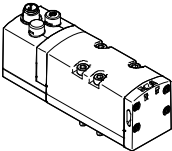
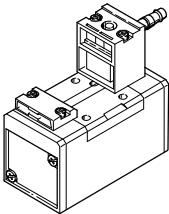
Ordering data				
	Description	Part No.	Type	PU ¹⁾
Solenoid valve				
	For sub-base: • VABP-S3-26V1G-G18-2	534546	VSVA-B-M52-MZH-A1-1R5L	1
	For sub-base: • VABP-S3-26V1G-G18-2 • With switching position sensing via inductive proximity sensor	560726	VSVA-B-M52-MZ-A1-1C1-APP	1
	For sub-base: • VABP-S1-1V1G-G14-2	561373	VSVA-B-M52-MZD-D1-1R5L	1
	For sub-base: • VABP-S1-2V1G-G38-2	159718	MN1H-5/2-D-2-FR-S-C	1
Solenoid coil				
	For solenoid valve: • MN1H-5/2-D-2-FR-S-C	123060	MSN1G-24DC-OD	1
Blanking plug				
	For realising a switch-off function	3568	B-1/8	10
		3569	B-1/4	
Silencer				
	For realising a switch-off function	161419	UC-1/8	1
		165004	UC-1/4	
Exhaust air flow control valve				
	For realising a switch-off function	10351	GRE-1/8	1
		10352	GRE-1/4	
Flow control valve				
	For realising a switch-off function	193973	GRO-QS-6	1

1) Packaging unit

Sub-bases VABP

Accessories

FESTO

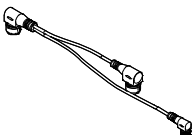Ordering data				
	Description	Part No.	Type	PU ¹⁾
Push-in fitting (only use push-in fitting with sealing ring)				
	For pilot air port 14			
	VABP-S3-26V1G	130896	QSM-B-M5-6-20	20
	VABP-S1-1V1G	186096	QS-G $\frac{1}{8}$ -6	10
	VABP-S1-2V1G	186098	QS-G $\frac{1}{8}$ -8	10
	For function ports 32, 34			
	VABP-S3-26V1G	186096	QS-G $\frac{1}{8}$ -6	10
	VABP-S1-1V1G	186098	QS-G $\frac{1}{8}$ -8	10
	VABP-S1-2V1G	186099	QS-G $\frac{1}{4}$ -8	10
	For working ports 2, 4, 22, 44			
	VABP-S3-26V1G	186098	QS-G $\frac{1}{8}$ -8	10
	VABP-S1-1V1G	186101	QS-G $\frac{1}{4}$ -10	10
	VABP-S1-2V1G	186103	QS-G $\frac{3}{8}$ -12	10
Connecting cable and plug socket with cable				
	Connection of solenoid valve to proportional directional control valve VPWP.	2384165	NEDV-L2R1-V7-M12W3-K-0.1L1-N-M8W4-0.2R1	1
	For the solenoid valves: • VSVA-B-M52-MZH-A1-1R5L • VSVA-B-M52-MZD-D1-1R5L			
	Connection of solenoid valve to controller.	541363	NEBU-M12G5-K-2.5-LE3	1
	For the solenoid valves: • VSVA-B-M52-MZH-A1-1R5L • VSVA-B-M52-MZD-D1-1R5L	541364	NEBU-M12G5-K-5-LE3	
	Connection of solenoid valve to controller.	151688	KMEB-1-24-2,5-LED	1
	For solenoid valve with switching position sensing • VSVA-B-M52-MZ-A1-1C1-APP	151689	KMEB-1-24-5-LED	
	Connection of solenoid valve to controller.	30931	KMC-1-24DC-2,5-LED	1
	For solenoid valve: • MN1H-5/2-D-2-FR-S-C	30933	KMC-1-24DC-5-LED	
	Connection of switching position sensing system to controller	541334	NEBU-M8G3-K-5-LE3	1
Plug and plug socket				
	Alternative plug socket for solenoid valve.	151687	MSSD-EB	1
	For solenoid valve with switching position sensing • VSVA-B-M52-MZ-A1-1C1-APP			
	Alternative plug socket for solenoid valve.	34583	MSSD-C	1
	For solenoid valve: • MN1H-5/2-D-2-FR-S-C			
	• Insulation displacement connector • Connection of the connecting cable KMC to the proportional directional control valve VPWP	562025	NECU-S-M8G4-HX	1
	• Screw terminal • Connection of the connecting cable KMC to the proportional directional control valve VPWP	1068198	NECU-S-M8G4-C2	

1) Packaging unit

Festo - Your Partner in Automation



1 Festo Inc.
5300 Explorer Drive
Mississauga, ON L4W 5G4
Canada

Festo Customer Interaction Center

Tel: 1 877 463 3786
Fax: 1 877 393 3786
Email: customer.service.ca@festo.com



2 Festo Pneumatic
Av. Ceylán 3,
Col. Tequesquináhuac
54020 Tlalneptla,
Estado de México

Multinational Contact Center

01 800 337 8669
ventas.mexico@festo.com



3 Festo Corporation
1377 Motor Parkway
Suite 310
Islandia, NY 11749

Festo Customer Interaction Center

1 800 993 3786
1 800 963 3786
customer.service.us@festo.com



4 Regional Service Center
7777 Columbia Road
Mason, OH 45040

Connect with us



www.festo.com/socialmedia



www.festo.com

Subject to change